

## PREFACE

This Service Manual describes the technical features and servicing procedures for the KYMCO **GRAND DINK 125/150**.

Section 1 contains the precautions for all operations stated in this manual. Read them carefully before any operation is started.

Section 2 is the removal/installation procedures for the frame covers which are subject to higher removal/installation frequency during maintenance and servicing operations.

Section 3 describes the inspection/adjustment procedures, safety rules and service information for each part, starting from periodic maintenance.

Sections 5 through 13 give instructions for disassembly, assembly and adjustment of engine parts. Section 14 is the removal/ installation of chassis. Section 16 states the testing and measuring methods of electrical equipment.

Most sections start with an assembly or system illustration and troubleshooting for the section. The subsequent pages give detailed procedures for the section.

The information and contents included in this manual may be different from the motorcycle in case specifications are changed.

**KWANG YANG MOTOR CO., LTD.**  
**OVERSEAS SALES DEPARTMENT**  
**OVERSEAS SERVICE SECTION**

## TABLE OF CONTENTS

|                      |  |    |
|----------------------|--|----|
| ENGINE               | GENERAL INFORMATION  | 1  |
|                      | EXHAUST MUFFLER/FRAME COVERS   | 2  |
|                      | INSPECTION/ADJUSTMENT  | 3  |
|                      | LUBRICATION SYSTEM   | 4  |
|                      | ENGINE REMOVAL/INSTALLATION  | 5  |
|                      | CYLINDER HEAD/VALVES   | 6  |
|                      | CYLINDER/PISTON  | 7  |
|                      | DRIVE AND DRIVEN PULLEYS/KICK STARTER  | 8  |
|                      | FINAL REDUCTION  | 9  |
|                      | A.C. GENERATOR/STARTER CLUTCH  | 10 |
|                      | CRANKCASE/CRANKSHAFT   | 11 |
|                      | COOLING SYSTEM   | 12 |
|                      | FUEL SYSTEM/CARBURETOR/FUEL PUMP FUEL TANK   | 13 |
| CHASSIS              | STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK           | 14 |
|                      | REAR BRAKE/REAR FORK/REAR WHEEL/REAR SHOCK ABSORBER`                                 | 15 |
| ELECTRICAL EQUIPMENT | BATTERY/CHARGING SYSTEM  | 16 |
|                      | IGNITION SYSTEM  | 17 |
|                      | STARTING SYSTEM  | 18 |
|                      | SWITCHES/HORN/FUEL UNIT / THERMO-STATIC SWITCH/TEMPERATURE GAUGE/INSTRUMENTS/ LIGHTS | 19 |

# 1. GENERAL INFORMATION

---

**1**

---

## GENERAL INFORMATION

---

|                              |      |
|------------------------------|------|
| ENGINE SERIAL NUMBER-----    | 1-1  |
| SPECIFICATION-----           | 1-2  |
| SERVICE PRECAUTIONS-----     | 1-4  |
| TORQUE VALUES -----          | 1-8  |
| SPECIAL TOOLS -----          | 1-9  |
| LUBRICATION POINTS-----      | 1-10 |
| CABLE & HARNESS ROUTING----- | 1-12 |
| WIRING DIAGRAM-----          | 1-17 |
| TROUBLESHOOTING -----        | 1-18 |

# 1. GENERAL INFORMATION

---

## SERIAL NUMBER



Vehicle Identification Serial Number



Location of Frame Serial Number



Location of Engine Serial Number

# 1. GENERAL INFORMATION

## SPECIFICATIONS

|                        |  |                        |                                   |                            |
|------------------------|--|------------------------|-----------------------------------|----------------------------|
| Name & Model No.       |  |                        | SH25DA                            |                            |
| Motorcycle Name & Type |  |                        |                                   |                            |
| Overall length         |  |                        | 2060mm                            |                            |
| Overall width          |  |                        | 770mm                             |                            |
| Overall height         |  |                        | 1360mm                            |                            |
| Wheel base             |  |                        | 1435mm                            |                            |
| Engine type            |  |                        | Water cooled 4-stroke, OHC engine |                            |
| Displacement           |  |                        | 124.6cc                           |                            |
| Fuel Used              |  |                        | 92# unleaded gasoline             |                            |
| Net weight (kg)        | Front wheel                                    |                        | 58                                |                            |
|                        | Rear wheel                                     |                        | 82                                |                            |
|                        | Total  |                        | 140                               |                            |
| Gross weight(kg)       | Front wheel                                    |                        | 60                                |                            |
|                        | Rear wheel                                     |                        | 95                                |                            |
|                        | Total  |                        | 155                               |                            |
| Tires                  | Front wheel                                    |                        | 120/70-12                         |                            |
|                        | Rear wheel                                     |                        | 140/70-12                         |                            |
| Ground clearance       |  |                        |                                   |                            |
| Perform-<br>ance       | Braking distance (m)                           |                        | 30km/hr7.0m                       |                            |
|                        | Min. turning radius                            |                        | 2350mm                            |                            |
| Engine                 | Starting system                                |                        | Starting motor & Kick starter     |                            |
|                        | Type   |                        | Gasoline, 4-stroke                |                            |
|                        | Cylinder arrangement                           |                        | Single cylinder                   |                            |
|                        | Combustion chamber type                        |                        | Semi-sphere                       |                            |
|                        | Valve arrangement                              |                        | O.H.C.                            |                            |
|                        | Bore x stroke (mm)                             |                        | 52.4 x 57.8                       |                            |
|                        | Compression ratio                              |                        | 10:1                              |                            |
|                        | Compression pressure (kg/cm <sup>2</sup> -rpm) |                        | 15                                |                            |
|                        | Max. output (kw/rpm)                           |                        | 8.4/7500                          |                            |
|                        | Max. torque (N.m/rpm)                          |                        | 9.8/6000                          |                            |
|                        | Port timing                                    | Intake (1mm)           | Open                              | BTDC 12°                   |
|                        |  |                        | Close                             | ATDC 35°                   |
|                        |  | Exhaust (1mm)          | Open                              | BDDC 28°                   |
|                        |  |                        | Close                             | 0°                         |
|                        | Valve clearance (cold)                         |                        | Intake                            | 0.1mm                      |
|                        |  |                        | Exhaust                           | 0.1mm                      |
|                        | Idle speed (rpm)                               |                        |                                   | 1700rpm                    |
|                        | Lubrication System                             | Lubrication type       |                                   | Forced pressure & Wet sump |
| Oil pump type          |  | Inner/outer rotor type |                                   |                            |
| Oil filter type        |  | Full-flow filtration   |                                   |                            |
| Oil capacity           |  | 1.1 liters             |                                   |                            |

|              |  |               |
|--------------|--|---------------|
|              |  |               |
| Cooling Type |  | Water cooling |

|                    |                                     |                 |            |                            |  |
|--------------------|-------------------------------------|-----------------|------------|----------------------------|--|
| Fuel System        | Air cleaner type & No               |                 |            | Paper element, wet         |  |
|                    | Fuel capacity                       |                 |            | 9.0 liters                 |  |
|                    | Carburetor                          | Type            |            | VE                         |  |
|                    |                                     | Piston dia.     |            | 22                         |  |
|                    |                                     | Venturi dia.    |            | 26 equivalent              |  |
| Throttle type      |                                     | Butterfly type  |            |                            |  |
| Electrical         | Ignition System                     | Type            |            | CDI                        |  |
|                    |                                     | Ignition timing |            | 10°±1.5°/1000rpm           |  |
|                    |                                     | Contact breaker |            | Non-contact point type     |  |
|                    |                                     | Spark plug      |            | NGK DPR7EA-9               |  |
|                    |                                     | Spark plug gap  |            | 0.8~0.9mm                  |  |
|                    | Battery                             | Capacity        |            | 12V8AH                     |  |
| Power Drive System | Clutch                              | Type            |            | Dry multi-disc clutch      |  |
|                    | Transmission Gear                   | Type            |            | Non-stage transmission     |  |
|                    |                                     | Operation       |            | Automatic centrifugal Type |  |
|                    | Reduction Gear                      | Type            |            | Two-stage reduction        |  |
|                    |                                     | Reduction ratio | 1st        | 2.8~1.0                    |  |
| 2nd                |                                     |                 | 8.82       |                            |  |
| Moving Device      | Front Axle                          | Caster angle    |            |                            |  |
|                    |                                     | Connecting rod  |            |                            |  |
|                    | Tire pressure (kg/cm <sup>2</sup> ) |                 | Front      | 1.75                       |  |
|                    |                                     |                 | Rear       | 2.25                       |  |
|                    | Turning angle                       |                 | Left       | 42.5°                      |  |
| Right              |                                     |                 | 42.5°      |                            |  |
| Brake system type  |                                     | Front           | Disk brake |                            |  |
|                    |                                     | Rear            | Disk brake |                            |  |
| Damping Device     | Suspension type                     |                 | Front      | Telescope                  |  |
|                    |                                     |                 | Rear       | Double swing               |  |
|                    | Shock absorber type                 |                 | Front      | Telescope                  |  |
|                    |                                     |                 | Rear       | Double swing               |  |
| Frame type         |                                     |                 |            | Under bone                 |  |

# 1. GENERAL INFORMATION

## SPECIFICATIONS

|   |             |                                   |  |
|---|-------------|-----------------------------------|--|
| Name & Model No.  |             | SH30DA                            |  |
| Motorcycle Name & Type  |             |                                   |  |
| Overall length  |             | 2060mm                            |  |
| Overall width   |             | 770mm                             |  |
| Overall height  |             | 1360mm                            |  |
| Wheel base  |             | 1435mm                            |  |
| Engine type   |             | Water cooled 4-stroke, OHC engine |  |
| Displacement  |             | 149.5                             |  |
| Fuel Used   |             | 92# unleaded gasoline             |  |
| Net weight (kg)   | Front wheel | 58                                |  |
|   | Rear wheel  | 82                                |  |
|   | Total       | 140                               |  |
| Gross weight(kg)  | Front wheel | 60                                |  |
|   | Rear wheel  | 95                                |  |
|   | Total       | 155                               |  |
| Tires   | Front wheel | 120/70-12                         |  |
|   | Rear wheel  | 140/70-12                         |  |
| Ground clearance  |             |                                   |  |
| Perform-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br>-<br> |             |                                   |  |


|              |  |               |
|--------------|--|---------------|
|              |  |               |
| Cooling Type |  | Water cooling |

|                    |                                     |                 |       |                            |  |
|--------------------|-------------------------------------|-----------------|-------|----------------------------|--|
| Fuel System        | Air cleaner type & No               |                 |       | Paper element, wet         |  |
|                    | Fuel capacity                       |                 |       | 9.0 liters                 |  |
|                    | Carburetor                          | Type            |       | VE                         |  |
|                    |                                     | Piston dia.     |       | 22                         |  |
|                    |                                     | Venturi dia.    |       | 26 equivalent              |  |
| Throttle type      |                                     | Butterfly type  |       |                            |  |
| Electrical         | Ignition System                     | Type            |       | CDI                        |  |
|                    |                                     | Ignition timing |       | 10°±1.5°/1000RPM           |  |
|                    |                                     | Contact breaker |       | Non-contact point type     |  |
|                    |                                     | Spark plug      |       | NGK DP7EA-9                |  |
|                    |                                     | Spark plug gap  |       | 0.8~0.9mm                  |  |
|                    | Battery                             | Capacity        |       | 12V8AH                     |  |
| Power Drive System | Clutch                              | Type            |       | Dry multi-disc clutch      |  |
|                    | Transmission Gear                   | Type            |       | Non-stage transmission     |  |
|                    |                                     | Operation       |       | Automatic centrifugal Type |  |
|                    | Reduction Gear                      | Type            |       | Two-stage reduction        |  |
|                    |                                     | Reduction ratio | 1st   | 2.8~1.0                    |  |
| 2nd                |                                     |                 | 8.82  |                            |  |
| Moving Device      | Front Axle                          | Caster angle    |       |                            |  |
|                    |                                     | Connecting rod  |       |                            |  |
|                    | Tire pressure (kg/cm <sub>2</sub> ) |                 | Front | 2.00                       |  |
|                    |                                     |                 | Rear  | 2.25                       |  |
|                    | Turning angle                       |                 | Left  | 42.5°                      |  |
|                    |                                     |                 | Right | 42.5°                      |  |
| Brake system type  |                                     |                 | Front | Disk brake                 |  |
|                    |                                     |                 | Rear  | Disk brake                 |  |
| Damping Device     | Suspension type                     |                 | Front | Telescope                  |  |
|                    |                                     |                 | Rear  | Double swing               |  |
|                    | Shock absorber type                 |                 | Front | Telescope                  |  |
|                    |                                     |                 | Rear  | Double swing               |  |
| Frame type         |                                     |                 |       | Under bone                 |  |


# 1. GENERAL INFORMATION

## SERVICE PRECAUTIONS


- Make sure to install new gaskets, O-rings, circlips, cotter pins, etc. when reassembling.

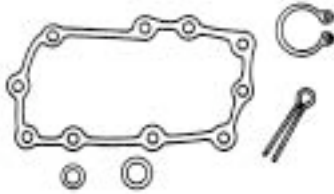

- When tightening bolts or nuts, begin with larger-diameter to smaller ones at several times, and tighten to the specified torque diagonally.

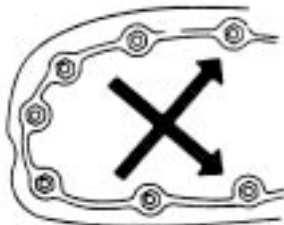


- Use genuine parts and lubricants.

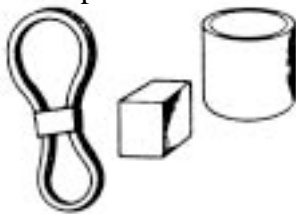


- When servicing the motorcycle, be sure to use special tools for removal and installation.



- After disassembly, clean removed parts. Lubricate sliding surfaces with engine oil before reassembly.

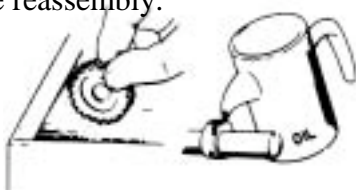

- Apply or add designated greases and lubricants to the specified lubrication points.

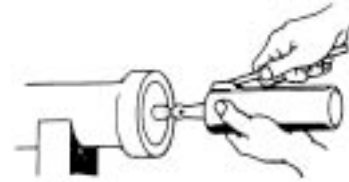


- After reassembly, check all parts for proper tightening and operation.



- When two persons work together, pay attention to the mutual working safety.



- Disconnect the battery negative (-) terminal before operation.
- When using a spanner or other tools, make sure not to damage the motorcycle surface.

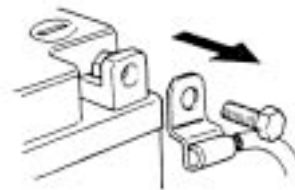


- After operation, check all connecting points, fasteners, and lines for proper connection and installation.
- When connecting the battery, the positive (+) terminal must be connected first.
- After connection, apply grease to the battery terminals.
- Terminal caps shall be installed securely.





# 1. GENERAL INFORMATION


- If the fuse is burned out, find the cause and repair it. Replace it with a new one according to the specified capacity.

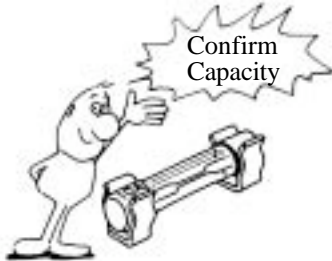

- After operation, terminal caps shall be installed securely.




- When taking out the connector, the lock on the connector shall be released before operation.

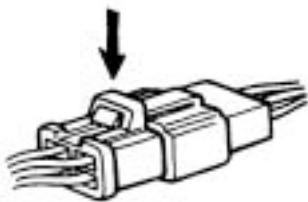

- Hold the connector body when connecting or disconnecting it.
- Do not pull the connector wire.




- Check if any connector terminal is bending, protruding or loose.

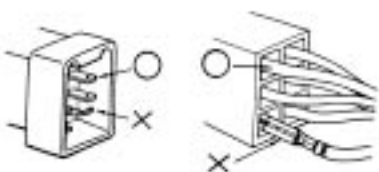


- The connector shall be inserted completely.
- If the double connector has a lock, lock it at the correct position.
- Check if there is any loose wire.




- Before connecting a terminal, check for damaged terminal cover or loose negative terminal.

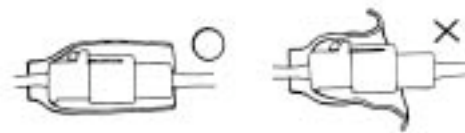

 
- Check the double connector cover for proper coverage and installation.

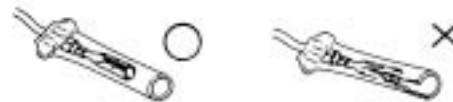

- Insert the terminal completely.
- Check the terminal cover for proper coverage.
- Do not make the terminal cover opening face up.

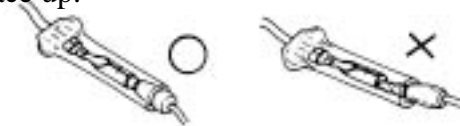

- Secure wire harnesses to the frame with their respective wire bands at the designated locations. Tighten the bands so that only the insulated surfaces contact the wire harnesses.

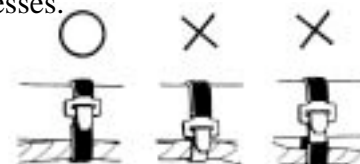

# 1. GENERAL INFORMATION


- After clamping, check each wire to make sure it is secure.




- Do not squeeze wires against the weld or its clamp.



- After clamping, check each harness to make sure that it is not interfering with any moving or sliding parts.

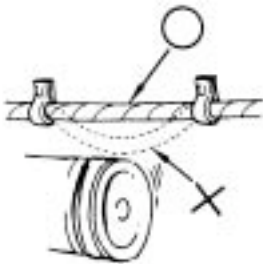


- When fixing the wire harnesses, do not make it contact the parts which will generate high heat.

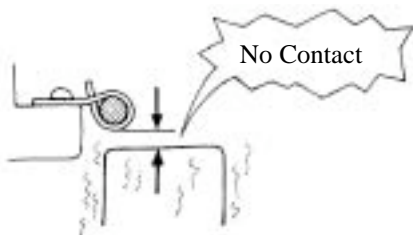


- Route wire harnesses to avoid sharp edges or corners. Avoid the projected ends of bolts and screws.
- Route wire harnesses passing through the side of bolts and screws. Avoid the projected ends of bolts and screws.




- Route harnesses so they are neither pulled tight nor have excessive slack.

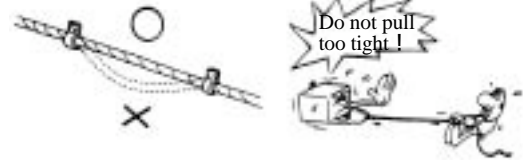

- Protect wires and harnesses with electrical tape or tube if they contact a sharp edge or corner.

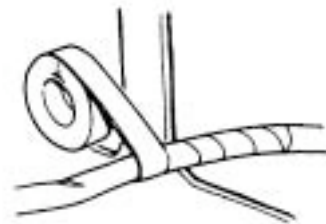


- When rubber protecting cover is used to protect the wire harnesses, it shall be installed securely.

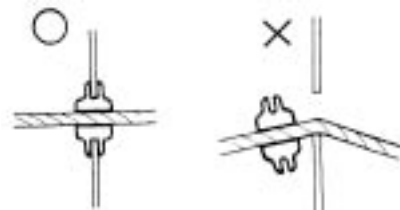

- Do not break the sheath of wire.
- If a wire or harness is with a broken sheath, repair by wrapping it with protective tape or replace it.



- When installing other parts, do not press or squeeze the wires.

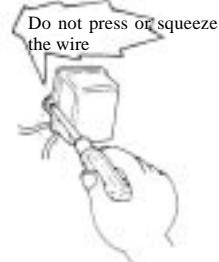



# 1. GENERAL INFORMATION


- After routing, check that the wire harnesses are not twisted or kinked.



- Wire harnesses routed along with handlebar should not be pulled tight, have excessive slack or interfere with adjacent or surrounding parts in all steering positions.



- When a testing device is used, make sure to understand the operating methods thoroughly and operate according to the operating instructions.

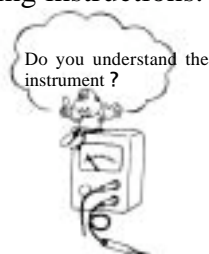

- Be careful not to drop any parts.



- When rust is found on a terminal, remove the rust with sand paper or equivalent before connecting.



- Symbols:

The following symbols represent the servicing methods and cautions included in this service manual.



Engine Oil

: Apply engine oil to the specified points. (Use designated engine oil for lubrication.)



Grease

: Apply grease for lubrication.



Gear Oil

: Transmission Gear Oil (90#)



Special

: Use special tool.



: Caution



: Warning

# 1. GENERAL INFORMATION

## TORQUE VALUES

### STANDARD TORQUE VALUES

| Item           | Torque (N-m) | Item                  | Torque (N-m) |
|----------------|--------------|-----------------------|--------------|
| 5mm bolt, nut  | 4.9          | 5mm screw             | 3.9          |
| 6mm bolt, nut  | 9.8          | 6mm screw, SH bolt    | 8.8          |
| 8mm bolt, nut  | 21.6         | 6mm flange bolt, nut  | 11.8         |
| 10mm bolt, nut | 34.3         | 8mm flange bolt, nut  | 26.5         |
| 12mm bolt, nut | 53.9         | 10mm flange bolt, nut | 39.2         |

Torque specifications listed below are for important fasteners.

### ENGINE

| Item                             | Q'ty | Thread dia.(mm) | Torque (N-m) | Remarks   |
|----------------------------------|------|-----------------|--------------|---|
| Cylinder head bolt A             | 2    | 8               | 21.6         | Double end bolt<br>Double end bolt<br>Apply oil to<br>threads |
| Cylinder head bolt B             | 2    | 8               | 21.6         |   |
| Oil filter screen cap            | 1    | 30              | 14.7         |   |
| Exhaust muffler joint lock nut   | 2    | 8               | 8.8          |   |
| Cylinder head cap nut            | 4    | 8               | 21.6         |   |
| Valve adjusting lock nut         | 2    | 5               | 8.8          |   |
| Cam chain tensioner slipper bolt | 1    | 6               | 8.8          |   |
| Oil bolt                         | 1    | 12              | 12.7         |   |
| Clutch outer nut                 | 1    | 12              | 53.9         |   |
| Clutch drive plate nut           | 1    | 12              | 53.9         |   |
| Flywheel nut                     | 1    | 14              | 53.9         | Left hand threads   |
| Oil pump bolt                    | 2    | 5               | 3.9          |   |
| Cylinder head cover bolt         | 4    | 6               | 11.8         |   |
| Spark plug                       | 1    | 10              | 11.8         |   |
| Cam chain tensioner bolt         | 1    | 6               | 8.8          |   |
| Water pump impeller              | 1    | 8               | 13.7         |   |

### FRAME

| Item                           | Q'ty | Thread dia.(mm) | Torque (N-m) | Remarks |
|--------------------------------|------|-----------------|--------------|---------|
| Steering stem lock nut         | 1    | 10              | 44.1         | U-nut   |
| Front axle nut                 | 1    | 12              | 58.8         | U-nut   |
| Rear axle nut                  | 1    | 14              | 88.2         | U-nut   |
| Rear shock absorber upper bolt | 2    | 10              | 29.4         |         |
| Rear shock absorber lower bolt | 2    | 8               | 29.4         |         |
| Front shock absorber lock bolt | 4    | 10              | 24.5         |         |
| Engine hanger bolt             | 1    | 12              | 53.9         |         |

# 1. GENERAL INFORMATION

## SPECIAL TOOLS

| Tool Name                      | Tool No. | Remarks   | Ref. Page |
|--------------------------------|----------|---|-----------|
| Valve guide driver             |          | Valve guide removal/installation                |           |
| Valve guide reamer             |          | Valve guide grinding                            |           |
| Valve spring compressor        |          | Valve removal                                   |           |
| Lock nut wrench, 39mm          | E027     | Clutch disassembly                              |           |
| Bearing driver                 |          | Bearing removal                                 |           |
| Bearing remover, 12mm          | E020     | Bearing removal                                 |           |
| Remover shaft                  |          | Bearing removal                                 |           |
| Remover weight                 |          | Bearing removal                                 |           |
| Bearing remover, 15mm          | E018     | Bearing removal                                 |           |
| Bearing driver                 |          | Bearing removal                                 |           |
| Clutch spring compressor       | E027     | Clutch disassembly                              |           |
| Ball race remover extension    |          | Ball race removal                               |           |
| Ball race remover              |          | Ball race removal                               |           |
| Spring compressor              |          | Spring removal                                  |           |
| Mechanical seal driver         | E014     | Water pump mechanical seal removal/installation |           |
| Kick starter spring remover    |          | Kick starter spring removal                     |           |
| Gear remover                   |          | Starter gear removal                            |           |
| Valve adjuster                 | E012     | Tapper adjustment                               |           |
| Float level gauge              |          | Carburetor fuel level check                     |           |
| Valve seat cutter 45°          |          | Valve seat refacing                             |           |
| Valve seat cutter 32°          |          | Valve seat refacing                             |           |
| Valve seat cutter 60°          |          | Valve seat refacing                             |           |
| Cutter clip, 5mm               |          |   |           |
| Universal holder               | E017     | Holding clutch for removal                      |           |
| Bearing driver (32x35mm)       | E014     | Bearing installation                            |           |
| Pilot, 12mm                    | E014     | Bearing installation                            |           |
| Pilot, 15mm                    | E014     | Bearing installation                            |           |
| Pilot, 17mm                    | E014     | Bearing installation                            |           |
| Flywheel puller                | E003     | A.C. generator flywheel removal                 |           |
| Rear shock absorber compressor | F004     | Rear shock absorber disassembly                 |           |
| Steering head bearing remover  | F005     | Steering head bearing removal                   |           |
| Flywheel holder                | E021     | A.C. generator flywheel holding                 |           |
| Reamer clip                    |          |   |           |
| Fuel unit wrench               |          | Fuel unit removal                               |           |

# 1. GENERAL INFORMATION

## LUBRICATION POINTS

### ENGINE

| Lubrication Points  | Lubricant   |
|---|---|
| Valve guide/valve stem movable part<br>Camshaft protruding surface<br>Valve rocker arm friction surface<br>Camshaft drive chain<br>Cylinder lock bolt and nut<br>Piston surroundings and piston ring grooves<br>Piston pin surroundings<br>Cylinder inside wall<br>Connecting rod/piston pin hole<br>Connecting rod big end<br>Crankshaft<br>Crankshaft one-way clutch movable part<br>Oil pump drive chain<br>Starter reduction gear engaging part<br>Countershaft gear engaging part<br>Final gear engaging part<br>Bearing movable part<br>O-ring face<br>Oil seal lip | <ul style="list-style-type: none"> <li>•Genuine KYMCO Engine Oil (SAE15W-40)</li> <li>•API SE, SJ Engine Oil</li> </ul> |
| Starter idle gear<br>Friction spring movable part/shaft movable part<br>Shaft movable grooved part<br>Starter spindle movable part  | High-temperature resistant grease   |
| Starter one-way clutch threads  | Thread locking agent  |
| A.C. generator connector<br>Transmission case breather tube   | Adhesive  |


# 1. GENERAL INFORMATION

## FRAME

The following is the lubrication points for the frame.

Use general purpose grease for parts not listed.


Apply clean engine oil or grease to cables and movable parts not specified. This will avoid abnormal noise and rise the durability of the motorcycle.

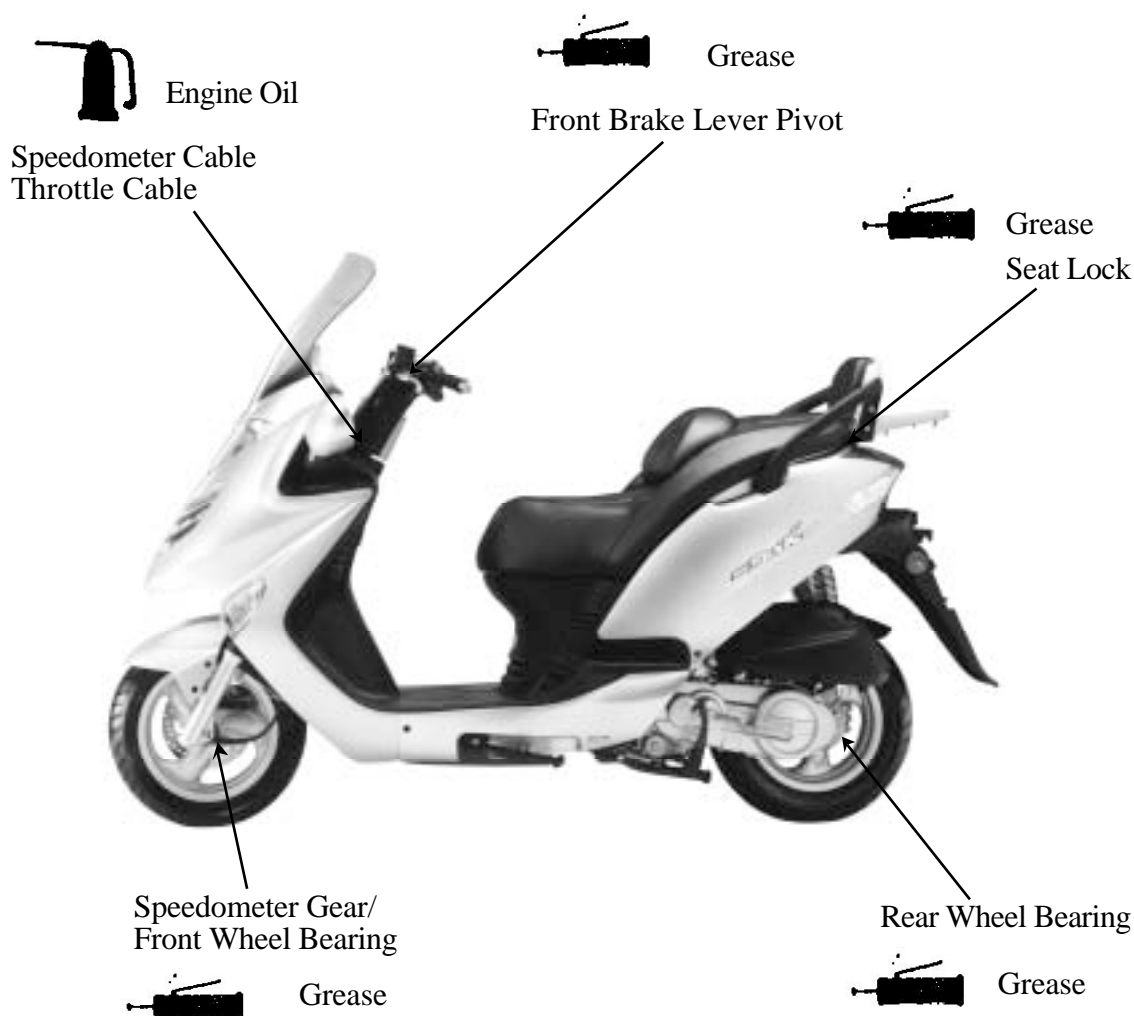

# 1. GENERAL INFORMATION


---

## CABLE & HARNESS ROUTING

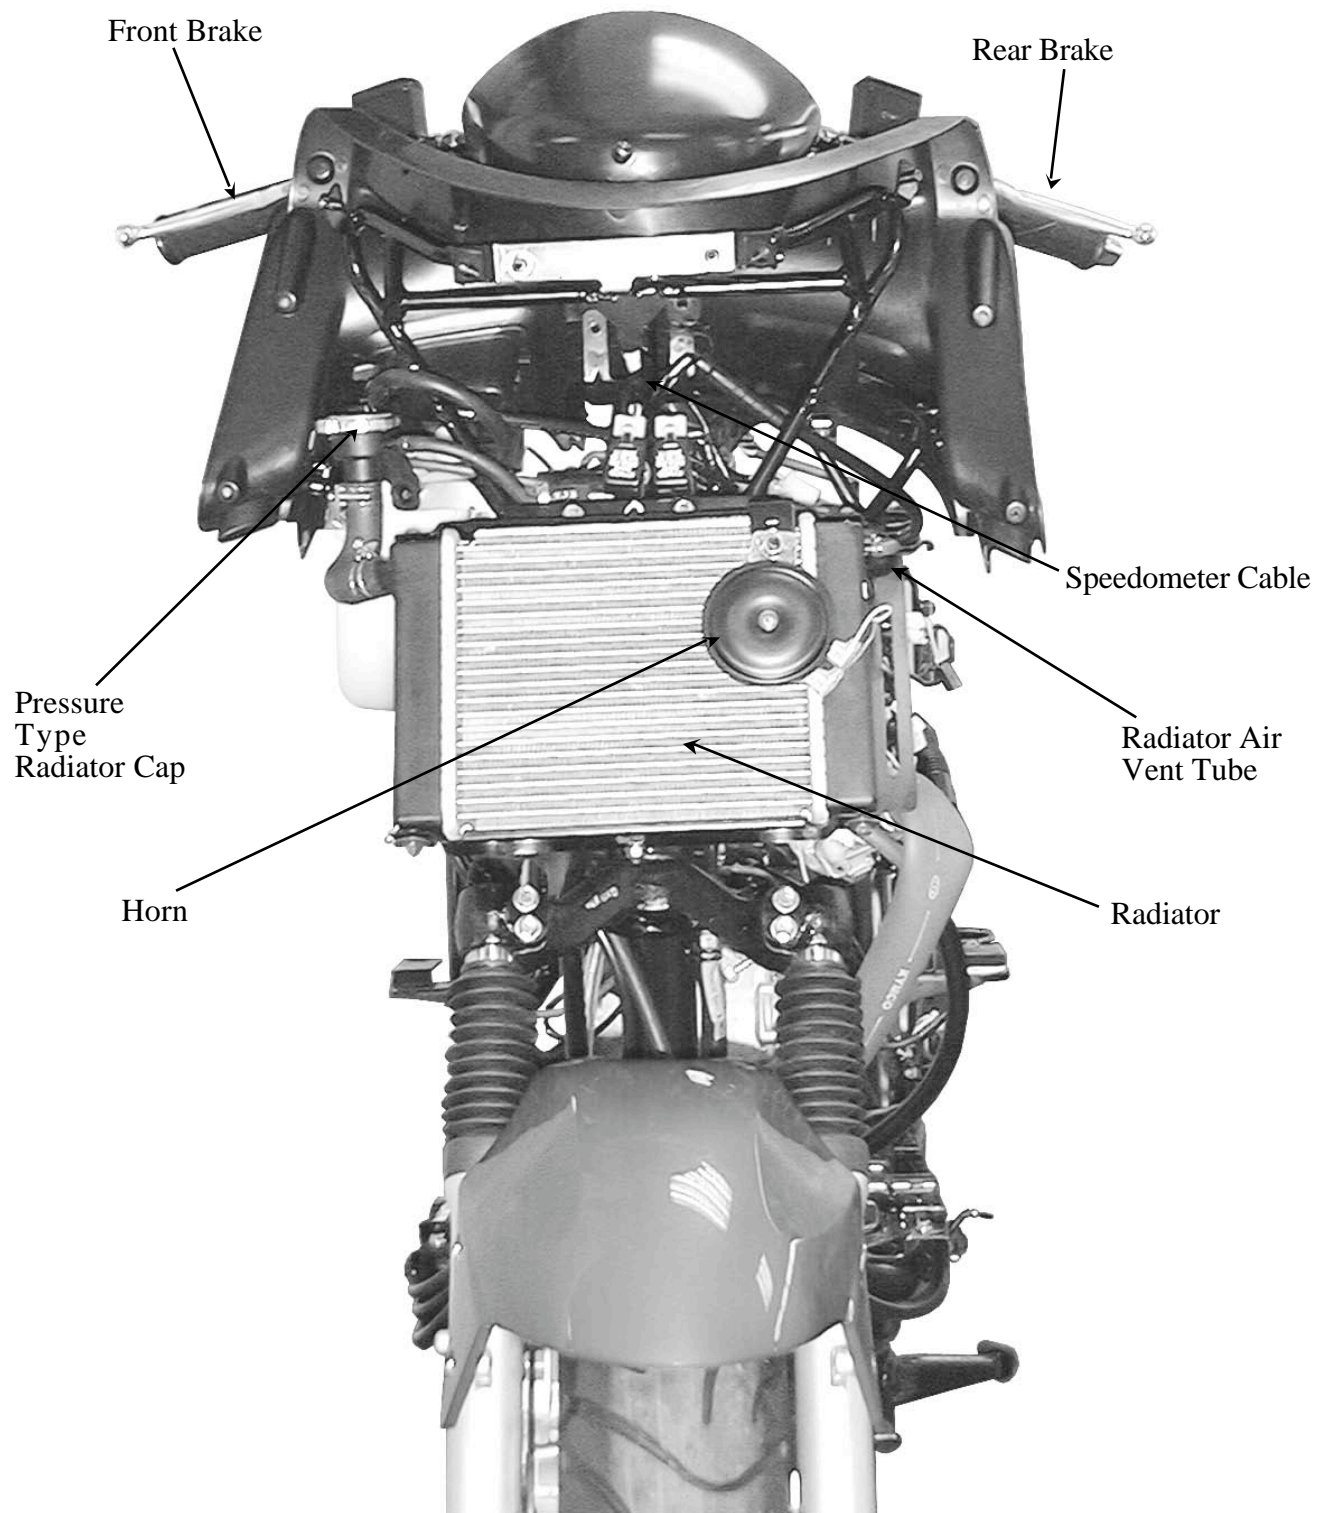




# 1. GENERAL INFORMATION

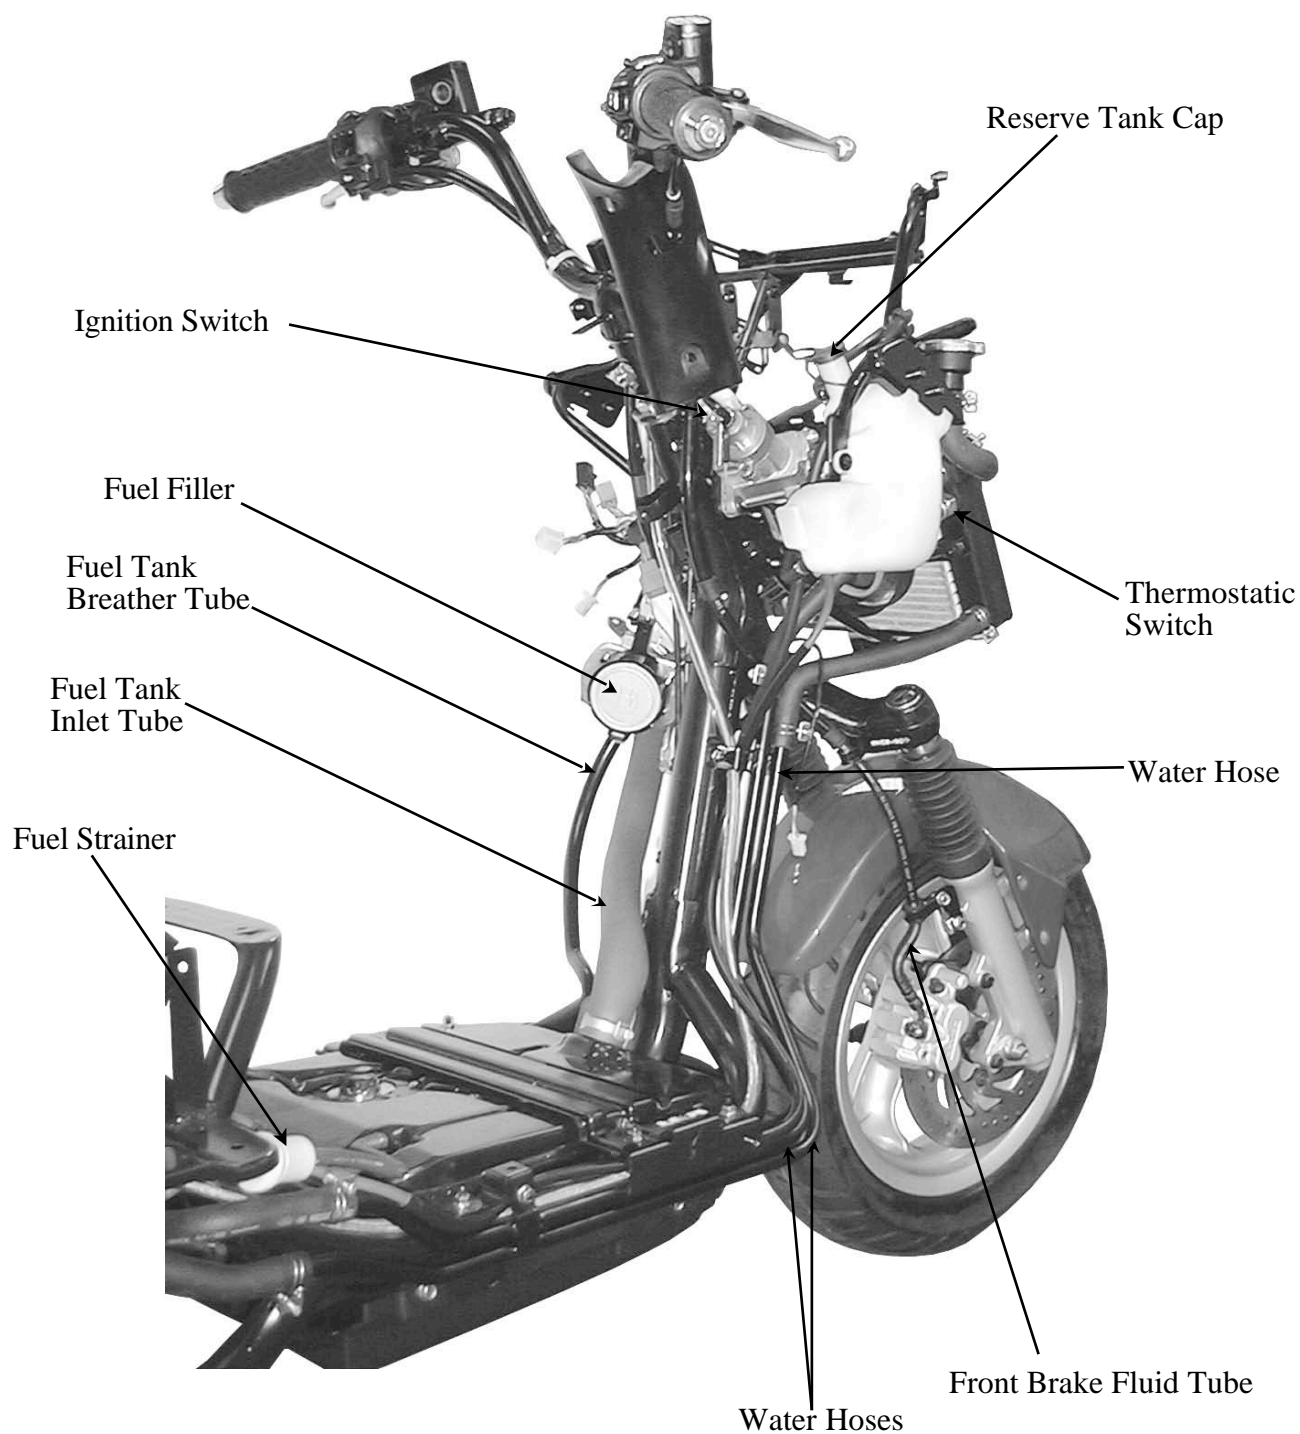


# 1. GENERAL INFORMATION

---


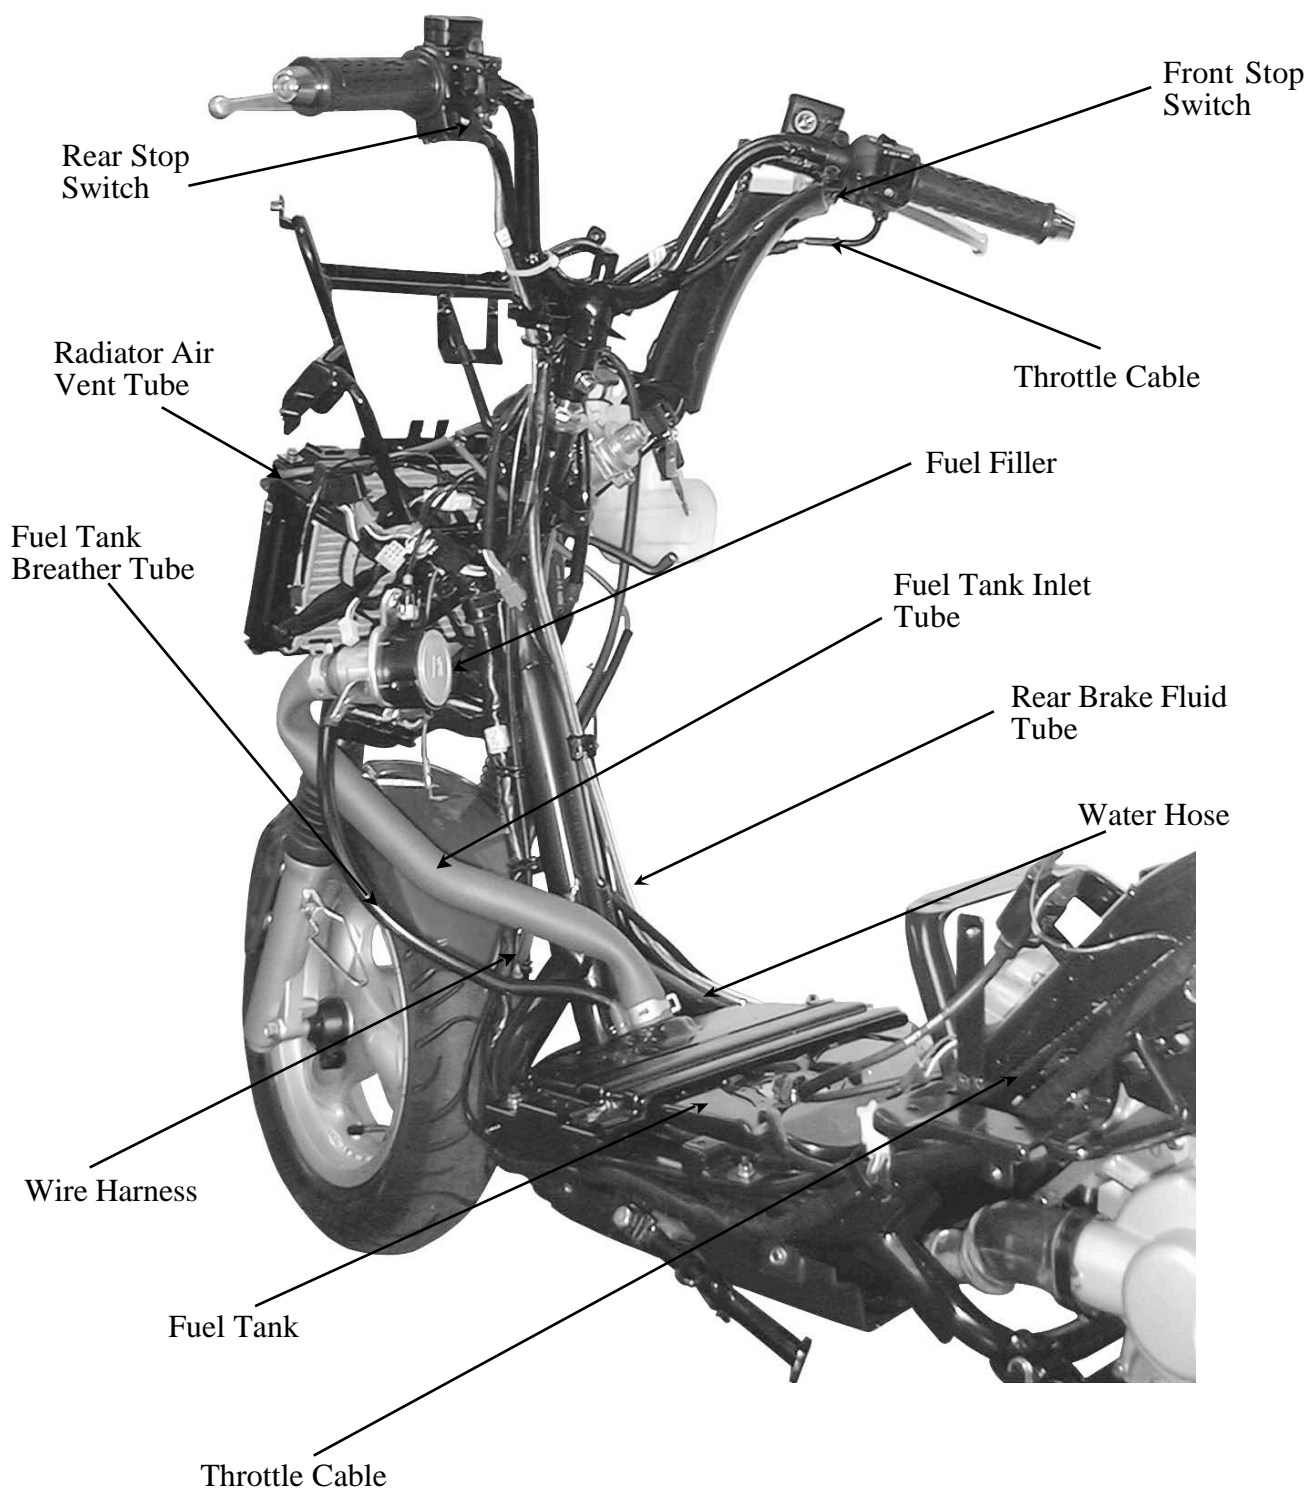


# 1. GENERAL INFORMATION

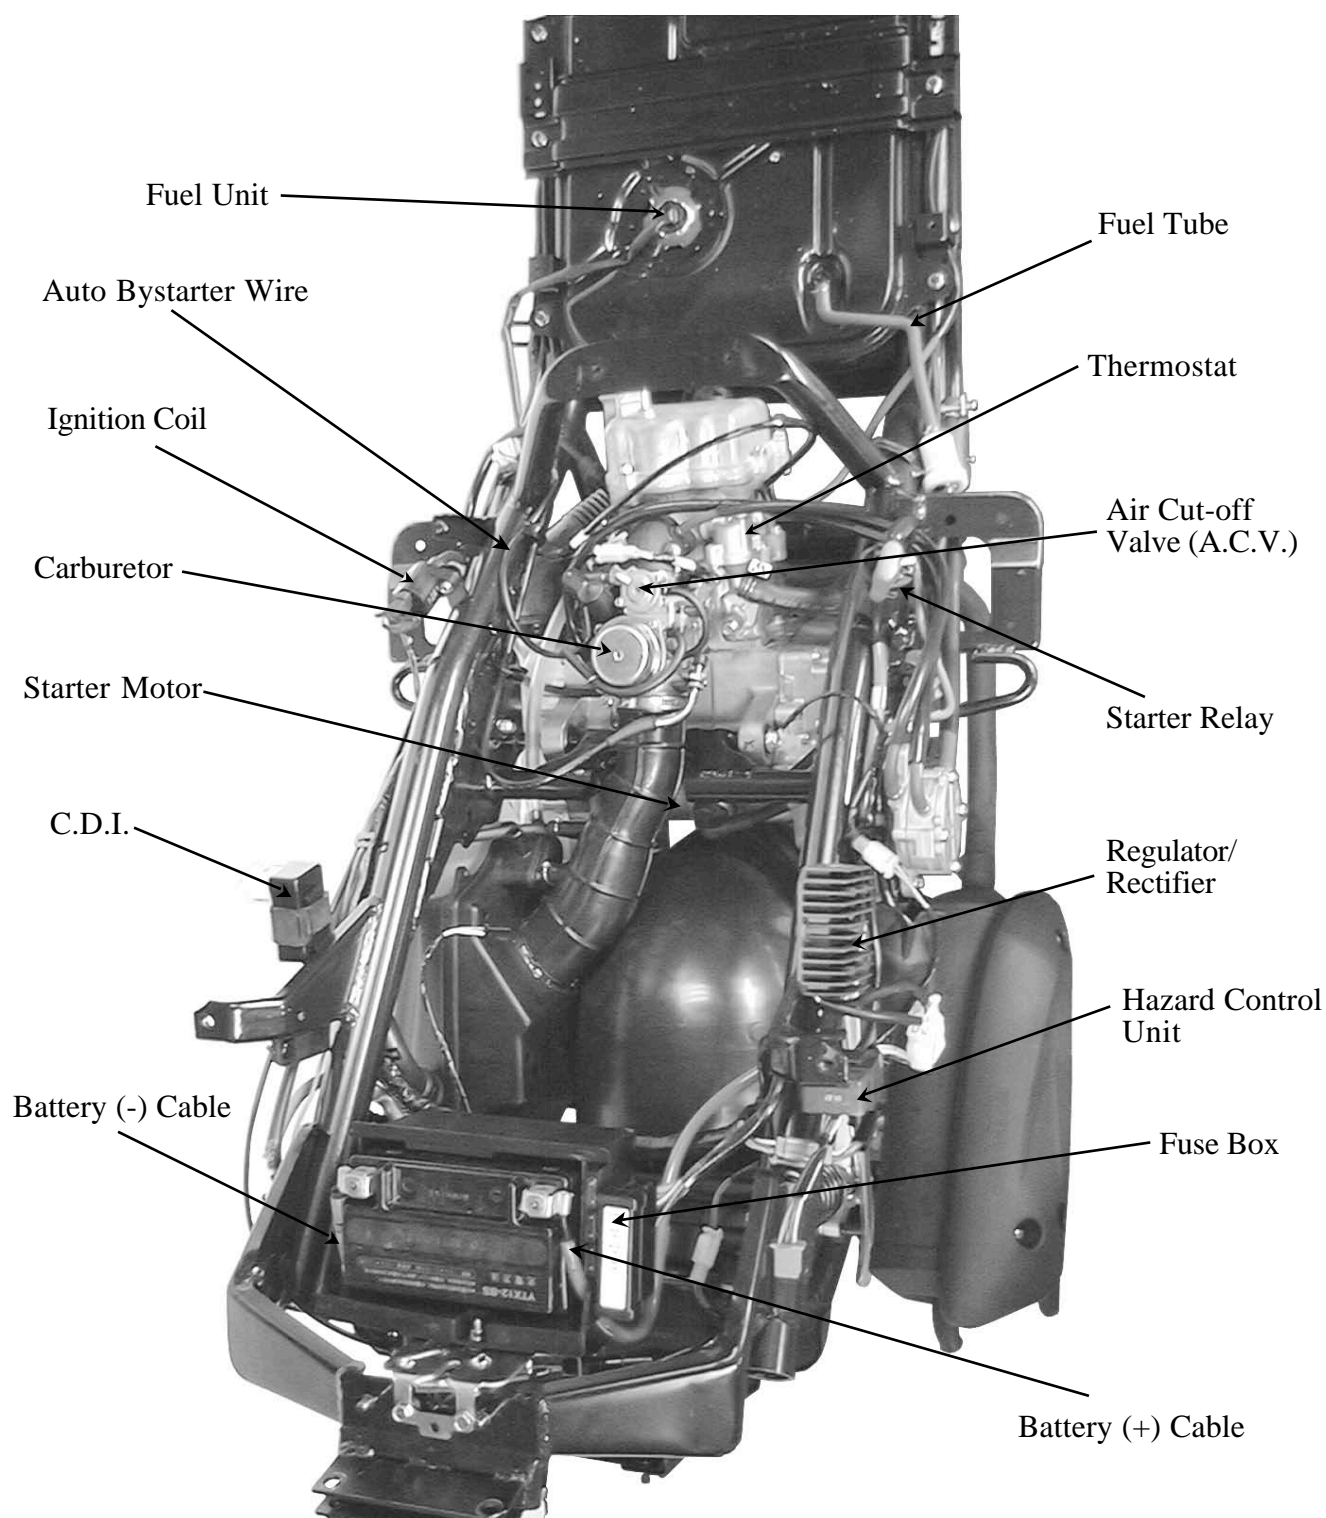




# 1. GENERAL INFORMATION

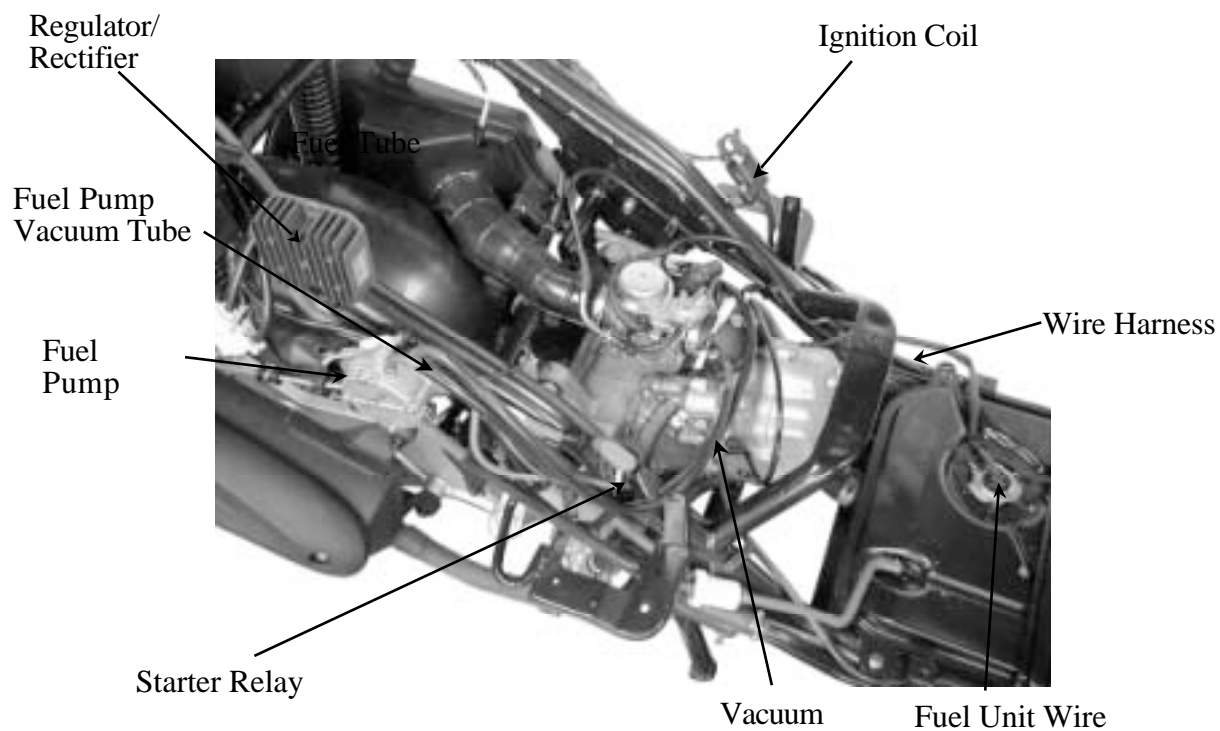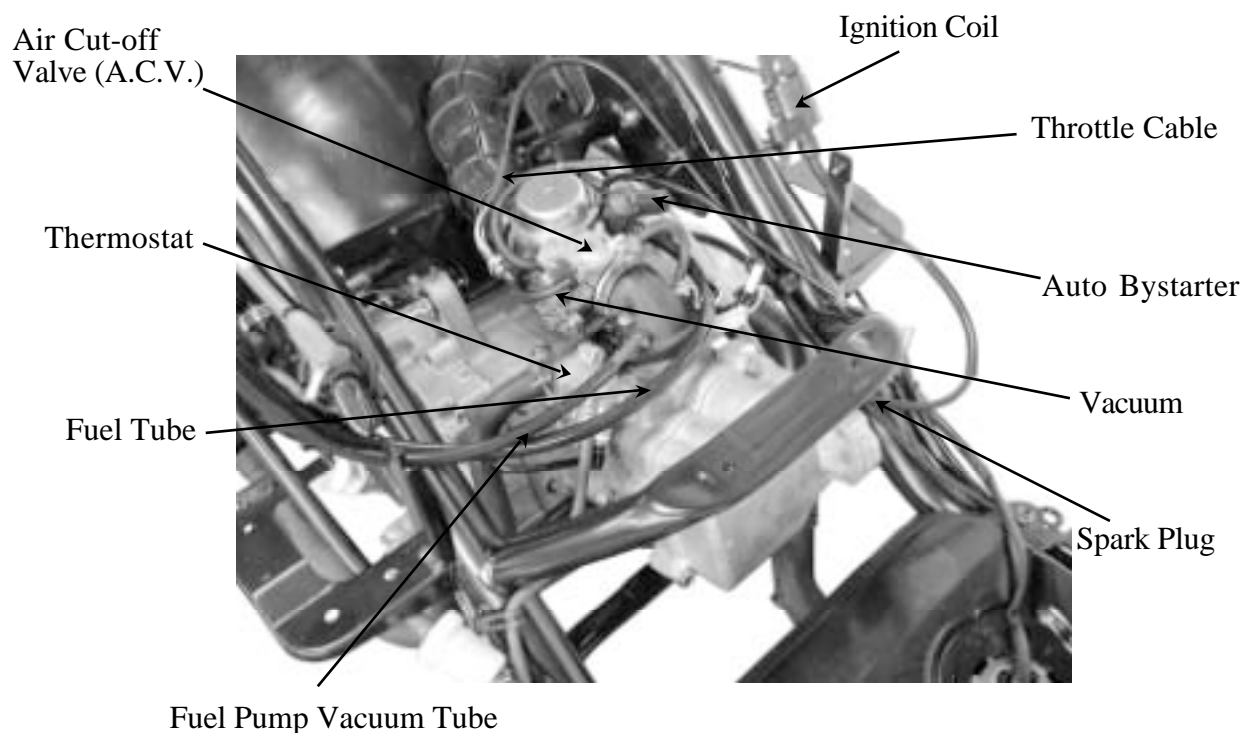


## WIRING DIAGRAM

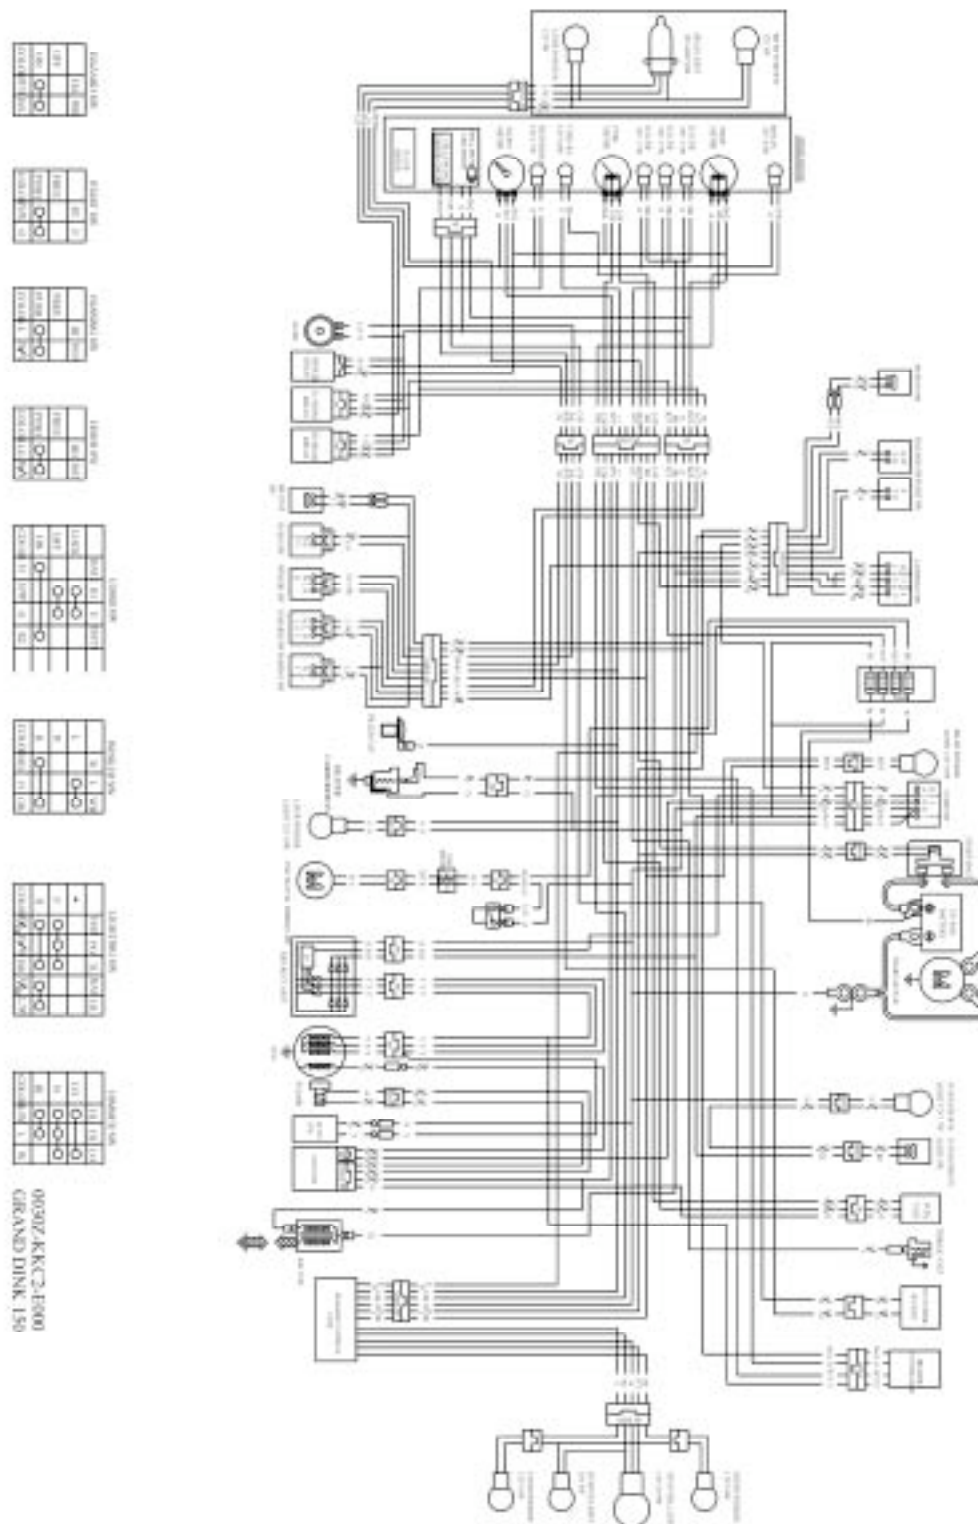

# 1. GENERAL INFORMATION

## TROUBLESHOOTING


### ENGINE WILL NOT START OR IS HARD TO START

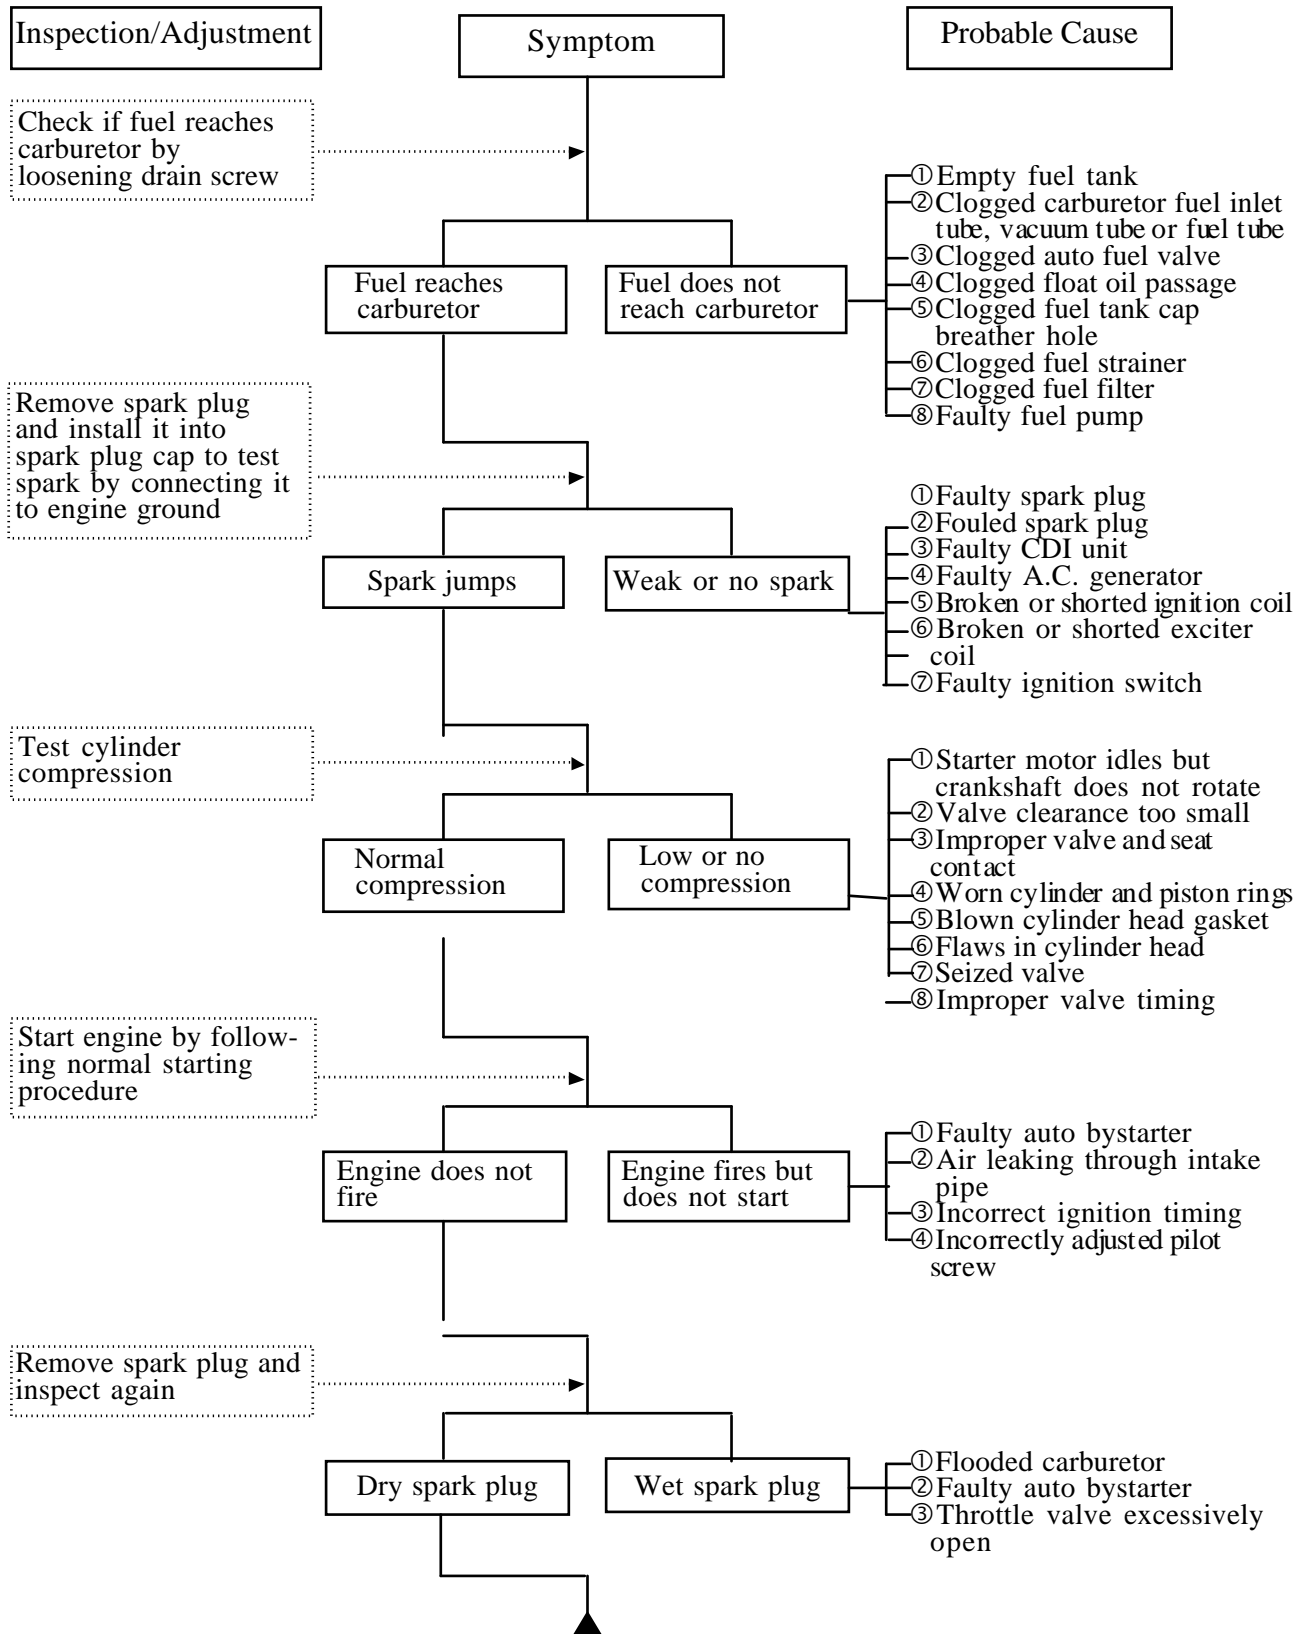




# 1. GENERAL INFORMATION

## ENGINE LACKS POWER

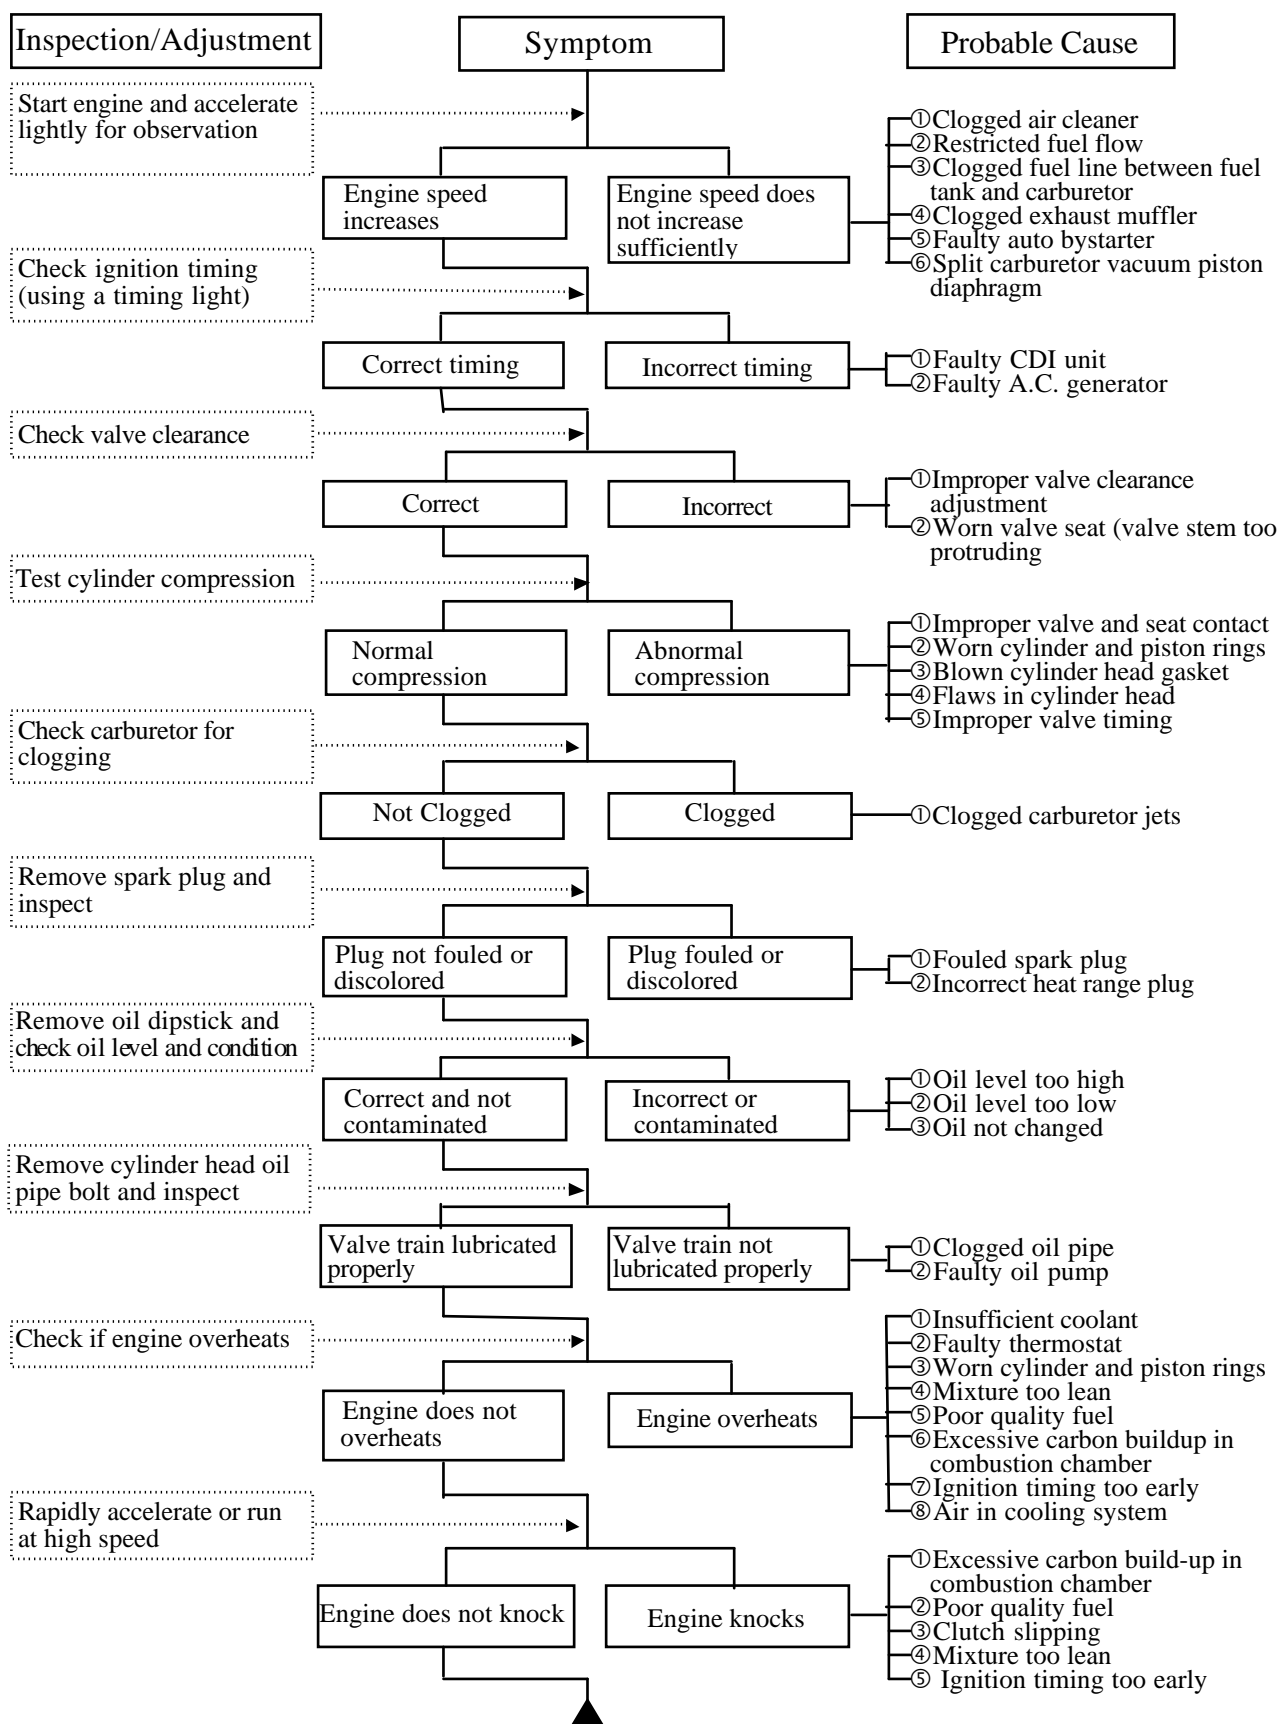


# 1. GENERAL INFORMATION

## POOR PERFORMANCE (ESPECIALLY AT IDLE AND LOW SPEEDS)

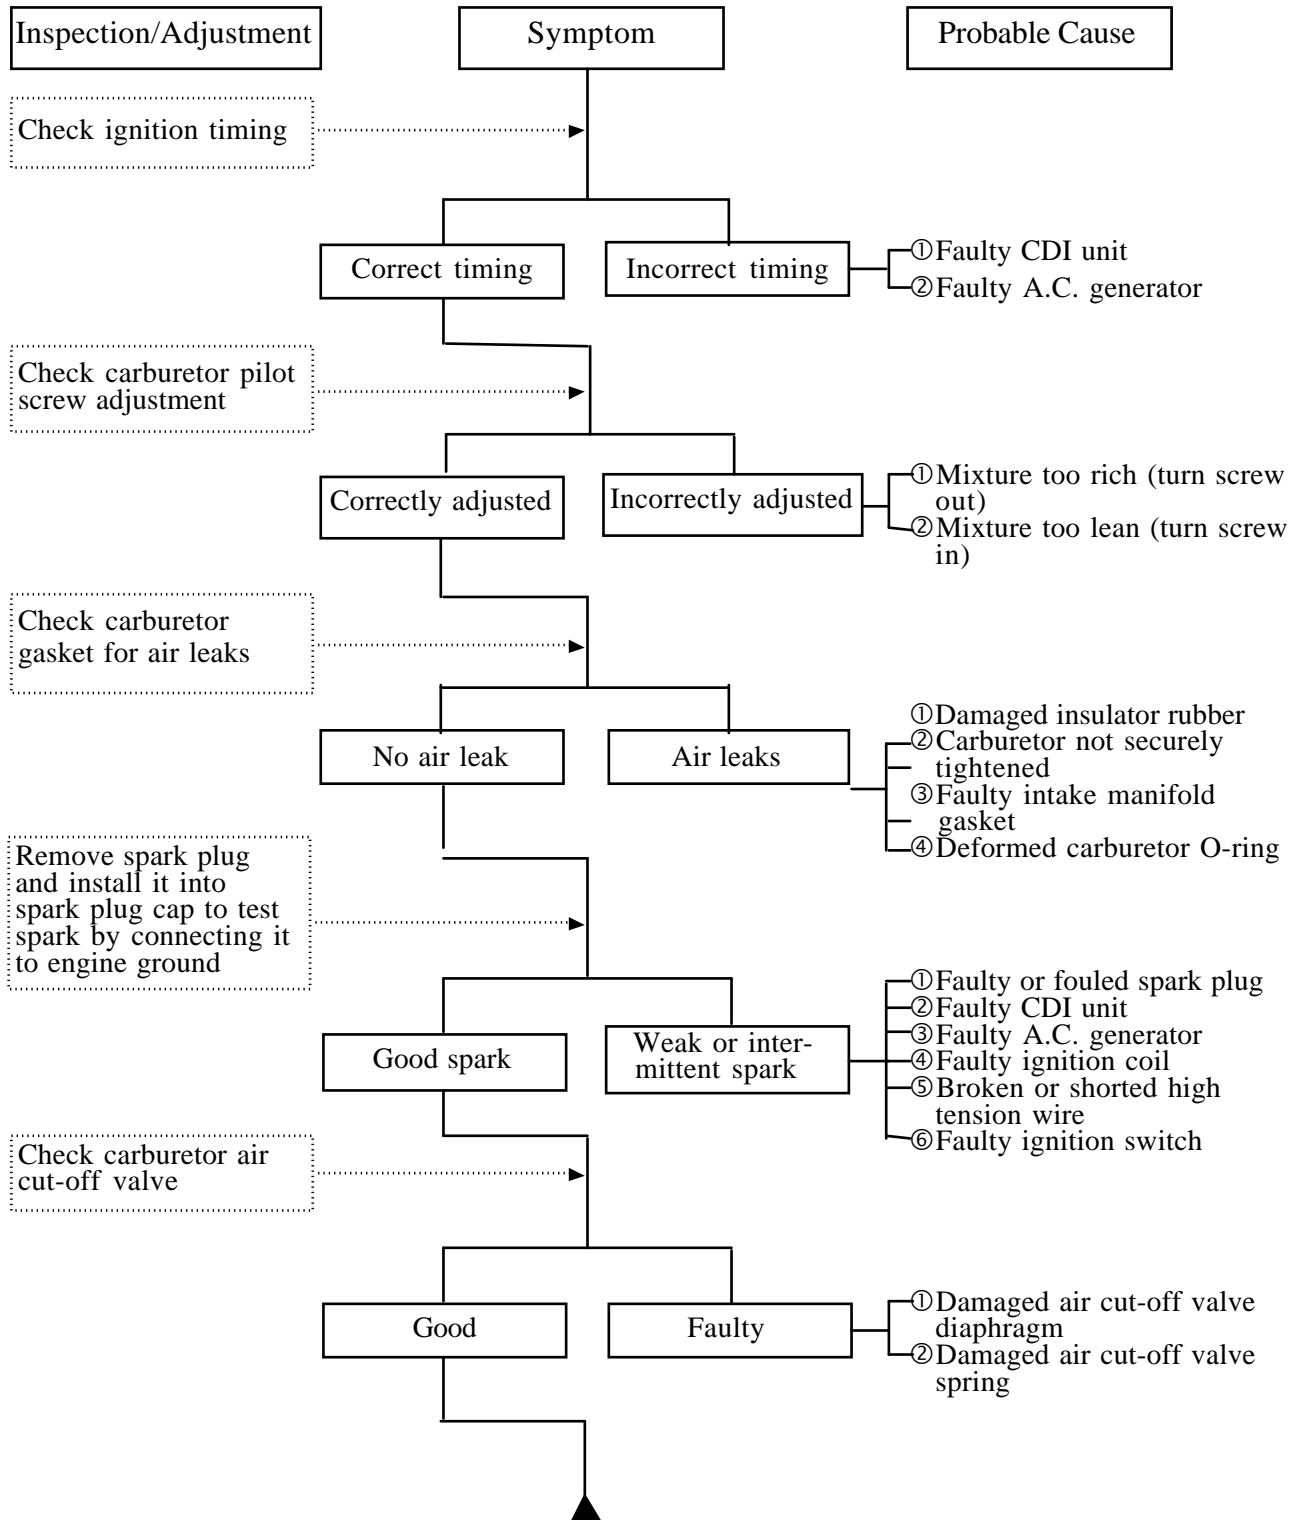


# 1. GENERAL INFORMATION

## POOR PERFORMANCE (AT HIGH SPEED)

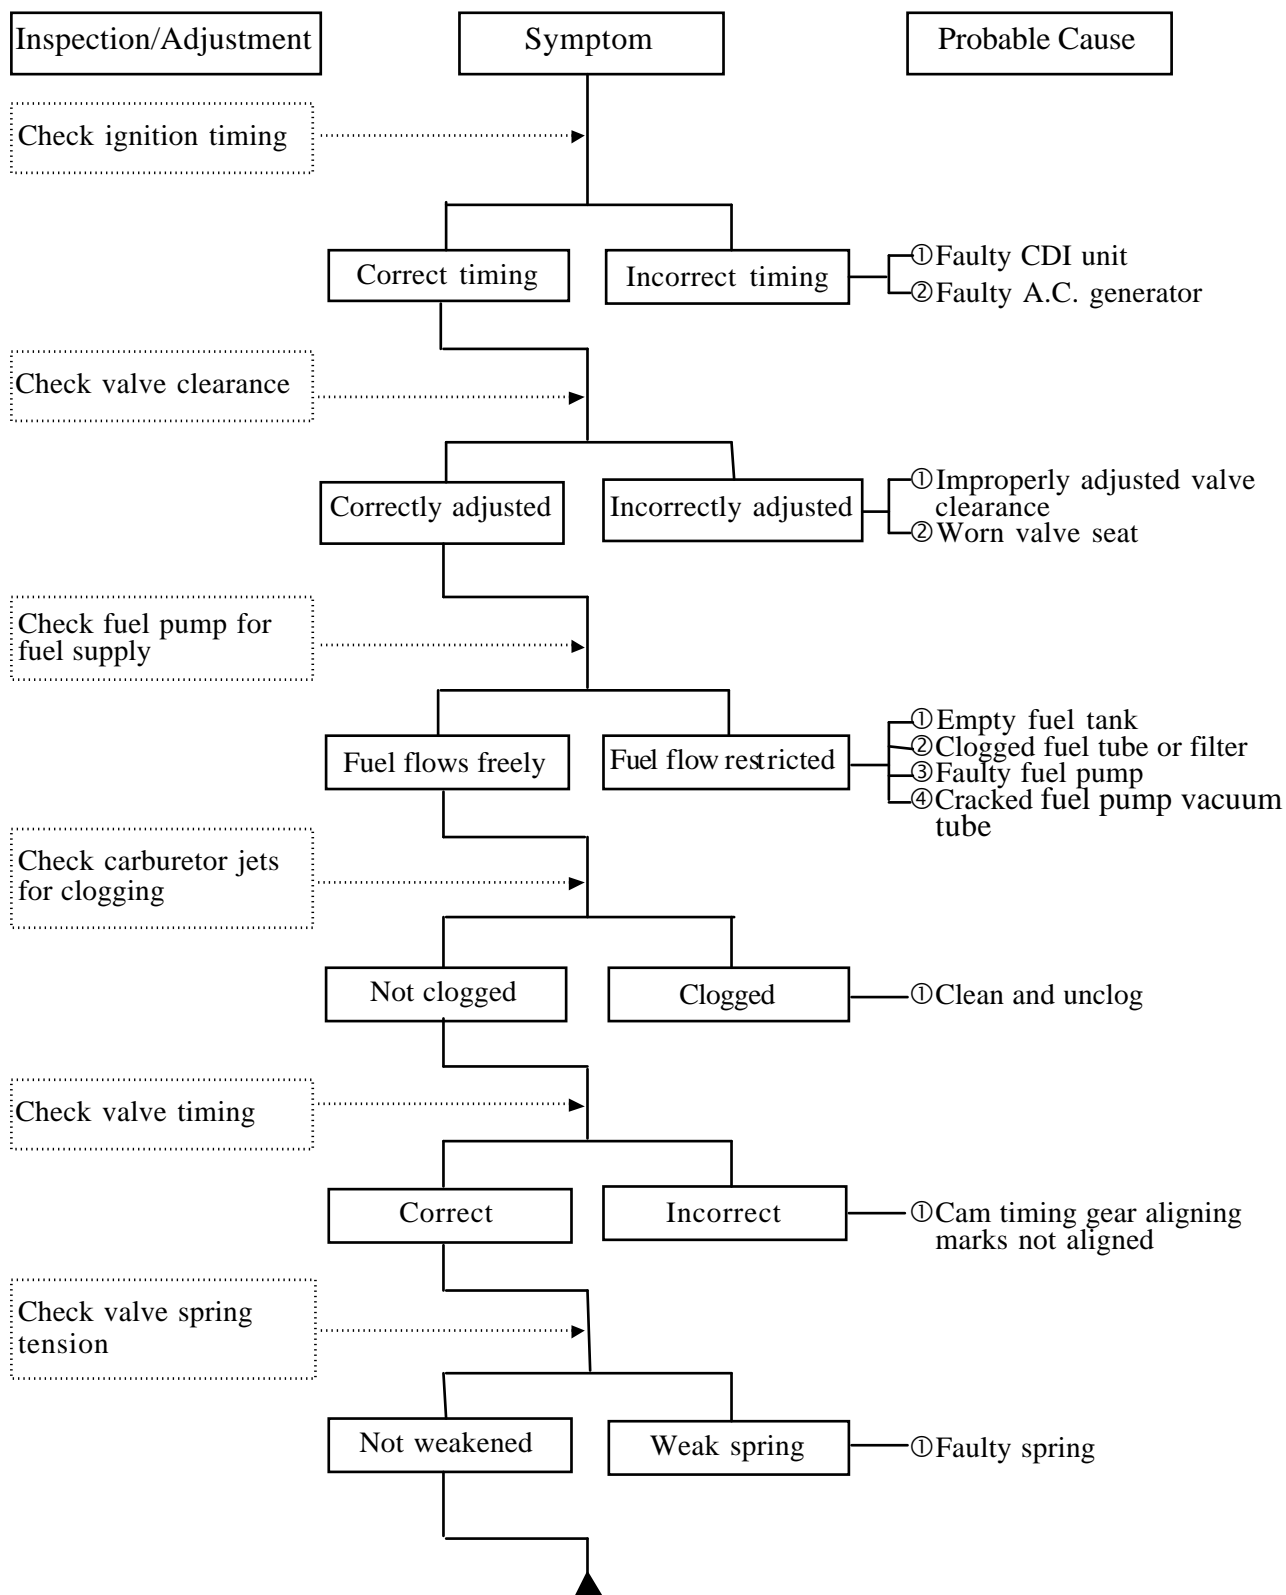


# 1. GENERAL INFORMATION

## ENGINE NOISE

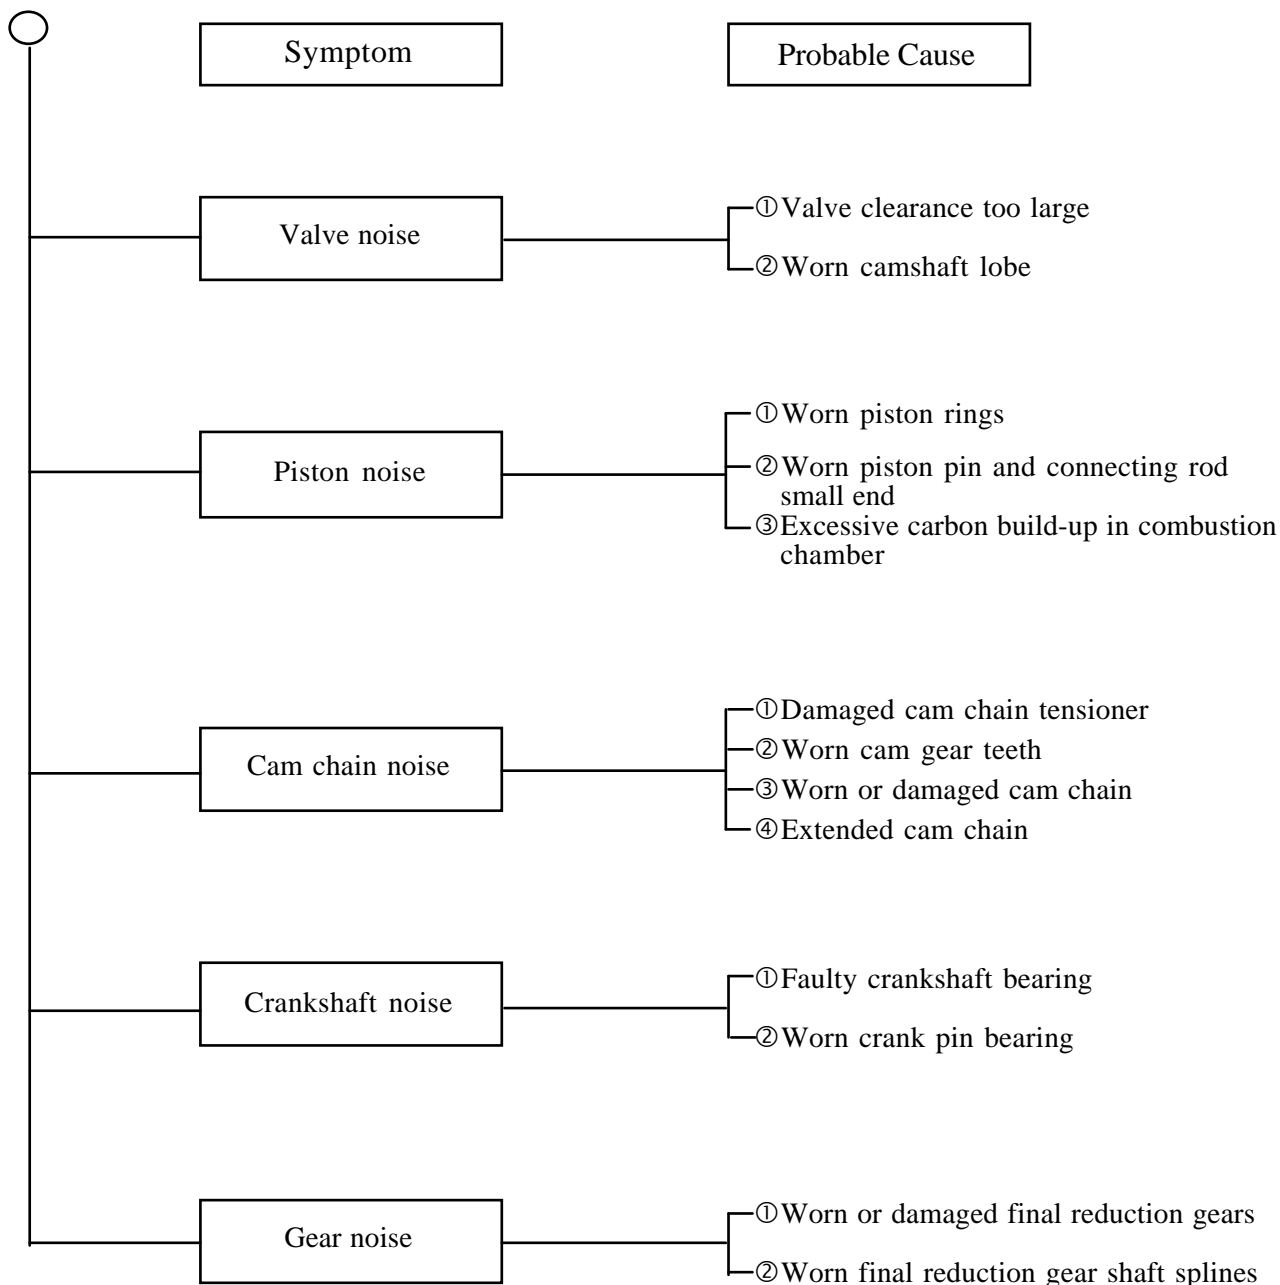

# 1. GENERAL INFORMATION


## CLUTCH, DRIVE AND DRIVEN PULLEYS

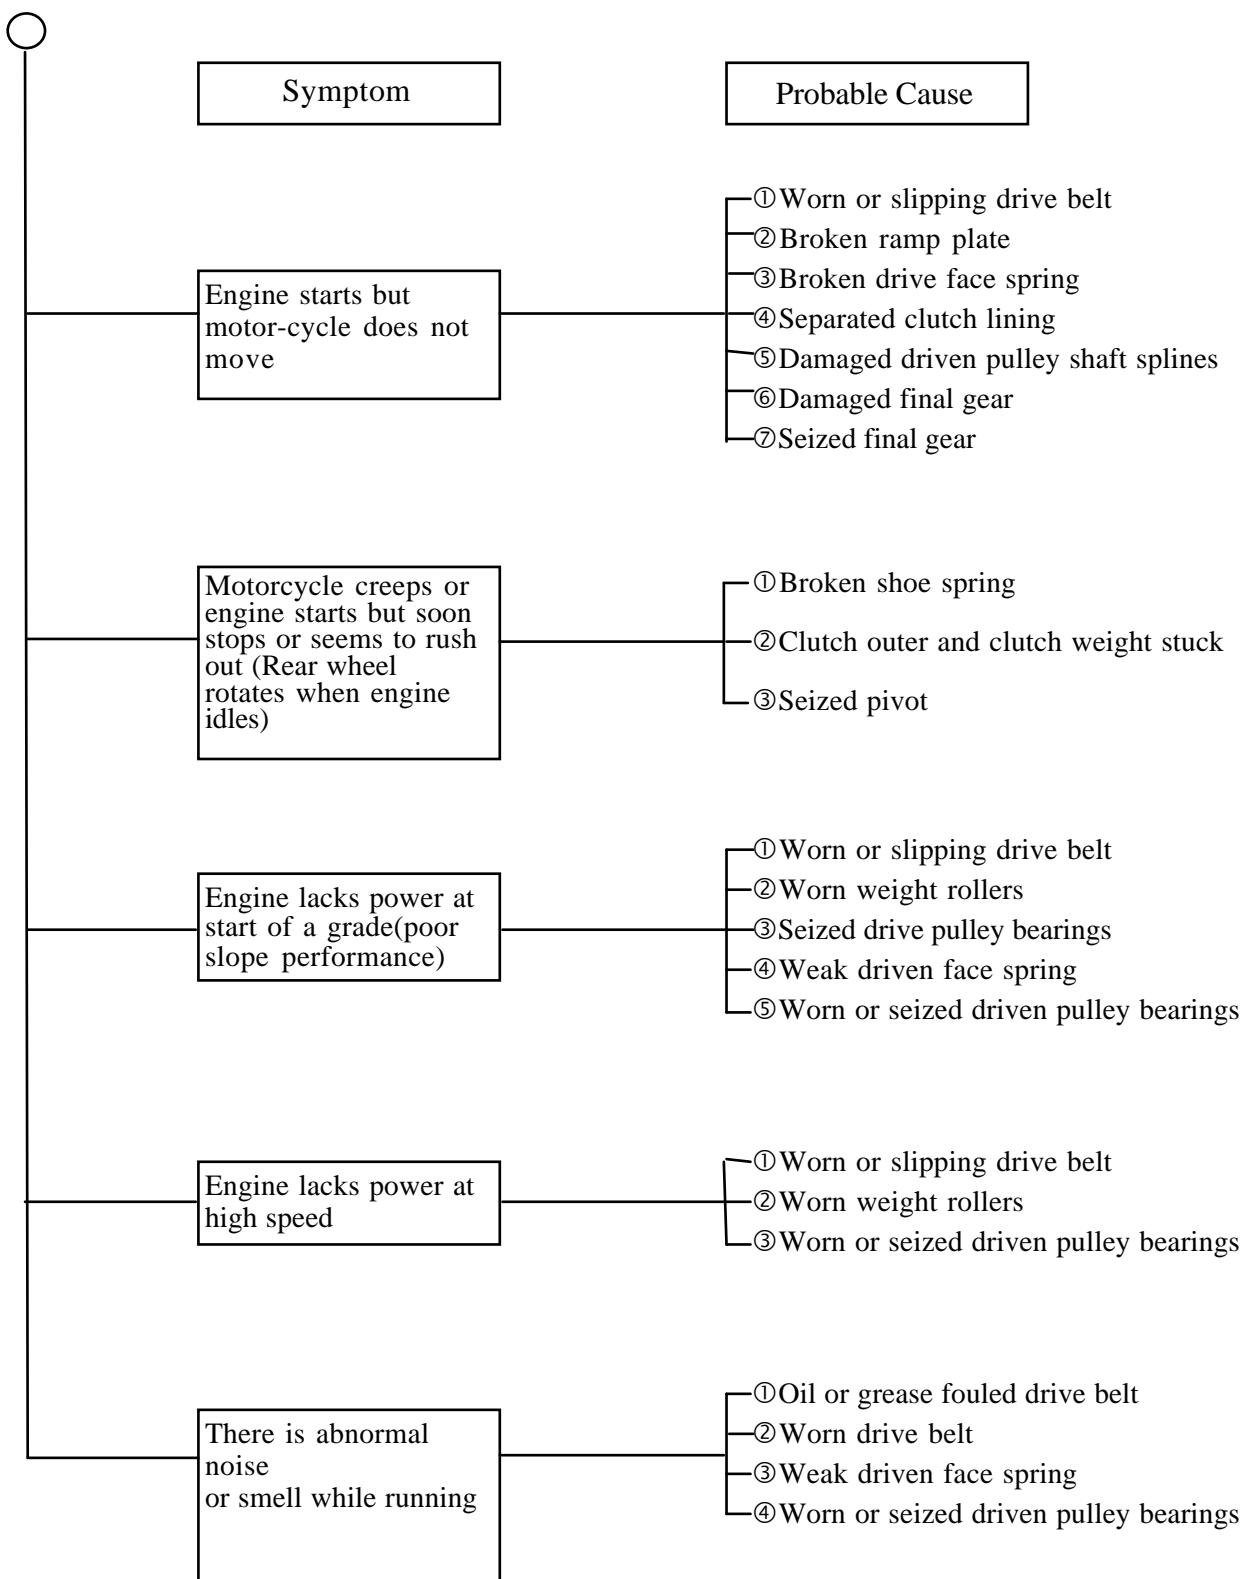


# 1. GENERAL INFORMATION

## STARTER MOTOR


### 1. Starter motor won't turn

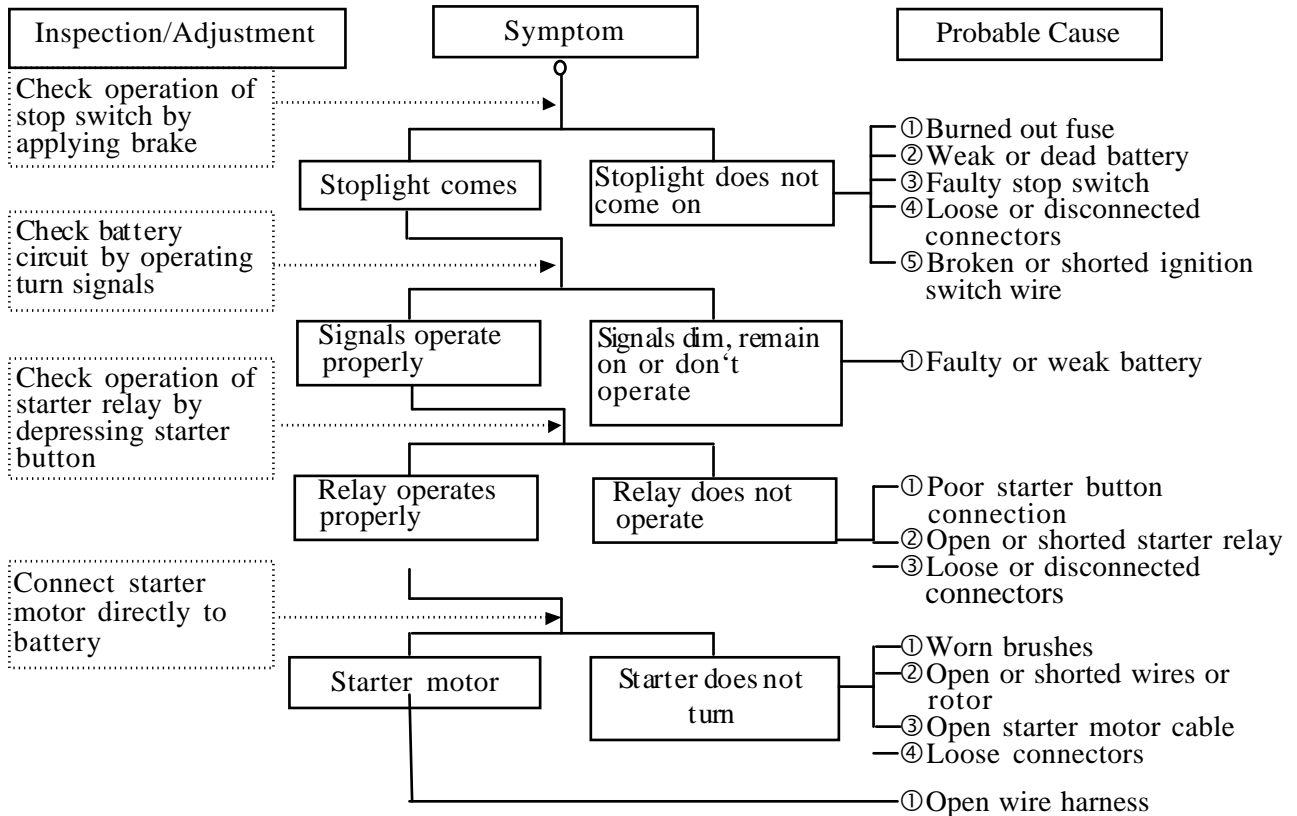

### 2. Starter motor turns slowly or idles

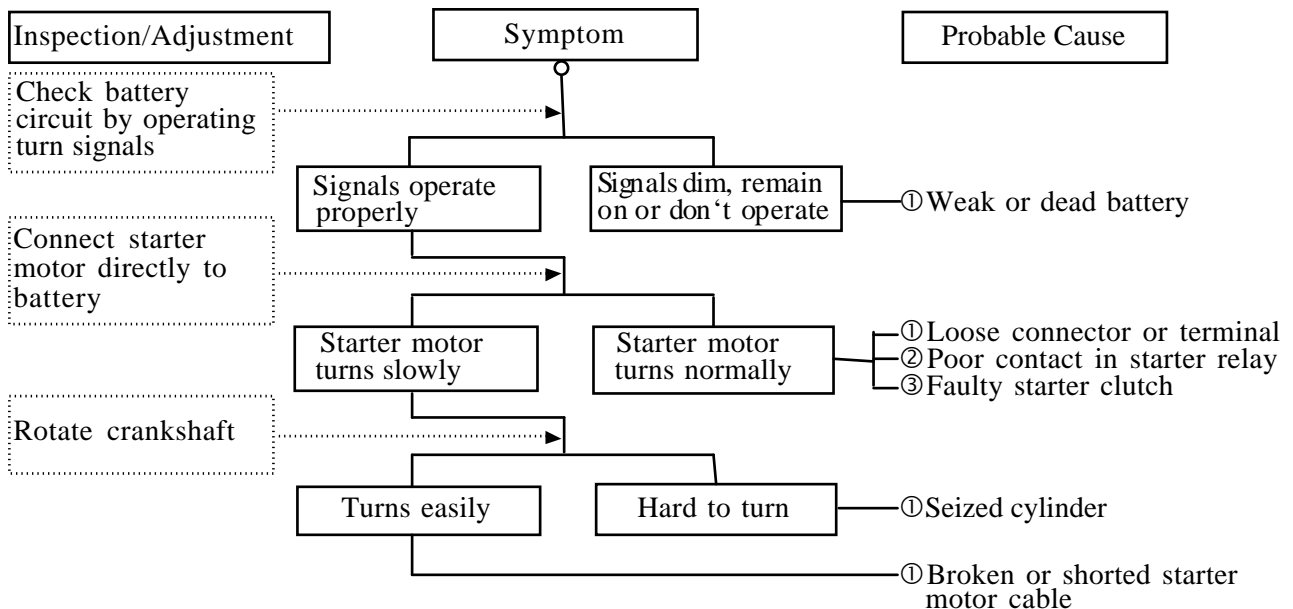


### 3. Starter motor does not stop turning

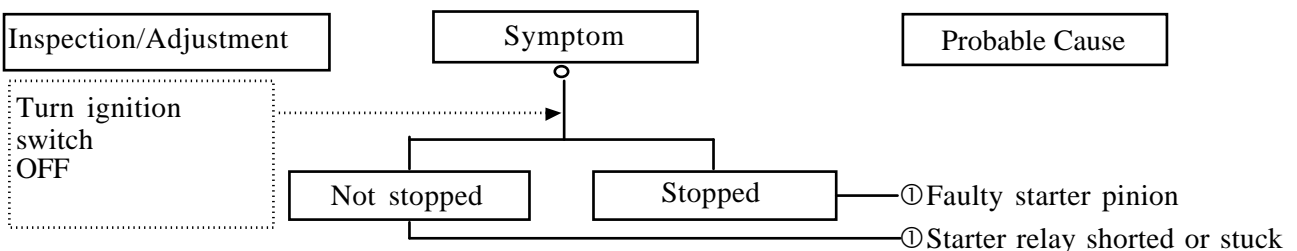



# 1. GENERAL INFORMATION


## NO SPARK AT SPARK PLUG

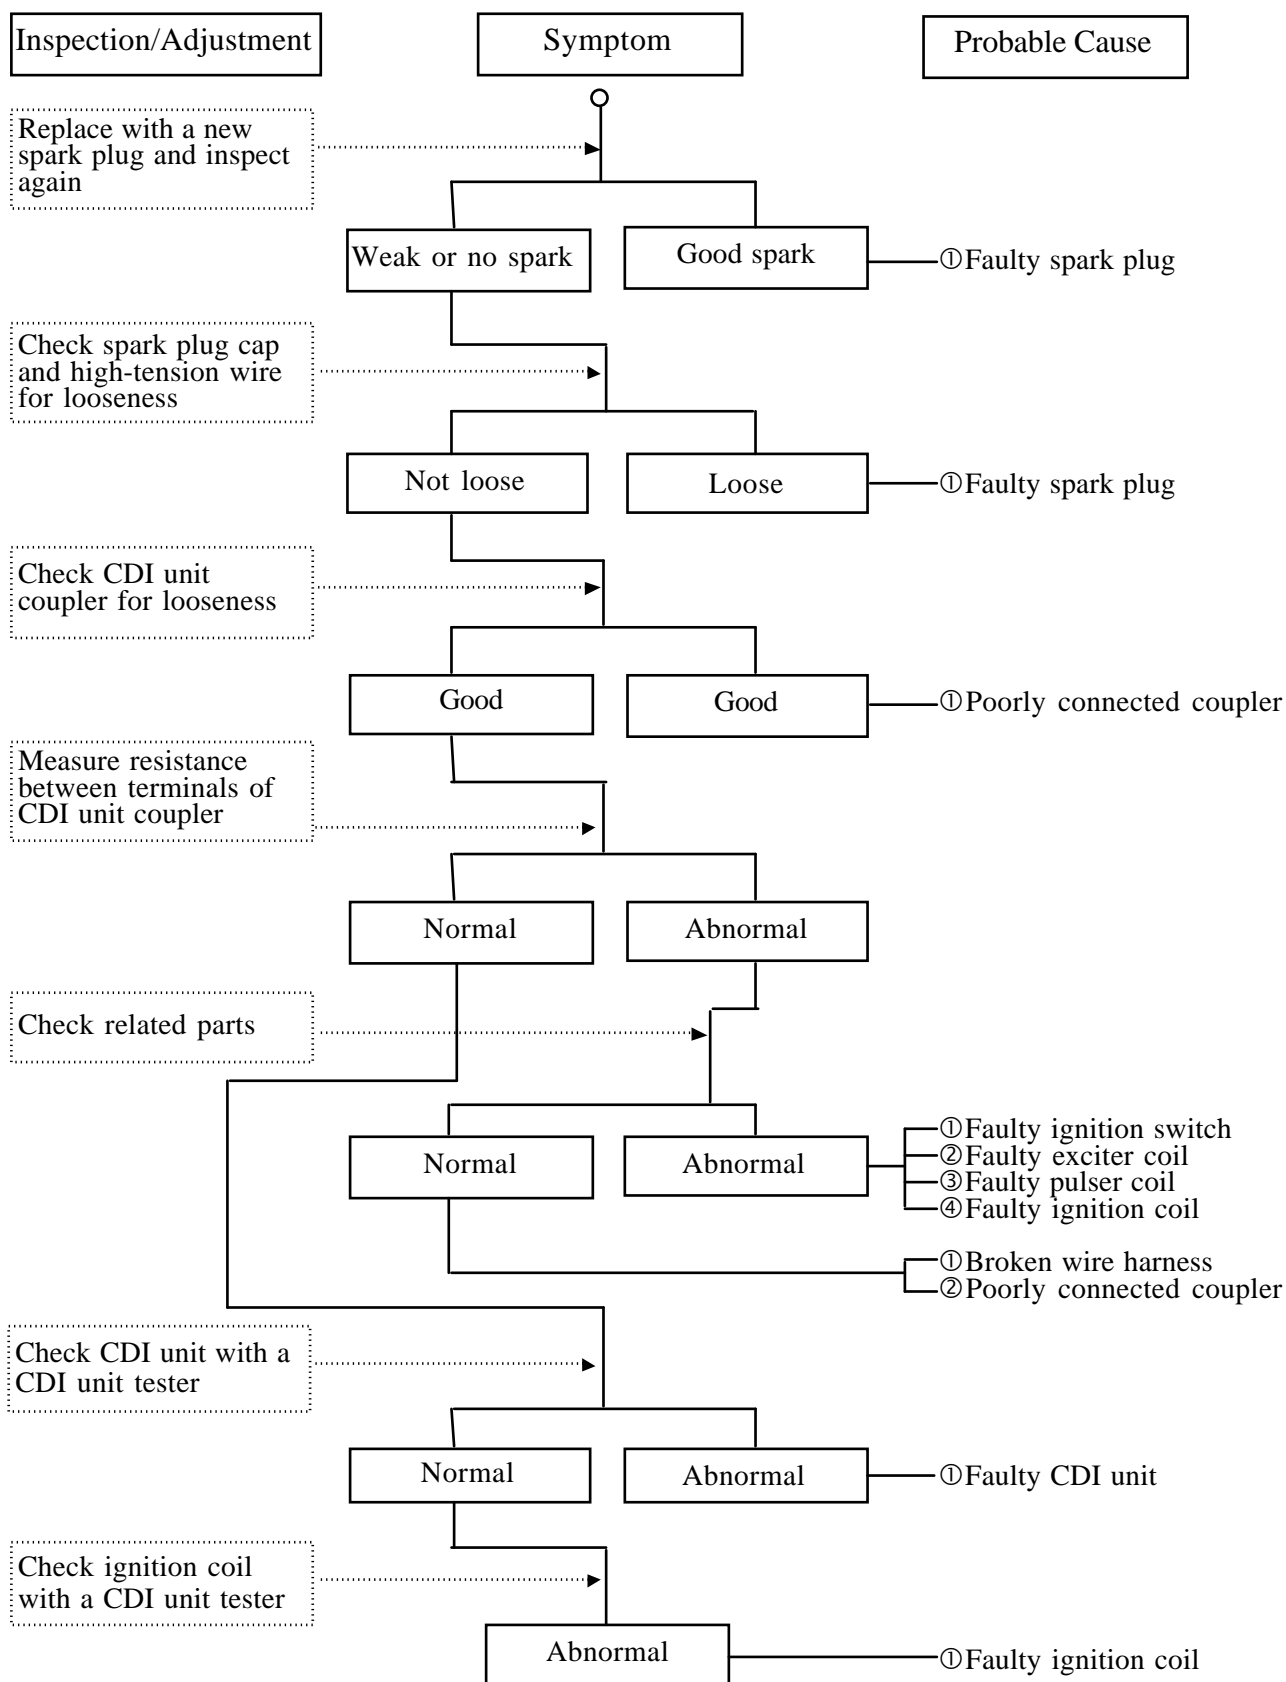


# 1. GENERAL INFORMATION

## POOR CHARGING (BATTERY OVER DISCHARGING OR OVERCHARGING)

### Undercharging

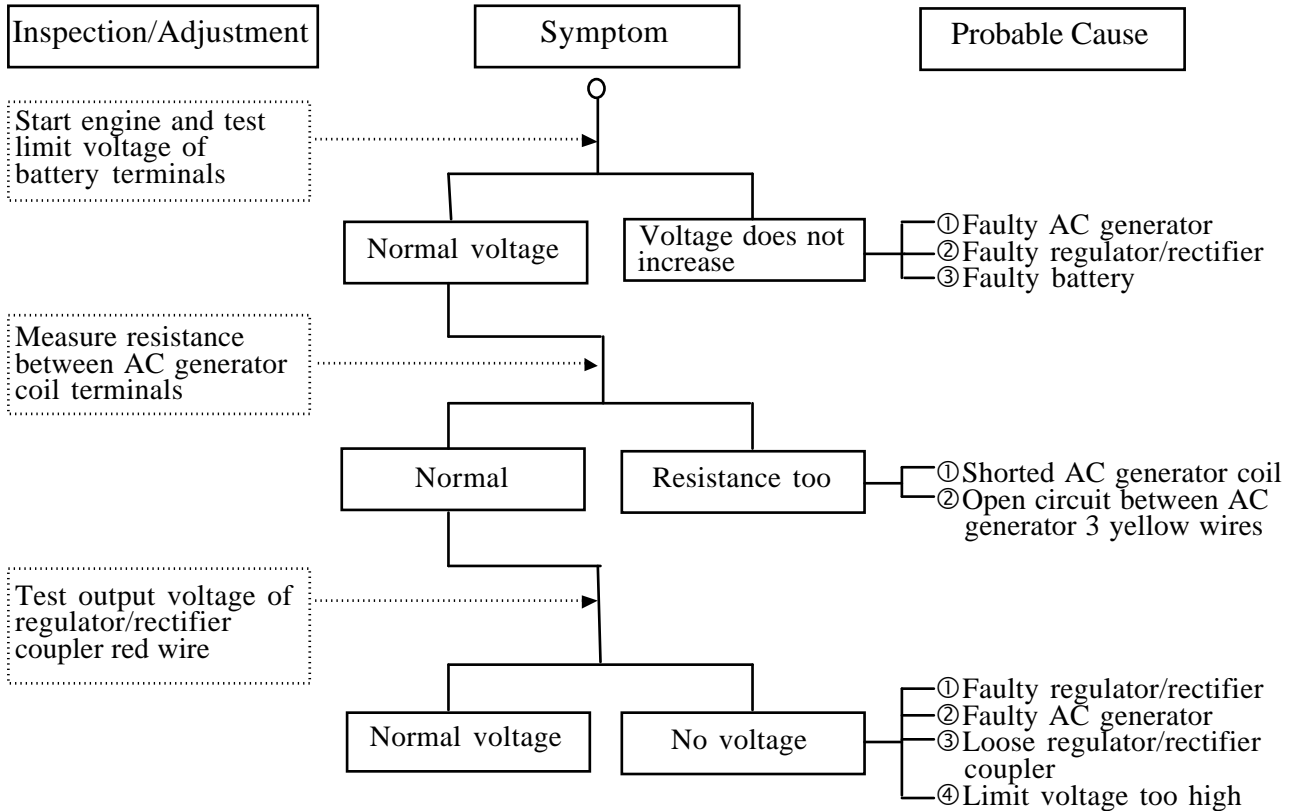


### Overcharging

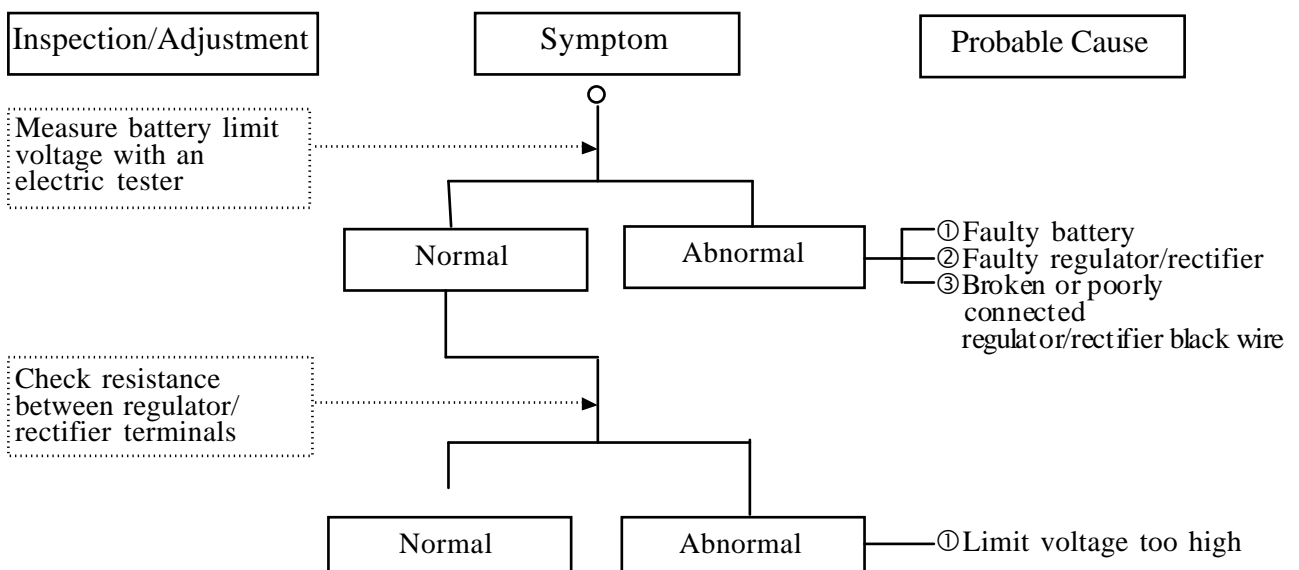


# 1. GENERAL INFORMATION

## FUEL GAUGE

### 1. Pointer does not register correctly (Ignition switch ON)

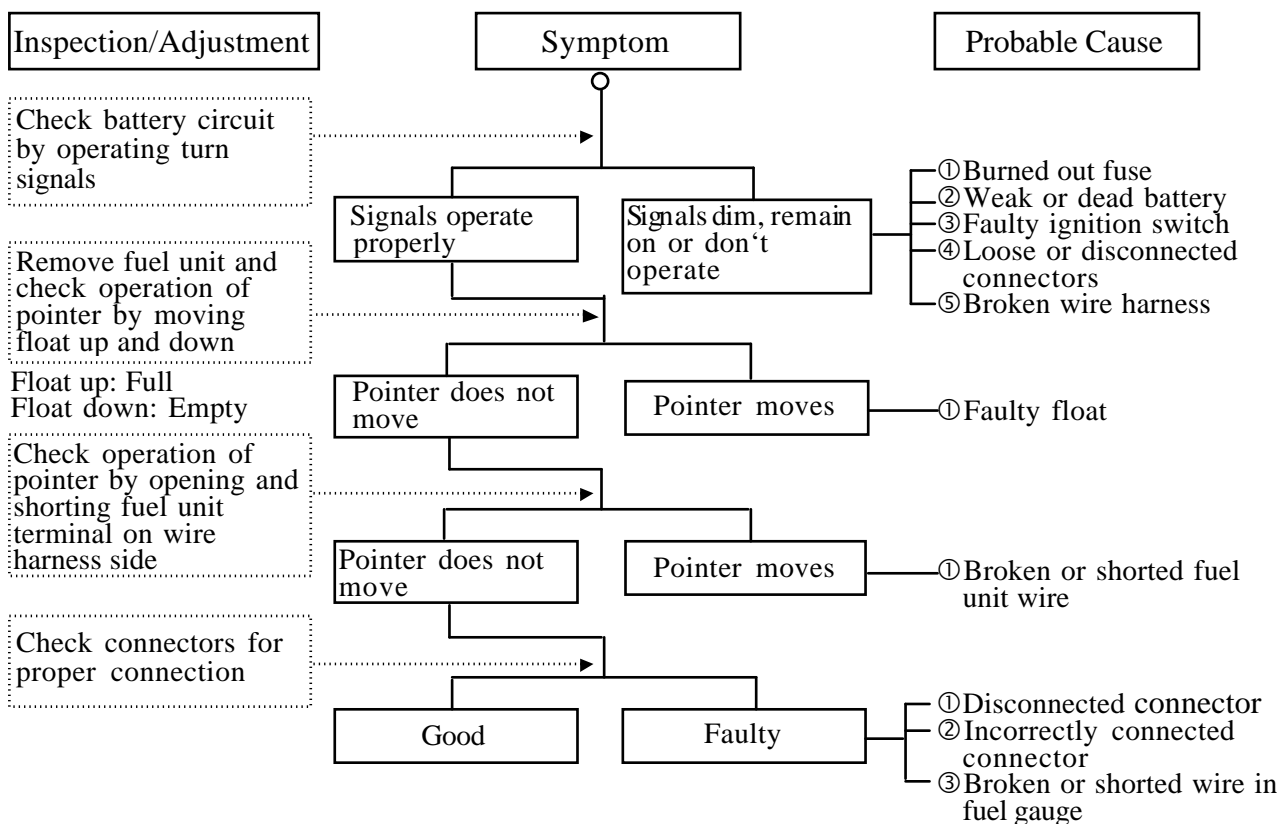

### 2. Pointer fluctuates or swings (Ignition switch ON)

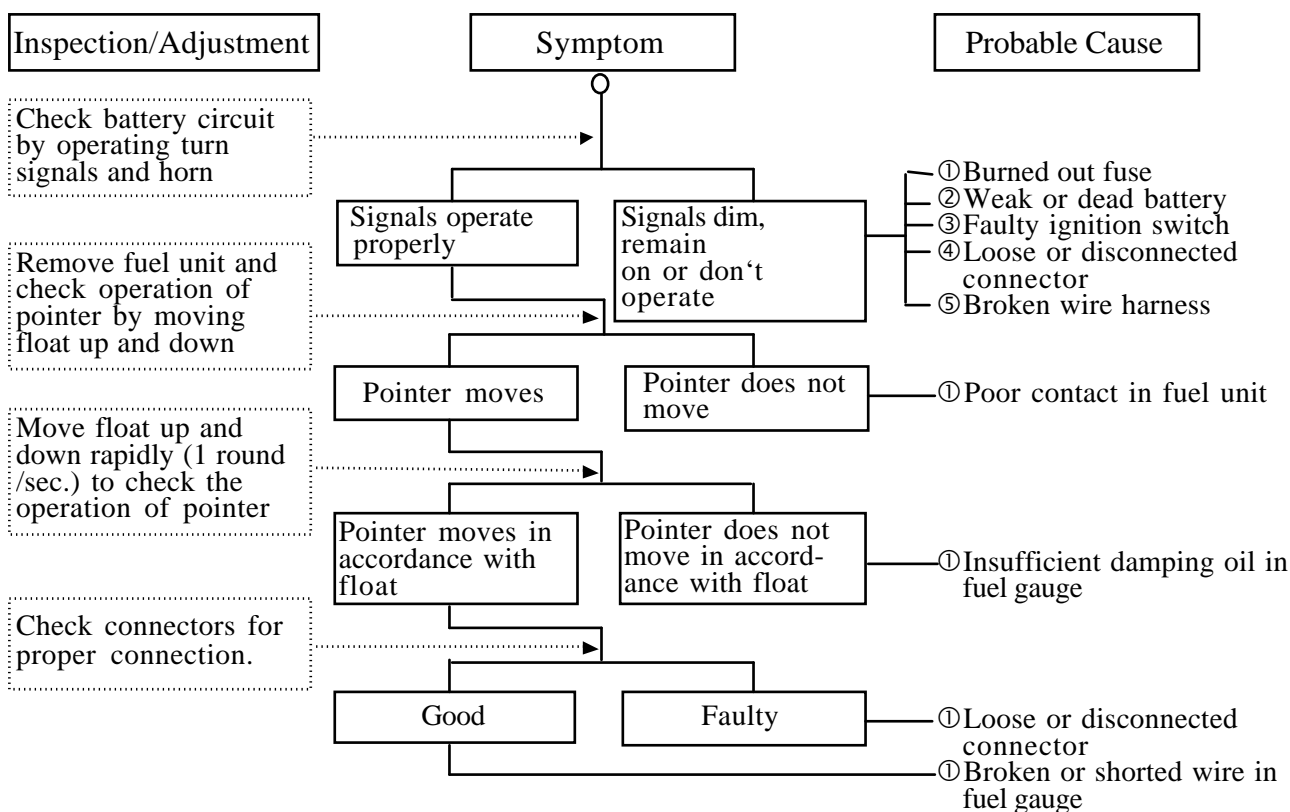

# 1. GENERAL INFORMATION

## STEERING HANDLEBAR DOES NOT TRACK STRAIGHT

| Symptom                              | Probable Cause   |
|--------------------------------------|--|
|                                      | (Front and rear tire pressures are normal)   |
| Steering is heavy                    | <ul style="list-style-type: none"> <li>① Steering stem nut too tight</li> <li>② Broken steering steel balls</li> </ul>         |
| Front or rear wheel is wobbling      | <ul style="list-style-type: none"> <li>① Excessive wheel bearing play</li> <li>② Bent rim</li> <li>③ Loose axle nut</li> </ul> |
| Steering handlebar pulls to one side | <ul style="list-style-type: none"> <li>① Misaligned front and rear wheels</li> <li>② Bent front fork</li> </ul>                |

## POOR SUSPENSION PERFORMANCE

| Symptom                | Probable Cause  |
|------------------------|---|
|                        | (Front and rear tire pressures are normal)  |
| Suspension is too soft | <ul style="list-style-type: none"> <li>① Weak shock spring</li> <li>② Excessive load</li> <li>③ Shock damper oil leaking</li> </ul>   |
| Suspension is too hard | <ul style="list-style-type: none"> <li>① Bent fork tube or shock rod</li> </ul>   |
| Suspension is noisy    | <ul style="list-style-type: none"> <li>① Fork tube and slider binding</li> <li>② Fork spring and slider binding</li> <li>③ Damaged shock stopper rubber</li> <li>④ Loose steering stem nut</li> </ul> |

## POOR BRAKE PERFORMANCE

| Symptom                | Probable Cause  |
|------------------------|---|
| Soft brake lever       | <ul style="list-style-type: none"> <li>① Worn brake linings</li> <li>② Foreign matter on brake linings</li> <li>③ Rough brake drum contacting area</li> </ul>   |
| Hard brake lever       | <ul style="list-style-type: none"> <li>① Worn brake linings</li> <li>② Foreign matter on brake linings</li> <li>③ Rough brake drum contacting area</li> </ul>   |
| Hard to brake          | <ul style="list-style-type: none"> <li>① Worn brake linings</li> <li>② Worn brake cam contacting area on</li> </ul>   |
| Poor brake performance | <ul style="list-style-type: none"> <li>① Worn brake linings</li> <li>② Foreign matter on brake linings</li> </ul>   |
| Brake squeaks          | <ul style="list-style-type: none"> <li>① Sluggish or elongated brake cables</li> <li>② Brake shoes improperly contact</li> <li>③ Water and mud in brake system</li> <li>④ Oil or grease on brake linings</li> </ul> |

## **2. EXHAUST MUFFLER/FRAME COVERS**

---

# **2**

---

### **EXHAUST MUFFLER/FRAME COVERS**


---

|                               |     |
|-------------------------------|-----|
| SCHEMATIC DRAWING .....       | 2-1 |
| SERVICE INFORMATION .....     | 2-2 |
| TROUBLESHOOTING .....         | 2-2 |
| FRAME COVERS REMOVAL.....     | 2-3 |
| EXHAUST MUFFLER REMOVAL ..... | 2-6 |

## **2. EXHAUST MUFFLER/FRAME COVERS**

---

### **SCHEMATIC DRAWING**

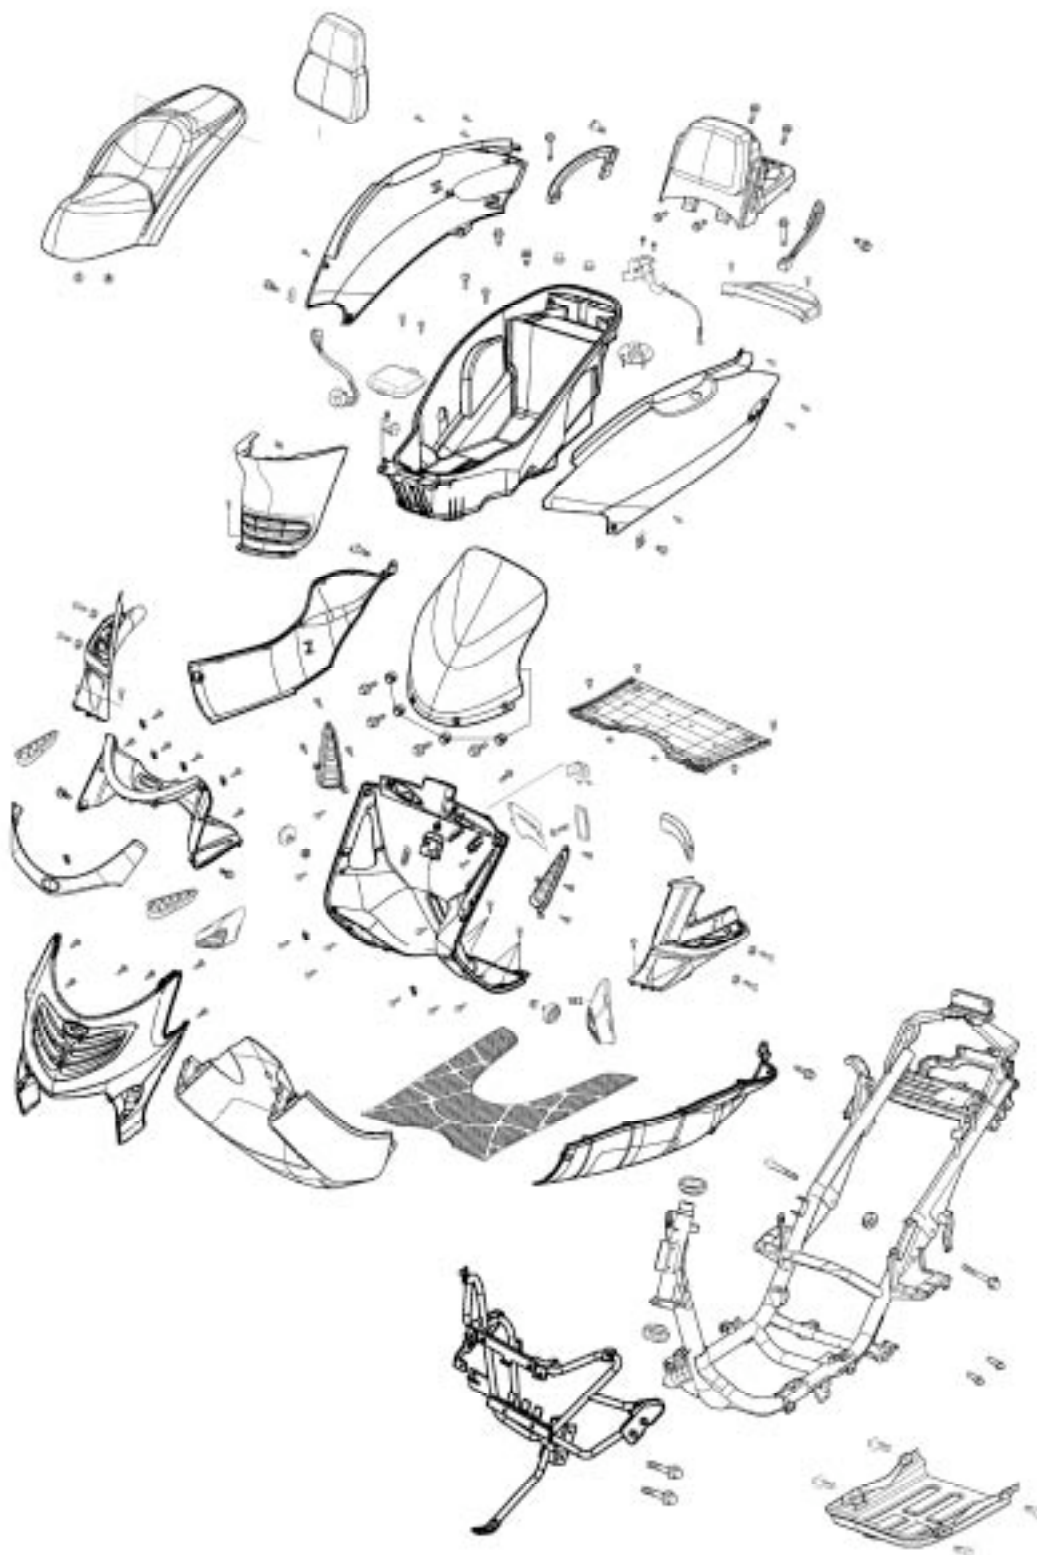

## **2. EXHAUST MUFFLER/FRAME COVERS**

---

### **SERVICE INFORMATION**

#### **GENERAL INSTRUCTIONS**

- When removing frame covers, use care not to pull them by force because the cover joint claws may be damaged.
- Make sure to route cables and harnesses according to the Cable & Harness Routing.

#### **TORQUE VALUES**

|                                |         |
|--------------------------------|---------|
| Exhaust muffler lock bolt      | 34.3N-m |
| Exhaust muffler joint lock nut | 11.8N-m |

### **TROUBLESHOOTING**

#### **Noisy exhaust muffler**

- Damaged exhaust muffler
- Exhaust muffler joint air leaks

#### **Lack of power**

- Caved exhaust muffler
- Clogged exhaust muffler
- Exhaust muffler air leaks




## 2. EXHAUST MUFFLER/FRAME COVERS


### FRAME COVERS REMOVAL

#### REAR CARRIER & HAND RAIL REMOVAL

Remove the met-in box:  
First remove the three bolts and two nuts attaching the met-in box.  
Remove the met-in box.

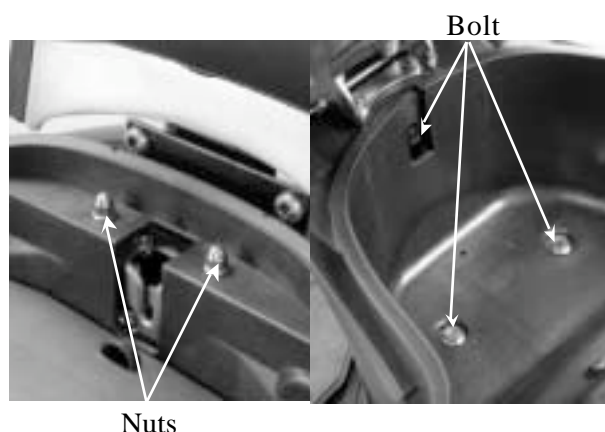


Remove the hand rail right and left lock hex bolts.  
Remove the two hex bolts  
Remove the rear carrier and hand rail.

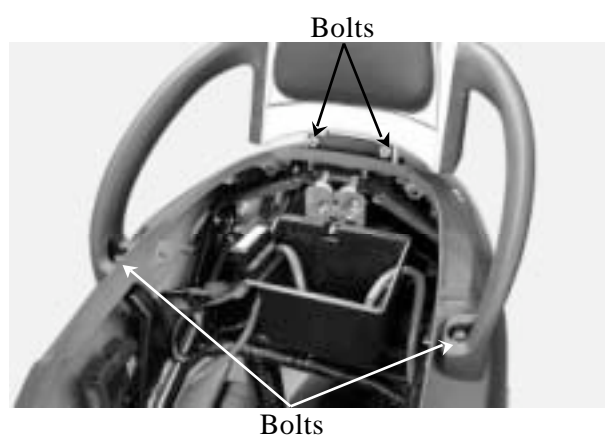


### FRAME BODY COVER REMOVAL

Remove the two screws on the center cover.  
Remove the center cover.

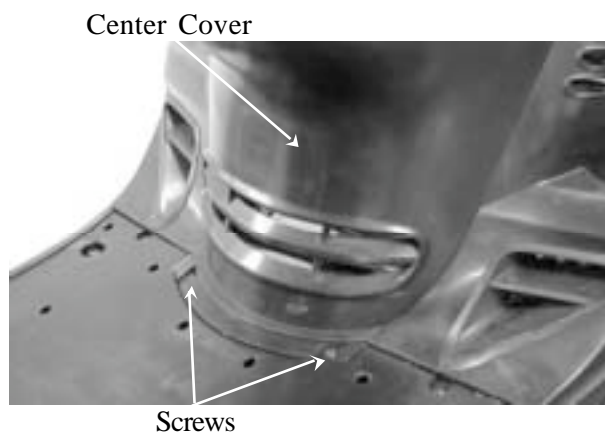


Remove the three bolts on the back fender.  
Remove the back fender.

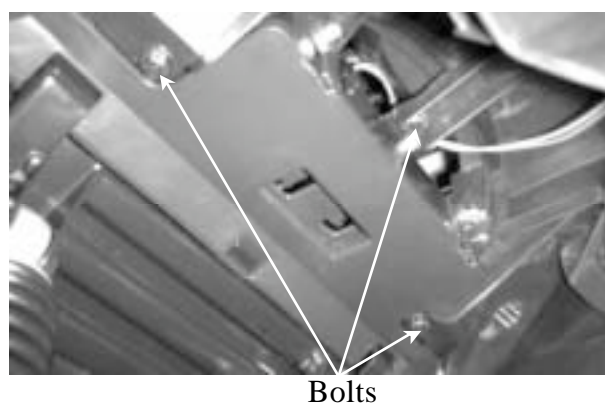

## 2. EXHAUST MUFFLER/FRAME COVERS


Remove the two screws on the molding covers.  
Remove the molding covers.

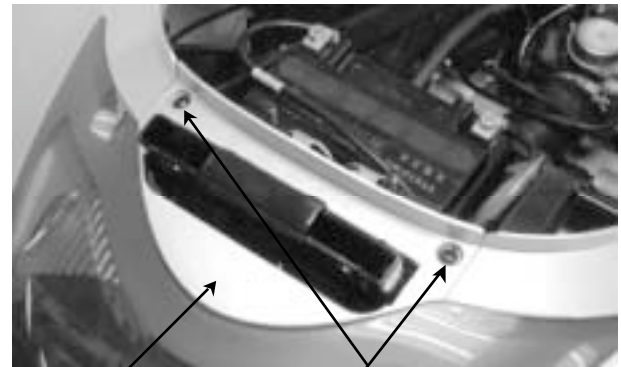

Molding Cover

Screws


Remove the two nuts and one bolt on the back taillight.

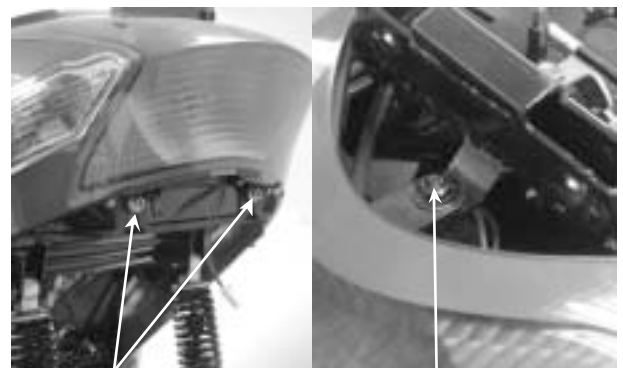

Nuts

Bolt


Remove the left and right sides screws on the frame body cover.  
Remove the frame body cover.

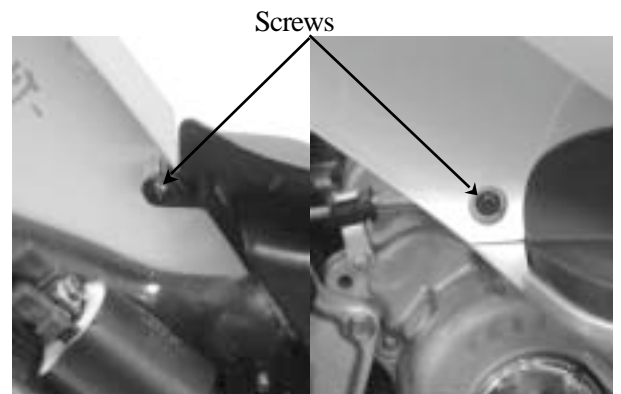

Screws

### FLOOR BOARD REMOVAL

Remove the bolt on the front right and left side covers.

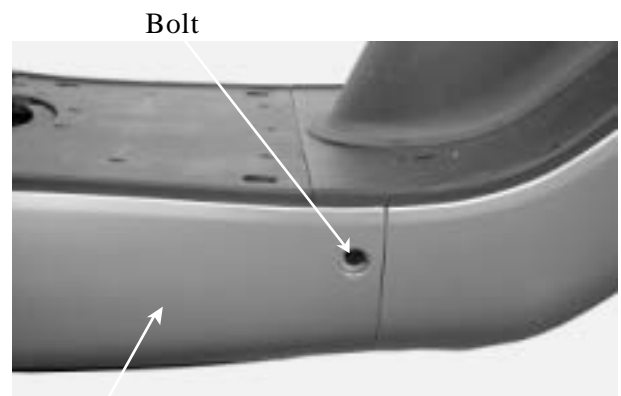


Bolt


Side Cover

## 2. EXHAUST MUFFLER/FRAME COVERS

Remove the left and right side screws on the side cover.  
Remove the side cover.

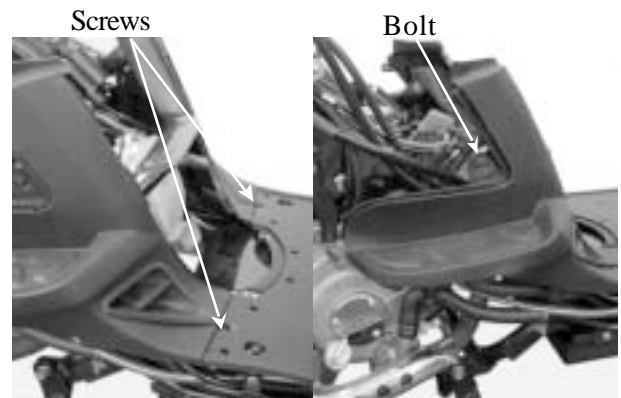


Remove the four bolts on the floor board.  
Remove the floor board.

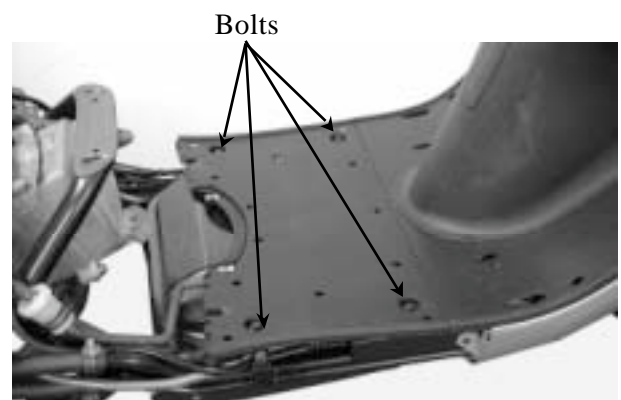


### **FRONT UPPER COVER REMOVAL**

Remove the two screws on the front upper cover.  
Remove the front upper cover.

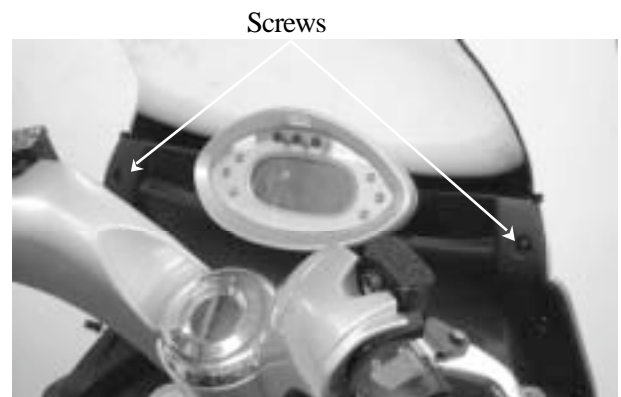

Remove the four bolts on the front windshield.  
Remove the front windshield.

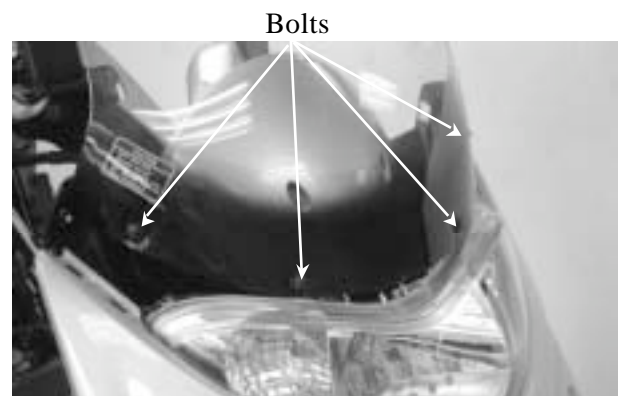

## 2. EXHAUST MUFFLER/FRAME COVERS

### FRONT COVER REMOVAL

First remove the front upper cover.  
Remove the two bolts attaching the front cover.



Bolts

Remove the six screws on the back of the front cover.

Disconnect the right/left turn signal light wire connectors.

Remove the front cover


The installation sequence is the reverse of removal.



Screws

Remove the six screws on the front lower cover.

Remove the front lower cover.

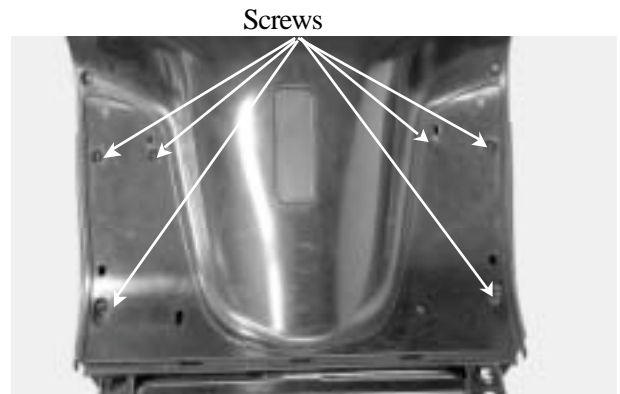

Screws

### BACK COVER REMOVAL


Remove the front cover.

Remove the key moldings.

Remove the fuel cap moldings.

Remove the back cover bolt.

Remove the back cover.

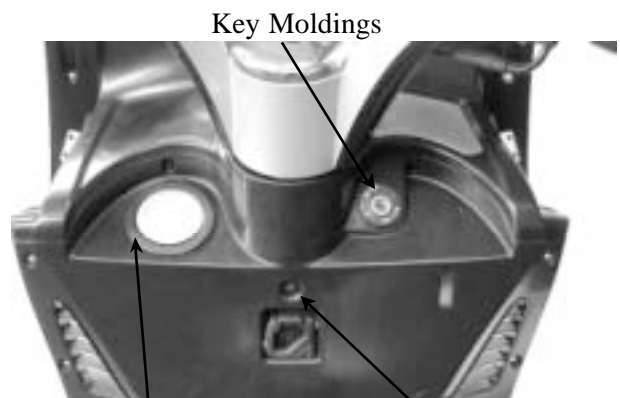


Fuel Cap Moldings

Bolts

## 2. EXHAUST MUFFLER/FRAME COVERS


Remove the three screws attaching fuel tank inlet tube join.  
Remove the back cover.

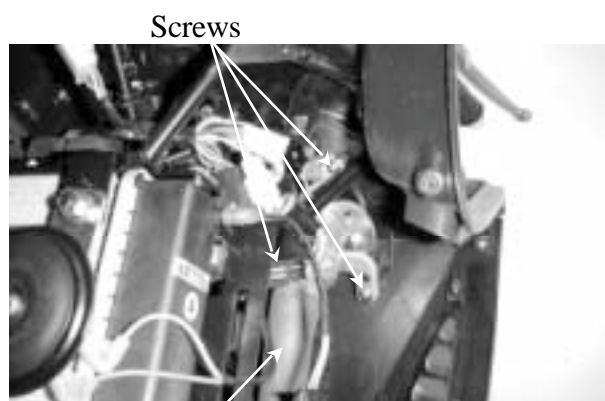

Fuel Tank Inlet Tube

### **BOTTOM COVER REMOVAL**

Remove the side stand.  
Remove the four bolts attaching the bottom cover.  
Remove the bottom cover.

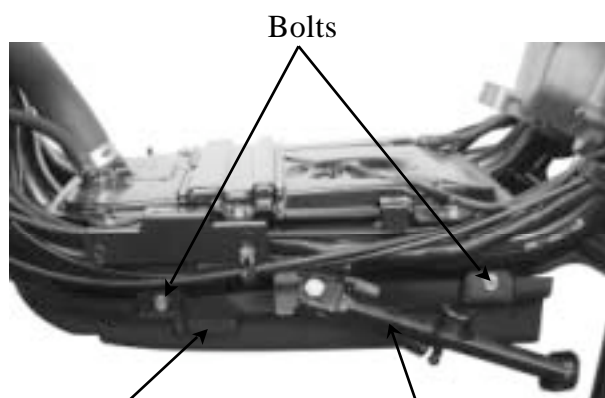


Bottom Cover

Side Stand

### **FRONT FENDER REMOVAL**

Remove the two bolts attaching the fender.  
Remove the front fender cover.  
The installation sequence is the reverse of removal.

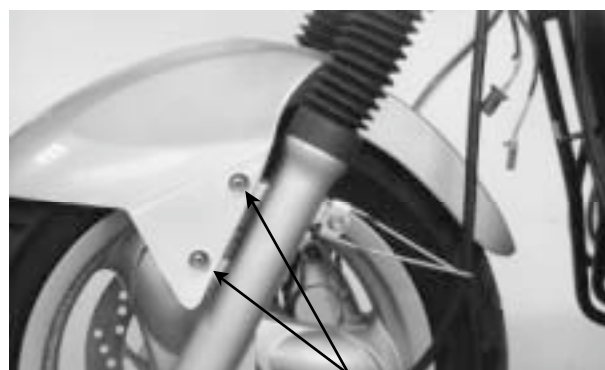

Bolts


### **EXHAUST MUFFLER REMOVAL**

Remove the two exhaust muffler joint lock nuts.  
Remove the three exhaust muffler lock bolts to remove the exhaust muffler.  
Remove the exhaust muffler joint packing collar.  
The installation sequence is the reverse of removal.

#### **Torque:**

Exhaust muffler joint lock nut: 11.8N-m

Exhaust muffler lock bolt: 34.3N-m

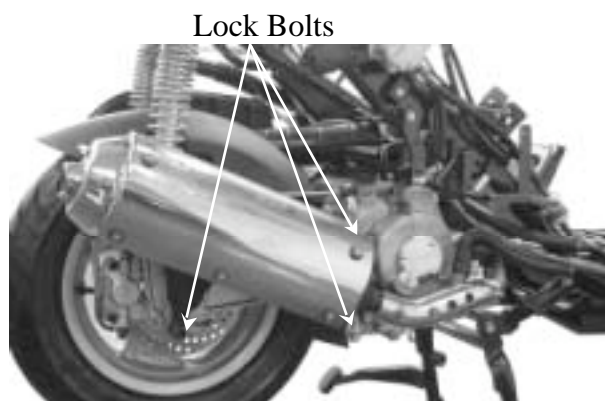

Lock Bolts



## 2. EXHAUST MUFFLER/FRAME COVERS

### HANDLEBAR COVER REMOVAL


First remove the three screws attaching the handlebar under cover.

Remove the handlebar under cover.




Screws

Remove the screw from the handlebar upper cover.

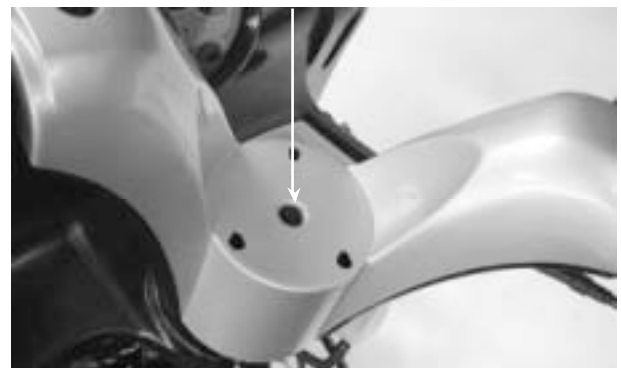

Screw

Remove the screw from the bottom of handlebar upper cover.  
Remove the handlebar upper cover.

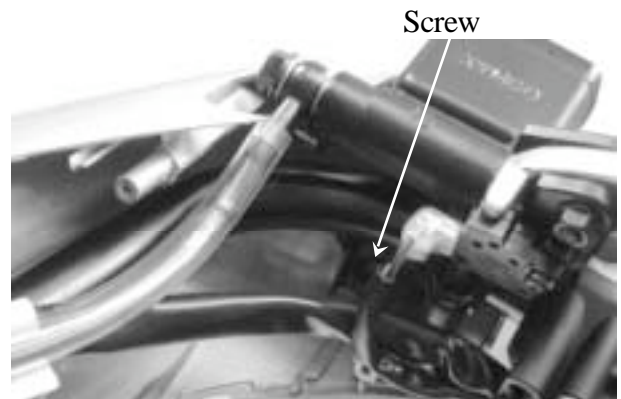

Screw



### 3. INSPECTION/ADJUSTMENT

---

---

# 3

---

---

## INSPECTION/ADJUSTMENT

---

|                                |      |
|--------------------------------|------|
| SERVICE INFORMATION .....      | 3- 1 |
| MAINTENANCE SCHEDULE .....     | 3- 2 |
| FUEL LINE/FUEL FILTER .....    | 3- 3 |
| THROTTLE OPERATION .....       | 3- 3 |
| ENGINE OIL .....               | 3- 4 |
| AIR CLEANER .....              | 3- 5 |
| SPARK PLUG .....               | 3- 5 |
| VALVE CLEARANCE .....          | 3- 6 |
| CARBURETOR IDLE SPEED .....    | 3- 6 |
| IGNITION TIMING .....          | 3- 7 |
| CYLINDER COMPRESSION .....     | 3- 7 |
| FINAL REDUCTION GEAR OIL ..... | 3- 8 |
| DRIVE BELT .....               | 3- 8 |
| HEADLIGHT AIM .....            | 3- 9 |
| CLUTCH SHOE WEAR .....         | 3- 9 |
| COOLING SYSTEM .....           | 3- 9 |
| BRAKE SYSTEM .....             | 3-10 |
| NUTS/BOLTS/FASTENERS .....     | 3-11 |
| WHEELS/TIRES .....             | 3-11 |
| STEERING HANDLEBAR .....       | 3-11 |
| SUSPENSION .....               | 3-11 |

# 3. INSPECTION/ADJUSTMENT

## SERVICE INFORMATION

### GENERAL

#### WARNING

- Before running the engine, make sure that the working area is well-ventilated. Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas which may cause death to people.
- Gasoline is extremely flammable and is explosive under some conditions. The working area must be well-ventilated and do not smoke or allow flames or sparks near the working area or fuel storage area.

## SPECIFICATIONS

### ENGINE

Throttle grip free play : 2\_ 6mm

Spark plug : NGK: DPR7EA9

Spark plug gap : 0.9mm

Valve clearance : IN: 0.1mm EX: 0.1mm

Idle speed : 1700rpm

Engine oil capacity:

At disassembly : 1.1 liter

At change : 0.9 liter

Gear oil capacity :

adiator capacity : 1000±20cc

At disassembly : 0.20 liter

At change : 0.18 liter

Cylinder compression : 15±2kg/cm\_

Ignition timing : BTDC 10°±3°/1500rpm

Coolant capacity : 1400±20cc

R

Reserve tank capacity : 400±20cc

### CHASSIS

Front/rear brake free play: 20\_ 30mm

### TIRE

|       | 1 Rider    | 2 Riders   |
|-------|------------|------------|
| Front | 1.75kg/cm_ | 1.75kg/cm_ |
| Rear  | 2.00kg/cm_ | 2.25kg/cm_ |

### TIRE SPECIFICATION:

Front : 120/70-12 56J

Rear : 140/70-12 59J

### TORQUE VALUES

Front axle nut : 14.8\_ 68.6N-m

Rear axle nut : 107.8\_ 127.4N-m

### 3. INSPECTION/ADJUSTMENT

#### MAINTENANCE SCHEDULE

Perform the periodic maintenance at each scheduled maintenance period.

I: Inspect, and Clean, Adjust, Lubricate or Replace if necessary.

A: Adjust C: Clean R: Replace T : Tighten

| Item                     | Frequency | Whichever comes first ⇨<br>⇩ | Regular Service Mileage (km)                   |      |      |      |      |       |
|--------------------------|-----------|------------------------------|--|------|------|------|------|-------|
|                          |           |                              | 1000   | 2000 | 4000 | 6000 | 8000 | 10000 |
| Engine oil               |           |                              | R New motorcycle 300km                         | R    | R    | R    | R    | R     |
| Engine oil filter screen |           |                              | Replace at every 6000 km(R)                    |      |      |      |      |       |
| Fuel filter screen       |           |                              |  |      |      |      |      | R     |
| Gear oil                 | Note 3    |                              | R New motorcycle 300km                         |      | R    |      |      | R     |
| Valve clearance          |           |                              |  | A    | A    |      | A    |       |
| Carburetor               |           |                              |  |      | I    |      | I    |       |
| Air Cleaner              | Note 2,3  |                              | I  |      | R    |      |      | R     |
| Spark plug               |           |                              | Clean at every 3000km and replace if necessary |      |      |      |      |       |
| Brake system             |           |                              | I  | I    | I    | I    | I    | I     |
| Drive belt               |           |                              |  |      |      |      | I    |       |
| Suspension               |           |                              |  |      | I    |      | I    |       |
| Nut, bolt, fastener      |           |                              |  |      |      |      | I    |       |
| Tire                     |           |                              |  |      | I    |      | I    |       |
| Steeringhead bearing     |           |                              | I  |      |      | I    | I    |       |
| Brake fluid              |           |                              | Perform pre-ride inspection daily              |      |      |      |      |       |
| Radiator coolant         |           |                              | Replace every year or at every 10000km (R)     |      |      |      |      |       |
| Radiator core            |           |                              |  |      |      | I    |      | I     |
| Radiator cap             |           |                              |  |      |      | I    |      | I     |
| Brake lever              |           |                              |  |      | I    |      |      | I     |
| Brake shoe wear          |           |                              |  |      | I    |      |      | I     |
| Shock absorber           |           |                              |  |      | I    |      |      | I     |

- In the interest of safety, we recommend these items be serviced only by an authorized KYMCO motorcycle dealer.

Note: 1. For higher odometer readings, repeat at the frequency interval established here.

2. Service more frequently when riding in dusty or rainy areas.

3. Service more frequently when riding in rain or at full throttle.

### 3. INSPECTION/ADJUSTMENT


#### FUEL LINE/FUEL FILTER

Remove the center cover.

Check the fuel lines and replace any parts which show signs of deterioration, damage or leakage.

Check for dirty or clogged fuel filter and replace with a new one if it is clogged.

- \* • Do not smoke or allow flames or sparks in your working area.

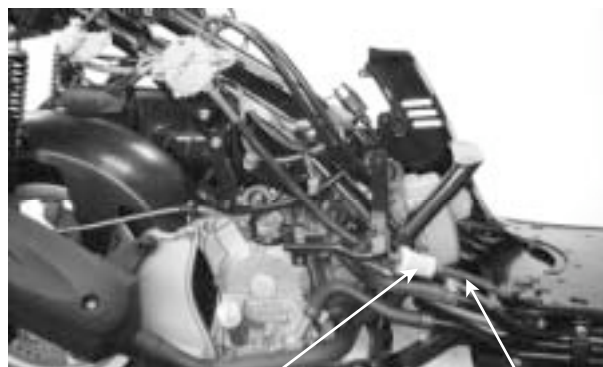

Fuel Filter

Fuel Line


#### THROTTLE OPERATION

Check the throttle grip for smooth movement.  
Measure the throttle grip free play.

**Free Play:** 2\_ 6mm



Major adjustment of the throttle grip free play is made with the adjusting nut at the carburetor side. Adjust by loosening the lock nut and turning the adjusting nut.

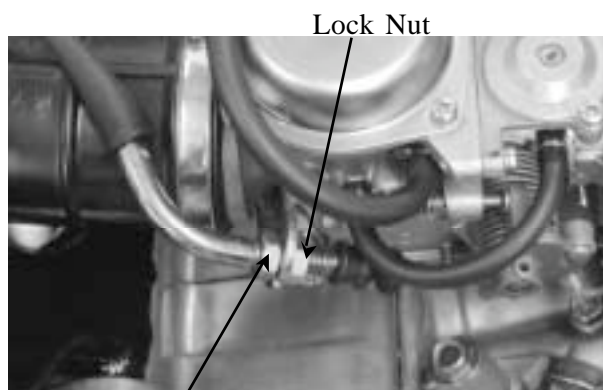


Lock Nut

Adjusting Nut

Minor adjustment is made with the adjusting nut at the throttle grip side.

Slide the rubber cover out and adjust by loosening the lock nut and turning the adjusting nut.

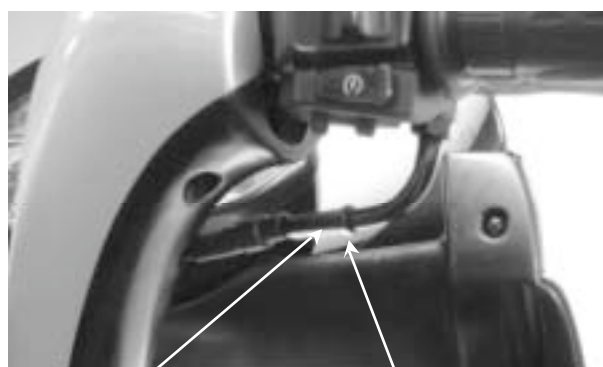

Adjusting Nut

Lock Nut

### 3. INSPECTION/ADJUSTMENT


#### ENGINE OIL

##### OIL LEVEL INSPECTION

Stop the engine and support the motorcycle upright on level ground.

Wait for 2\_ 3 minutes and check the oil level with the dipstick. Do not screw in the dipstick when making this check.

Oil Dipstick

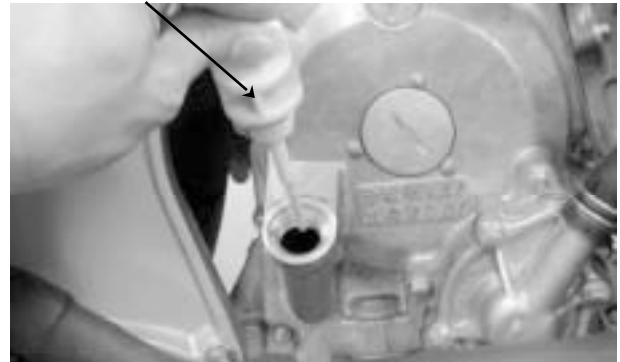

##### OIL CHANGE

- \* Drain the oil while the engine is warm.

Remove the oil drain bolt to drain the engine oil.

Install the aluminum washer and tighten the oil drain bolt.

**Torque:** 14.7N-m

- \* Replace the aluminum washer with a new one if it is deformed or damaged.

Pour the recommended oil through the oil filler hole.

##### Oil Capacity:

At disassembly: 1.1 liter

At change: 0.9 liter

##### Recommended Oil:


SAE: 15W40#

API: SJ

Start the engine and check for oil leaks.  
Stop the engine and recheck the oil level.



Oil Filter Screen Cap

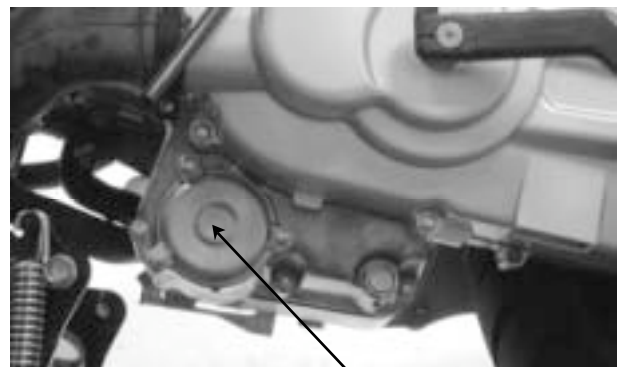

Oil Filter Screen Cap

##### OIL FILTER SCREEN INSPECTION

Drain the engine oil.

Remove the oil filter screen cap.

Clean the oil filter screen.

Install the oil filter screen, and filter screen cap.

Fill the engine with recommended engine oil.




Oil Filter Screen

### 3. INSPECTION/ADJUSTMENT

#### AIR CLEANER

Remove the seven air cleaner case cover screws and the cover.

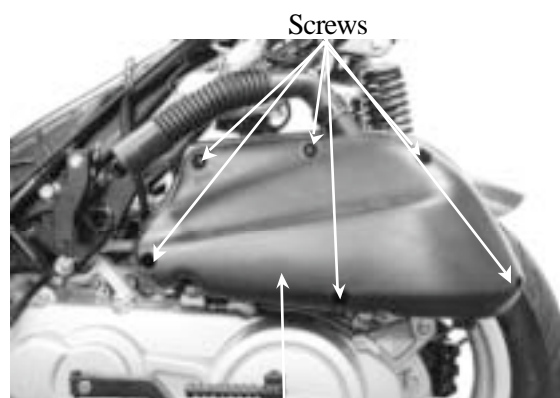


Air Cleaner Case Cover

Remove the air cleaner element. Check the element and replace it if it is excessively dirty or damaged.

#### CHANGE INTERVAL

More frequent replacement is required when riding in unusually dusty or rainy areas.

- \*
  - The air cleaner element has a viscous type paper element. Do not clean it with compressed air.
  - Be sure to install the air cleaner element and cover securely.

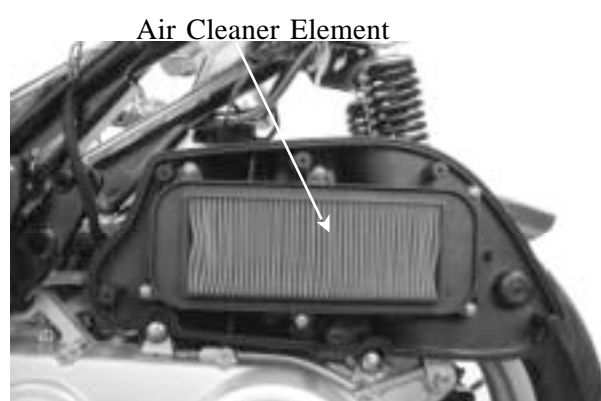

Air Cleaner Element

#### SPARK PLUG

Remove the frame center cover. Remove the spark plug cap and spark plug. Check the spark plug for wear and fouling deposits. Clean any fouling deposits with a spark plug cleaner or a wire brush.



Spark Plug


**Specified Spark Plug:** NGK: DP7EA9

Measure the spark plug gap.

**Spark Plug Gap:** 0.9mm

- \*
  - When installing, first screw in the spark plug by hand and then tighten it with a spark plug wrench.

**Torque:** 7.8\_ 9.8N-m

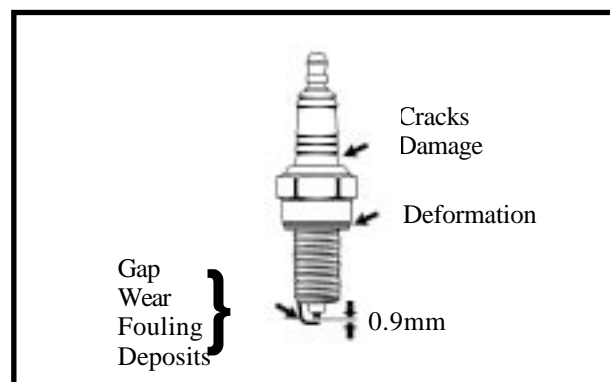




### 3. INSPECTION/ADJUSTMENT

#### VALVE CLEARANCE


- \* Inspect and adjust valve clearance while the engine is cold (below 35°C ).

Remove the cylinder head cover.

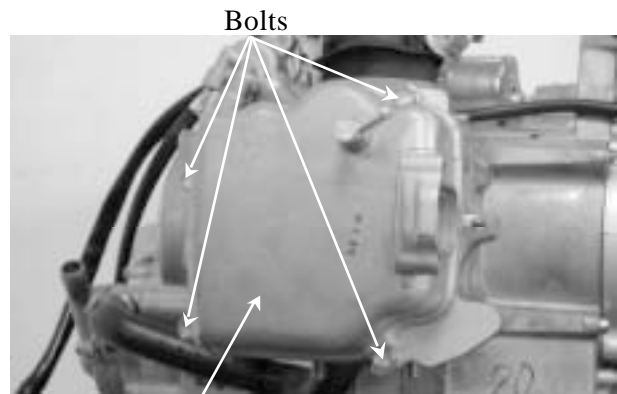

Cylinder Head Cover

Turn the A.C. generator flywheel to the top dead center (TDC) on the compression stroke so that the “T” mark on the flywheel aligns with the index mark on the left crankcase cover.

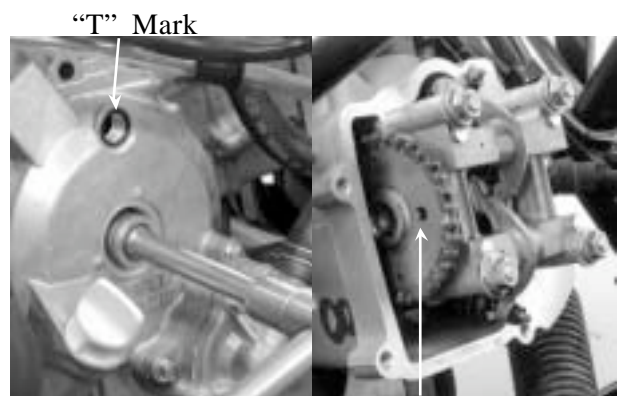

Top Dead Center

Inspect and adjust valve clearance.

**Valve Clearance:** IN: 0.1mm  
EX: 0.1mm

Loosen the lock nut and adjust by turning the adjusting nut

**Special**

Valve Wrench

- \* Check the valve clearance again after the lock nut is tightened.



Feeler Gauge

Valve Wrench

#### CARBURETOR IDLE SPEED


- \* The engine must be warm for accurate idle speed inspection and adjustment.

Lift up the seat and remove the inspection cover.

Warm up the engine before this operation. Start the engine and connect a tachometer. Turn the throttle stop screw to obtain the specified idle speed.

**Idle Speed:** 1700rpm

When the engine misses or run erratic, adjust the pilot screw.

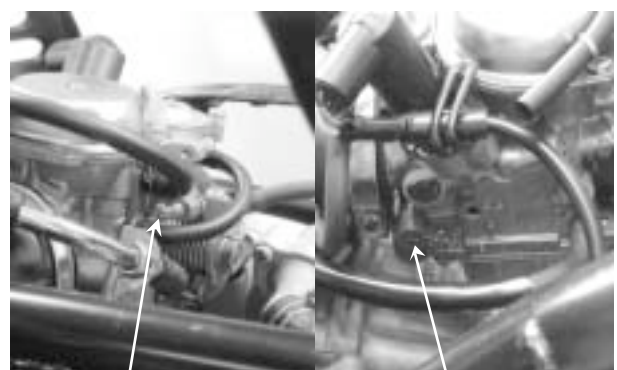

Throttle Stop Screw


Pilot Screw

### 3. INSPECTION/ADJUSTMENT

#### IGNITION TIMING


- \*
- The CDI unit is not adjustable.
  - If the ignition timing is incorrect, check the ignition system,

Remove the timing hole cap.

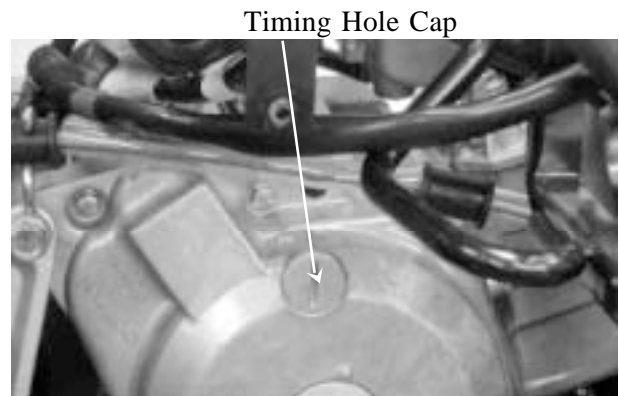

Timing Hole Cap

Check the ignition timing with a timing light. When the engine is running at the specified idle speed, the ignition timing is correct if the "F" mark on the flywheel aligns with the index mark on the crankcase cover. Also use a timing light to check the advance. Raise the engine speed to 4,000rpm. The index mark should be between the advance marks.

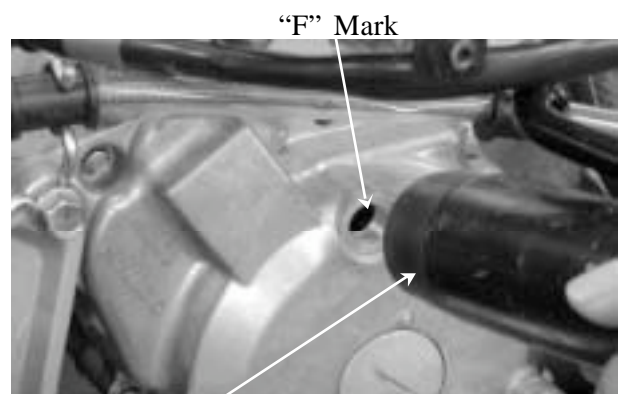

"F" Mark

Timing Light

#### CYLINDER COMPRESSION


Warm up the engine before compression test. Remove the center cover and spark plug cap. Remove the spark plug . Insert a compression gauge. Open the throttle valve fully and push the starter button to test the compression.

**Compression:**  $15 \pm 2 \text{ kg/cm}_2$

If the compression is low, check for the following:

- \_ Leaky valves
- \_ Valve clearance too small
- \_ Leaking cylinder head gasket
- \_ Worn pistons
- \_ Worn piston/cylinder

If the compression is high, it indicates that carbon deposits have accumulated on the combustion chamber and the piston head.

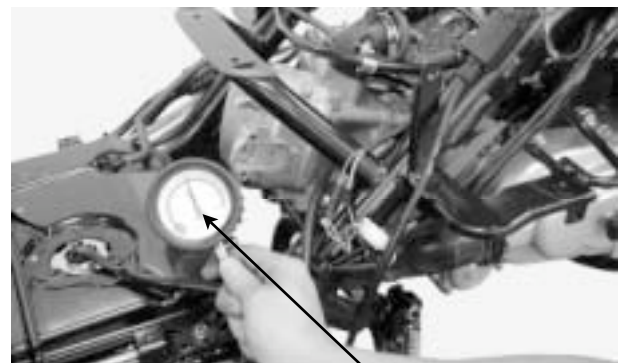

Compression Gauge

### 3. INSPECTION/ADJUSTMENT

#### FINAL REDUCTION GEAR OIL

- \* Place the motorcycle on its main stand on level ground.

Stop the engine and remove the oil check bolt. The oil level shall be at the oil check bolt hole. If the oil level is low, add the recommended oil SAE90# to the proper level.

Install the oil check bolt.

- \* Make sure that the sealing washer is in good condition.

#### OIL CHANGE

Remove the oil check bolt.  
Remove the oil drain bolt and drain the oil thoroughly.  
Install the oil drain bolt.

**Torque:** 9.8N-m

- \* Make sure that the sealing washer is in good condition.

Fill the final reduction with the recommended oil SAE90#.

#### Gear Oil Capacity:

At disassembly : 200cc

At change : 180cc


Reinstall the oil check bolt and check for oil leaks.

#### DRIVE BELT


Remove the left crankcase cover.  
Inspect the drive belt for cracks or excessive wear.

Replace the drive belt with a new one if necessary and in accordance with the Maintenance Schedule.

Oil Check Bolt Hole/Oil Filler

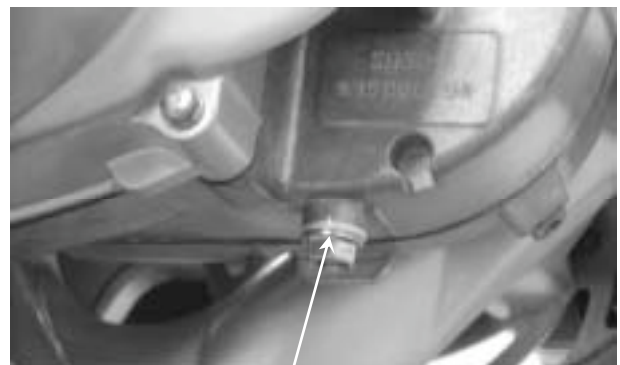

Oil Drain Bolt/Sealing Washer

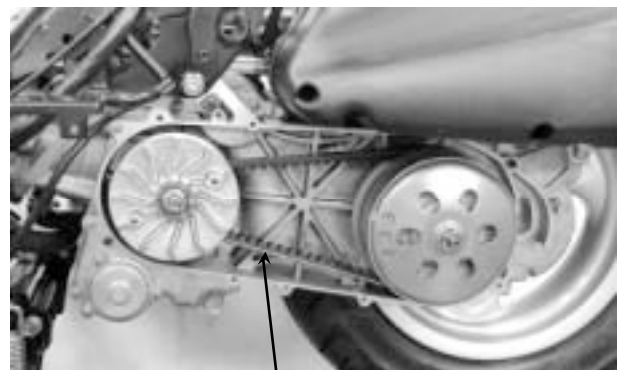

Drive Belt

### 3. INSPECTION/ADJUSTMENT

#### HEADLIGHT AIM


Turn the ignition switch ON.  
Turn on the headlight switch.  
Adjust the headlight aim by turning the headlight aim adjusting bolt.



Headlight Aim Adjusting Bolt

#### CLUTCH SHOE WEAR

Start the engine and check the clutch operation by increasing the engine speed gradually.  
If the motorcycle tends to creep, or the engine stalls, check the clutch shoes for wear and replace if necessary.

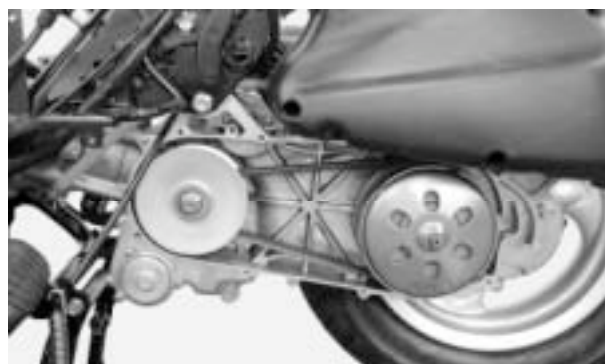

#### COOLING SYSTEM

##### COOLANT LEVEL INSPECTION


Place the motorcycle on its main stand on level ground.

Check the coolant level of the reserve tank and the level should be between the upper and lower level lines.

If necessary, fill the reserve tank with recommended coolant to the "F" level line.

**Recommended Coolant: SIGMA Coolant**  
(Standard Concentration 30%)

- \* The coolant level does not change no matter the engine is warm or cold. Fill to the "F" (upper) line.

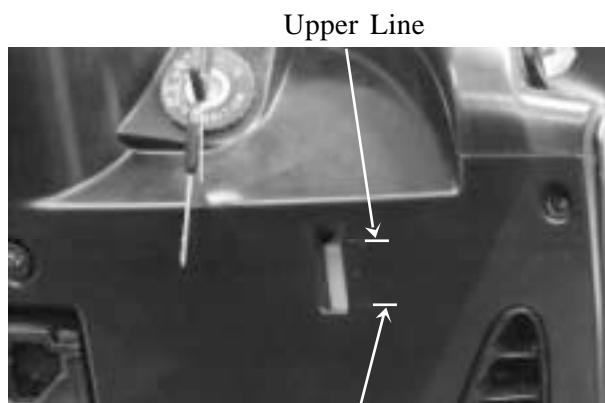

Upper Line

Lower Line

##### COOLANT REPLACEMENT

- \* Perform this operation when the engine is cold.

Remove the front cover.

Remove the radiator cap.


Remove the drain bolt to drain the coolant and tilt the motorcycle to the right and the coolant will drain more easily.

Drain the coolant in the reserve tank.

Reinstall the drain bolt.

Fill the radiator with the specified coolant.

- \* The coolant freezing point should be 5°C lower than the temperature of the riding area.

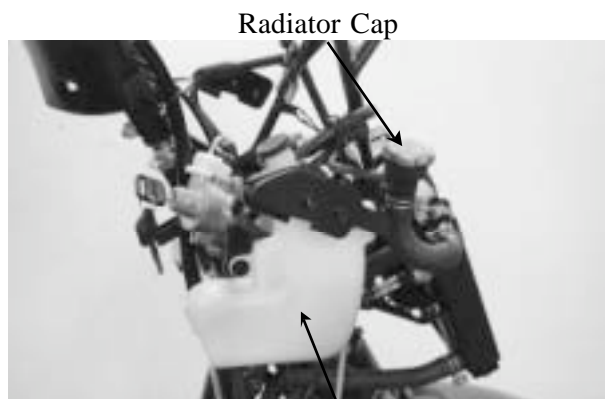

Radiator Cap

Reserve Tank



### 3. INSPECTION/ADJUSTMENT

Coolant capacity : 1400±20cc

Radiator capacity : 1000±20cc

Reserve tank capacity : 400±20cc

Start the engine and check if there is no bubbles in the coolant and the coolant level is stable. Reinstall the radiator cap.

If there are bubbles in the coolant, bleed air from the system.

Fill the reserve tank with the recommended coolant up to the upper line.



Drain Bolt

#### **BRAKE SYSTEM**

##### **BRAKE LEVER**

Measure the front and rear brake lever free plays.




##### **BRAKE FLUID**

Turn the steering handlebar upright and check if the front/rear brake fluid level is at the upper limit. If the brake fluid is insufficient, fill to the upper limit.

**Specified Brake Fluid:** DOT-4

- \* • The brake fluid level will decrease if the brake pads are worn.

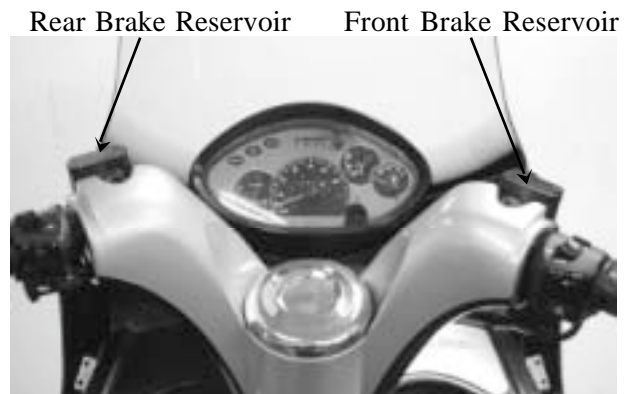


##### **BRAKE DISK/BRAKE PAD**

Check the brake disk surface for scratches, unevenness or abnormal wear.

Check if the brake disk runout is within the specified service limit.

Check if the brake pad wear exceeds the wear indicator line.

- \* • Keep grease or oil off the brake disk to avoid brake failure.

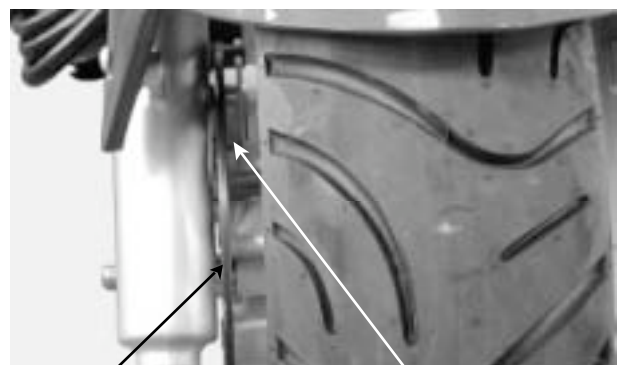

Brake Disk

Wear Indicator Line

### 3. INSPECTION/ADJUSTMENT

#### NUTS/BOLTS/FASTENERS

Check all important chassis nuts and bolts for looseness.

Tighten them to their specified torque values if any looseness is found.

#### WHEELS/TIRES

Check the tires for cuts, imbedded nails or other damages.

Check the tire pressure.

- \* • Tire pressure should be checked when tires are cold.



Pressure Gauge


Tire Pressure

|       | 1 Rider                | 2 Riders               |
|-------|------------------------|------------------------|
| Front | 1.75kg/cm <sub>2</sub> | 1.75kg/cm <sub>2</sub> |
| Rear  | 2.00kg/cm <sub>2</sub> | 2.25kg/cm <sub>2</sub> |

#### STEERING HANDLEBAR

Raise the front wheel off the ground and check that the steering handlebar rotates freely.

If the handlebar moves unevenly, binds, or has vertical movement, adjust the steering head bearing.

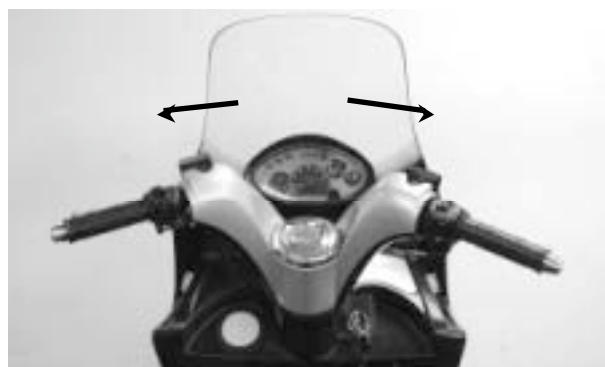

#### SUSPENSION

Check the action of the front/rear shock absorbers by compressing them several times. Check the entire shock absorber assembly for oil leaks, looseness or damage.

Jack the rear wheel off the ground and move the rear wheel sideways with force to see if the engine hanger bushings are worn.

Replace the engine hanger bushings if there is any looseness.





## 4. LUBRICATION SYSTEM

---

# 4

---

### LUBRICATION SYSTEM


---

|                                 |     |
|---------------------------------|-----|
| LUBRICATION SYSTEM DIAGRAM----- | 4-1 |
| SERVICE INFORMATION -----       | 4-2 |
| TROUBLESHOOTING -----           | 4-2 |
| ENGINE OIL/OIL FILTER -----     | 4-3 |
| OIL PUMP REMOVAL-----           | 4-4 |
| OIL PUMP DISASSEMBLY -----      | 4-4 |
| OIL PUMP INSPECTION -----       | 4-5 |
| OIL PUMP ASSEMBLY-----          | 4-5 |
| OIL PUMP INSTALLATION-----      | 4-6 |

## 4. LUBRICATION SYSTEM

---

### LUBRICATION SYSTEM

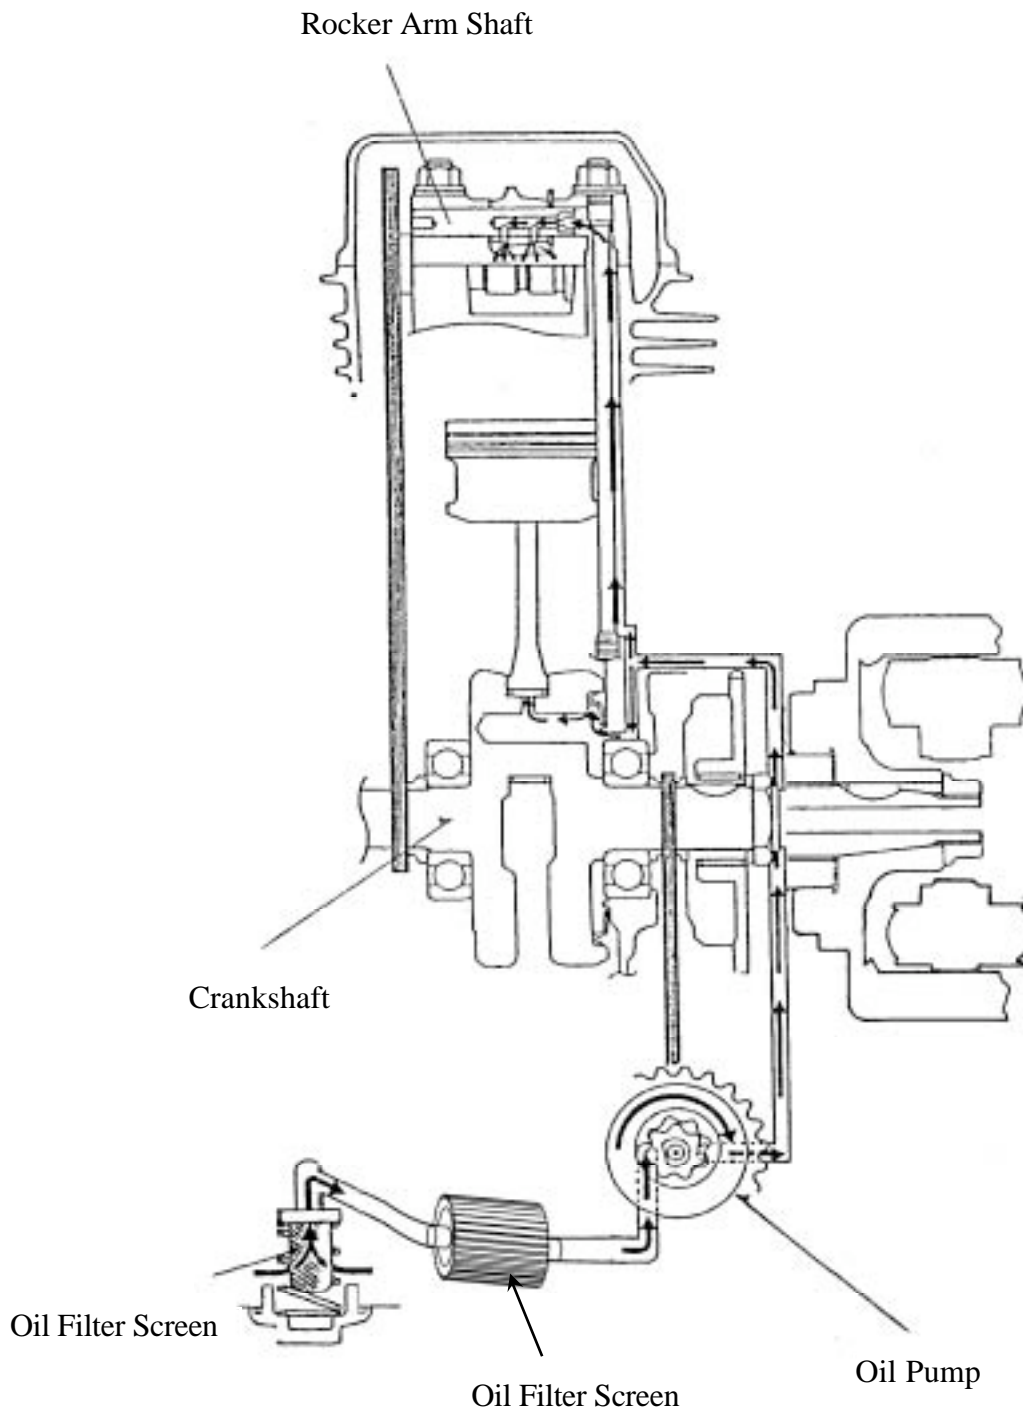

## 4. LUBRICATION SYSTEM

---

### SERVICE INFORMATION

#### GENERAL INSTRUCTIONS

- The maintenance of lubrication system can be performed with the engine installed in the frame.
- Drain the coolant before starting any operations.
- Use care when removing and installing the oil pump not to allow dust and foreign matters to enter the engine and oil line.
- Do not attempt to disassemble the oil pump. The oil pump must be replaced as a set when it reaches its service limit.
- After the oil pump is installed, check each part for oil leaks.

#### SPECIFICATIONS

##### OIL PUMP

|                                      | Standard (mm) | Service Limit (mm) |
|--------------------------------------|---------------|--------------------|
| Inner rotor-to-outer rotor clearance | 0.15          | 0.20               |
| Outer rotor-to-pump body clearance   | 0.15_ 0.20    | 0.25               |
| Rotor end-to-pump body clearance     | 0.04_ 0.09    | 0.12               |

##### ENGINE OIL

|                     |   |
|---------------------|---|
| Engine Oil Capacity | At disassembly: 1.1 liter    At change: 0.9 liter |
| Recommended Oil     | SAE15W40#    API: SJ                              |

### TROUBLESHOOTING

#### Oil level too low

- Natural oil consumption
- Oil leaks
- Worn piston rings
- Worn valve guide
- Worn valve guide seal

#### Poor lubrication pressure

- Oil level too low
- Clogged oil filter or oil passage
- Faulty oil pump

#### Oil contamination

- Oil not changed often enough
- Faulty cylinder head gasket
- Loose cylinder head bolts

## 4. LUBRICATION SYSTEM

### ENGINE OIL/OIL FILTER

- \* • Place the motorcycle upright on level ground for engine oil level check.
- Run the engine for 2\_ 3 minutes and check the oil level after the engine is stopped for 2\_ 3 minutes.

Remove the oil dipstick and check the oil level with the oil dipstick.  
If the level is near the lower level, fill to the upper level with the recommended engine oil.


### OIL CHANGE

- \* • The engine oil will drain more easily while the engine is warm.

Remove the oil drain bolt located at the left side of the engine to drain the engine oil.  
After the oil has been completely drained, install the aluminum washer and tighten the oil drain bolt.

**Torque:** 14.7N-m

Pour the recommended oil through the oil filler hole.

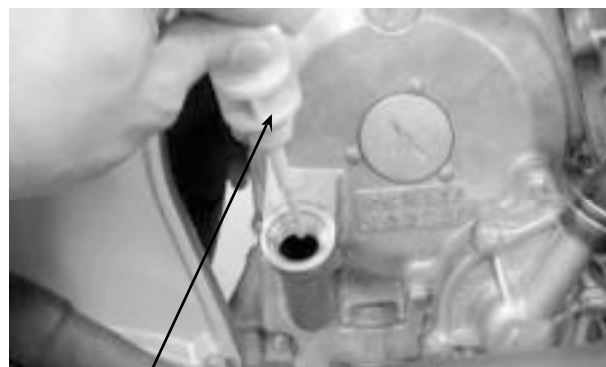

Oil Dipstick



Oil Drain Bolt

### OIL FILTER SCREEN

Drain the engine oil.  
Remove the oil filter screen cap.  
Remove the oil filter screen and spring.  
Check the oil filter screen for clogging or damage and replace if necessary. Check the filter screen O-ring for damage and replace if necessary.  
Install the oil filter screen, spring, O-ring and filter screen cap.

**Torque:** 14.7N-m

Recommended Oil: SAE15W40# API: SG/CD

Oil Capacity:


At disassembly: 1.1 liter

At change: 0.9 liter

Start the engine and check for oil leaks. Start the engine and let it idle for few minutes, then recheck the oil level.



Oil Filter Screen Cap

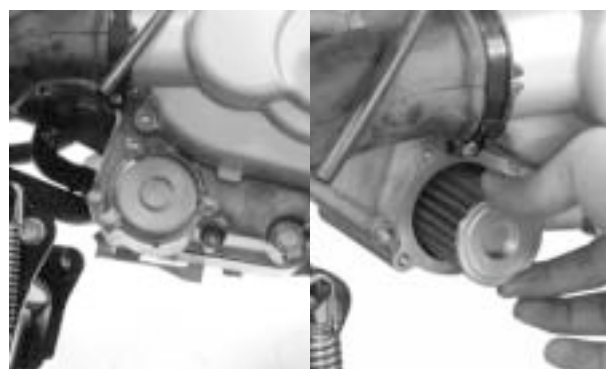

## 4. LUBRICATION SYSTEM


### OIL PUMP REMOVAL

First drain the coolant.

Remove the right crankcase cover. (⇒ 10-3)


Remove the A.C. generator starter driven gear. (⇒ 10-4)

Remove the attaching bolt and oil separator cover.

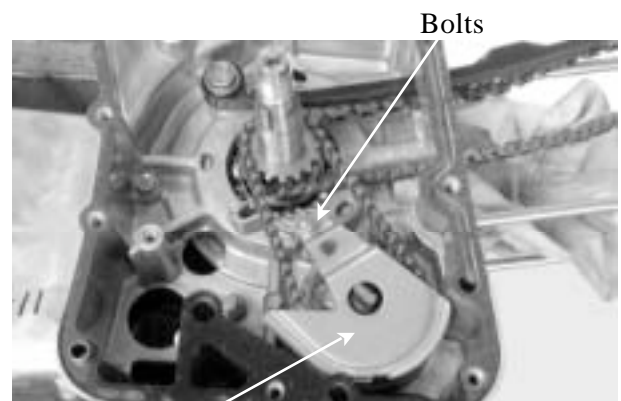

Oil Separator Cover


Pry the circlip off and remove the oil pump driven gear, then remove the oil pump drive chain.

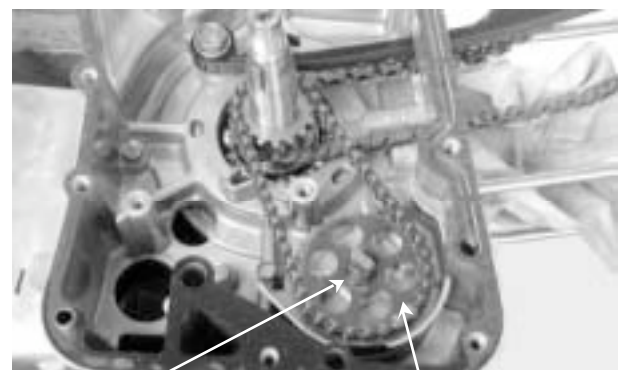

Circlip

Oil Pump Driven Gear

Remove the two oil separator bolts to remove the oil pump.

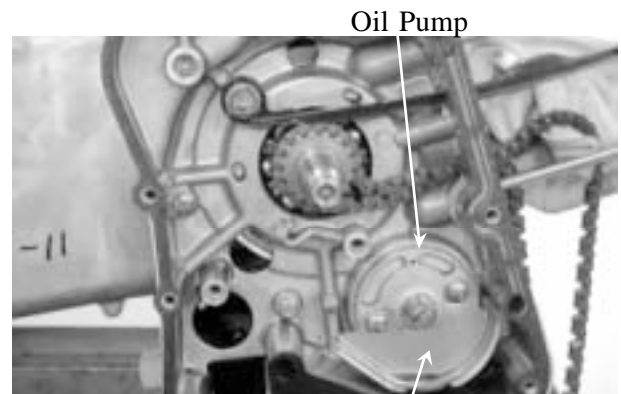

Oil Pump

Oil Separator

### OIL PUMP DISASSEMBLY

Remove the screw and disassemble the oil pump as shown.




## 4. LUBRICATION SYSTEM

### OIL PUMP INSPECTION


Measure the pump body-to-outer rotor clearance.

**Service Limit:** 0.25mm replace if over

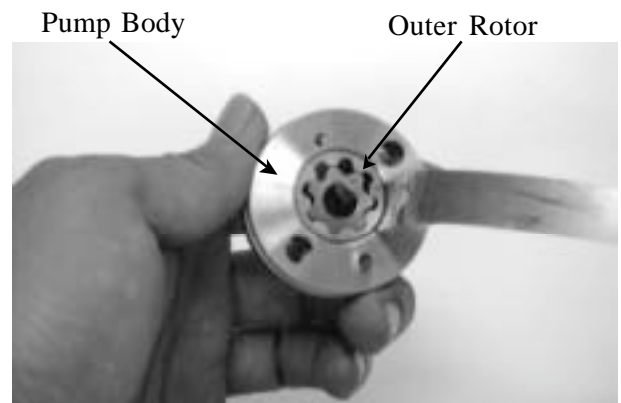


Measure the inner rotor-to-outer rotor clearance.

**Service Limit:** 0.20mm replace if over

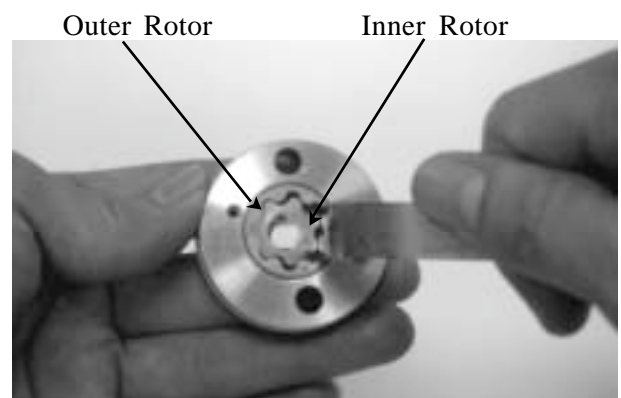

Measure the rotor end-to-pump body clearance.

**Service Limit:** 0.12mm replace if over

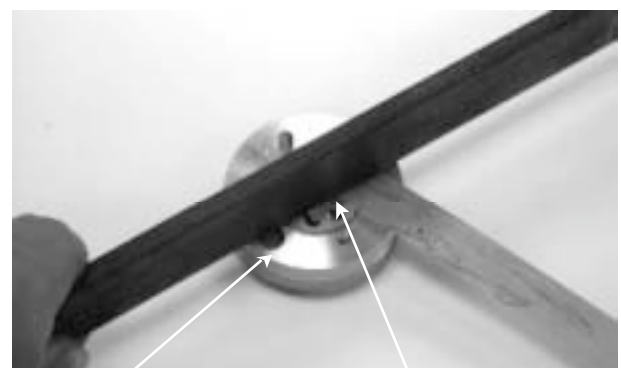


### OIL PUMP ASSEMBLY

Install the outer rotor, inner rotor and pump shaft into the pump body.

**\*** Insert the pump shaft by aligning the flat on the shaft with the flat in the inner rotor. Install the dowel pin.

There is one mark on the surface of the inner rotor and outer rotor.


The mark is upside.

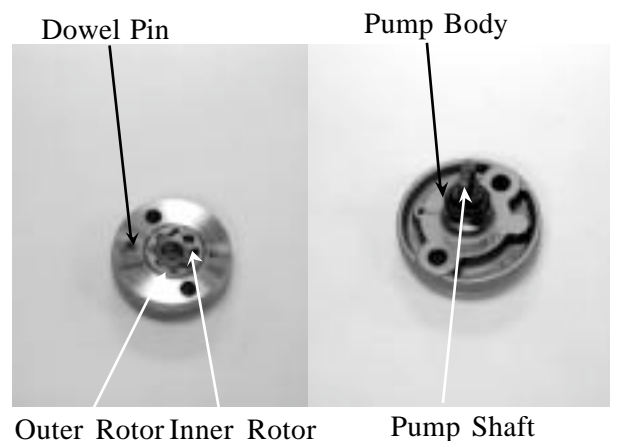





## 4. LUBRICATION SYSTEM

Install the pump cover by aligning the hole in the cover with the dowel pin.  
Tighten the screw to secure the pump cover.  
Make sure that the pump shaft rotates freely without binding.

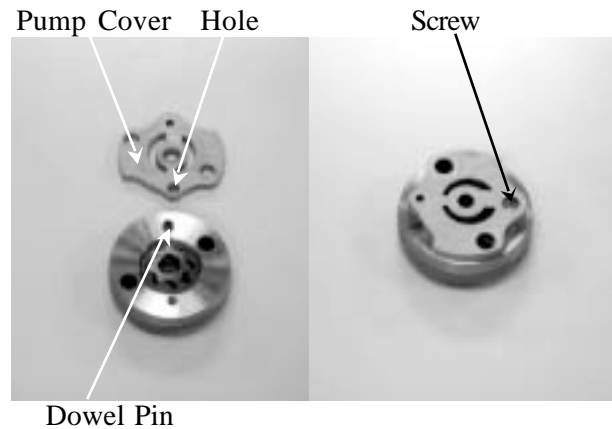

### OIL PUMP INSTALLATION


Install the oil pump and oil separator and tighten the two bolts.  
Make sure that the pump shaft rotates freely.  
The arrow of oil pump is upside.

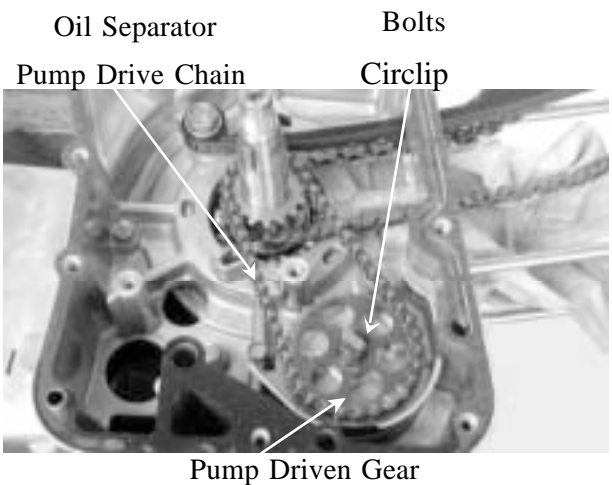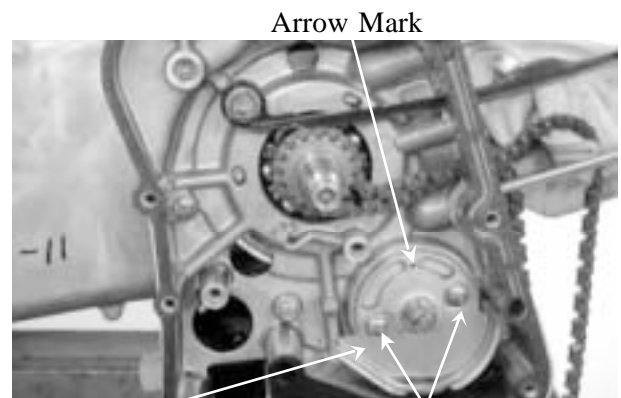

Install the oil separator cover properly.

- \* Fit the tab of the separator cover into the slit in the separator.

Install the A.C. generator starter driven gear.  
(⇒ 10-5)

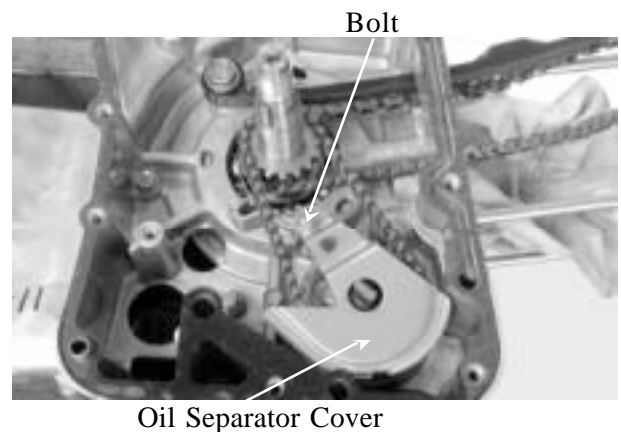



**5. ENGINE REMOVAL/INSTALLATION**

---

---

**ENGINE REMOVAL/INSTALLATION**

---

SCHEMATIC DRAWING ----- 5-1

SERVICE INFORMATION ----- 5-2


ENGINE REMOVAL ----- 5-3

ENGINE INSTALLATION ----- 5-5

## **5. ENGINE REMOVAL/INSTALLATION**

---

### **SCHEMATIC DRAWING**

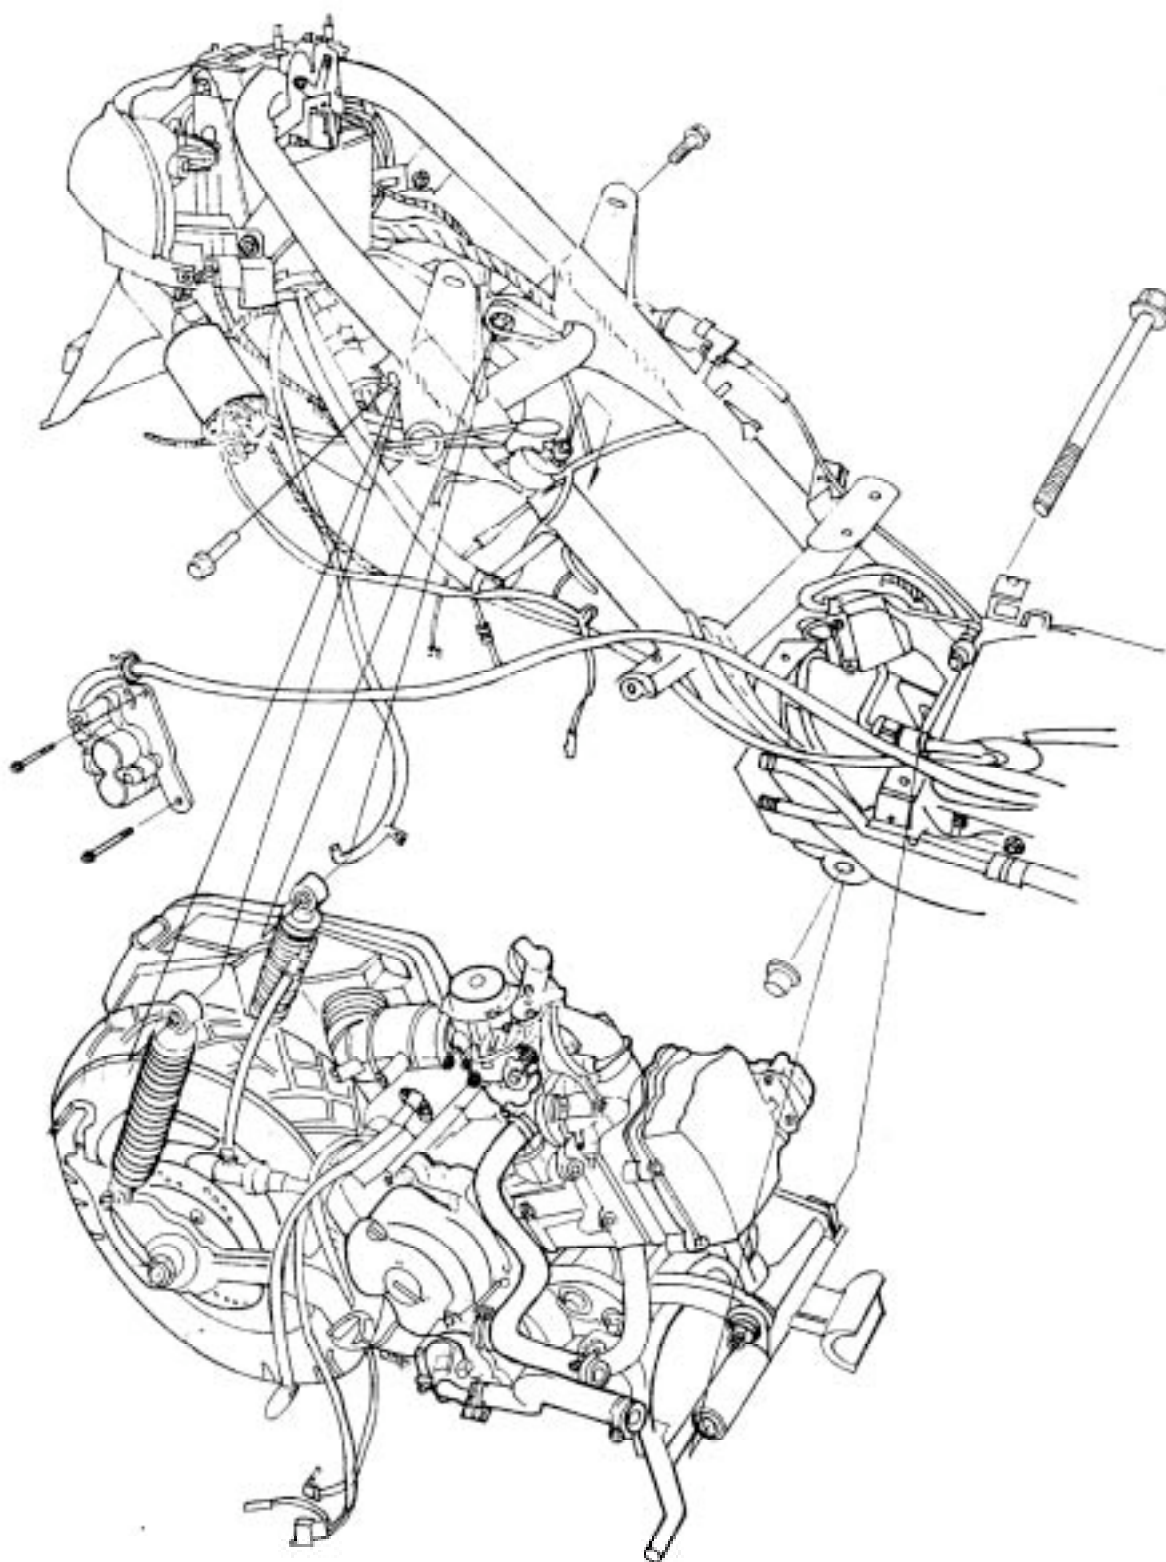

## 5. ENGINE REMOVAL/INSTALLATION

---

### SERVICE INFORMATION

#### GENERAL INSTRUCTIONS

- A floor jack or other adjustable support is required to support and maneuver the engine. Be careful not to damage the motorcycle body, cables and wires during engine removal.
- Use shop towels to protect the motorcycle body during engine removal.
- Drain the coolant before removing the engine.
- After the engine is installed, fill the cooling system with coolant and be sure to bleed air from the water jacket. Start the engine to check for coolant leaks.
- Before removing the engine, the rear brake caliper must be removed first. Be careful not to bend or twist the brake fluid tube.

#### SPECIFICATIONS

Engine dry weight: 30kg

Engine oil capacity: at disassembly: 1.1 liter  
: at change 0.9 liter

Coolant capacity:

Total capacity : 1400±20cc

Radiator capacity : 1000±20cc

Reserve tank capacity : 400±20cc

#### TORQUE VALUES

Engine mounting bolt 49N-m

Rear shock absorber upper mount bolt 39.2N-m

## 5. ENGINE REMOVAL/INSTALLATION

### ENGINE REMOVAL

Disconnect the battery negative cable.  
 Remove the frame body cover. (⇒2-3)  
 Disconnect the engine negative cable.  
 Disconnect all of the A.C. generator, auto  
 bystarter, spark plug, thermosensor wire  
 couplers and connectors.  
 Disconnect the engine fuel tube.  
 Drain the coolant. (⇒3-9)  
 Disconnect the water hose.

Wire Connectors



Rear Brake Caliper

Disconnect the starter motor wire that goes to  
 the starter relay.

Starter Relay



Disconnect the fuel tube and vacuum tube  
 that go to the carburetor from the fuel pump.  
 Disconnect the vacuum tube from the air cut-  
 off valve (ACV).  
 Disconnect the throttle cable from the  
 carburetor.

Throttle Cable

Fuel Tube




ACV Vacuum Tube

Fuel Pump Vacuum Tube

Remove the brake fluid tube bolt of the rear  
 brake caliper.  
 Remove the rear brake caliper bolt and the  
 rear brake caliper.

Brake Fluid Tube

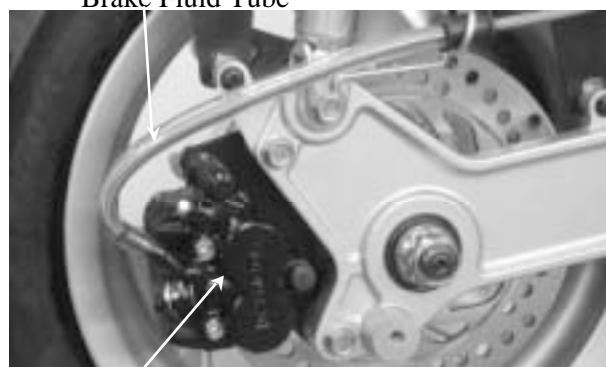


Rear Brake Caliper

## 5. ENGINE REMOVAL/INSTALLATION

Remove the right/left rear shock absorber upper mount bolts.

Rear Shock Absorber Upper Mount Bolts

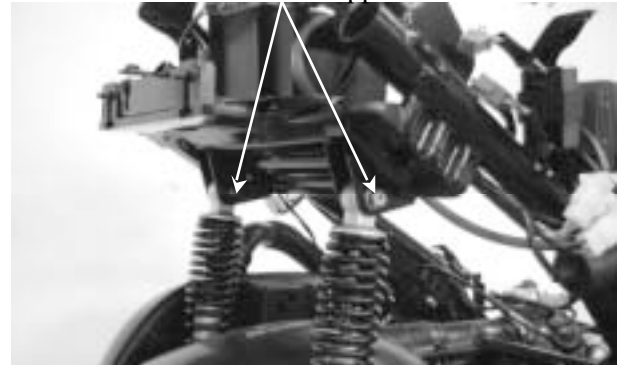


Remove the two engine mounting bolts and pull out the engine with the engine hanger backward.



Engine Hanger Bolt

### ENGINE HANGER REMOVAL

Remove the engine hanger bolts to remove the engine hanger.

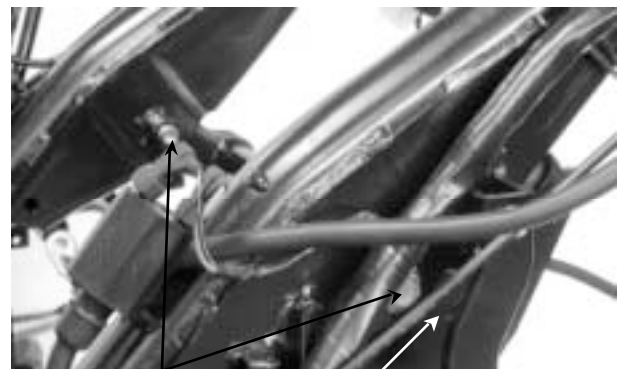


Bolt

Engine Hanger

Inspect the engine hanger bushings and stopper rubber for wear or damage.

Stopper Rubber

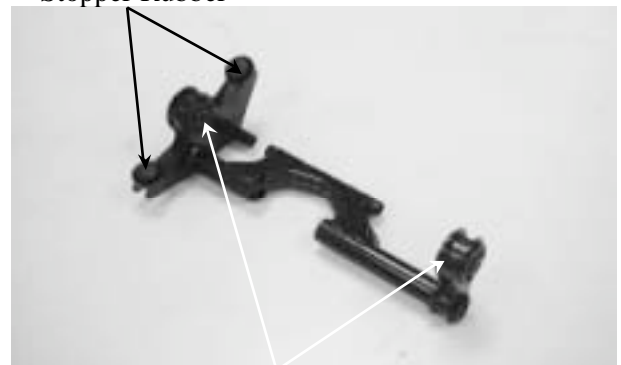

Bushings

## 5. ENGINE REMOVAL/INSTALLATION

---

### ENGINE INSTALLATION

Install the engine in the reverse order of removal.

Tighten the engine mounting bolts.


**Torque:** 49N-m

Tighten the rear shock absorber upper mount bolts.

**Torque:** 39.2N-m


After installation, inspect and adjust the following:

- Throttle grip free play ( $\Rightarrow$  3-3)
- Fill the rear brake reservoir with brake fluid and bleed air from the rear brake.
- Fill the cooling system with coolant and start the engine to bleed air from the system.

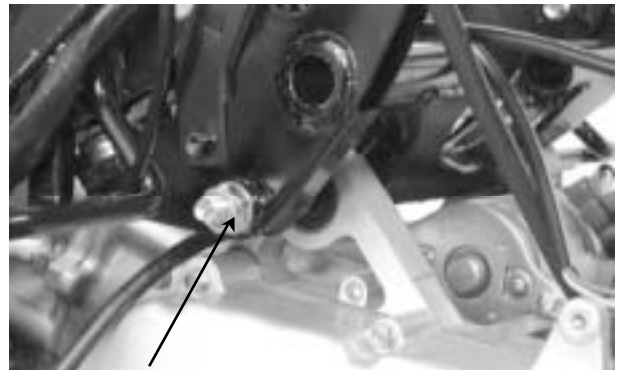

Engine Hanger Bolt

Rear Shock Absorber Upper Mount Bolts

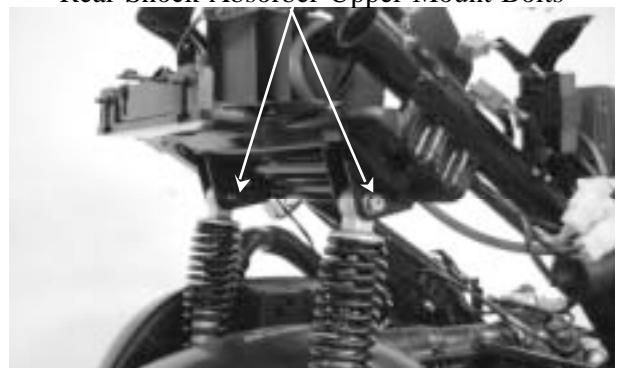



## 6. CYLINDER HEAD/VALVES

---

# 6

### CYLINDER HEAD/VALVES


---

|  |      |
|--|------|
| SCHEMATIC DRAWING .....                | 6- 1 |
| SERVICE INFORMATION .....              | 6- 2 |
| TROUBLESHOOTING .....                  | 6- 3 |
| CYLINDER HEAD COVER REMOVAL .....      | 6- 4 |
| CAMSHAFT REMOVAL .....                 | 6- 4 |
| CYLINDER HEAD REMOVAL .....            | 6- 6 |
| CYLINDER HEAD DISASSEMBLY .....        | 6- 7 |
| CYLINDER HEAD ASSEMBLY .....           | 6- 8 |
| CYLINDER HEAD INSTALLATION .....       | 6- 9 |
| CAMSHAFT INSTALLATION .....            | 6-10 |
| CYLINDER HEAD COVER INSTALLATION ..... | 6-11 |

## 6. CYLINDER HEAD/VALVES

---

### SCHEMATIC DRAWING

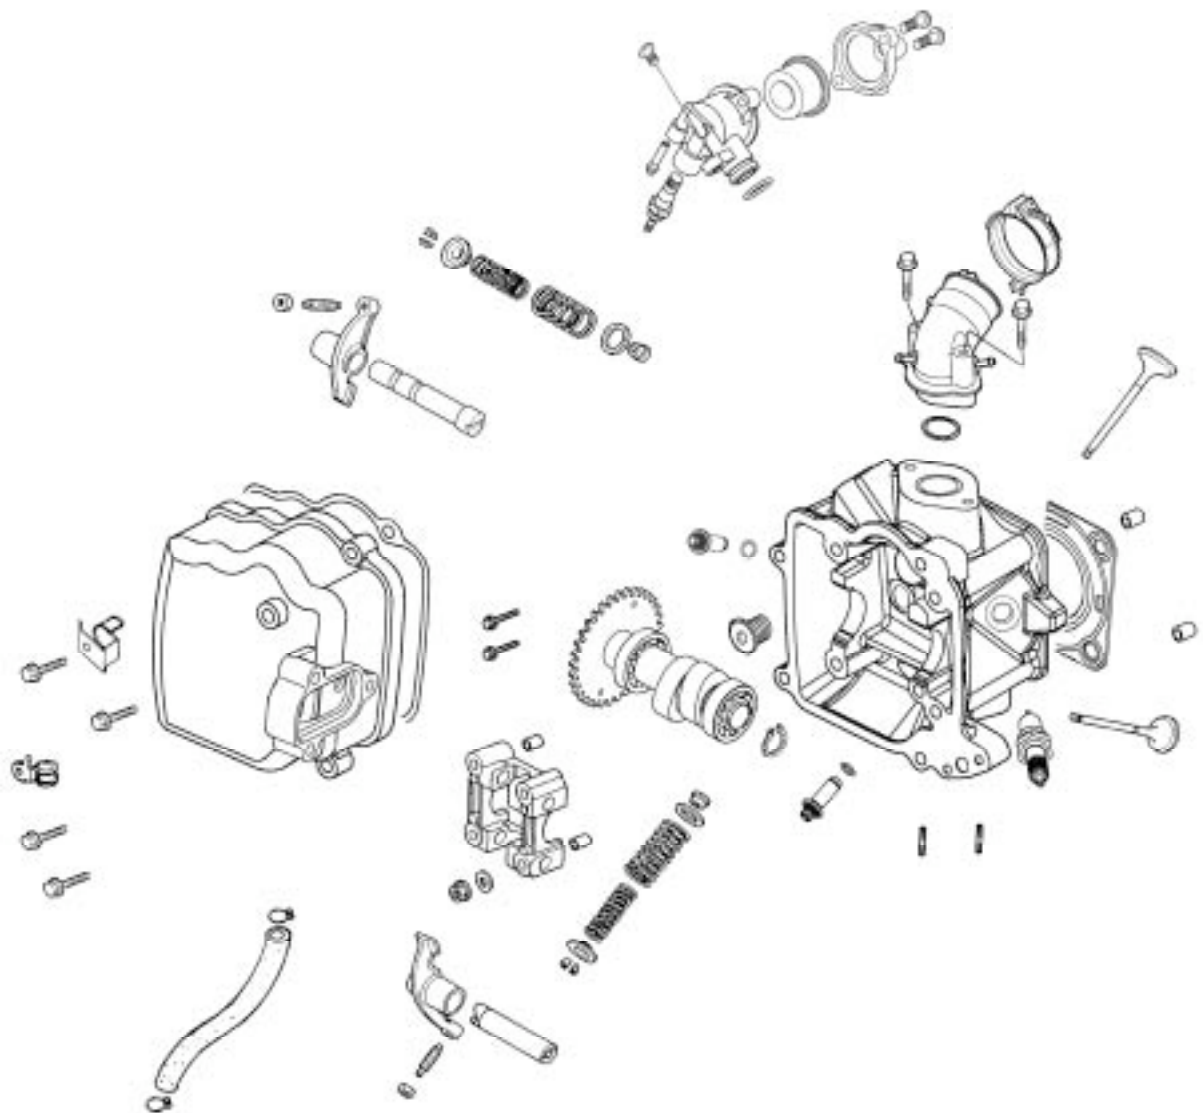

## 6. CYLINDER HEAD/VALVES

### SERVICE INFORMATION

#### GENERAL INSTRUCTIONS

- The cylinder head can be serviced with the engine installed in the frame. Coolant in the radiator and water jacket must be drained first.
- When assembling, apply molybdenum disulfide grease or engine oil to the valve guide movable parts and valve arm sliding surfaces for initial lubrication.
- The valve rocker arms are lubricated by engine oil through the cylinder head engine oil passages. Clean and unclog the oil passages before assembling the cylinder head.
- After disassembly, clean the removed parts and dry them with compressed air before inspection.
- After removal, mark and arrange the removed parts in order. When assembling, install them in the reverse order of removal.

| SPECIFICATIONS                     |    | Standard (mm) |              | Service Limit (mm) |        |
|------------------------------------|----|---------------|--------------|--------------------|--------|
| Item                               |    | SH30DA        | SH25DA       | SH30DA             | SH25DA |
| Valve clearance (cold)             | IN | 0.10          | 0.10         | □                  | □      |
|                                    | EX | 0.10          | 0.10         | □                  | □      |
| Cylinder head compression pressure |    | 15kg/cm       | 15kg/cm      | □                  |        |
| Cylinder head warpage              |    | □             | □            | 0.05               | 0.05   |
| Camshaft cam height                | IN | 30.8763       | 30.8763      | 30.75              | 30.75  |
|                                    | EX | 30.4081       | 30.4081      | 30.26              | 30.26  |
| Valve rocker arm I.D.              | IN | 10.00 10.018  | 10.00 10.018 | 10.10              | 10.10  |
|                                    | EX | 10.00 10.018  | 10.00 10.018 | 10.10              | 10.10  |
| Valve rocker arm shaft O.D.        | IN | 9.972 9.987   | 9.972 9.987  | 9.9                | 9.9    |
|                                    | EX | 9.972 9.987   | 9.972 9.987  | 9.9                | 9.9    |
| Valve seat width                   | IN | 1.2           | 1.2          | 1.8                | 1.8    |
|                                    | EX | 1.2           | 1.2          | 1.8                | 1.8    |
| Valve stem O.D.                    | IN | 4.990 4.975   | 4.990 4.975  | 4.925              | 4.925  |
|                                    | EX | 4.970 4.955   | 4.970 4.955  | 4.915              | 4.915  |
| Valve guide I.D.                   | IN | 5.00 5.012    | 5.00 5.012   | 5.03               | 5.03   |
|                                    | EX | 5.00 5.012    | 5.00 5.012   | 5.03               | 5.03   |
| Valve stem-to-guide clearance      | IN | 0.010 0.037   | 0.010 0.037  | 0.08               | 0.08   |
|                                    | EX | 0.030 0.057   | 0.030 0.057  | 0.10               | 0.10   |

#### TORQUE VALUES

|                               |              |                             |
|-------------------------------|--------------|-----------------------------|
| Cylinder head cap nut         | 19.6N-m      | Apply engine oil to threads |
| Valve clearance adjusting nut | 8.8N-m       | Apply engine oil to threads |
| Cylinder head cover bolt      | 7.8_ 11.8N-m |                             |

#### SPECIAL TOOLS

|                           |                          |
|---------------------------|--------------------------|
| Valve spring compressor   |                          |
| Valve seat cutter, 24.5mm | 45° IN-EX                |
| Valve seat cutter, 25mm   | Plane cutter 37.5° EX    |
| Valve seat cutter, 22mm   | Plane cutter 37.5° EX    |
| Valve seat cutter, 26mm   | Plane cutter 63.5° IN/EX |
| Cutter clip               |                          |
| Valve guide driver        |                          |
| Valve guide reamer        |                          |

## **6. CYLINDER HEAD/VALVES**

---

### **TROUBLESHOOTING**

- The poor cylinder head operation can be diagnosed by a compression test or by tracing engine top-end noises.

#### **Poor performance at idle speed**

- Compression too low

#### **Compression too low**

- Incorrect valve clearance adjustment
- Burned or bent valves
- Incorrect valve timing
- Broken valve spring
- Poor valve and seat contact
- Leaking cylinder head gasket
- Warped or cracked cylinder head
- Poorly installed spark plug

#### **Compression too high**

- Excessive carbon build-up in combustion chamber

#### **White smoke from exhaust muffler**

- Worn valve stem or valve guide
- Damaged valve stem oil seal


#### **Abnormal noise**

- Incorrect valve clearance adjustment
- Sticking valve or broken valve spring
- Damaged or worn camshaft
- Worn cam chain tensioner
- Worn camshaft and rocker arm

## 6. CYLINDER HEAD/VALVES


### CYLINDER HEAD COVER REMOVAL

Remove the center cover. (⇒2-3)  
 Remove the met-in box. (⇒2-3)  
 Remove the cylinder head cover four bolts and then remove the cylinder head cover.

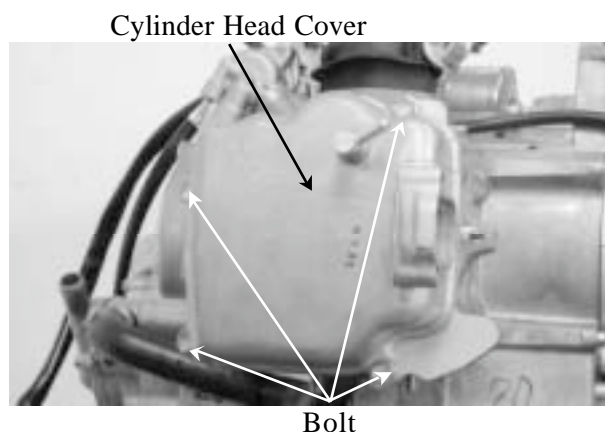


### CAMSHAFT REMOVAL

Turn the A.C. generator flywheel so that the "T" mark on the flywheel aligns with the index mark on the crankcase.  
 Hold the round hole on the camshaft gear facing up and the location is the top dead center on the compression stroke.  
 Remove the two bolts attaching cam chain tensioner and the tensioner.

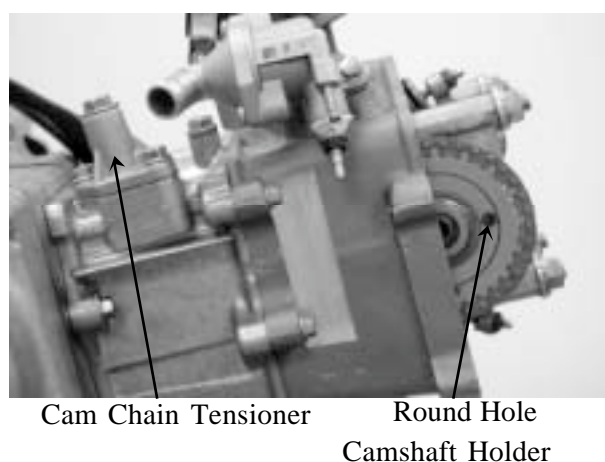


First remove the two bolts between the cylinder head and cylinder.  
 Then, remove the four cap nuts attaching the cylinder head.

- \* • Diagonally loosen the cylinder head cap nuts in 2 or 3 times.

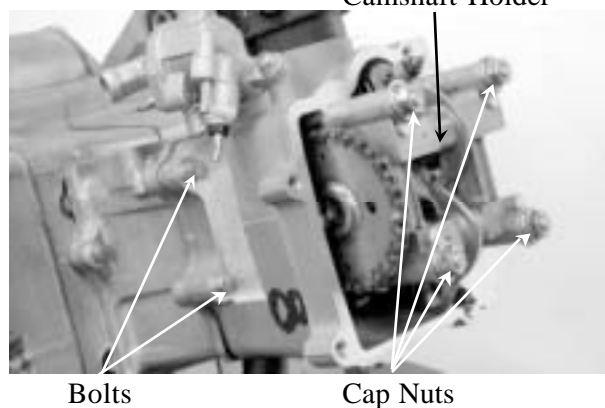


Remove the camshaft holder and dowel pins.

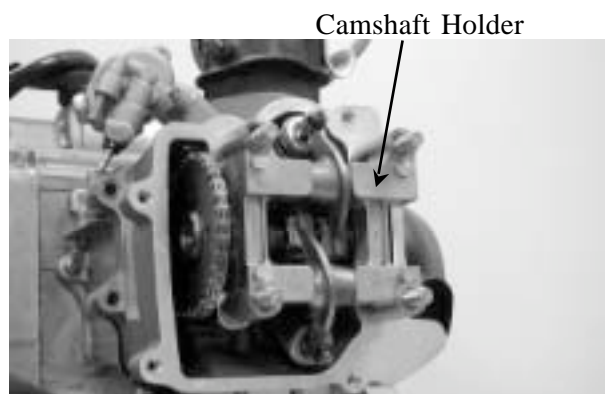

## 6. CYLINDER HEAD/VALVES

Remove the camshaft gear from the cam chain to remove the camshaft.

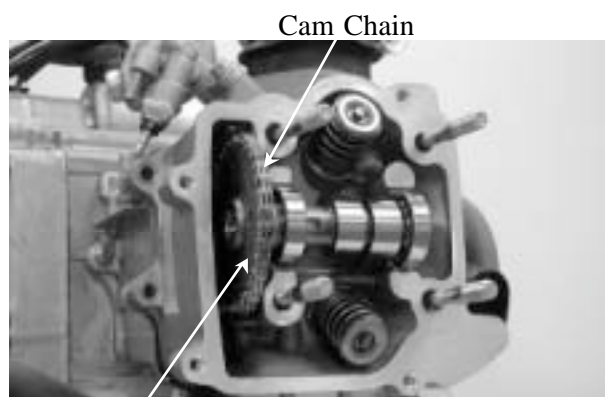

Camshaft Gear

### CAMSHAFT INSPECTION


Check each cam lobe for wear or damage. Measure the cam lobe height.

#### Service Limits:

|        |                              |
|--------|------------------------------|
| SH30DA | IN: 30.75mm replace if below |
| SH25DA | EX:30.26mm replace if below  |



Check each camshaft bearing for play or damage. Replace the camshaft assembly with a new one if the bearings are noisy or have excessive play.

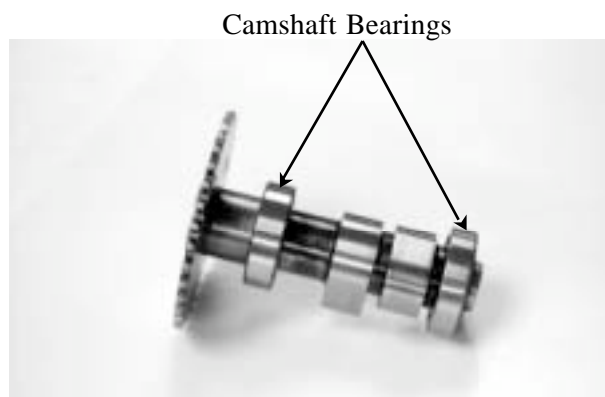


Camshaft Bearings

### CAMSHAFT HOLDER DISASSEMBLY

Take out the valve rocker arm shafts using a 6mm bolt.

Remove the valve rocker arms.

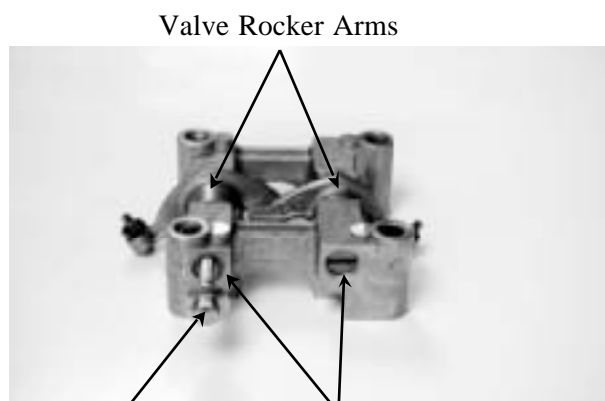

6mm Bolt

Rocker Arm Shafts




## 6. CYLINDER HEAD/VALVES

### CAMSHAFT HOLDER INSPECTION

Inspect the camshaft holder, valve rocker arms and rocker arm shafts for wear or damage.

- \* If the valve rocker arm contact surface is worn, check each cam lobe for wear or damage.

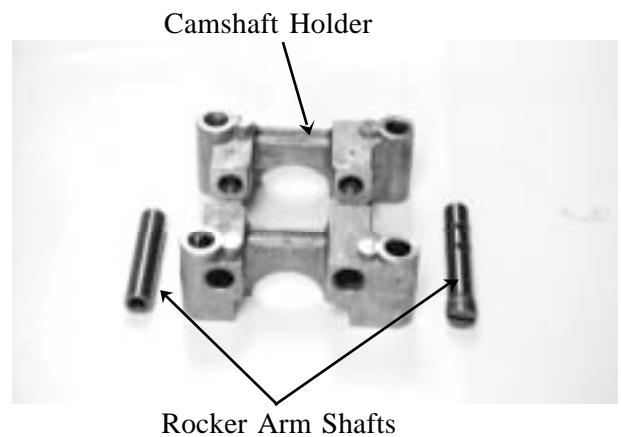

Measure the I.D. of each valve rocker arm.

**Service Limits:** IN: 10.10mm replace if over

EX: 10.10mm replace if over

Measure each rocker arm shaft O.D.

**Service Limits:** IN: 9.90mm replace if below

EX: 9.90mm replace if below



### CYLINDER HEAD REMOVAL


First drain the coolant from the radiator and water jacket, then remove the thermostat water hose.

Remove the camshaft. (⇒6-4)

Remove the carburetor and intake manifold.

Remove the bolt attaching the thermostat housing and the thermostat housing.

Remove the cylinder head.

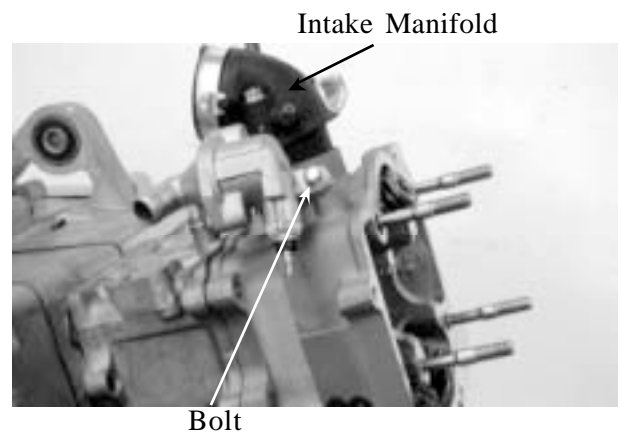


Remove the dowel pins and cylinder head gasket.

Remove the cam chain guide.

Remove all gasket material from the cylinder head mating surface.

- \* Be careful not to drop any gasket material into the engine.

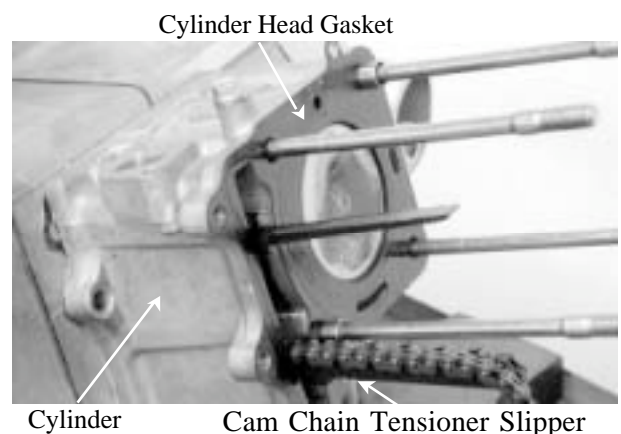

## 6. CYLINDER HEAD/VALVES

### CYLINDER HEAD DISASSEMBLY

Remove the valve spring cotters, retainers, springs, spring seats and valve stem seals using a valve spring compressor.

- \* 


- Be sure to compress the valve springs with a valve spring compressor.
  - Mark all disassembled parts to ensure correct reassembly.

Remove carbon deposits from the exhaust port and combustion chamber.

- \* 


Be careful not to damage the cylinder head mating surface.

Cylinder Head

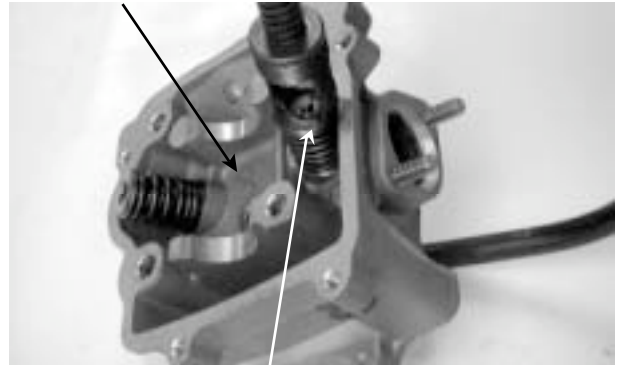

Valve Spring Compressor

Combustion Chamber

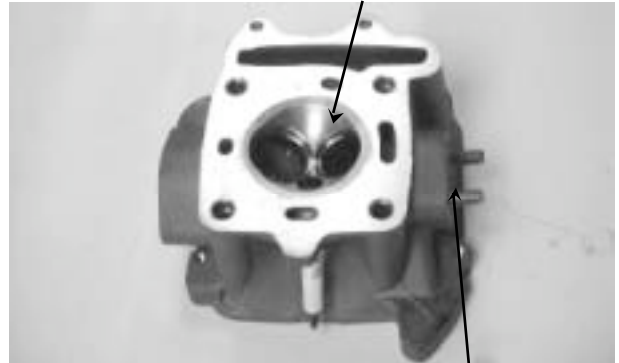

Exhaust Port

## 6. CYLINDER HEAD/VALVES


### INSPECTION

#### CYLINDER HEAD

Check the spark plug hole and valve areas for cracks.

Check the cylinder head for warpage with a straight edge and feeler gauge.

**Service Limit:** 0.05mm repair or replace if over

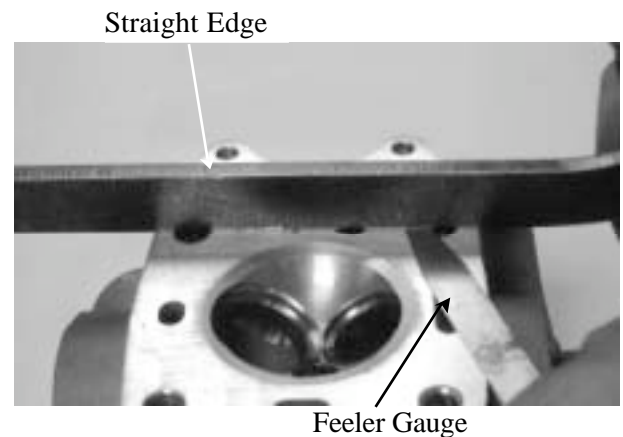


#### VALVE SPRING FREE LENGTH

Measure the free length of the inner and outer valve springs.

**Service Limits:**

Inner (IN, EX) : 29.3mm replace if below

Outer (IN, EX): 32.0mm replace if below

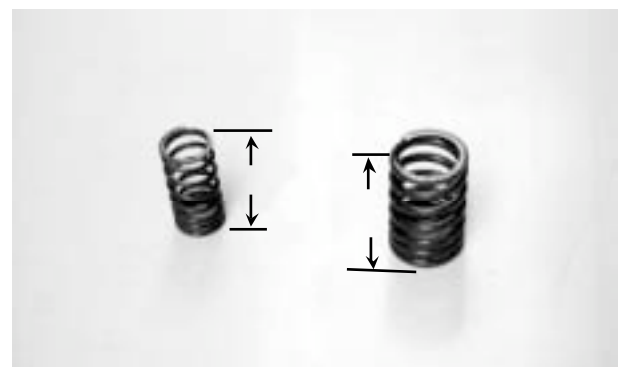


#### VALVE /VALVE GUIDE

Inspect each valve for bending, burning, scratches or abnormal stem wear.

Check valve movement in the guide.

Measure each valve stem O.D.

**Service Limits:** IN: 4.925mm replace if below  
EX: 4.915mm replace if below

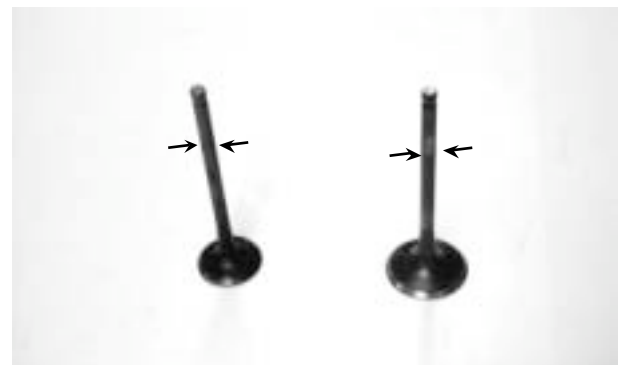


### CYLINDER HEAD ASSEMBLY

Install the valve spring seats and stem seals.

Lubricate each valve stem with engine oil and insert the valves into the valve guides.

Be sure to install new valve stem seals.

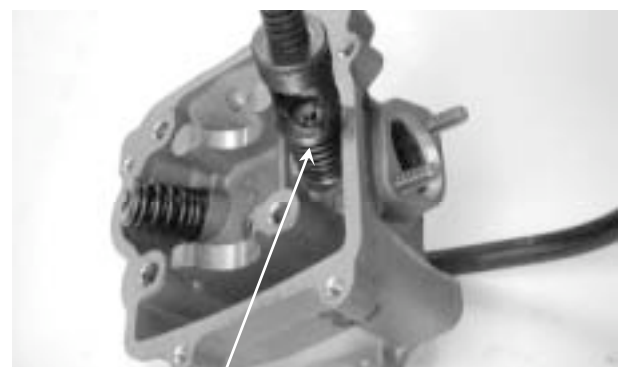


Valve Spring Compressor

## 6. CYLINDER HEAD/VALVES

Tap the valve stems gently with a plastic hammer to firmly seat the cotters.


- \* Be careful not to damage the valves.

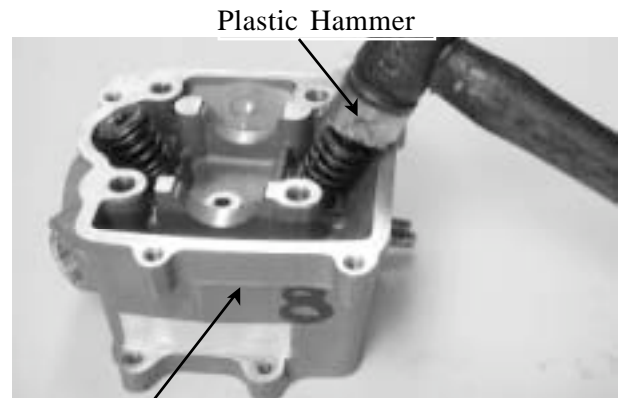

Cylinder Head

### CYLINDER HEAD INSTALLATION


Install the cam chain guide.  
Install the dowel pins and a new cylinder head gasket.

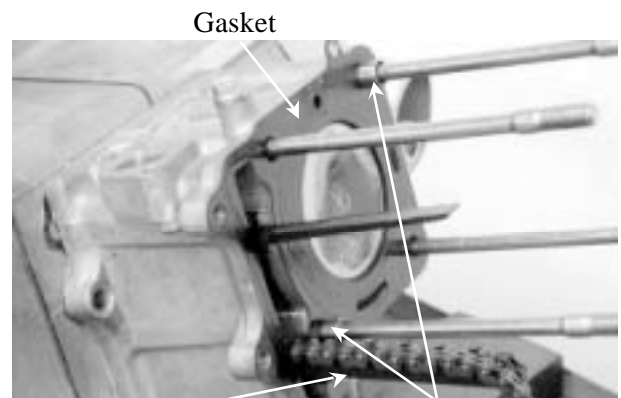

Cam Chain Guide

Dowel Pins


Install the cylinder head and take out the cam chain

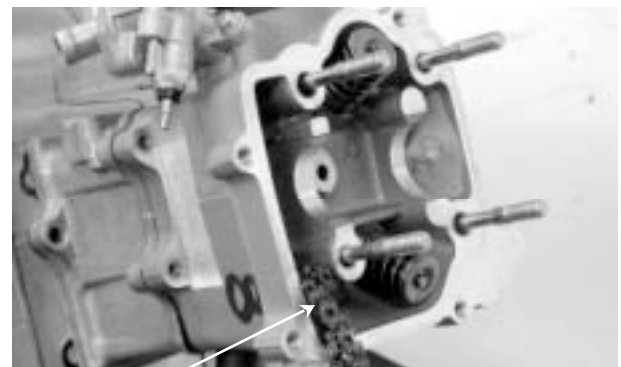

Cam Chain

Assemble the camshaft holder.  
First install the intake and exhaust valve rocker arms; then install the rocker arm shafts.

- \*
- Install the exhaust valve rocker arm shaft on the “EX” side of the camshaft holder and the exhaust rocker arm shaft is shorter.
  - Clean the intake valve rocker arm shaft off any grease before installation.
  - Align the cutout on the exhaust valve rocker arm shaft with the bolt of the camshaft holder.

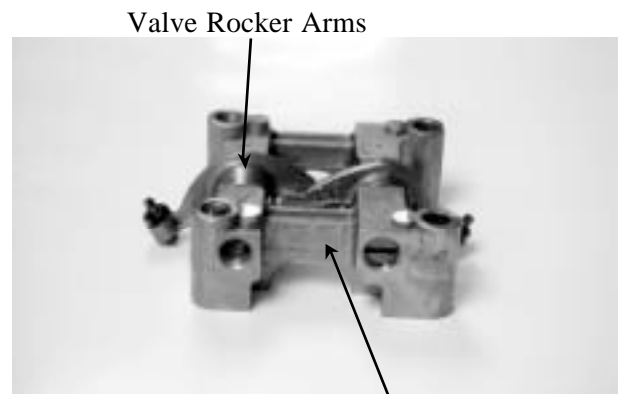

Valve Rocker Arms


Camshaft Holder

## 6. CYLINDER HEAD/VALVES


### CAMSHAFT INSTALLATION

Turn the A.C. generator flywheel so that the “T” mark on the flywheel aligns with the index mark on the crankcase.

Keep the round hole on the camshaft gear facing up and align the punch marks on the camshaft gear with the cylinder head surface (Position the intake and exhaust cam lobes down.) and install the cam chain over the camshaft gear.

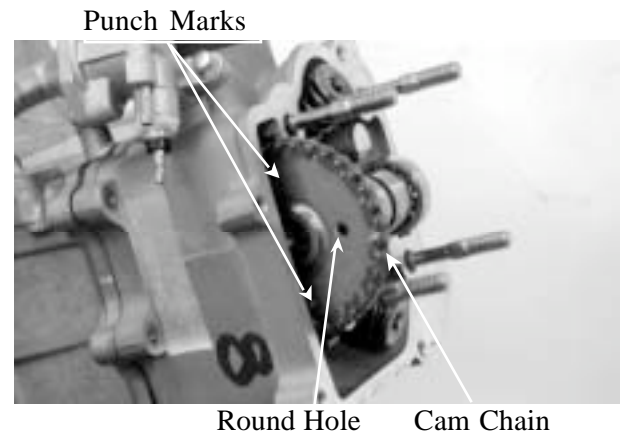

Install the dowel pins.

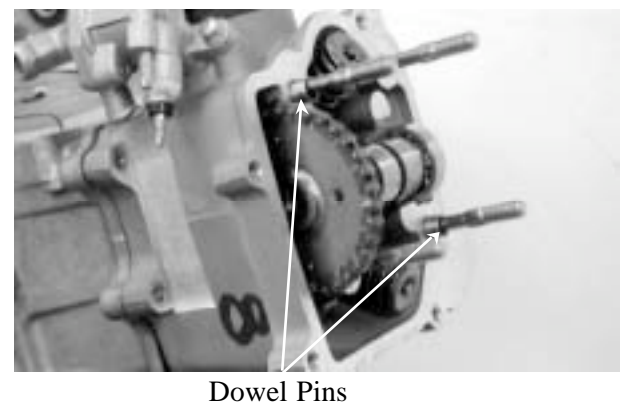


Install the camshaft holder, washers and nuts on the cylinder head.

Tighten the four cylinder head nuts and the two bolts between the cylinder head and cylinder.


**Torque:** Cylinder head cap nut: 19.6N-m  
Cylinder & cylinder head bolt:  
7.8\_ 11.8N-m

- \***
- Apply engine oil to the threads of the cylinder head cap nuts.
  - Diagonally tighten the cylinder head cap nuts in 2\_ 3 times.
  - First tighten the cylinder head cap nuts and then tighten the bolts between the cylinder and cylinder head to avoid cracks.

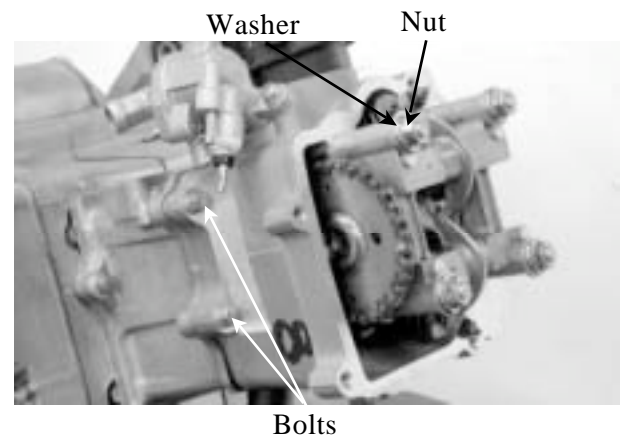


## 6. CYLINDER HEAD/VALVES

Install a new cam chain tensioner gasket.  
Release the lock pawl and push the push rod all the way in.

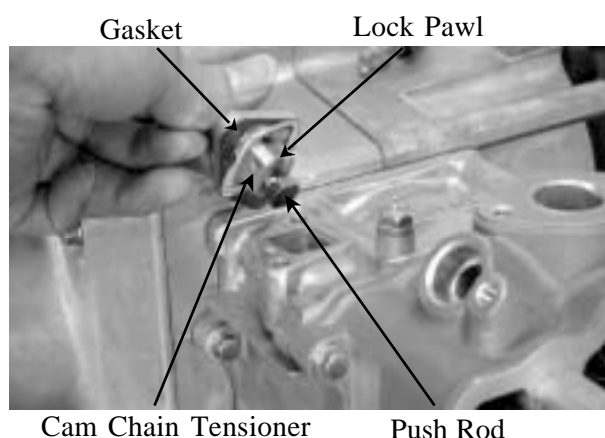

Install the cam chain tensioner and tighten the two bolts.  
Install the tensioner spring and tighten the sealing bolt.

**Torque:** 2.9\_ 5.8N-m

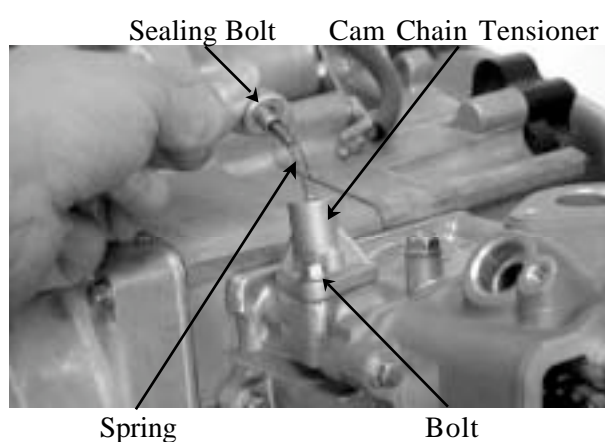


### CYLINDER HEAD COVER INSTALLATION

Adjust the valve clearance. (⇒3-6)  
Install a new cylinder head cover O-ring and install the cylinder head cover.

\* Be sure to install the O-ring into the groove properly.

Install and tighten the cylinder head cover bolts.

**Torque:** 7.8\_ 11.8N-m

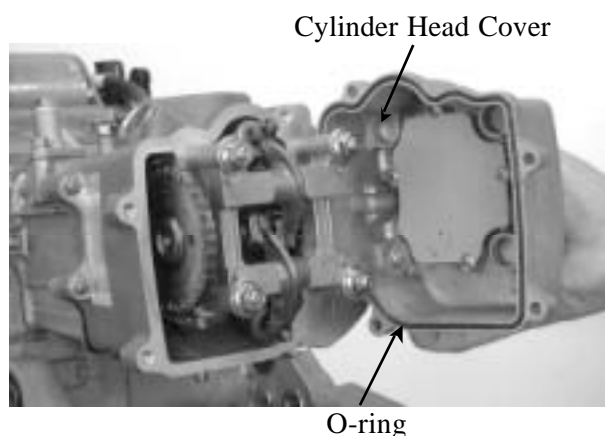



# 7. CYLINDER/PISTON

## CYLINDER/PISTON


7

|                            |     |
|----------------------------|-----|
| SCHEMATIC DRAWING -----    | 7-1 |
| SERVICE INFORMATION -----  | 7-2 |
| TROUBLESHOOTING -----      | 7-2 |
| CYLINDER REMOVAL-----      | 7-3 |
| PISTON REMOVAL -----       | 7-3 |
| PISTON INSTALLATION -----  | 7-7 |
| CYLINDER INSTALLATION----- | 7-7 |

## 7. CYLINDER/PISTON

---

### SCHEMATIC DRAWING

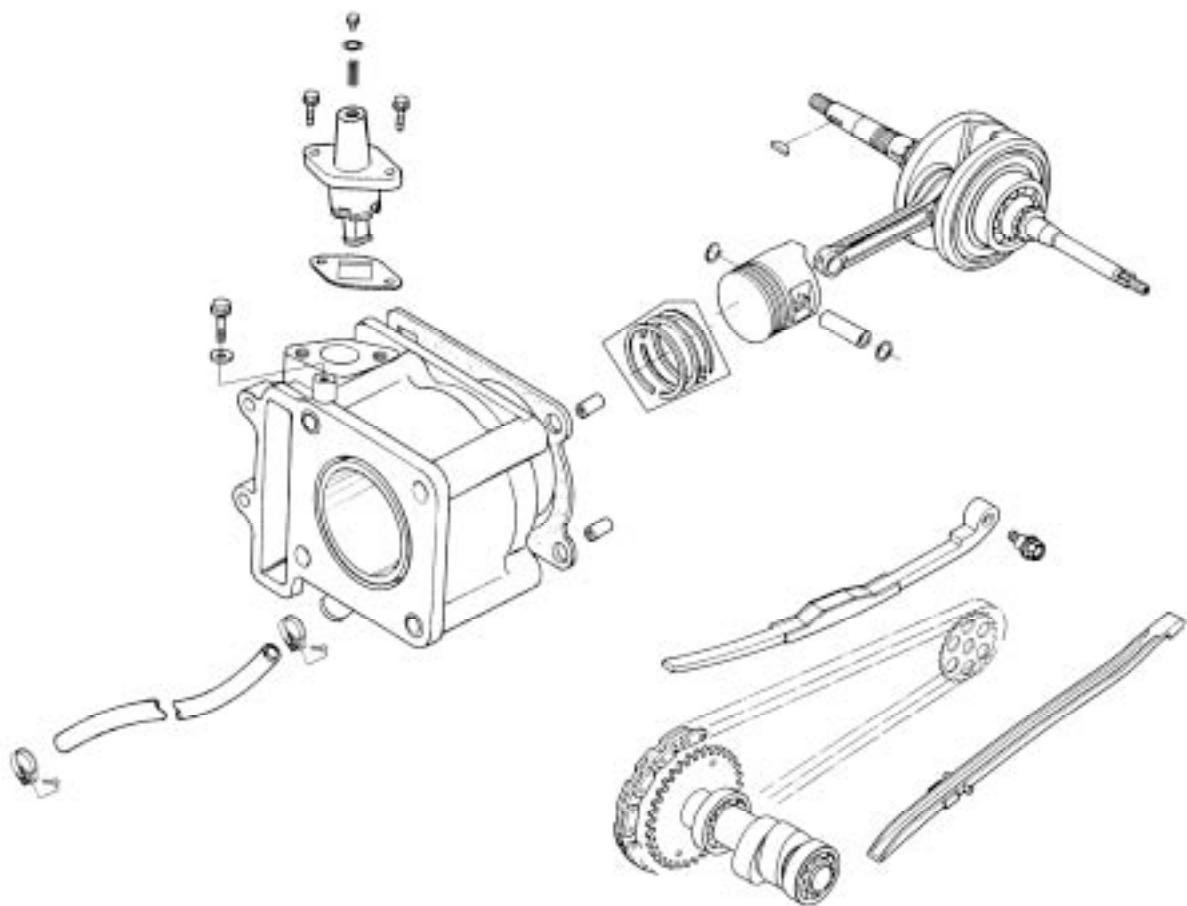

## 7. CYLINDER/PISTON

### SERVICE INFORMATION

#### GENERAL INSTRUCTIONS

- The cylinder and piston can be serviced with the engine installed in the frame.
- When installing the cylinder, use a new cylinder gasket and make sure that the dowel pins are correctly installed.
- After disassembly, clean the removed parts and dry them with compressed air before inspection.

#### SPECIFICATIONS

|                                    |                                |               | Standard (mm)               |      |                             |      | Service Limit (mm)    |                             |
|------------------------------------|--------------------------------|---------------|-----------------------------|------|-----------------------------|------|-----------------------|-----------------------------|
| Item                               |                                |               | SH30DA                      |      | SH25DA                      |      | SH30DA                | SH25DA                      |
| Cylinder                           | I.D.                           |               | 57.405_                     | 57.  | 52.400_                     | 52.  | 57.50                 | 52.50                       |
|                                    | Warpage                        |               | 0.01                        |      | 0.01                        |      | 0.05                  | 0.05                        |
|                                    | Cylindricity                   |               | 0.01                        |      | 0.01                        |      | 0.05                  | 0.05                        |
|                                    | True roundness                 |               | 0.01                        |      | 0.01                        |      | 0.05                  | 0.05                        |
| Piston,<br>piston ring             | Ring-to-groove<br>clearance    | top           | 0.015_                      | 0.05 | 0.015_                      | 0.05 | 0.09                  | 0.09                        |
|                                    |                                | Second        | 0.015_                      | 0.05 | 0.015_                      | 0.05 | 0.09                  | 0.09                        |
|                                    | Ring end gap                   | top           | 0.15_                       | 0.30 | 0.15_                       | 0.30 | 0.50                  | 0.50                        |
|                                    |                                | Second        | 0.15_                       | 0.30 | 0.15_                       | 0.30 | 0.50                  | 0.50                        |
|                                    |                                | Oil side rail | 0.2_                        | 0.9  | 0.2_                        | 0.9  | □                     | □                           |
|                                    | Piston O.D.                    |               | 57.375_                     | 57.  | 52.370_                     | 52.  | 57.30                 | 52.30                       |
|                                    | Piston O.D. measuring position |               | 9mm from<br>bottom of skirt |      | 9mm from<br>bottom of skirt |      | 9mm from<br>bottom of | 9mm from<br>bottom of skirt |
|                                    | Piston-to-cylinder clearance   |               | 0.010_                      | 0.04 | 0.010_                      | 0.04 | 0.01                  | 0.01                        |
|                                    | Piston pin hole I.D.           |               | 15.002_                     | 15.  | 15.002_                     | 15.  | 15.04                 | 15.04                       |
| Piston pin O.D                     |                                |               | 14.994_                     | 15.  | 14.994_                     | 15.  | 14.96                 | 14.96                       |
| Piston-to-piston pin clearance     |                                |               | 0.002_                      | 0.01 | 0.002_                      | 0.01 | 0.02                  | 0.02                        |
| Connecting rod small end I.D. bore |                                |               | 15.016_                     | 15.  | 15.016_                     | 15.  | 15.06                 | 15.06                       |

### TROUBLESHOOTING

- When hard starting or poor performance at low speed occurs, check the crankcase breather for white smoke. If white smoke is found, it means that the piston rings are worn, stuck or broken.

#### Compression too low or uneven compression

- Worn or damaged cylinder and piston rings
- Worn, stuck or broken piston rings

#### Compression too high

- Excessive carbon build-up in combustion chamber or on piston head

#### Excessive smoke from exhaust muffler

- Worn or damaged piston rings
- Worn or damaged cylinder and piston


#### Abnormal noisy piston

- Worn cylinder, piston and piston rings
- Worn piston pin hole and piston pin
- Incorrectly installed piston

## 7. CYLINDER/PISTON

### CYLINDER REMOVAL


Remove the cylinder head. (⇒6-7)  
 Remove the water hose from the cylinder.  
 Remove the cylinder base bolt.

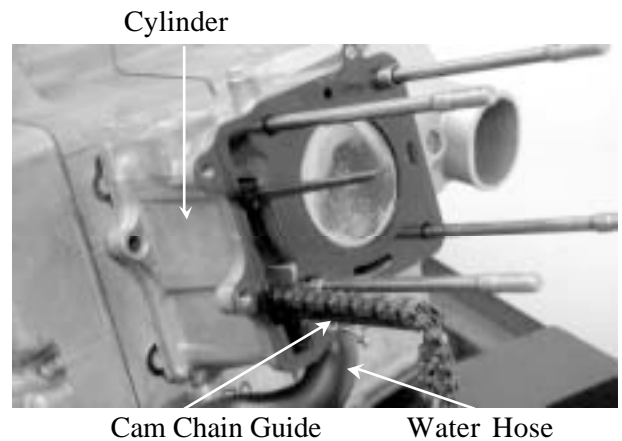

Remove the cam chain guide.  
 Remove the cylinder.




Remove the cylinder gasket and dowel pins.  
 Clean any gasket material from the cylinder surface.

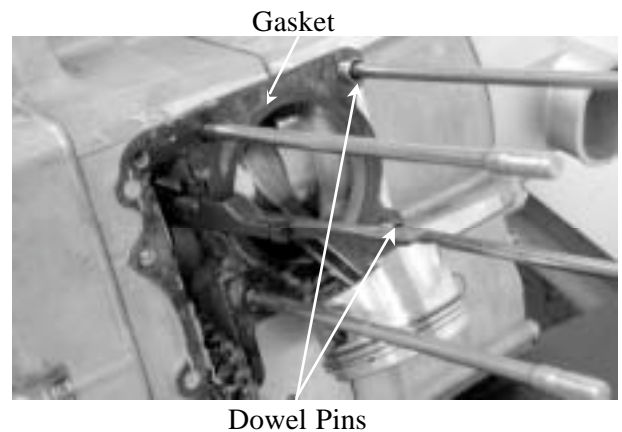

### PISTON REMOVAL

Remove the piston pin clip.  
 Press the piston pin out of the piston.

\* Place a clean shop towel in the crankcase to keep the piston pin clip from falling into the crankcase.

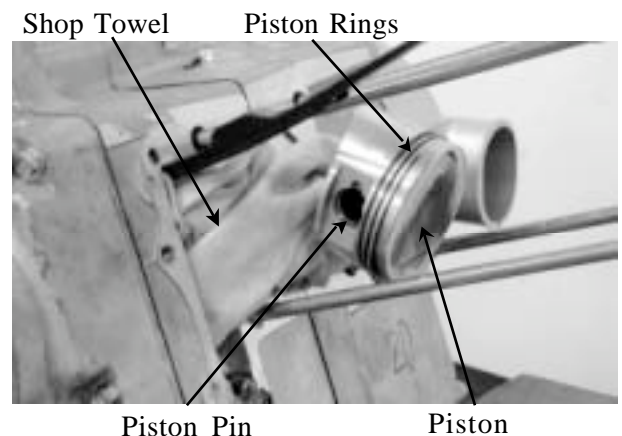

## 7. CYLINDER/PISTON

Inspect the piston, piston pin and piston rings.

Remove the piston rings.

- \* 

• Take care not to damage or break the piston rings during removal.

Clean carbon deposits from the piston ring grooves.



Install the piston rings onto the piston and measure the piston ring-to-groove clearance.

**Service Limits:**

**Top:** 0.09mm replace if over

**2nd:** 0.09mm replace if over



Remove the piston rings and insert each piston ring into the cylinder bottom.

- \* 

• Use the piston head to push each piston ring into the cylinder.

Measure the piston ring end gap.

**Service Limit:** 0.5mm replace if over



Measure the piston pin hole I.D.


**Service Limit:** 15.04mm replace if over



## 7. CYLINDER/PISTON

Measure the piston pin O.D.

**Service Limit:** 14.96mm replace if below

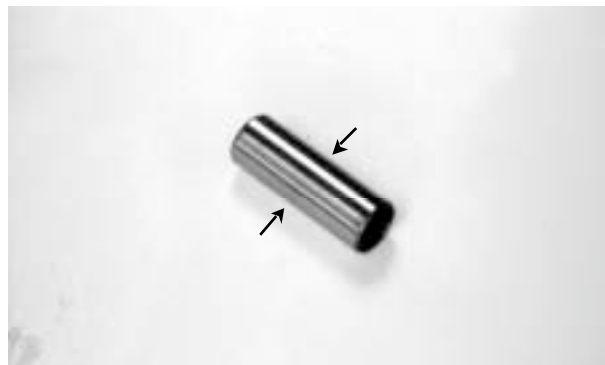

Measure the piston O.D.

- \***
- Take measurement at 9mm from the bottom and 90° to the piston pin hole.

**Service Limit:** 57.90mm replace if below

|        |                          |
|--------|--------------------------|
| SH30DA | 57.30mm replace if below |
| SH25DA | 52.30mm replace if below |

Measure the piston-to-piston pin clearance.

**Service Limit:** 0.02mm replace if over



### CYLINDER INSPECTION


Inspect the cylinder bore for wear or damage. Measure the cylinder I.D. at three levels of top, middle and bottom at 90° to the piston pin (in both X and Y directions).

**Service Limit:** 58.10mm repair or replace if below

|        |                                   |
|--------|-----------------------------------|
| SH30DA | 57.50mm repair or replace if over |
| SH25DA | 52.50mm repair or replace if over |

Measure the cylinder-to-piston clearance.

**Service Limit:** 0.1mm repair or replace if over

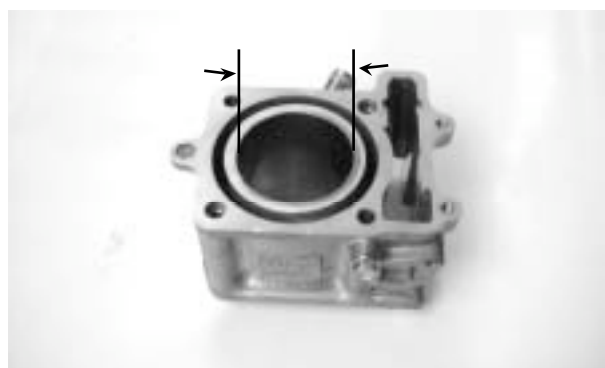


The true roundness is the difference between the values measured in X and Y directions. The cylindricity (difference between the values measured at the three levels) is subject to the maximum value calculated.

**Service Limits:**

**True Roundness:** 0.05mm repair or replace if over

**Cylindricity:** 0.05mm repair or replace if over

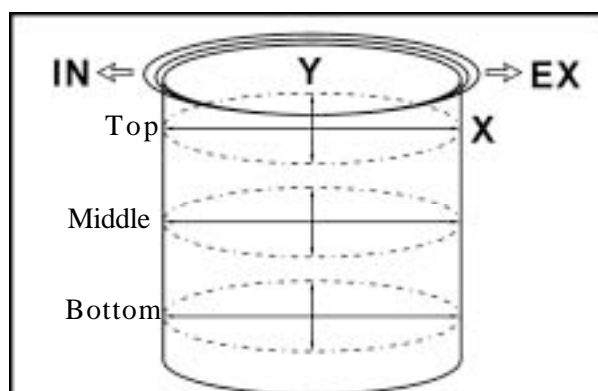



## 7. CYLINDER/PISTON

Inspect the top of the cylinder for warpage.

**Service Limit:** 0.05mm repair or replace if over



Measure the connecting rod small end I.D.

**Service Limit:** 15.06mm replace if over




### PISTON RING INSTALLATION

Install the piston rings onto the piston.  
Apply engine oil to each piston ring.

**\***

- Be careful not to damage the piston and piston rings during assembly.
- All rings should be installed with the markings facing up.
- After installing the rings, they should rotate freely without sticking.
- Stagger the ring end gaps as the figure shown.

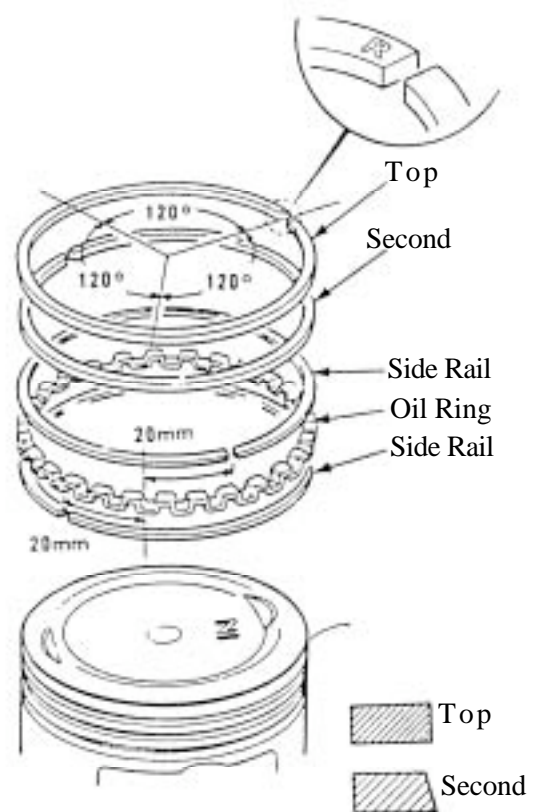

## 7. CYLINDER/PISTON

### PISTON INSTALLATION


Remove any gasket material from the crankcase surface.

- \* • Be careful not to drop foreign matters into the crankcase.




Install the piston, piston pin and a new piston pin clip.

- \* • Position the piston "IN" mark on the intake valve side.
- Place a clean shop towel in the crankcase to keep the piston pin clip from falling into the crankcase.

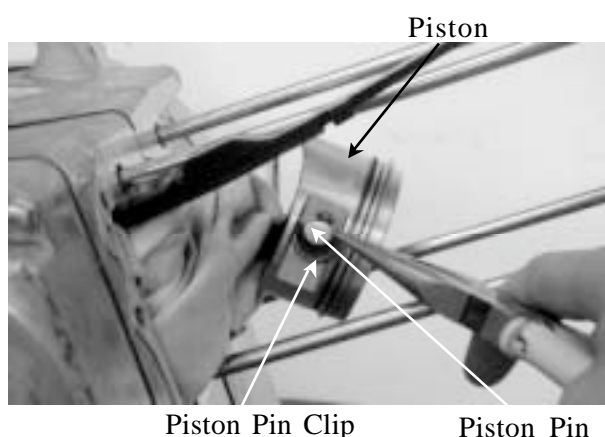


### CYLINDER INSTALLATION

Install the dowel pins and a new cylinder gasket on the crankcase.

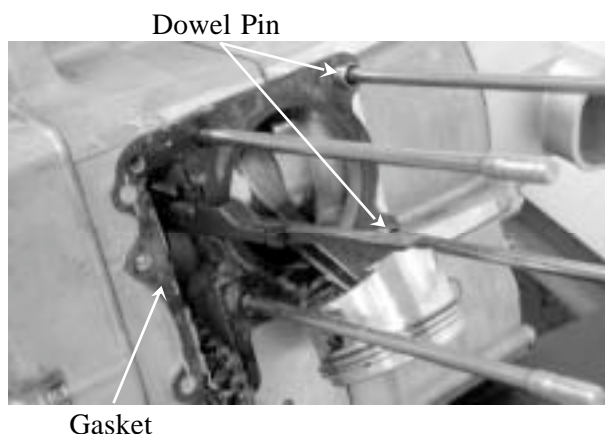

Coat the cylinder bore, piston and piston rings with clean engine oil. Carefully lower the cylinder over the piston by compressing the piston rings.

- \* • Be careful not to damage or break the piston rings.
- The piston ring end gaps should not be parallel with or at 90° to the piston pin.

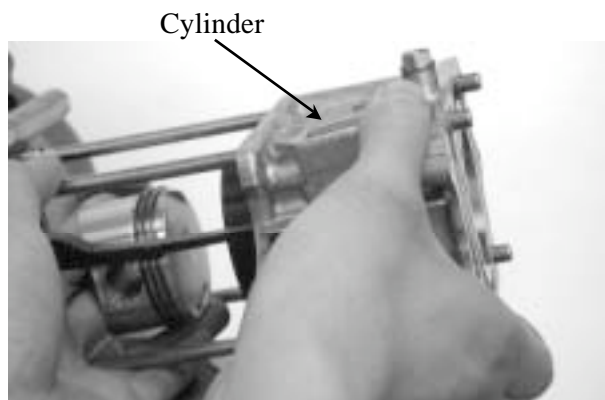


## 7. CYLINDER/PISTON

---

Tighten the cylinder base bolt.

Cylinder Base Bolt

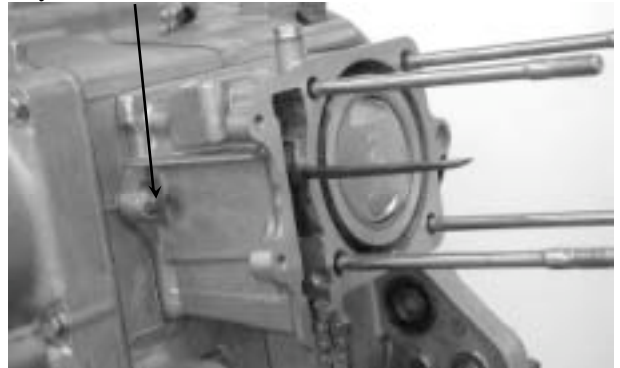

Install the cam chain guide.

- \* • Insert the tab on the cam chain guide into the cylinder groove.

Connect the water hose to the cylinder.  
Install the cylinder head. (⇒6-9)  
Tighten the cylinder base bolt.



Cam Chain Guide


DRIVE AND DRIVEN PULLEYS/  
KICK STARTER

|                            |      |
|----------------------------|------|
| SCHEMATIC DRAWING -----    | 8- 1 |
| SERVICE INFORMATION -----  | 8- 2 |
| TROUBLESHOOTING -----      | 8- 2 |
| LEFT CRANKCASE COVER-----  | 8- 3 |
| DRIVE PULLEY -----         | 8- 4 |
| CLUTCH/DRIVEN PULLEY ----- | 8- 8 |
| KICK STARTER -----         | 8-15 |

## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

---

### SCHEMATIC DRAWING

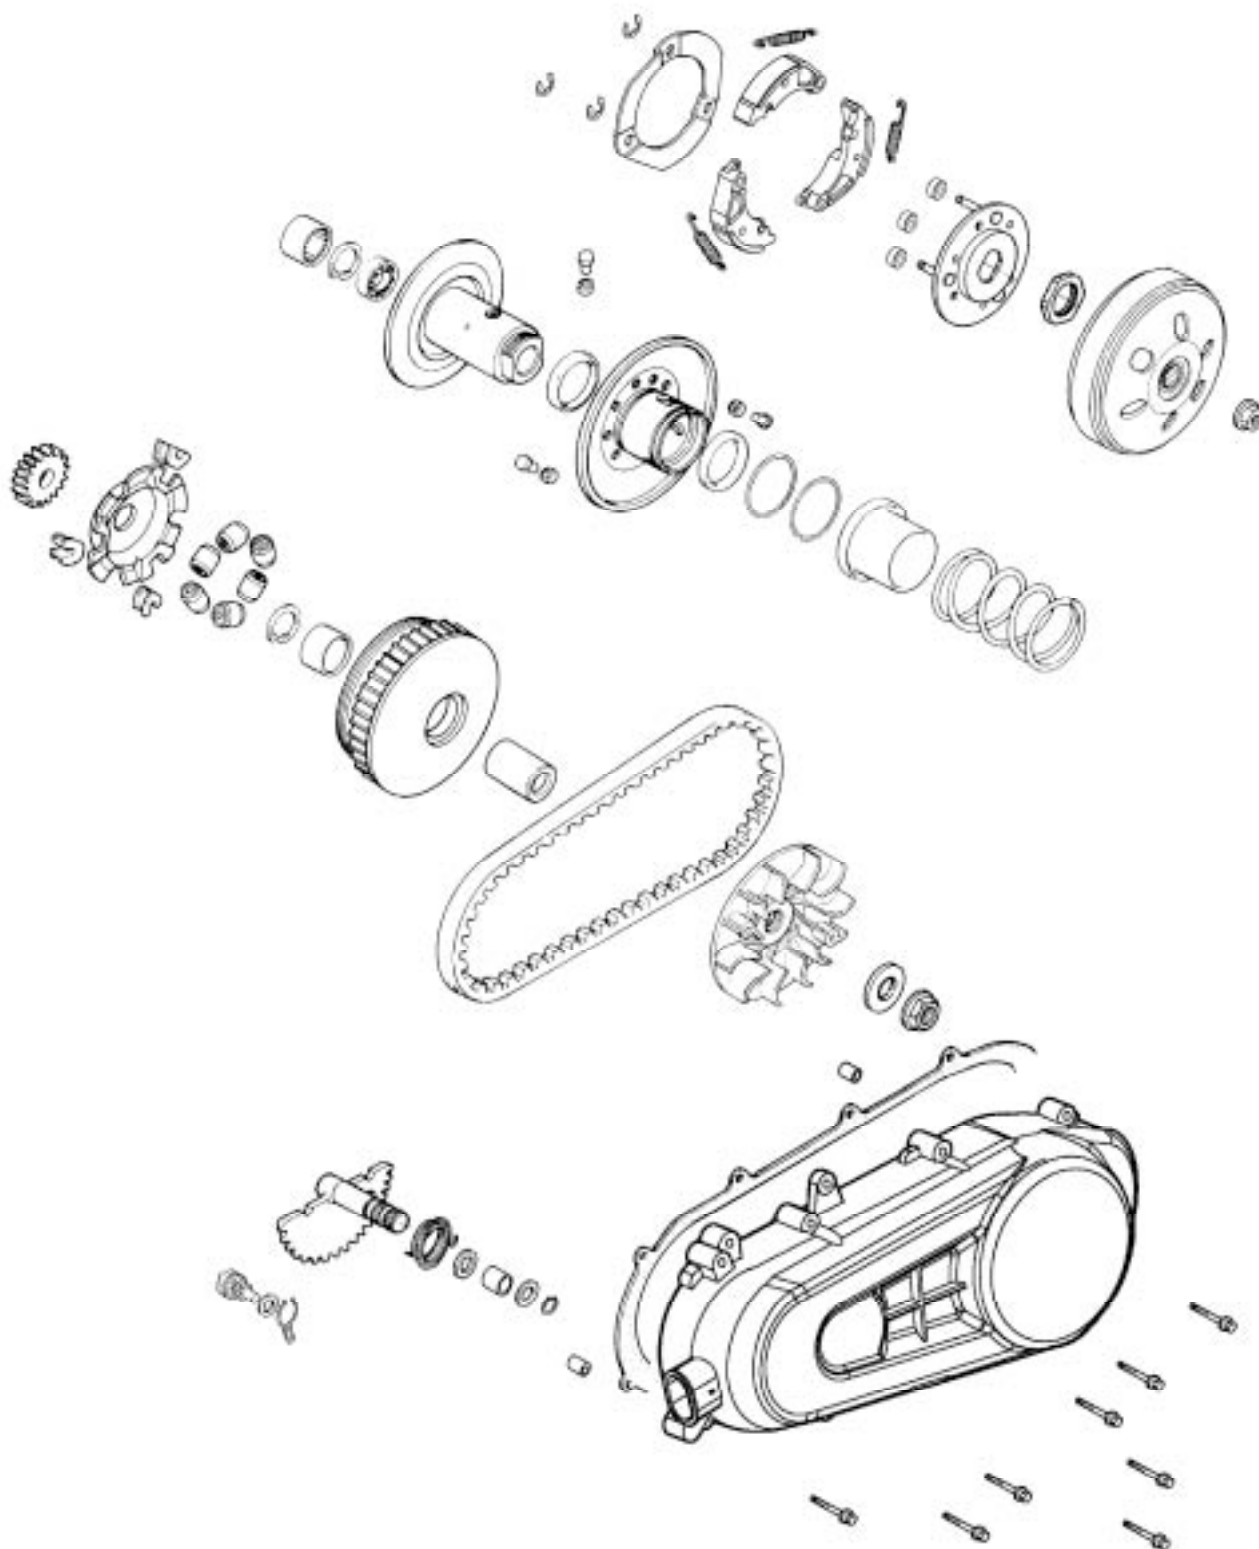

## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

### SERVICE INFORMATION

#### GENERAL INSTRUCTIONS

- The drive pulley, clutch and driven pulley can be serviced with the engine installed.
- Avoid getting grease and oil on the drive belt and pulley faces. Remove any oil or grease from them to minimize the slipping of drive belt and drive pulley.

#### SPECIFICATIONS

| Item                            | Standard (mm) |        | Service Limit (mm) |
|---------------------------------|---------------|--------|--------------------|
| Movable drive face bushing I.D. | 33.000_       | 33.025 | 33.06              |
| Drive face collar O.D.          | 32.006_       | 32.009 | 31.90              |
| Drive belt width                | 19.0          |        | 17.5               |
| Clutch lining thickness         | 3.963_        | 4.037  | 2.0                |
| Clutch outer I.D.               | 130.0_        | 130.2  | 130.5              |
| Driven face spring free length  | 88.3          |        | 83.2               |
| Driven face O.D.                | 33.965_       | 33.985 | 33.94              |
| Movable driven face I.D.        | 34.00_        | 34.025 | 34.06              |
| Weight roller O.D.              | 16.99_        | 17.00  | 16.00              |

#### TORQUE VALUES

|                        |       |         |
|------------------------|-------|---------|
| Drive face nut         | 49.0_ | 58.8N-m |
| Clutch outer nut       | 49.0_ | 58.8N-m |
| Clutch drive plate nut | 49.0_ | 58.8N-m |

#### SPECIAL TOOLS

Universal holder  
Bearing driver

Clutch spring compressor  
Lock nut wrench, 39mm  
Kick starter spring remover

#### TROUBLESHOOTING

##### Engine starts but motorcycle won't move

- Worn drive belt
- Broken ramp plate
- Worn or damaged clutch lining
- Broken driven face spring

##### Lack of power

- Worn drive belt
- Weak driven face spring
- Worn weight roller
- Faulty driven face

##### Engine stalls or motorcycle creeps

- Broken clutch weight spring




## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER


### LEFT CRANKCASE COVER

#### REMOVAL

Loosen the drive belt air tube band screw.

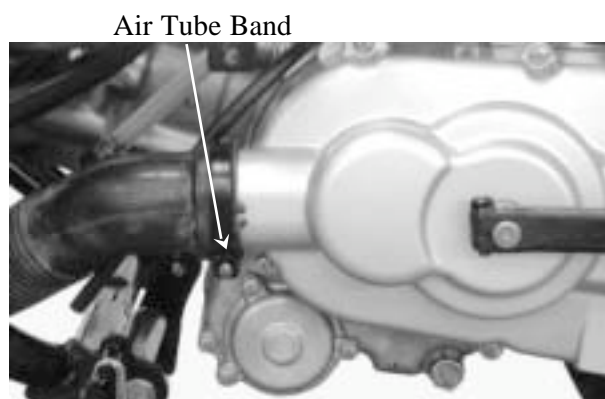


Remove the left crankcase cover bolts and left crankcase cover.  
Remove the seal rubber and dowel pins.

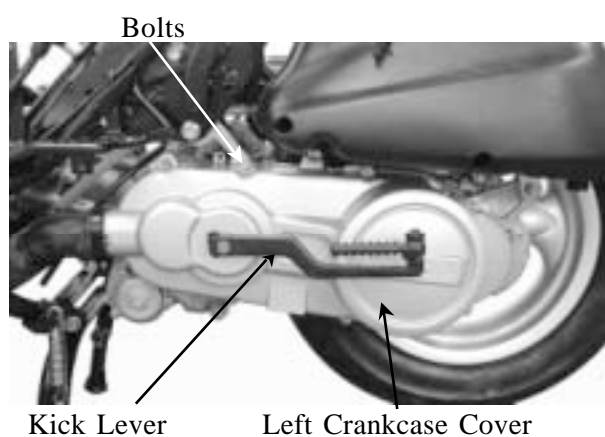

#### INSTALLATION


Install the dowel pins and the gasket.

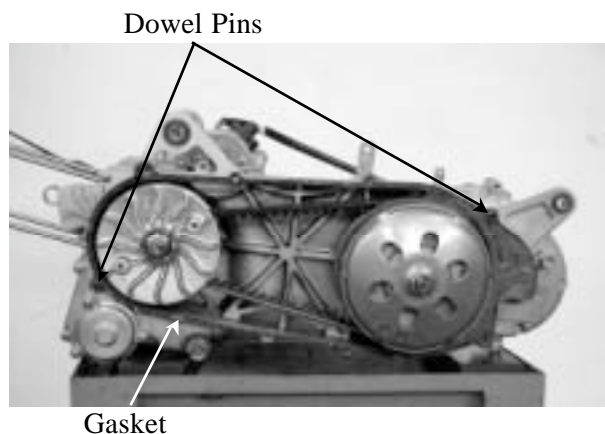

Install the left crankcase cover.


- \* Do not pull out the kick starter spindle. Press in the kick starter spindle when installing the left crankcase cover.

Install the cable clamp to the specified location. Install and tighten the left crankcase cover bolts.

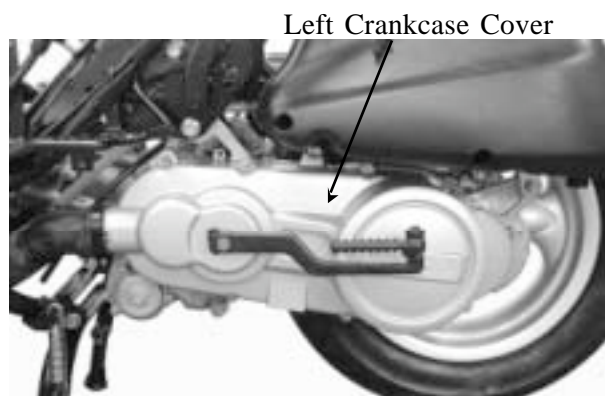

## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Install the drive belt air tube and tighten the tube band screw.

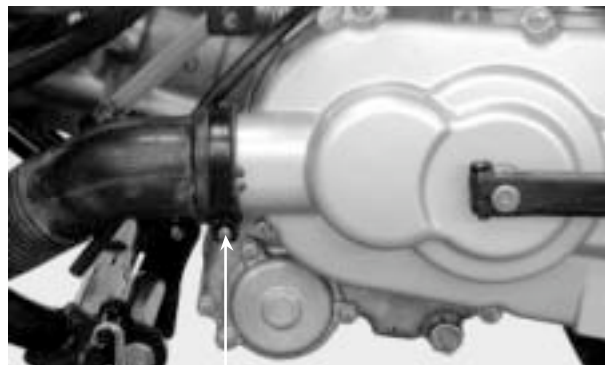

Tube Band Screw


### DRIVE PULLEY

#### REMOVAL

Remove the left crankcase cover.  
Hold the drive pulley using an universal holder and remove the drive face nut and washer.  
Remove the drive pulley face.

 Special


Universal Holder

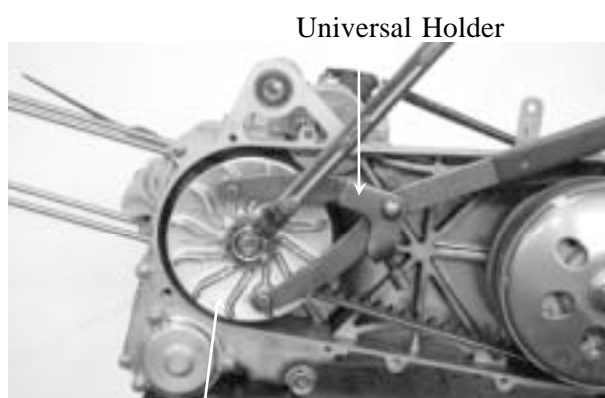

Universal Holder

Drive Pulley Face

Remove the drive belt from the movable drive face.

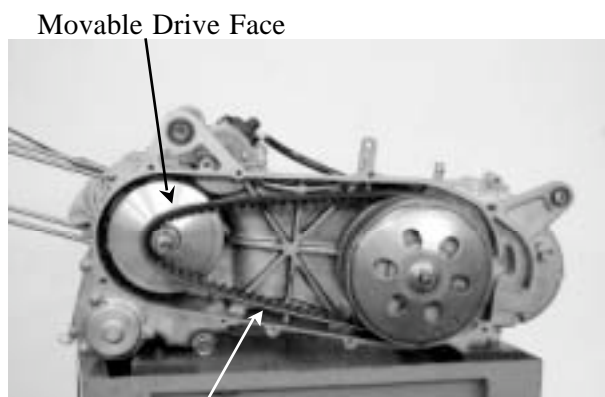

Movable Drive Face

Drive Belt

#### INSPECTION

Check the drive belt for cracks, separation or abnormal or excessive wear.  
Measure the drive belt width.

**Service Limit:** 17.5mm replace if below


- \* 

- Use specified genuine parts for replacement.




## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Remove the movable drive face assembly.  
Remove the drive pulley collar.

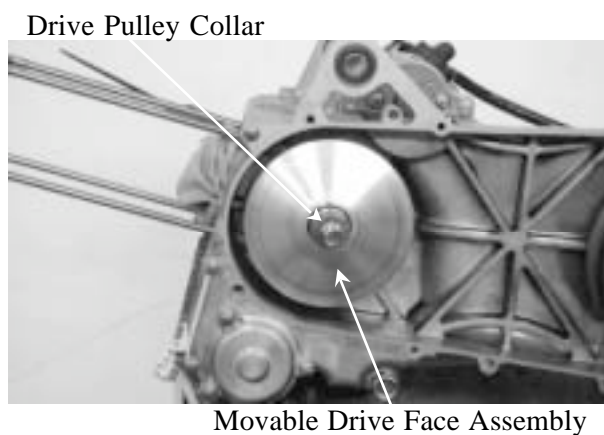


### DISASSEMBLY

Remove the ramp plate.

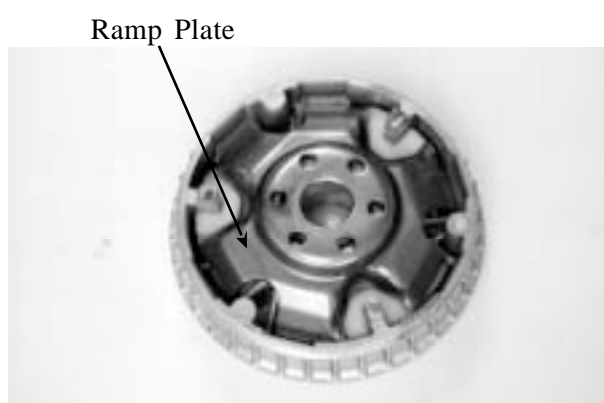


Remove the weight rollers.

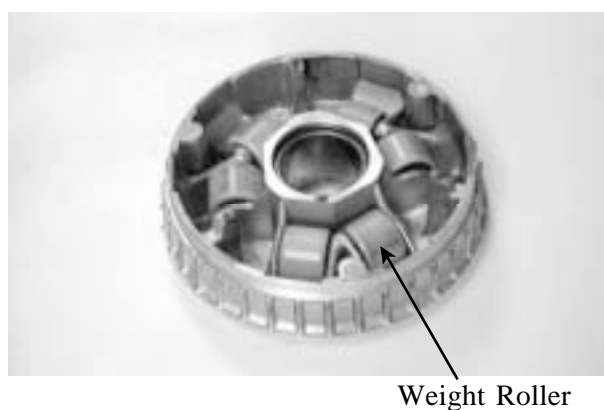

### INSPECTION

Check each weight roller for wear or damage.  
Measure each weight roller O.D.

**Service Limit:** 16.00mm replace if below

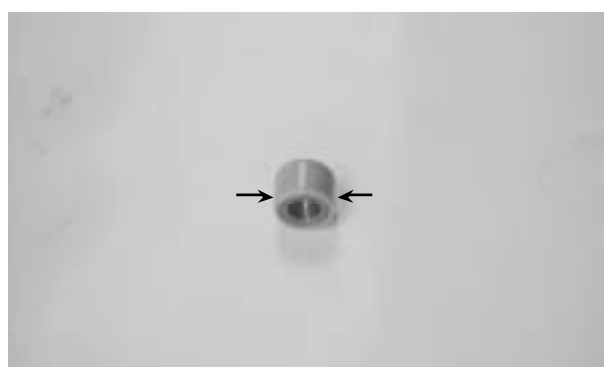

## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Measure the movable drive face bushing assembly I.D.

**Service Limit:** 27.20mm replace if over




Check the drive pulley collar for wear or damage.

Measure the O.D. of the drive pulley collar sliding surface.

**Service Limit:** 26.90mm replace if below



### ASSEMBLY

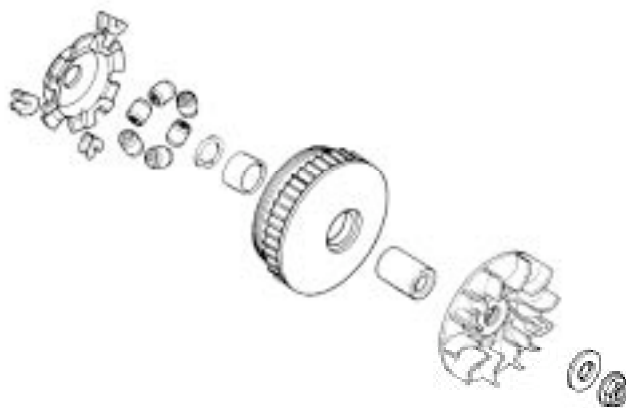


Install the weight rollers into the movable drive face.




Weight Roller

## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Install the ramp plate.

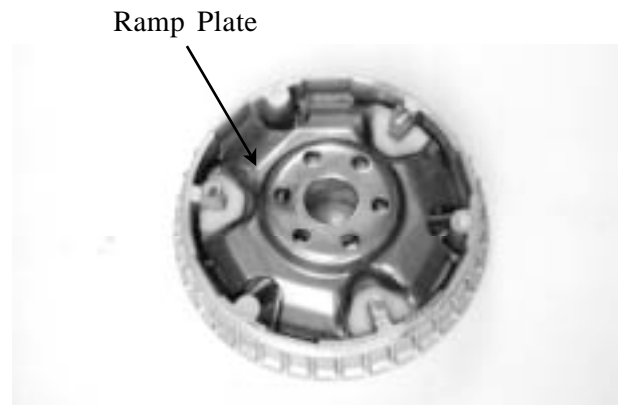


Insert the drive pulley collar into the movable drive face.

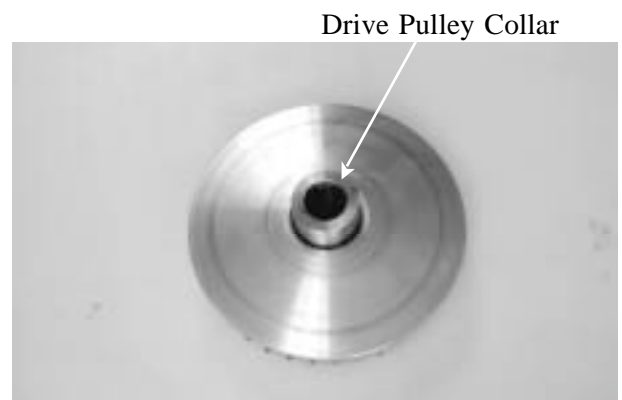


### INSTALLATION

Install the movable drive face onto the crankshaft.

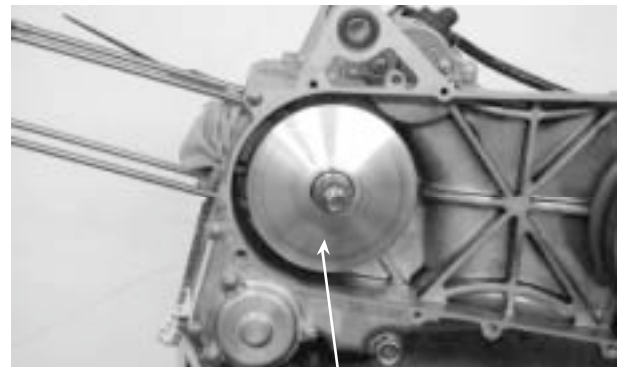


Lay the drive belt on the driven pulley.  
Set the drive belt on the drive pulley collar.

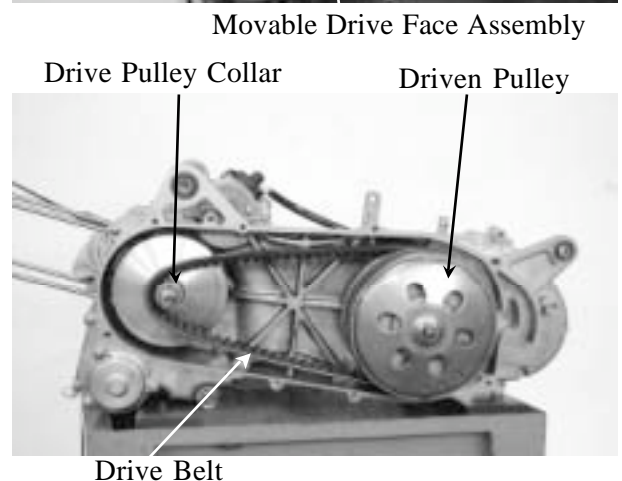

## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Install the drive pulley face, washer and drive face nut.

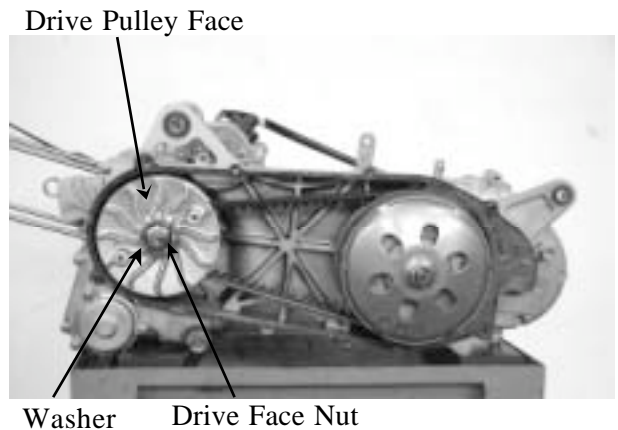


Hold the drive pulley with the universal holder and tighten the drive face nut.

**Torque:** 49.0\_ 58.5N-m

**Special**

Universal Holder

- \* Do not get oil or grease on the drive belt or drive pulley faces.

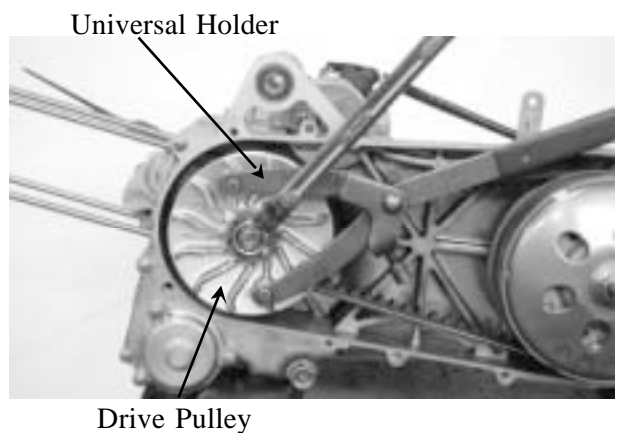

### CLUTCH/DRIVEN PULLEY


Remove the left crankcase cover. (⇒8-3)  
Remove the drive pulley and drive belt. (⇒8-4)

Hold the clutch outer with the universal holder and remove the clutch outer nut.

**Special**

Universal Holder


Remove the clutch outer.

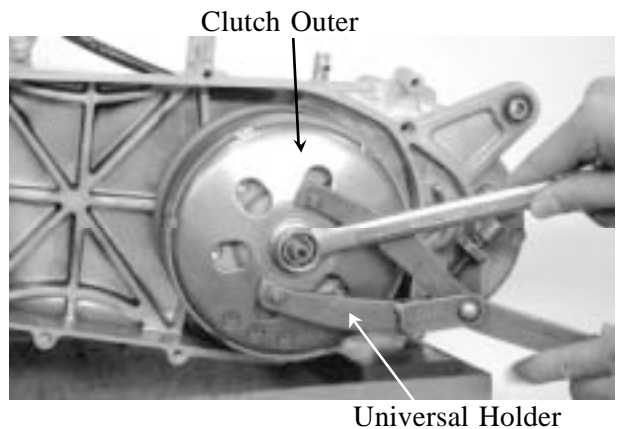

### INSPECTION

Inspect the clutch outer for wear or damage.  
Measure the clutch outer I.D.

**Service Limit:** 130.5mm replace if over

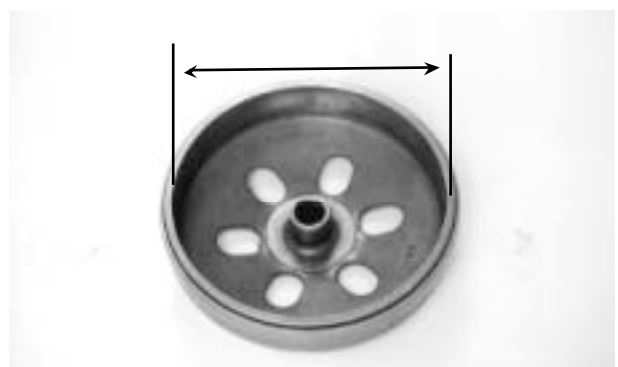




## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Check the clutch shoes for wear or damage.  
Measure the clutch lining thickness.

**Service Limit:** 2.0mm replace if below



### CLUTCH/DRIVEN PULLEY DISASSEMBLY

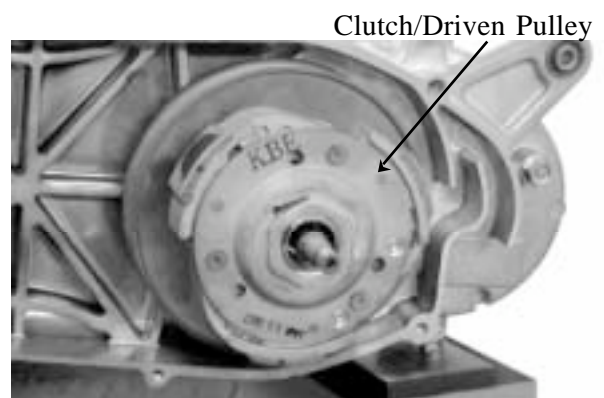


Hold the clutch/driven pulley assembly with the clutch spring compressor.

- \* Be sure to use a clutch spring compressor to avoid spring damage.

**Special**

Clutch Spring Compressor

Set the tool in a vise and remove the clutch drive plate nut.

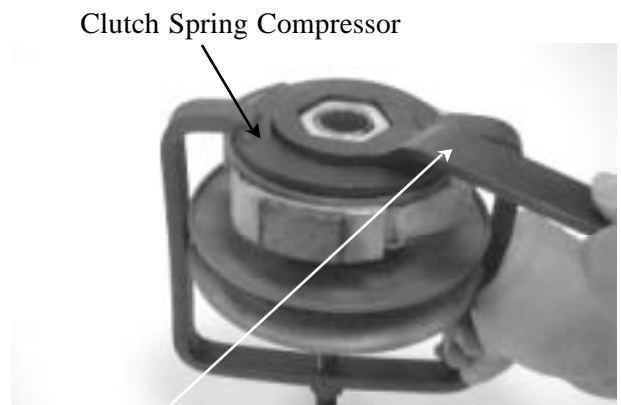

Lock Nut Wrench

**Special**

Lock Nut Wrench, 39mm


Loosen the clutch spring compressor and disassemble the clutch/driven pulley assembly.

Remove the seal collar.




## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Pull out the guide roller pins and guide rollers.  
Remove the movable driven face from the  
driven face.

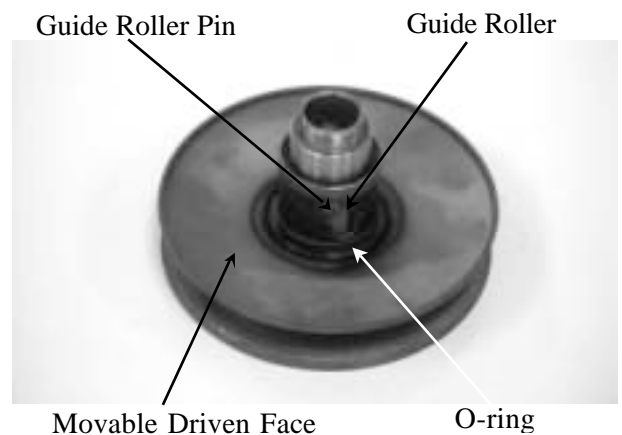


Remove the oil seal from the movable driven  
face.

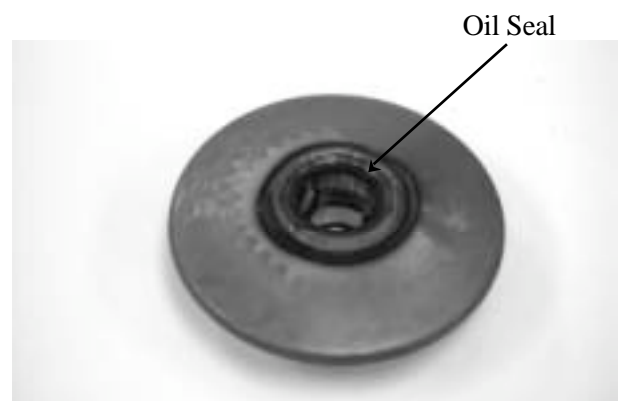

### INSPECTION

Measure the driven face spring free length.

**Service Limit:** 83.2mm replace if below

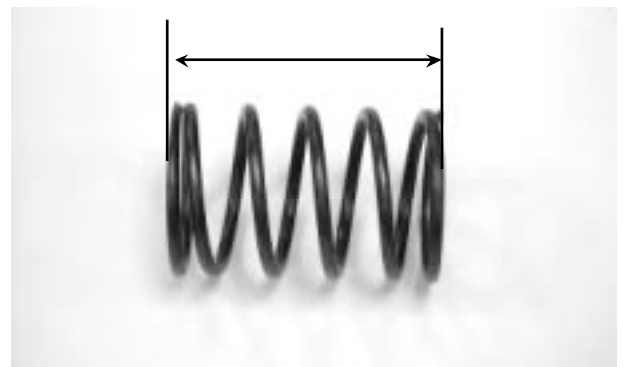

Check the driven face assembly for wear or  
damage.

Measure the driven face O.D.

**Service Limit:** 33.94mm replace if below




## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Check the movable driven face for wear or damage.

Measure the movable driven face I.D.

**Service Limit:** 34.06mm replace if over

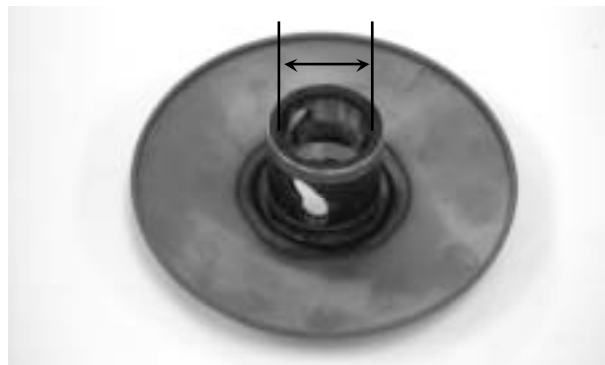


### DRIVEN PULLEY FACE BEARING REPLACEMENT

Check the bearings for play and replace them if they have excessive play.

Drive the inner needle bearing out of the driven pulley face.


- \* Discard the removed bearing and replace with a new one.

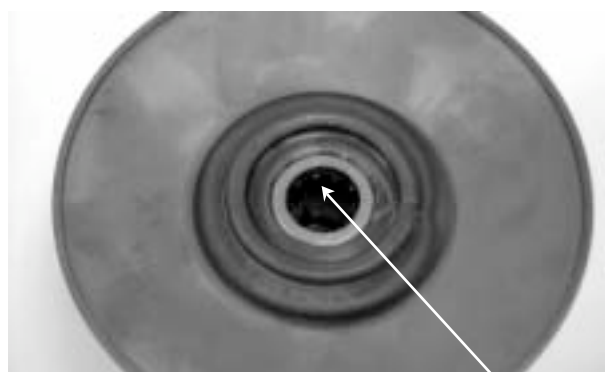

Inner Bearing

Remove the snap ring and drive the outer bearing out of the driven face.

- \* Discard the removed bearing and replace with a new one.

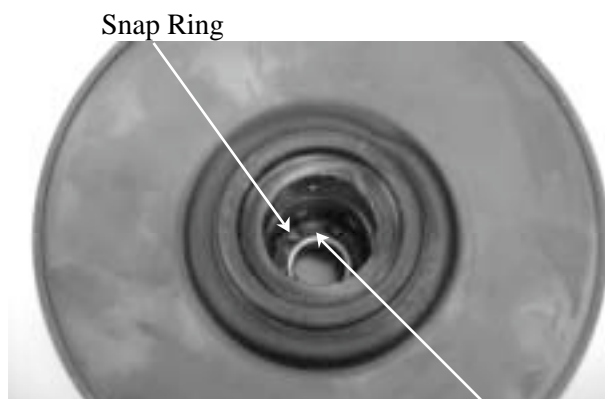

Outer Bearing

Apply grease to the outer bearing.

Drive a new outer bearing into the driven face with the sealed end facing up.

Special

Bearing Driver

Seat the snap ring in its groove.

Apply grease to the driven face bore areas.


- \* Pack all bearing cavities with 9\_ 9.5g grease.

## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Press a new needle bearing into the driven face.

Special


Bearing Driver

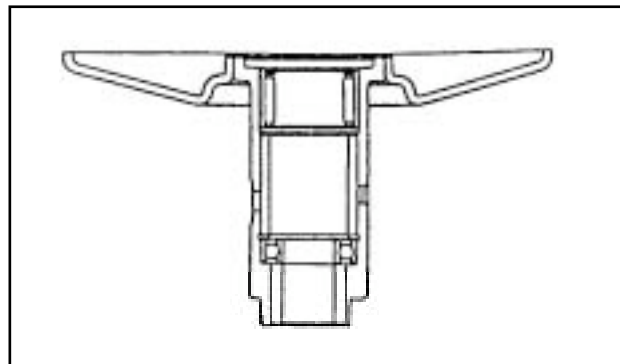

### CLUTCH DISASSEMBLY


Remove the circlips and retainer plate to disassemble the clutch.

- \*
  - Keep grease off the clutch linings.

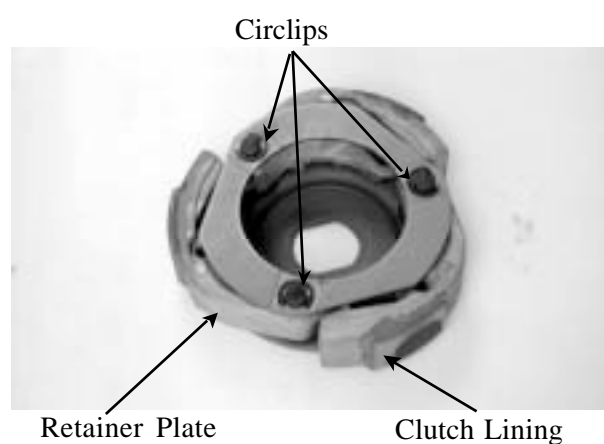


## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

### CLUTCH ASSEMBLY

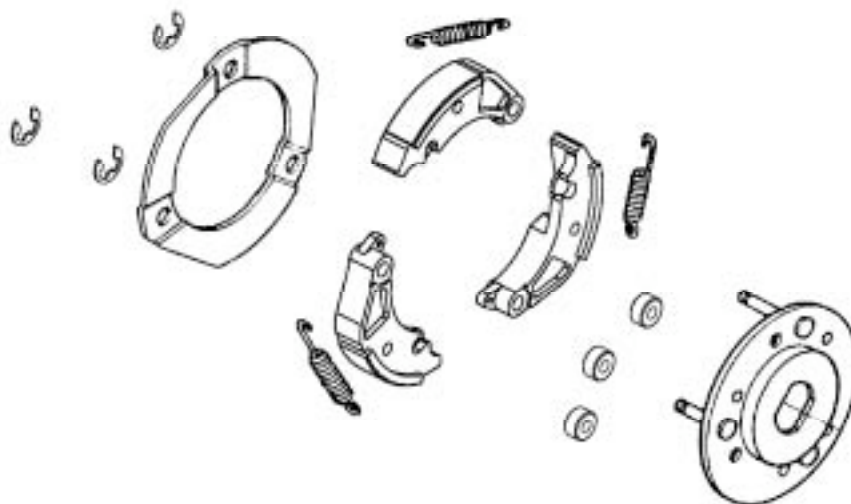


Install the damper rubbers on the drive plate pins.  
Install the clutch weights/shoes and clutch springs onto the drive plate.  
Install the retainer plate and secure with the circlips.

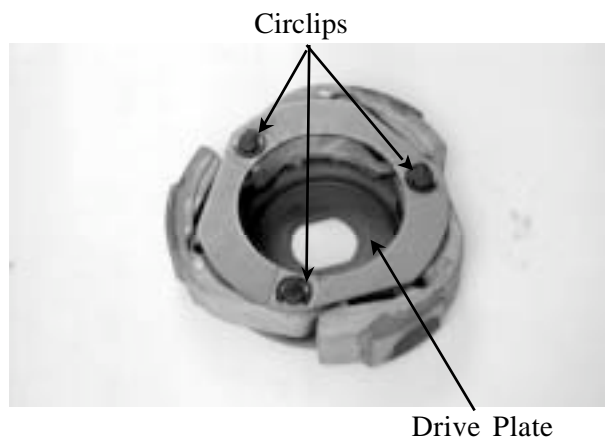

### CLUTCH/DRIVEN PULLEY ASSEMBLY


Clean the pulley faces and remove any grease from them.  
Apply grease to the O-rings and install them onto the moveable driven face.

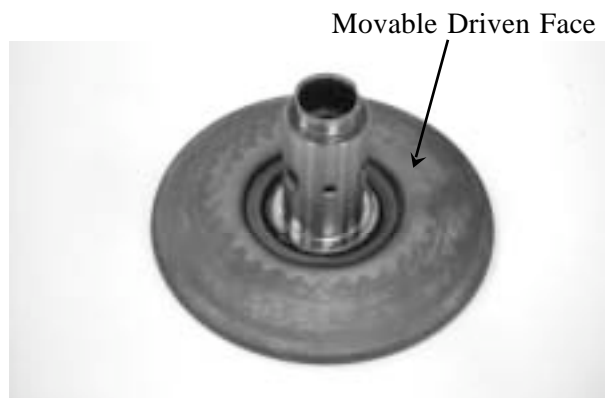

## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER


Install the movable driven face onto the driven face.

Apply grease to the guide rollers and guide roller pins and then install them into the holes of the driven face.

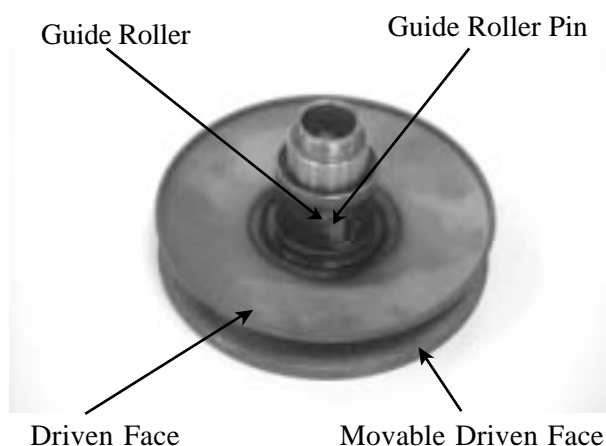

Install the seal collar.  
Remove any excessive grease.

- \* Be sure to clean the driven face off any grease.

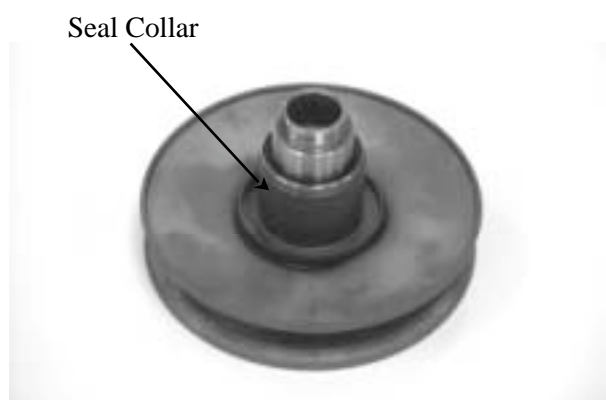

Set the driven pulley assembly, driven face spring and clutch assembly onto the clutch spring compressor.


- \* Align the flat surface of the driven face with the flat on the clutch drive plate.

Compress the tool and install the drive plate nut.

Set the tool in a vise and tighten the drive plate nut to the specified torque.

**Torque:** 49.0\_ 58.8N-m

- \* Be sure to use a clutch spring compressor to avoid spring damage.

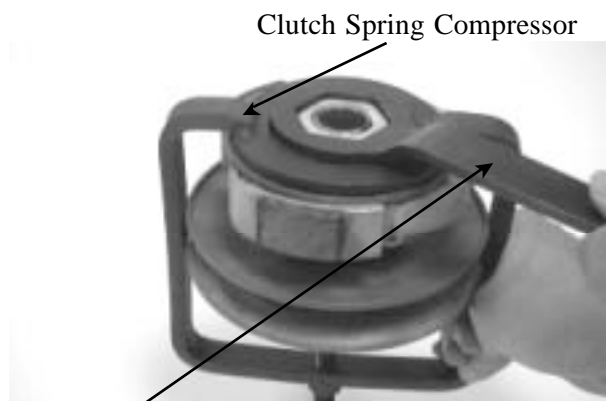

**Special**

Clutch Spring Compressor  
Outer Driver, 32x35mm

### INSTALLATION

Install the clutch/driven pulley onto the drive shaft.

- \* Keep grease off the drive shaft.



Clutch/Driven Pulley



## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

Install the clutch outer.  
Hold the clutch outer with the universal  
holder.

Install and tighten the clutch outer nut.


**Torque:** 49.0\_ 58.8kg-m

Special

Universal Holder

Install the drive belt. (⇒8-7)

Install the left crankcase cover. (⇒8-3)

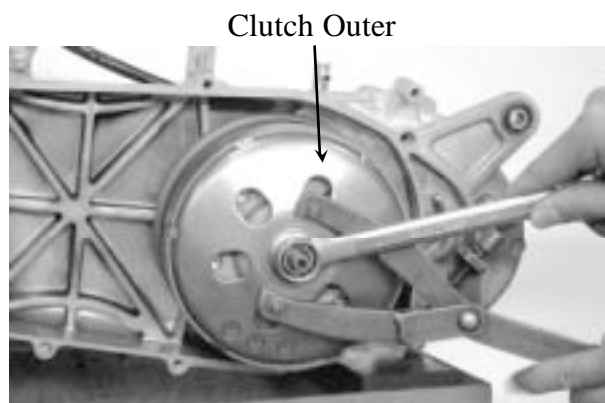

### KICK STARTER


#### REMOVAL

Remove the left crankcase cover. (⇒8-3)


Remove the seal rubber and dowel pins.

Remove the kick lever.


Remove the circlip and washer from the kick  
starter spindle.

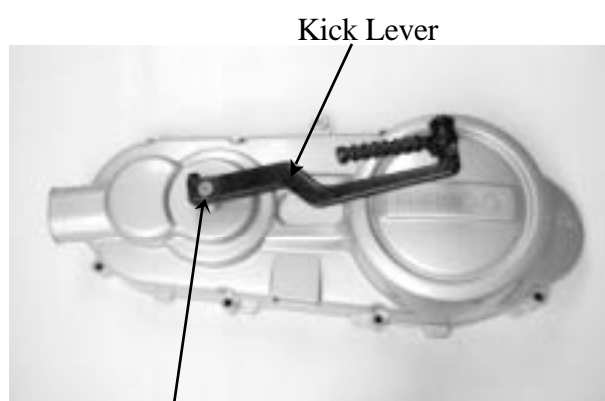

Gently turn the kick starter spindle to remove  
the starter driven gear together with the  
friction spring.

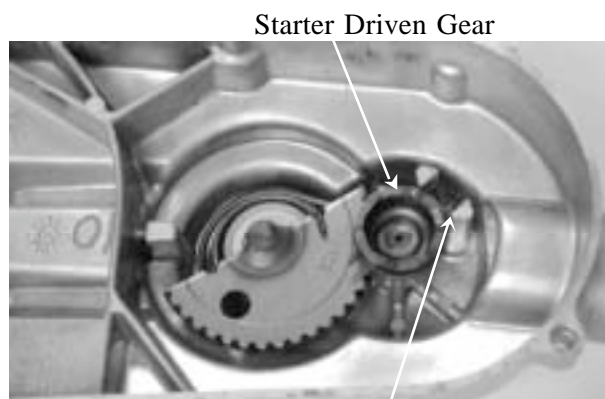


Remove the kick starter spindle and return  
spring from the left crankcase cover.  
Remove the kick starter spindle bushing.

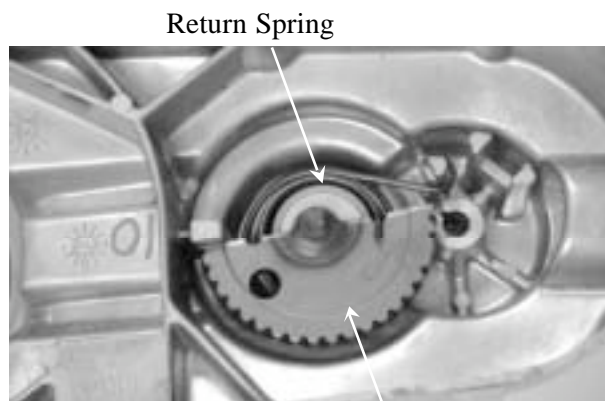


## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

### INSPECTION


Inspect the kick starter spindle and gear for wear or damage.  
Inspect the return spring for weakness or damage.  
Inspect the kick starter spindle bushings for wear or damage.

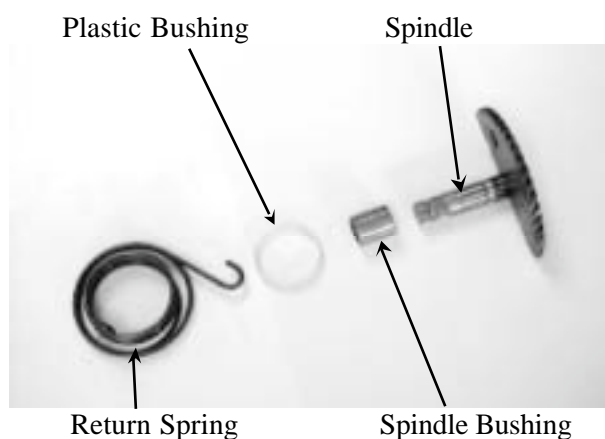

Inspect the starter driven gear for wear or damage.  
Inspect the friction spring for wear or damage.

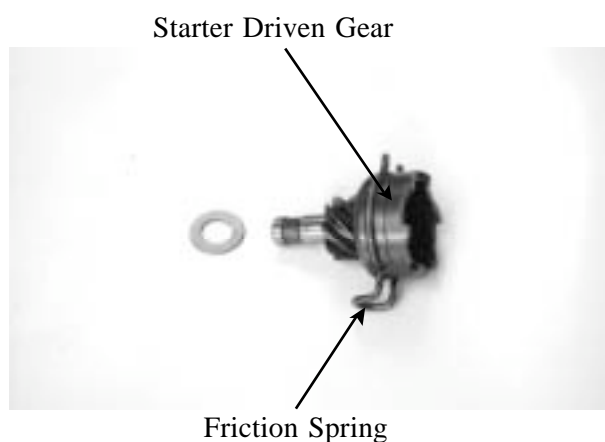

Inspect the kick starter spindle and starter driven gear forcing parts for wear or damage.

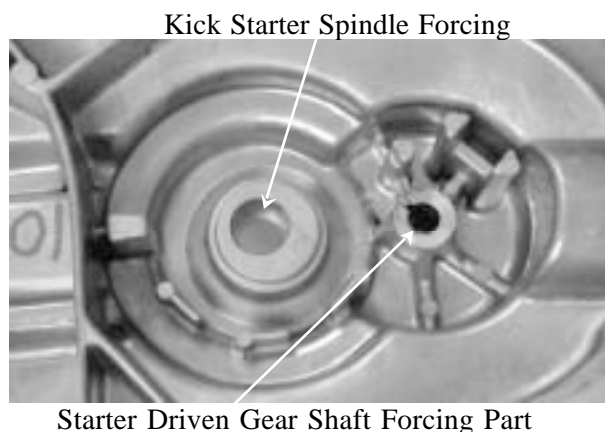


### INSTALLATION

Install the kick starter spindle bushings and return spring onto the left crankcase cover.

- \* When installing the return spring, use a screw driver to press the inward and outward return spring hooks into their original positions respectively.


Install the starter driven gear and friction spring as the figure shown.

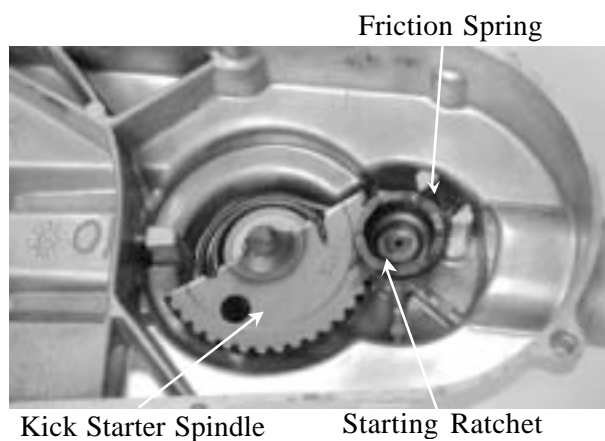

## 8. DRIVE AND DRIVEN PULLEYS/ KICK STARTER

---

Install the kick lever.  
Install the left crankcase cover and tighten the cover bolts diagonally.  
Connect the drive belt air tube and tighten the band screw.

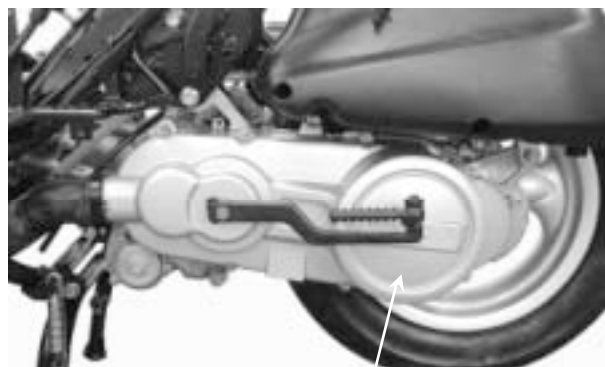

Left Crankcase Cover

### **LEFT CRANKCASE COVER BEARING INSPECTION**

Inspect the bearing into the left crankcase cover for loose, wear or damage.  
If any abnormal problem is found, replace the bearing with a new one.



# 9. FINAL REDUCTION

---

---

---

---

---

---


## FINAL REDUCTION

---

|                                   |     |
|-----------------------------------|-----|
| SCHEMATIC DRAWING -----           | 9-1 |
| SERVICE INFORMATION -----         | 9-2 |
| TROUBLESHOOTING -----             | 9-2 |
| FINAL REDUCTION DISASSEMBLY ----- | 9-3 |
| FINAL REDUCTION INSPECTION -----  | 9-3 |
| FINAL REDUCTION ASSEMBLY -----    | 9-6 |

## 9. FINAL REDUCTION

### SCHEMATIC DRAWING

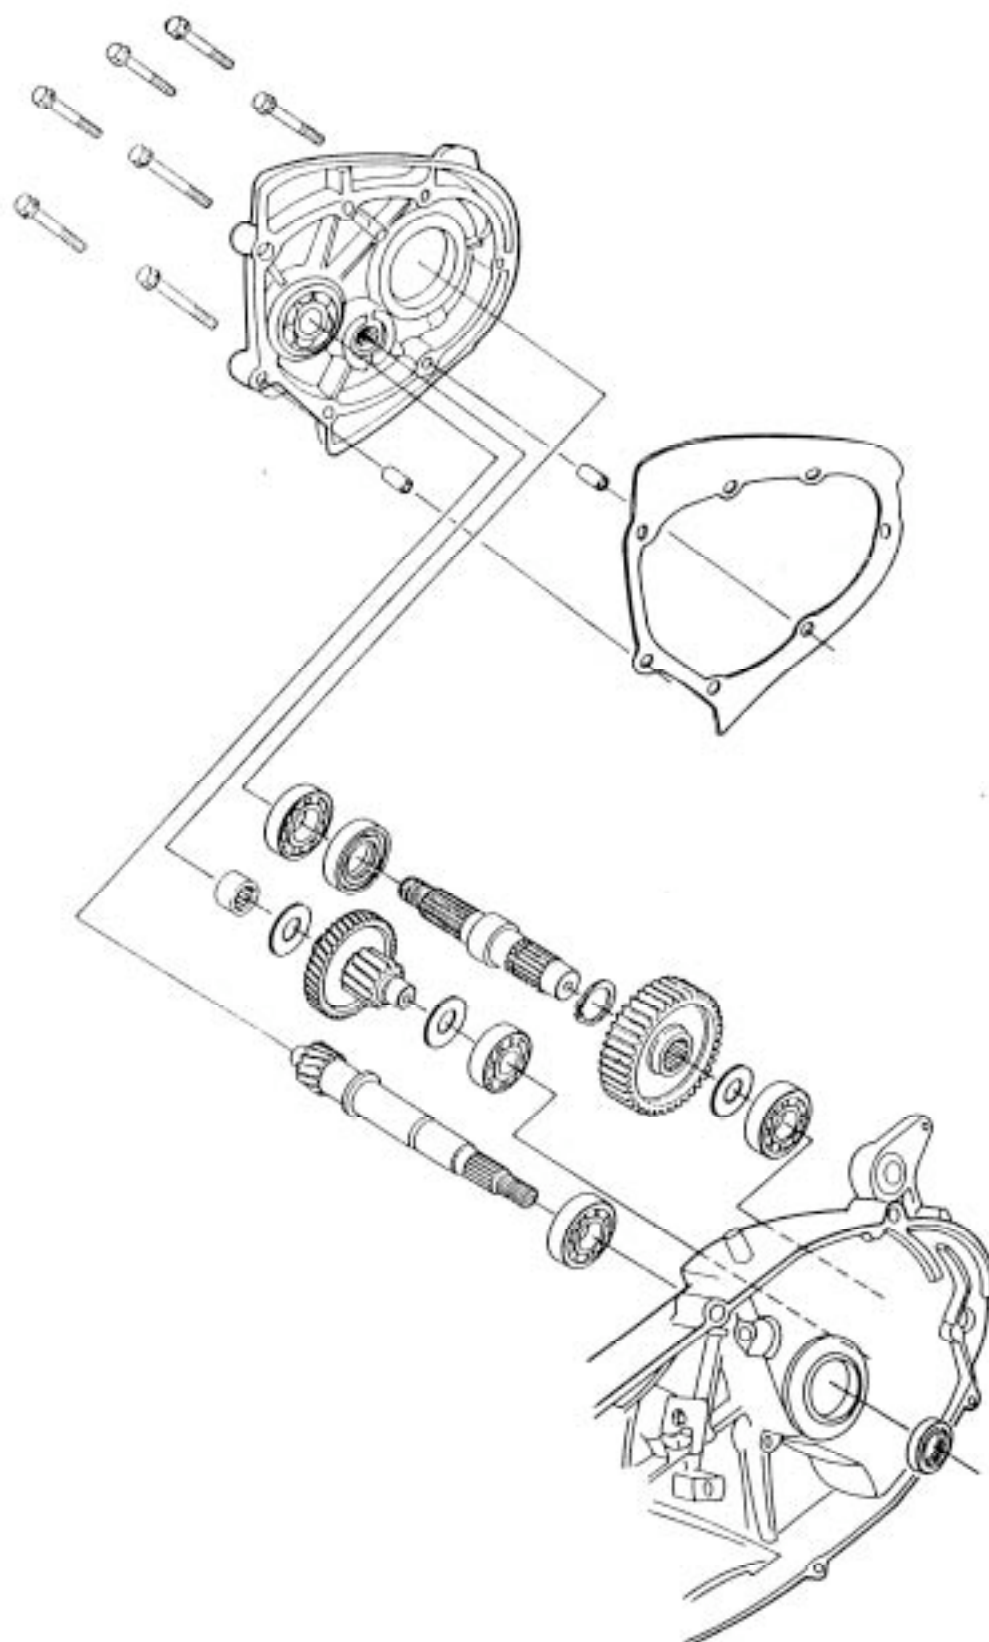

## 9. FINAL REDUCTION

---

### SERVICE INFORMATION

#### GENERAL INSTRUCTIONS

- The servicing operations of this section can be made with the engine installed.
- When replacing the drive shaft, use a special tool to hold the bearing inner race for this operation.

#### SPECIFICATIONS

Specified Oil: SAE 90#

Oil Capacity:

At disassembly : 0.2 liter

At change : 0.18 liter

#### TORQUE VALUES

Transmission case cover bolt    25.5\_    31.4N-m

Oil check bolt                      9.8\_    14.7N-m

#### SPECIAL TOOLS

Bearing remover, 12mm

Bearing remover, 15mm

Pilot, 12mm

Pilot, 15mm

### TROUBLESHOOTING

#### Engine starts but motorcycle won't move

- Damaged transmission
- Seized or burnt transmission

#### Abnormal noise

- Worn, seized or chipped gears
- Worn bearing

#### Oil leaks


- Oil level too high
- Worn or damaged oil seal



## 9. FINAL REDUCTION


### FINAL REDUCTION DISASSEMBLY

Remove the exhaust muffler. (⇒ 2-6)  
 Remove the rear brake caliper. (⇒ 15-3)  
 Remove the right rear shock absorber.  
 (⇒ 15-5)  
 Remove the rear fork. (⇒ 15-4)  
 Remove the rear wheel. (⇒ 15-4)  
 Remove the left crankcase cover. (⇒ 8-3)  
 Remove the clutch/driven pulleys. (⇒ 8-4)  
 Drain the transmission gear oil into a clean container.  
 Remove the transmission case cover  
 attaching bolts.

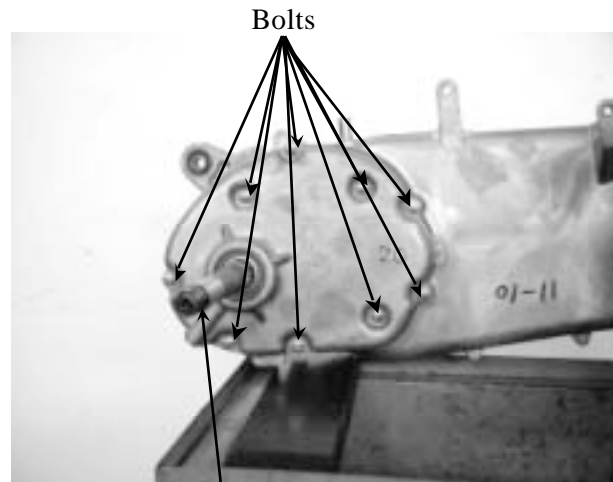

Final Shaft


Remove the transmission case cover.  
 Remove the gasket and dowel pins.  
 Remove the final gear and countershaft.

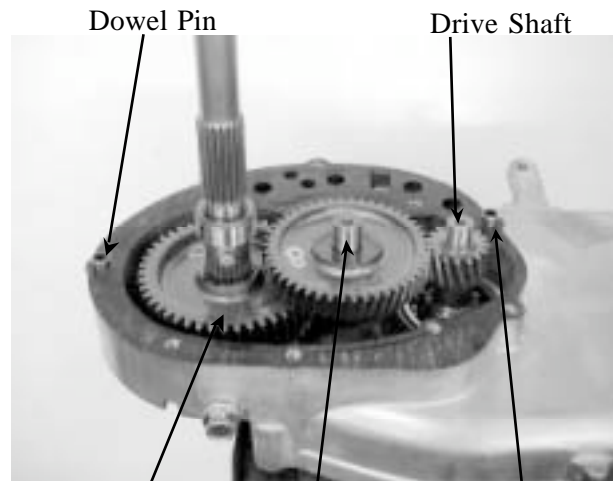

Final Gear Countershaft Dowel Pin

### FINAL REDUCTION INSPECTION

Inspect the countershaft and gear for wear  
 or damage.

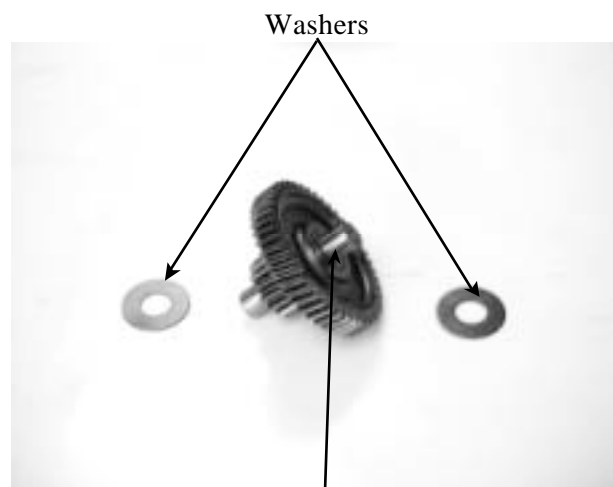


Countershaft

## 9. FINAL REDUCTION

Inspect the final gear and final shaft for wear, damage or seizure.




Check the left crankcase bearings for excessive play and inspect the oil seal for wear or damage.

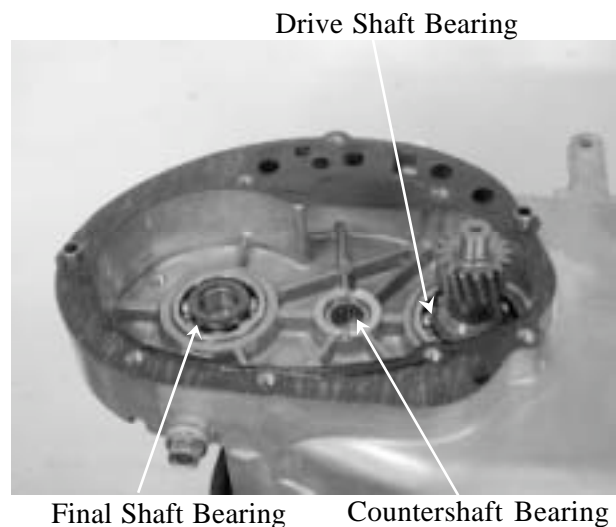

Inspect the drive shaft and gear for wear or damage.  
Check the transmission case cover bearings for excessive play and inspect the final shaft bearing oil seal for wear or damage.


**\*** Do not remove the transmission case cover except for necessary part replacement. When replacing the drive shaft, also replace the bearing and oil seal.

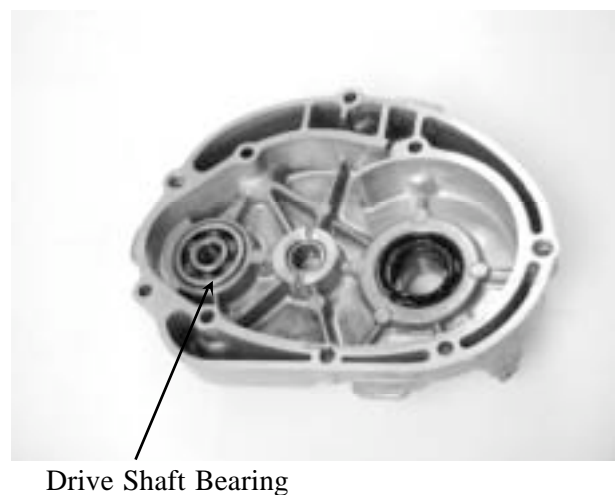


## 9. FINAL REDUCTION

### BEARING REPLACEMENT (TRANSMISSION CASE COVER)

Remove the transmission case cover bearings using the bearing remover.  
Remove the final shaft oil seal.

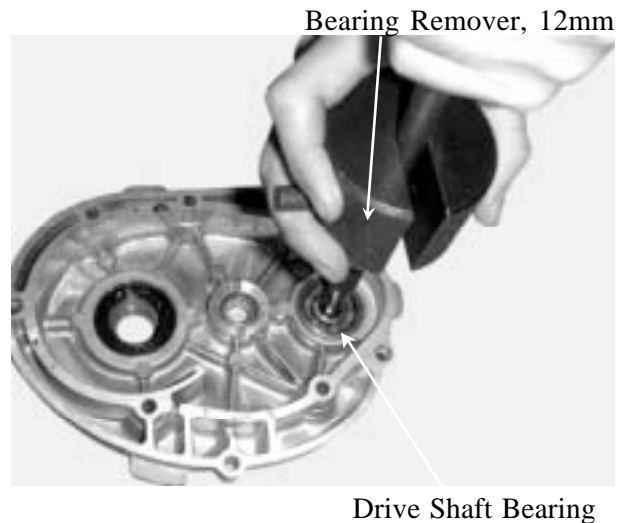

Drive new bearings into the transmission case cover.

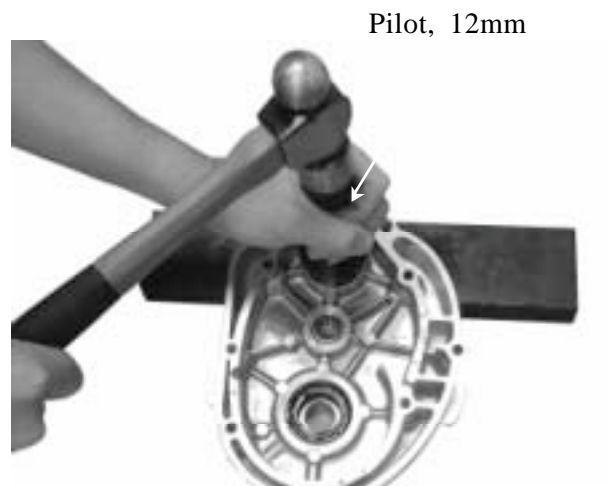

### BEARING REPLACEMENT (LEFT CRANKCASE COVER)

Remove the drive shaft.  
Remove the drive shaft oil seal.  
Remove the left crankcase bearings using the bearing remover.



## 9. FINAL REDUCTION


Drive new bearings into the left crankcase.  
Install a new drive shaft oil seal.



Pilot, 15mm


### FINAL REDUCTION ASSEMBLY

Install the drive shaft into the left crankcase.

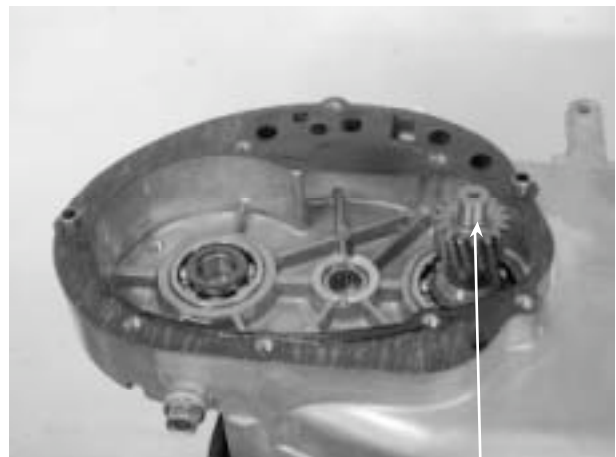

Drive Shaft

Install the final gear and final shaft into the left crankcase.

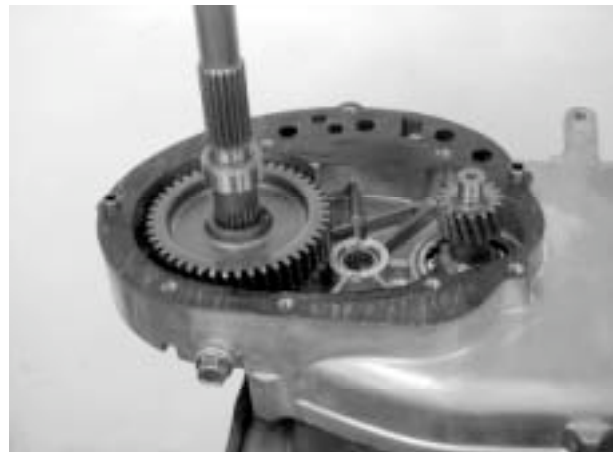


## 9. FINAL REDUCTION

---

Install the countershaft and gear into the left crankcase.

Install the resin washer onto the countershaft.


Install the dowel pins and a new gasket.

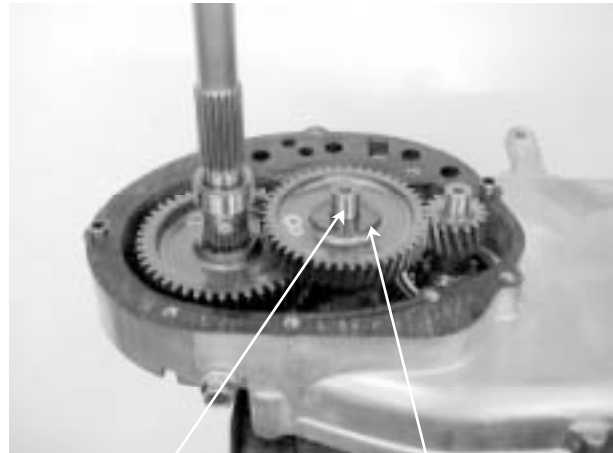

Countershaft

Washer

Install the transmission case cover.

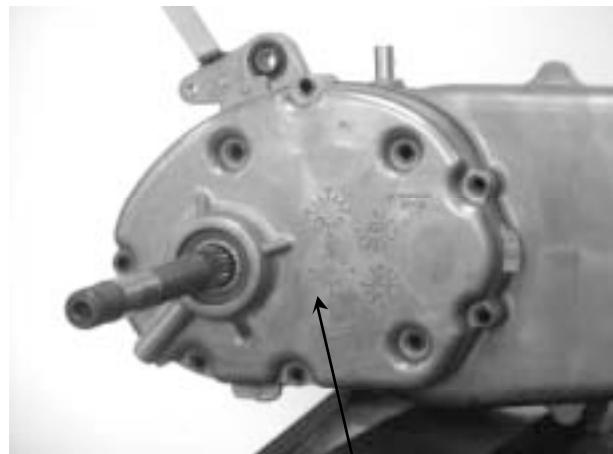


Transmission Case Cover

Install and tighten the transmission case cover bolts.

Install the clutch/driven pulley.

Install other removed parts in the reverse order of removal.

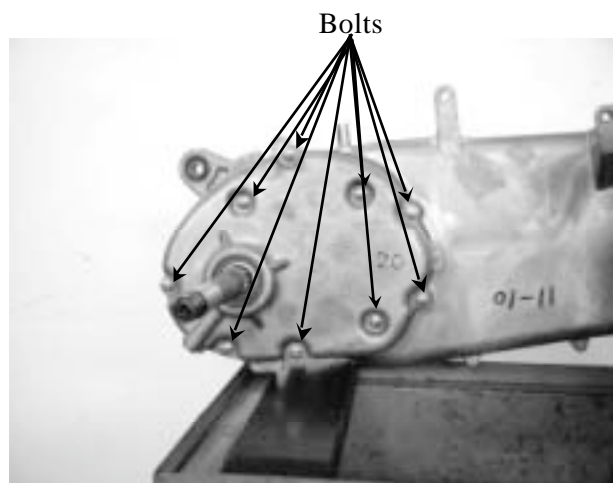

Bolts

## 9. FINAL REDUCTION

After installation, fill the transmission case with the specified oil.

**\***

- Place the motorcycle on its main stand on level ground.
- Check the oil sealing washer for wear or damage.

**Specified Gear Oil:** SAE90#

**Oil Capacity:**

At disassembly : 0.2 liter


At change : 0.18 liter

Install and tighten the oil check bolt.

**Torque:** 9.8\_ 14.7N-m

Start the engine and check for oil leaks.

Check the oil level from the oil check bolt hole and add the specified oil to the proper level if the oil level is low.

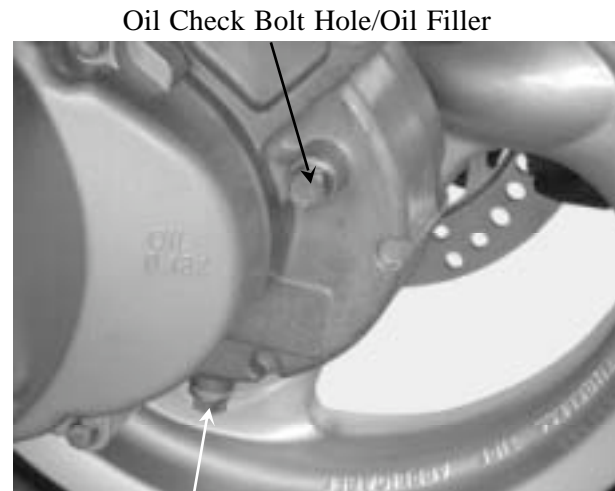

Drain Bolt



## **10. A.C. GENERATOR/STARTER CLUTCH**

---


### **A.C. GENERATOR/STARTER CLUTCH**

---

|   |      |
|---|------|
| SCHEMATIC DRAWING -----                 | 10-1 |
| SERVICE INFORMATION -----               | 10-2 |
| TROUBLESHOOTING -----                   | 10-2 |
| RIGHT CRANKCASE COVER REMOVAL-----      | 10-3 |
| STATOR REMOVAL -----                    | 10-3 |
| FLYWHEEL REMOVAL-----                   | 10-3 |
| STARTER CLUTCH -----                    | 10-4 |
| FLYWHEEL INSTALLATION-----              | 10-5 |
| STATOR INSTALLATION -----               | 10-6 |
| RIGHT CRANKCASE COVER INSTALLATION----- | 10-6 |

## 10. A.C. GENERATOR/STARTER CLUTCH

### SCHEMATIC DRAWING

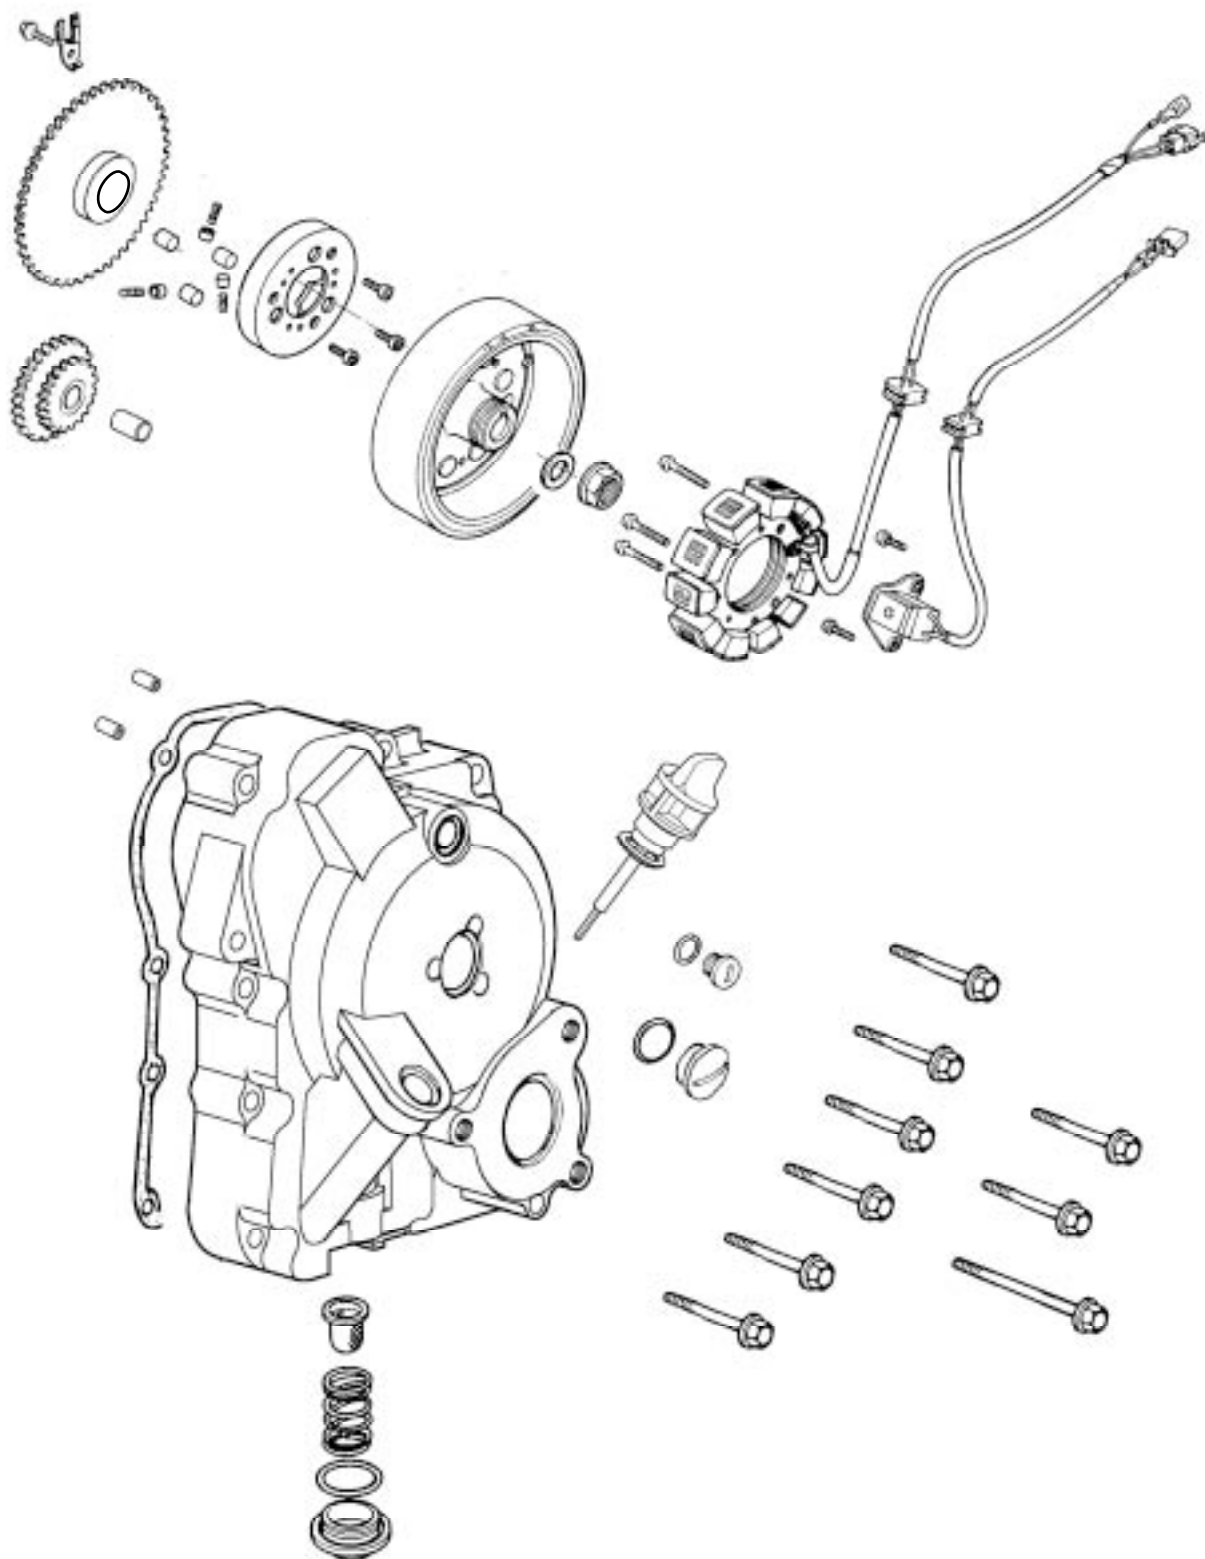

## 10. A.C. GENERATOR/STARTER CLUTCH

### SERVICE INFORMATION

#### GENERAL INSTRUCTIONS

- All servicing operations and inspections in this section can be made with the engine installed.
- Drain the coolant before removing the right crankcase cover.
- Be careful not to drain the coolant when the engine temperature is high. (Perform this operation when the engine is cold.)
- Drain the coolant into a clean container.
- Drain the engine oil into a clean container before removing the right crankcase cover.
- When the right crankcase cover is installed, fill with the recommended engine oil and coolant. Then, bleed air from the water jacket.
- Refer to page 18-4 for A.C. generator inspection.

#### SPECIFICATIONS

Engine oil: SAE15W/40#  
API-SJ

Oil capacity at change: 0.9 liter

Coolant: distilled water + coolant concentrate

Coolant capacity: 1400±20cc

#### SPECIAL TOOLS

Flywheel puller

Flywheel holder

#### SPECIFICATIONS

| Item                     | Standard (mm) |        | Service Limit (mm) |
|--------------------------|---------------|--------|--------------------|
| Starter driven gear I.D. | 20.025_       | 20.045 | 20.15mm            |
| Starter driven gear O.D. | 42.175_       | 42.200 | 41.0mm             |

#### TORQUE VALUES

Flywheel nut : 34.3\_ 44.1N-m

#### TROUBLESHOOTING

Refer to page 1-27 for A.C. generator troubleshooting.

##### **Starter motor rotates but engine does not start**


- Faulty starter clutch
- Starter motor rotates reversely
- Weak battery

# 10. A.C. GENERATOR/STARTER CLUTCH

## RIGHT CRANKCASE COVER REMOVAL

Disconnect the water hoses from the right crankcase cover.

Remove the nine bolts attaching the right crankcase cover and the cover.

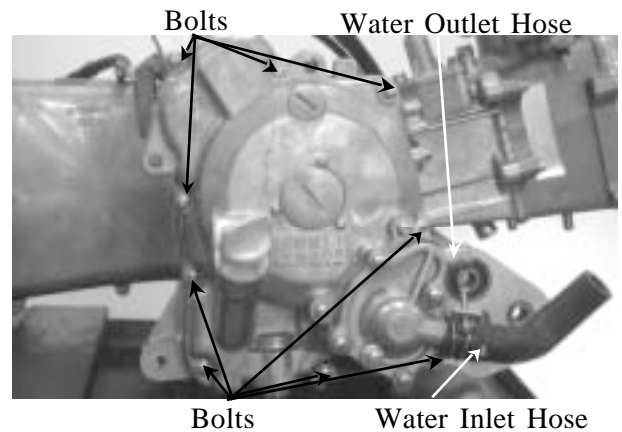


## STATOR REMOVAL

Remove the two pulser coil attaching screws and the pulser coil.


Remove the three A.C. generator stator bolts and the stator.

\* When removing the pulser coil and stator, be careful not to damage them to avoid shorted or broken wire.

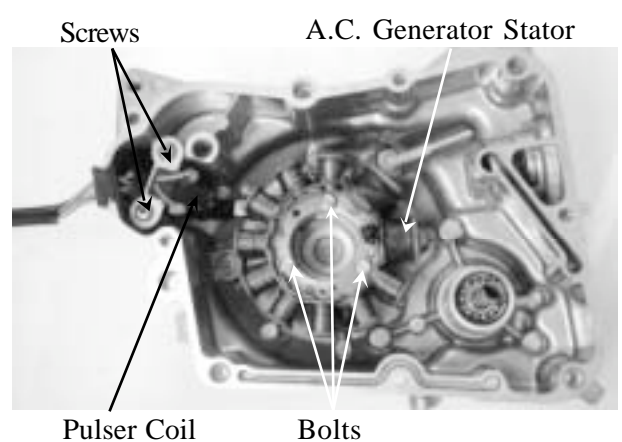


## FLYWHEEL REMOVAL

Hold the flywheel with a flywheel holder and remove the flywheel nut.

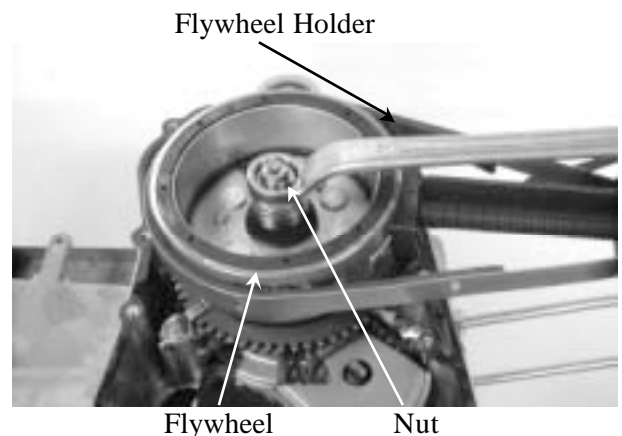

Remove the flywheel with a flywheel puller.

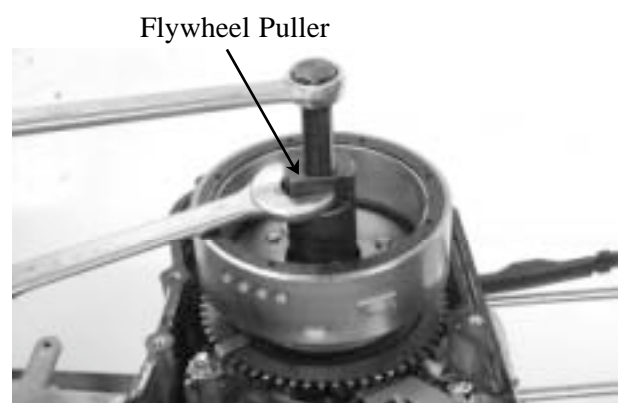


# 10. A.C. GENERATOR/STARTER CLUTCH

## STARTER CLUTCH

### REMOVAL

Remove the starter idle gear and shaft.

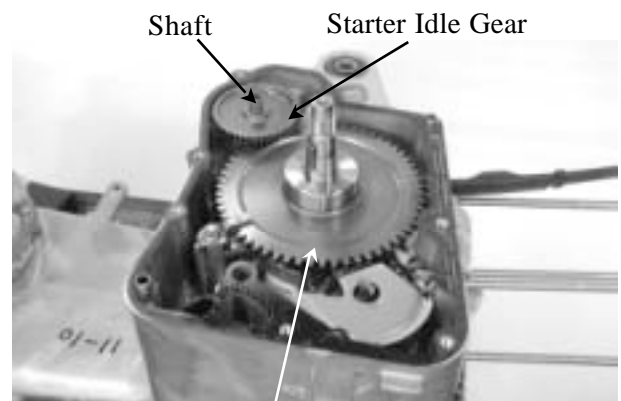

Starter Driven Gear

Remove the starter driven gear.



Starter Driven Gear

### INSPECTION


Inspect the starter driven gear for wear or damage.

Measure the starter driven gear I.D. and O.D.

#### Service Limits:


**I.D.** : 20.15mm replace if over

**O.D.** : 41.00mm replace if below

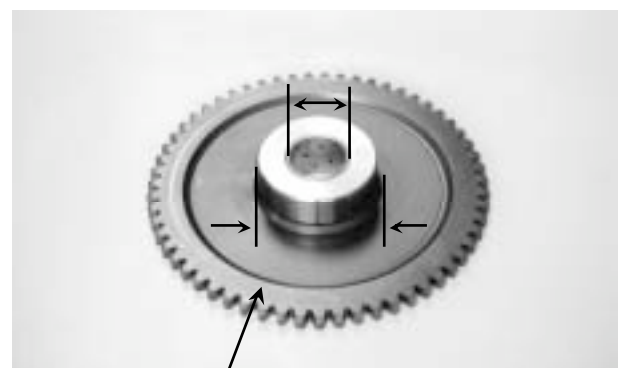

Starter Driven Gear

Inspect the starter idle gear and shaft for wear or damage.

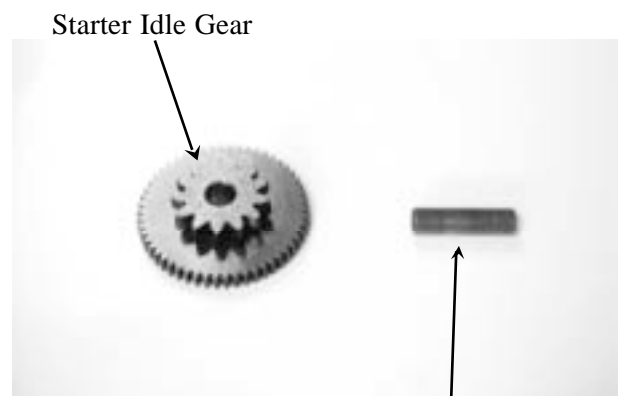


Starter Idle Gear

Shaft


## 10. A.C. GENERATOR/STARTER CLUTCH

Remove the starter one-way clutch rollers, plungers and springs.  
Inspect each roller and plunger for wear or damage and check for broken or weak spring.

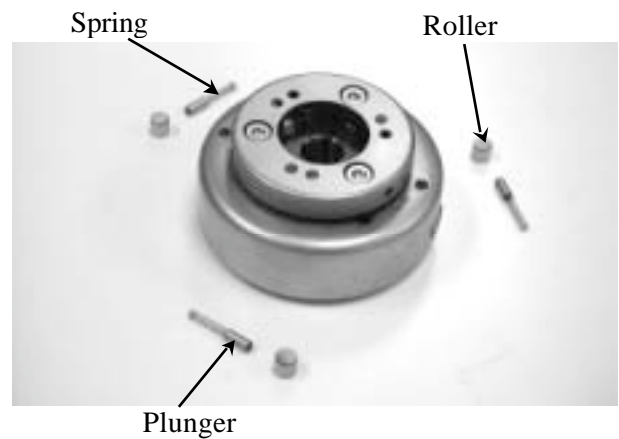

### INSTALLATION

Install the starter driven gear onto the crankshaft.  
Install the starter idle gear and shaft.

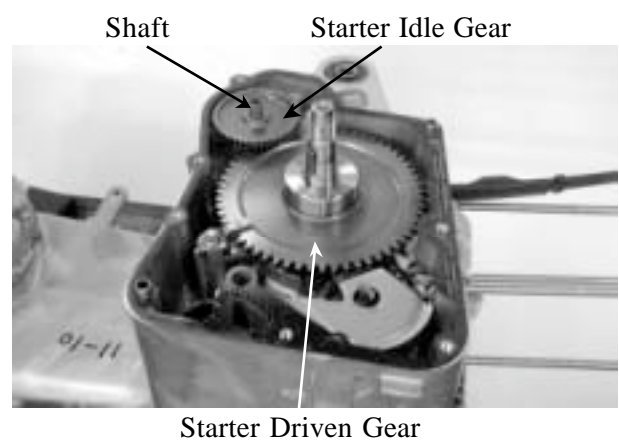



### FLYWHEEL INSTALLATION

Install the flywheel onto the crankshaft by aligning the key on the crankshaft with the groove in the flywheel.

- \***
- Before installation, check and make sure that the inside of the flywheel is not contaminated.

Hold the flywheel with the flywheel holder and tighten the flywheel nut.

**Torque:** 34.3\_ 39.2N-m

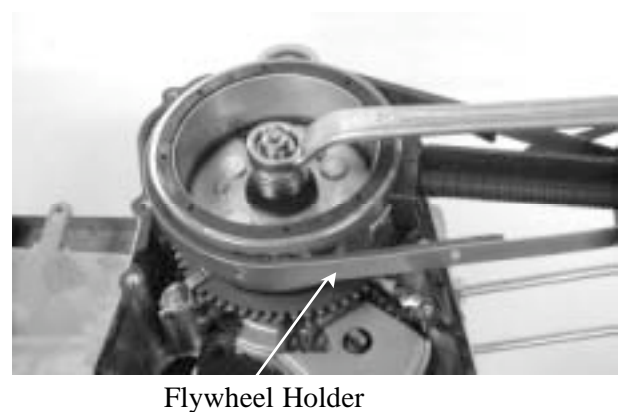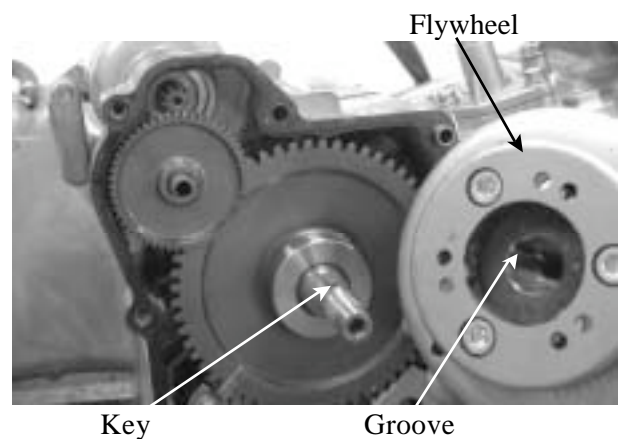



## 10. A.C. GENERATOR/STARTER CLUTCH

### STATOR INSTALLATION


Install the A.C. generator stator on the right crankcase cover and secure it with the three bolts.

Install the pulser coil on the right crankcase cover and secure it with the two screws.

Install the wire grommet in the groove in the right crankcase cover securely.


**\***

Be sure to route the stator wire under the pulser coil.

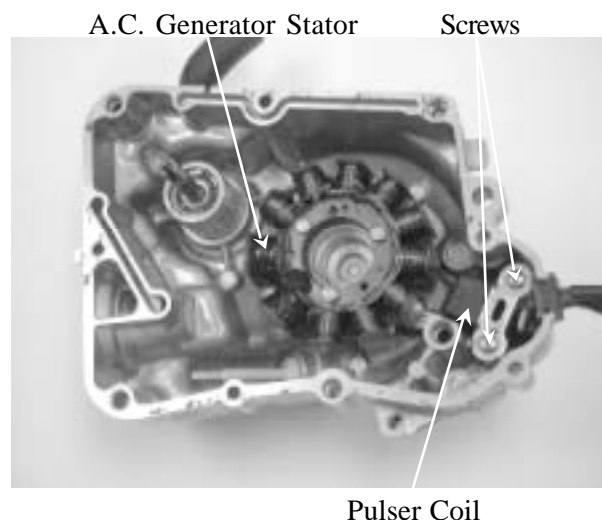

### RIGHT CRANKCASE COVER INSTALLATION

Install the two dowel pins and a new gasket.

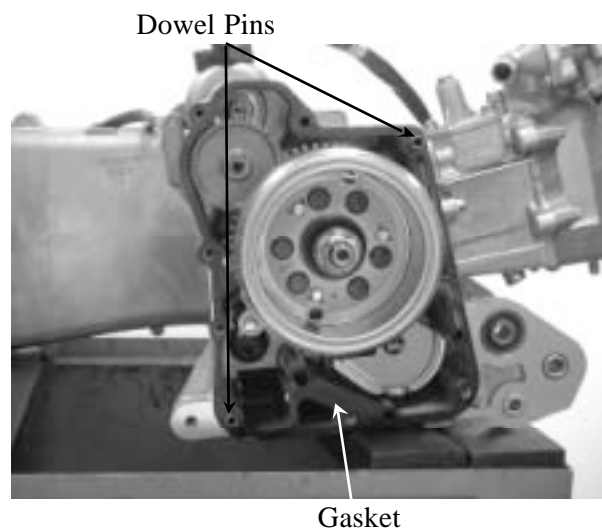


Install the right crankcase cover over the crankcase, aligning the water pump shaft groove with the oil pump shaft. Tighten the nine right crankcase cover bolts. Connect the water hoses to the right crankcase cover.

Add the recommended engine oil. (⇒4-3)

Fill the cooling system with the specified coolant. (⇒3-9)

**\***

Be sure to bleed air from the water jacket after filling the coolant.

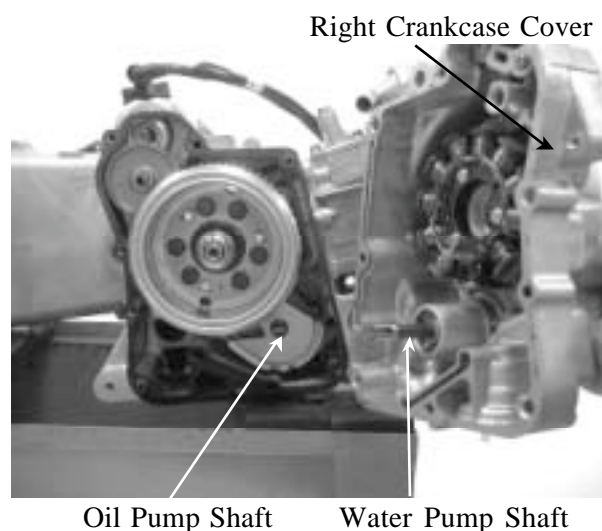

# **11. CRANKCASE/CRANKSHAFT**

---

---


## **CRANKCASE/CRANKSHAFT**

---

|                            |      |
|----------------------------|------|
| SCHEMATIC DRAWING .....    | 11-1 |
| SERVICE INFORMATION .....  | 11-2 |
| TROUBLESHOOTING .....      | 11-2 |
| CRANKCASE SEPARATION ..... | 11-3 |
| CRANKSHAFT INSPECTION..... | 11-4 |
| CRANKCASE ASSEMBLY .....   | 11-5 |

# 11. CRANKCASE/CRANKSHAFT

## SCHEMATIC DRAWING

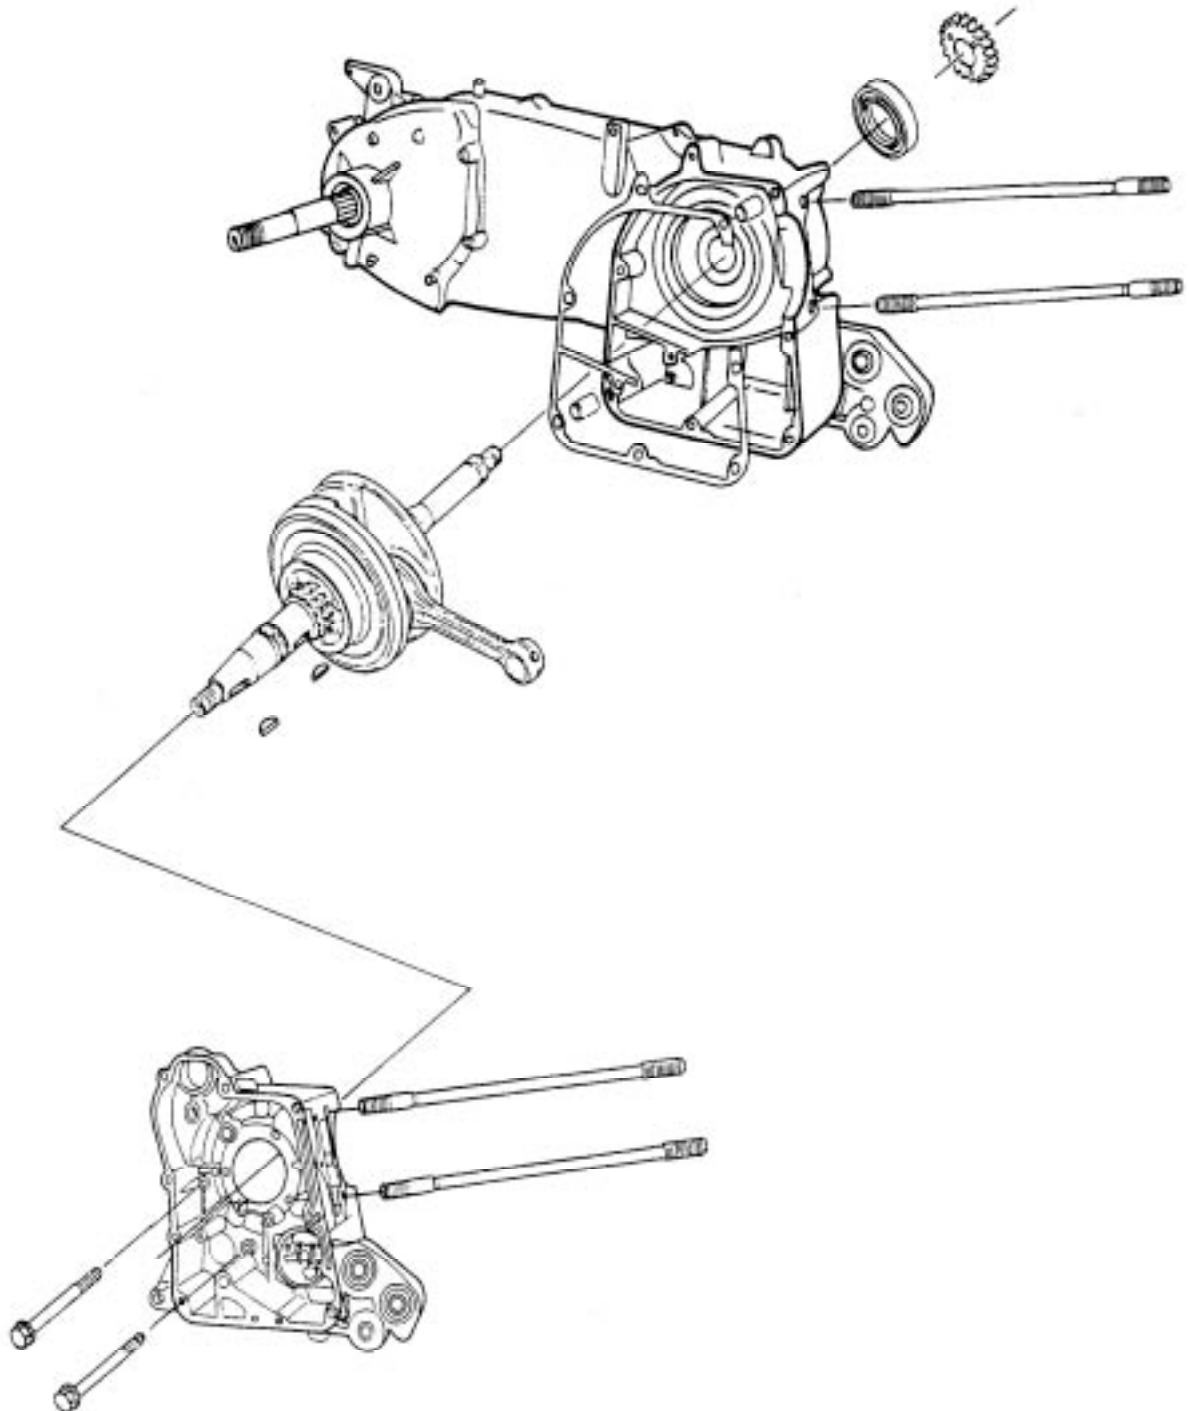

# 11. CRANKCASE/CRANKSHAFT

## SERVICE INFORMATION

### GENERAL INSTRUCTIONS

- This section covers crankcase separation to service the crankshaft. The engine must be removed for this operation.
- When separating the crankcase, never use a driver to pry the crankcase mating surfaces apart forcibly to prevent damaging the mating surfaces.
- When installing the crankcase, do not use an iron hammer to tap it.
- The following parts must be removed before separating the crankcase.
  - Cylinder head (⇒6-4)
  - Cylinder/piston (⇒7-3)
  - Right crankcase cover/drive and driven pulley (⇒8-3)
  - A.C. generator/starter clutch (⇒10-3)
  - Rear wheel/rear shock absorber (⇒15-4)
  - Starter motor (⇒19-3)
  - Oil pump (⇒4-4)

### SPECIFICATIONS

|            | Item                                    | Standard (mm) | Service Limit (mm) |
|------------|---|---------------|--------------------|
| Crankshaft | Connecting rod big end side clearance   | 0.15_ 0.35    | 0.6                |
|            | Connecting rod big end radial clearance | 0._ 0.008     | 0.05               |
|            | Runout                                  | □             | 0.10               |

### TORQUE VALUES

|                                  |      |         |
|----------------------------------|------|---------|
| Crankcase bolt                   | 7.8_ | 10.8N-m |
| Cam chain tensioner slipper bolt | 7.8_ | 11.8N-m |

### SPECIAL TOOL

Gear remover

### TROUBLESHOOTING


#### Excessive engine noise

- Excessive bearing play
- Excessive crankpin bearing play
- Worn piston pin and piston pin hole


# 11. CRANKCASE/CRANKSHAFT

## CRANKCASE SEPARATION

Remove the cam chain tensioner slipper bolt.  
Remove the cam chain tensioner slipper and cam chain.  
Remove the two right crankcase attaching bolts.

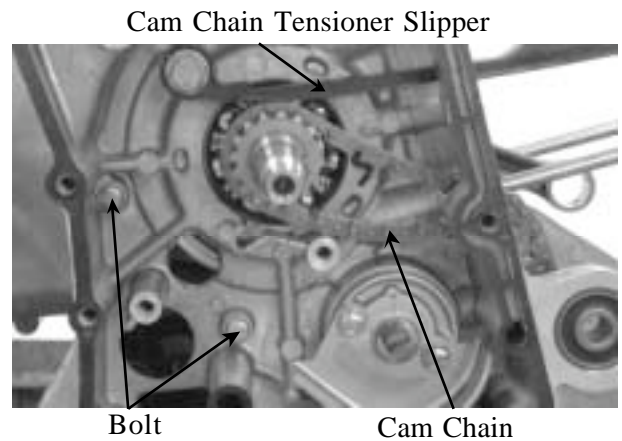


Remove the five left crankcase bolts.

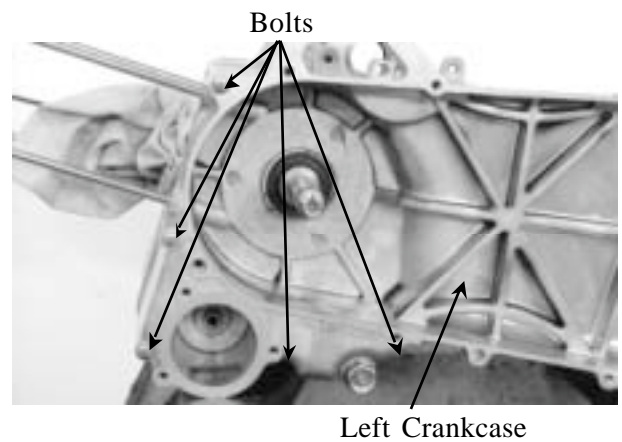


Place the crankcase with the left crankcase down and remove the right crankcase from the left crankcase.

- \* • Never use a driver to pry the crankcase mating surfaces apart.

Remove the gasket and dowel pins.

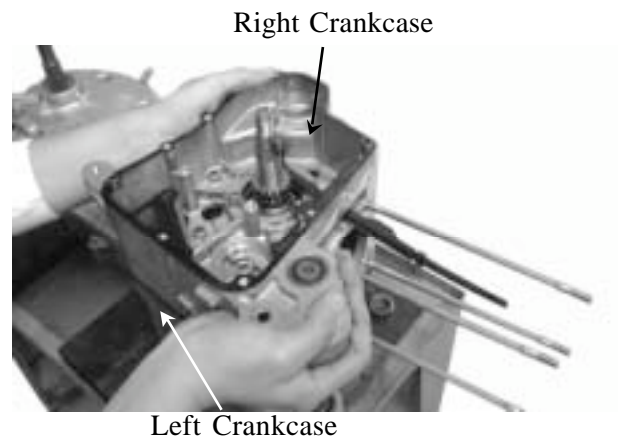


Remove the crankshaft from the left crankcase.

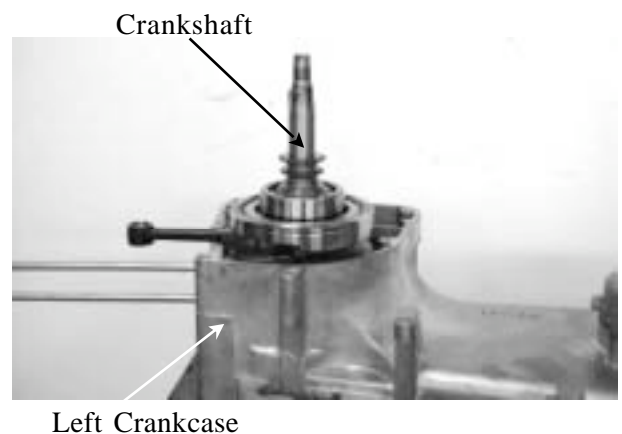

# 11. CRANKCASE/CRANKSHAFT

Remove the oil seal from the left crankcase.

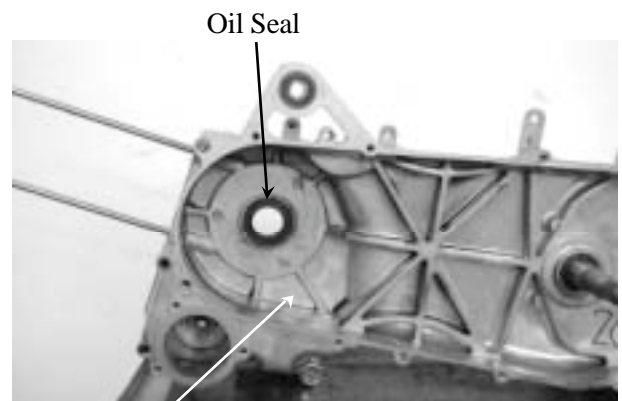

Left Crankcase

## CRANKSHAFT INSPECTION

Measure the connecting rod big end side clearance.

**Service Limit:** 0.6mm replace if over



Measure the connecting rod small end I.D.

**Service Limit:** 15.06mm replace if over





# 11. CRANKCASE/CRANKSHAFT

Measure the crankshaft runout.

**Service Limit:** 0.10mm replace if over




Measure the crankshaft bearing play.

**Service Limits:**

Axial : 0.20mm replace if over

Radial : 0.05mm replace if over

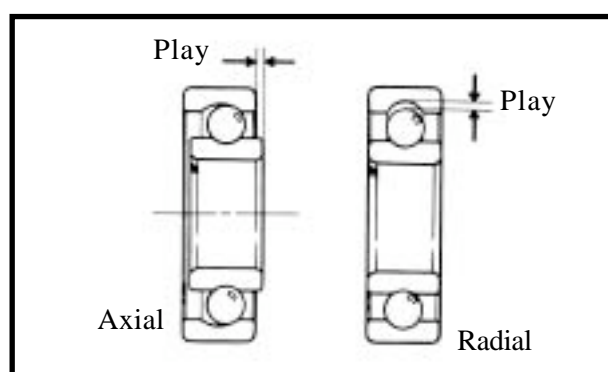

## CRANKCASE ASSEMBLY


Clean off all gasket material from the crankcase mating surfaces.

- \* 

- Avoid damaging the crankcase mating surfaces.



Install a new oil seal into the left crankcase.

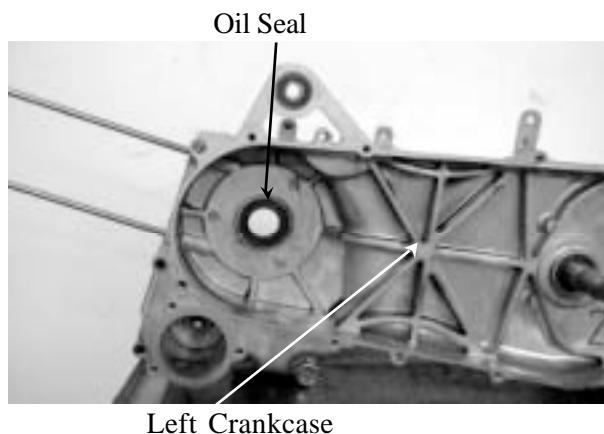


# 11. CRANKCASE/CRANKSHAFT

Place the left crankcase down and install the crankshaft into the left crankcase.

- \* • Avoid damaging the oil seal.
- Apply grease to the lip of the oil seal.




Install the two dowel pins and a new gasket.

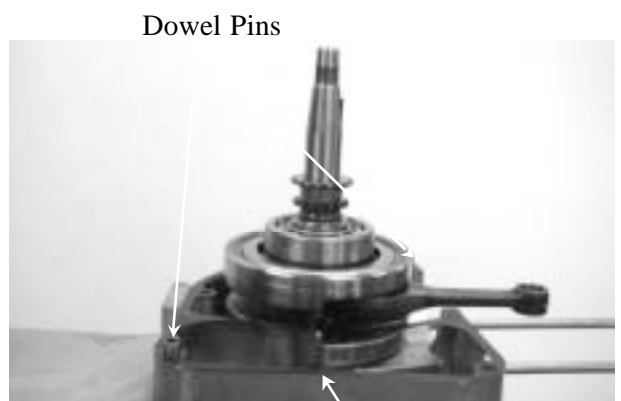


Place the right crankcase over the crankshaft and onto the left crankcase.

- \* • Install the right crankcase squarely and do not tap it with an iron or plastic hammer.

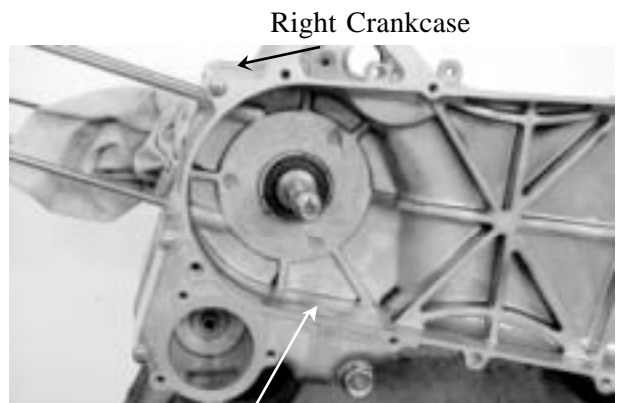

Install and tighten the right and left crankcase attaching bolts.

**Torque:** 7.8\_ 10.8N-m

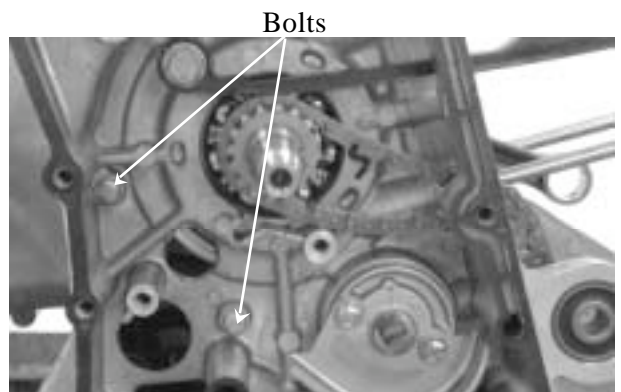


## 11. CRANKCASE/CRANKSHAFT

---

Install the cam chain.  
Install the cam chain tensioner slipper.  
Install and tighten the cam chain tensioner slipper bolt.

**Torque:** 7.8\_ 11.8N-m

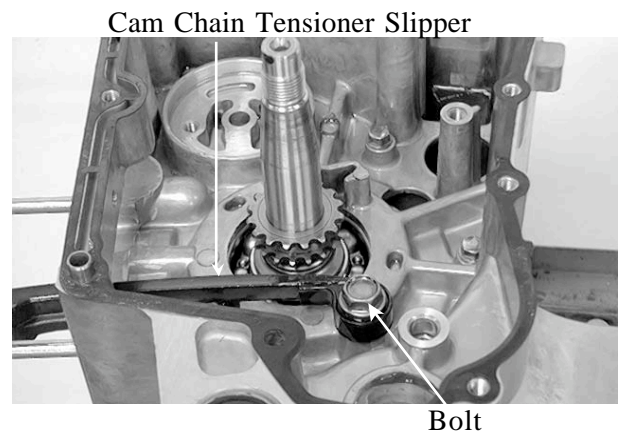

## 12. COOLING SYSTEM

---

---

---

---

---

---


### COOLING SYSTEM

---

|                              |       |
|------------------------------|-------|
| SCHEMATIC DRAWING .....      | 12- 1 |
| SERVICE INFORMATION .....    | 12- 2 |
| TROUBLESHOOTING .....        | 12- 2 |
| COOLING SYSTEM TESTING ..... | 12- 4 |
| RADIATOR .....               | 12- 4 |
| WATER PUMP .....             | 12- 9 |
| THERMOSENSOR .....           | 12-15 |
| THERMOSTAT .....             | 12-16 |

## 12. COOLING SYSTEM

### SCHEMATIC DRAWING

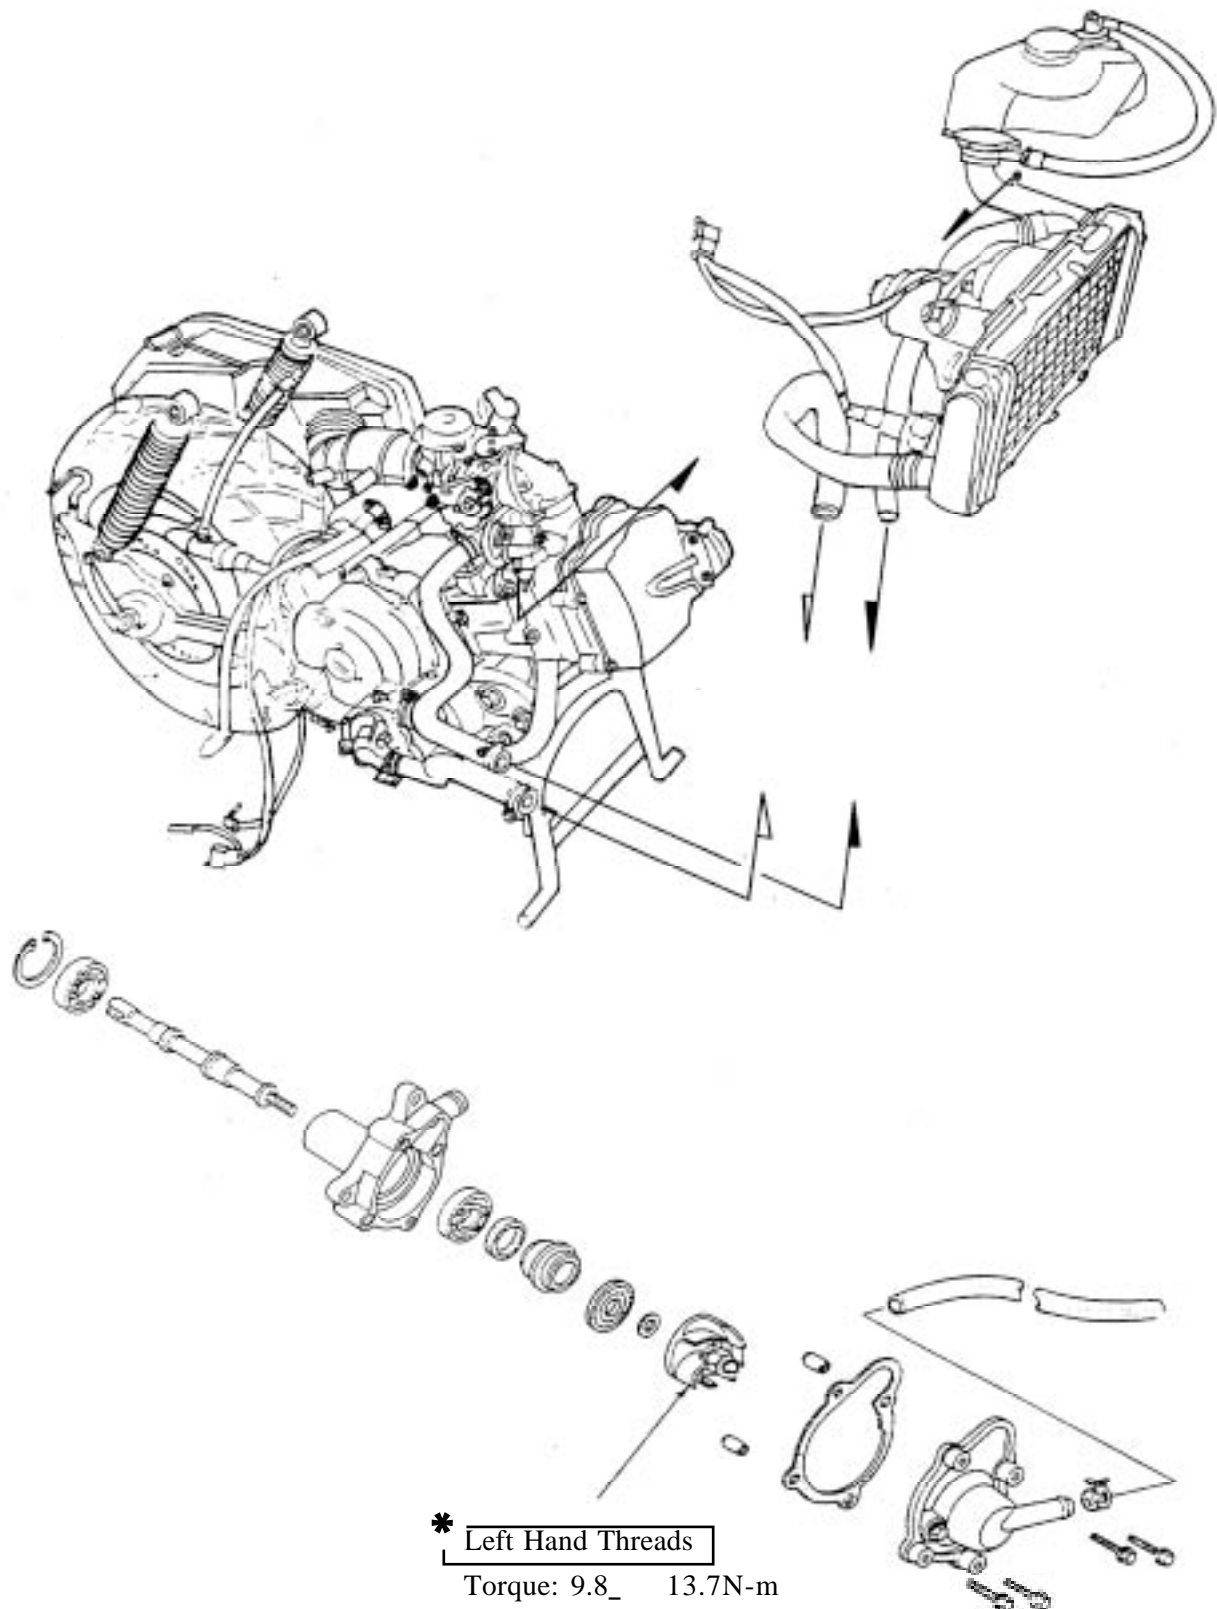

## 12. COOLING SYSTEM

---

### SERVICE INFORMATION

#### GENERAL INSTRUCTIONS

- The water pump must be serviced after removing the engine. Other cooling system service can be done with the engine installed in the frame.
- The engine must be cool before servicing the cooling system.  
When the coolant temperature is over 100°C , never remove the radiator cap to release the pressure because the boiling coolant may cause danger.
- Avoid spilling coolant on painted surfaces because the coolant will corrode the painted surfaces.  
Wash off any spilled coolant with fresh water as soon as possible.
- After servicing the system, check for leaks with a cooling system tester.

#### SPECIAL TOOL

Mechanical seal driver

#### TORQUE VALUES

|                       |      |         |
|-----------------------|------|---------|
| Water pump impeller   | 9.8_ | 13.7N-m |
| Water pump cover bolt | 7.8_ | 11.8N-m |

### TROUBLESHOOTING

#### Engine temperature too high

- Faulty temperature gauge or thermosensor
- Faulty radiator cap
- Faulty thermostat
- Insufficient coolant
- Passages blocked in hoses or water jacket
- Clogged radiator fins
- Passages blocked in radiator
- Faulty water pump

#### Coolant leaks

- Faulty pump mechanical (water) seal
- Deteriorated O-rings
- Damaged or deteriorated water hoses

#### Temperature gauge pointer does not register the correct coolant temperature

- Faulty temperature gauge or thermosensor
- Faulty thermostat



## 12. COOLING SYSTEM

### SPECIFICATIONS

|                              |                |                            |   |
|------------------------------|----------------|----------------------------|---|
| Radiator cap relief pressure |                | 0.9±0.15kg/cm <sub>2</sub> |   |
| Thermostat temperature       | Begins to open | 80±2°C                     |   |
|                              | Full-open      | 90°C                       |   |
|                              | Valve lift     | 3.5_ 4.5mm                 |   |
| Coolant capacity             |                | Total system<br>1400±20cc  | Radiator: 1000±20cc<br>Reserve tank: 400±20cc |

### COOLANT GRAVITY

| Temp. °C<br>Coolant concentration | 0     | 5     | 10    | 15    | 20    | 25    | 30    | 35    | 40    | 45    | 50    |
|-----------------------------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 5%                                | 1.009 | 1.009 | 1.008 | 1.008 | 1.007 | 1.006 | 1.005 | 1.003 | 1.001 | 0.009 | 0.997 |
| 10%                               | 1.018 | 1.107 | 1.017 | 1.016 | 1.015 | 1.014 | 0.013 | 1.011 | 1.009 | 1.007 | 1.005 |
| 15%                               | 1.028 | 1.027 | 1.026 | 1.025 | 1.024 | 1.022 | 1.020 | 1.018 | 1.016 | 1.014 | 1.012 |
| 20%                               | 1.036 | 1.035 | 1.034 | 1.033 | 1.031 | 1.029 | 1.027 | 1.025 | 1.023 | 1.021 | 1.019 |
| 25%                               | 1.045 | 1.044 | 1.043 | 1.042 | 1.040 | 1.038 | 1.036 | 1.034 | 1.031 | 1.028 | 1.025 |
| 30%                               | 1.053 | 1.051 | 1.051 | 1.049 | 1.047 | 1.045 | 1.043 | 1.041 | 1.038 | 1.035 | 1.032 |
| 35%                               | 1.063 | 1.062 | 1.060 | 1.058 | 1.056 | 1.054 | 1.052 | 1.049 | 1.046 | 1.043 | 1.040 |
| 40%                               | 1.072 | 1.070 | 1.068 | 1.066 | 1.064 | 1.062 | 1.059 | 1.056 | 1.053 | 1.050 | 1.047 |
| 45%                               | 1.080 | 1.078 | 1.076 | 1.074 | 1.072 | 1.069 | 1.056 | 1.063 | 1.062 | 1.057 | 1.054 |
| 50%                               | 1.086 | 1.084 | 1.082 | 1.080 | 1.077 | 1.074 | 1.071 | 1.068 | 1.065 | 1.062 | 1.059 |
| 55%                               | 1.095 | 1.093 | 1.091 | 1.088 | 1.085 | 1.082 | 1.079 | 1.076 | 1.073 | 1.070 | 1.067 |
| 60%                               | 1.100 | 1.098 | 1.095 | 1.092 | 1.089 | 1.086 | 1.083 | 1.080 | 1.077 | 1.074 | 1.071 |

### COOLANT MIXTURE (WITH ANTI-RUST AND ANTI-FREEZING EFFECTS)

| Freezing Point | Mixing Rate | KYMCO SIGMA Coolant Concentrate | Distilled Water |
|----------------|-------------|---------------------------------|-----------------|
| -9°C           | 20%         |                                 |                 |
| -15°C          | 30%         | 425cc                           | 975cc           |
| -25°C          | 40%         |                                 |                 |
| -37°C          | 50%         |                                 |                 |
| -44.5°C        | 55%         |                                 |                 |

#### Cautions for Using Coolant:

- Use coolant of specified mixing rate. (The mixing rate of 425cc KYMCO SIGMA coolant concentrate + 975cc distilled water is 30%.)
- Do not mix coolant concentrate of different brands.
- Do not drink the coolant which is poisonous.
- The freezing point of coolant mixture shall be 5°C lower than the freezing point of the riding area.

## 12. COOLING SYSTEM

### COOLING SYSTEM TESTING


#### RADIATOR CAP INSPECTION

Install the radiator cap onto the radiator tester and apply specified pressure to it. It must hold specified pressure for at least six seconds.

- \* Apply water to the cap sealing surface before testing.

#### Radiator Cap Relief Pressure:

$0.9 \pm 0.15 \text{ kg/cm}_2$

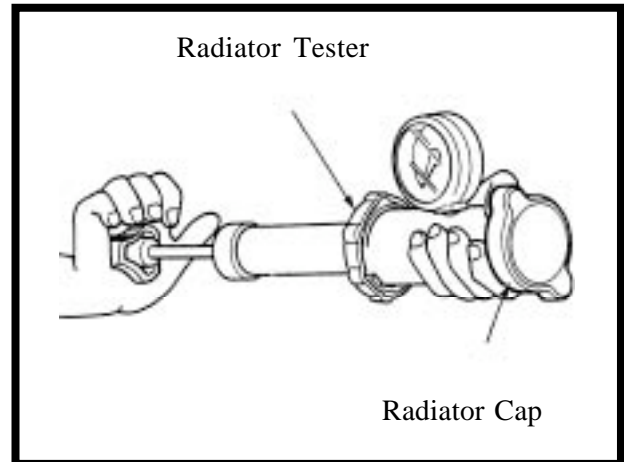

Install the radiator tester onto the radiator and apply specified pressure to it. It must hold specified pressure for at least six seconds.

Check the water hoses and connectors for leaks.

- \* The test pressure should not exceed  $1.05 \text{ kg/cm}_2$ . Excessive pressure can damage the radiator and its hose connectors.

### RADIATOR

#### RADIATOR INSPECTION

Remove the front upper cover. (⇒2-5)

Remove the front lower cover. (⇒2-5)




## 12. COOLING SYSTEM

Inspect the radiator soldered joints and seams for leaks.

Blow dirt out from between core fins with compressed air. If insects, etc., are clogging the radiator, wash them off.

Carefully straighten any bent fins.

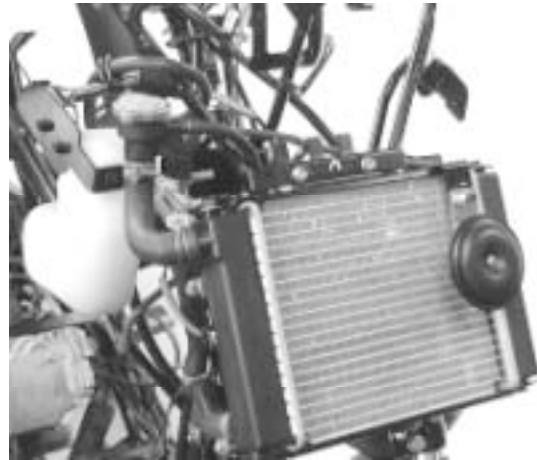


### **RADIATOR REMOVAL**


Drain the coolant. (⇒3-9)

Disconnect the air vent tube from the radiator filler.

Remove the overflow tube clamp and disconnect the overflow tube.

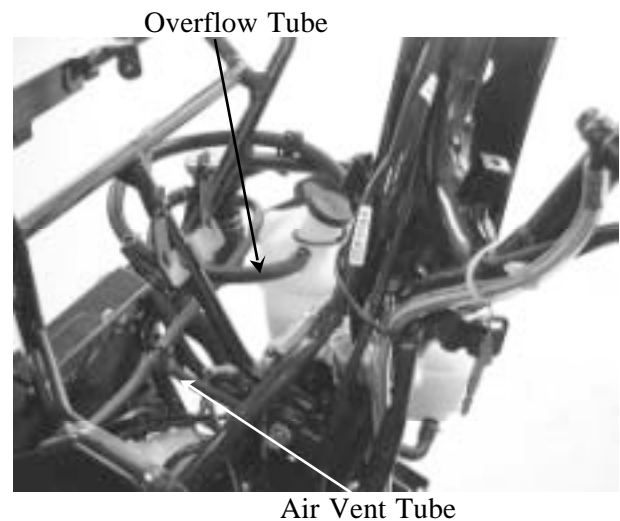


Loosen the hose band and disconnect the upper hose and lower hose from the radiator.

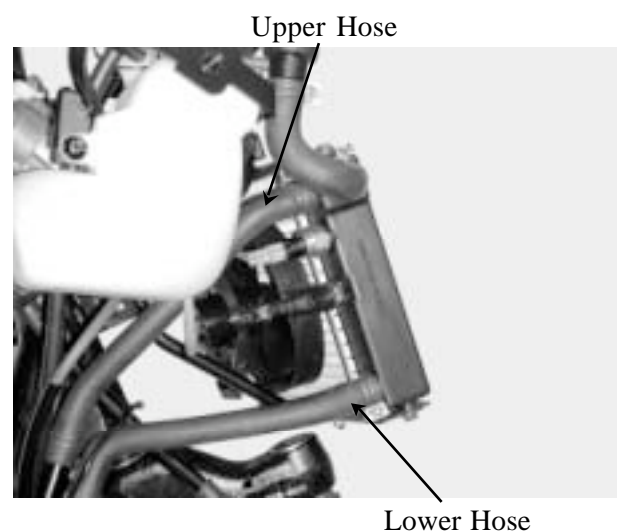

## 12. COOLING SYSTEM

Disconnect the thermostatic switch wire coupler.  
Disconnect the fan motor wire coupler.


Thermostatic Switch Wire    Thermostatic Switch

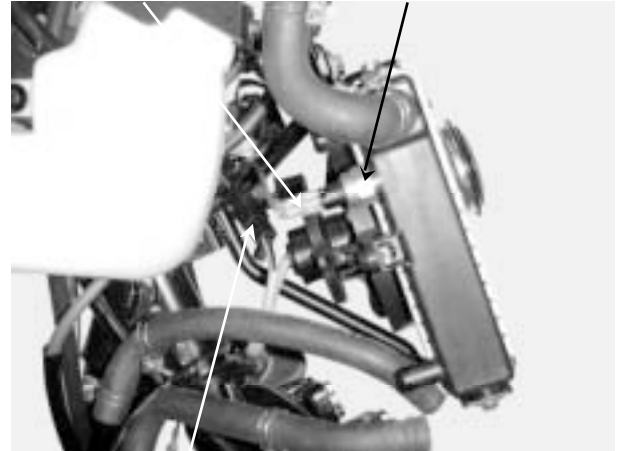

Fan Motor Wire Coupler

Remove the two bolts and one nut on the radiator.

Bolts    Radiator

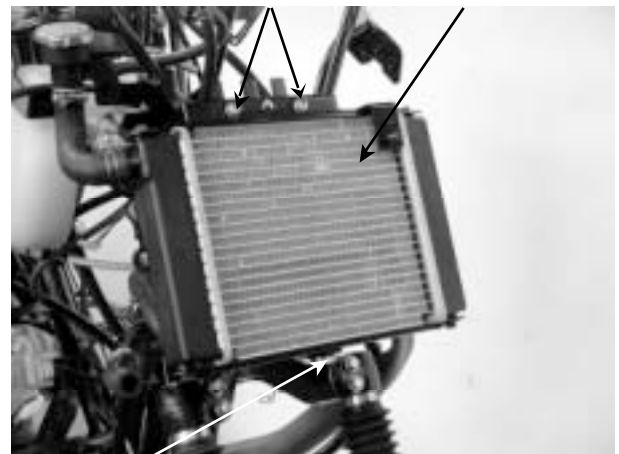


Nut

### **RADIATOR DISASSEMBLY**

Remove the four bolts and then remove the fan/shroud from the radiator.


Fan/Shroud

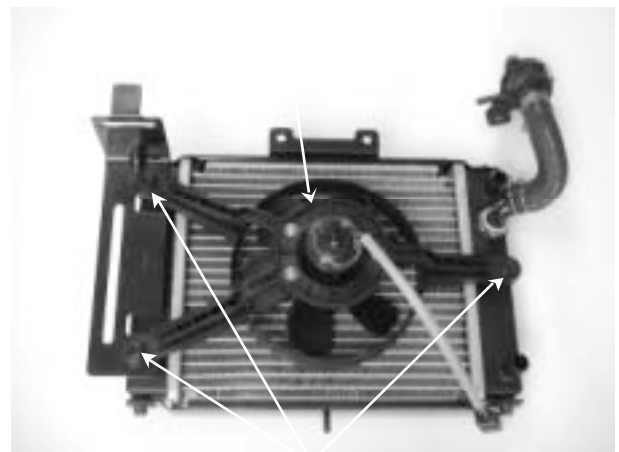

Bolts

## 12. COOLING SYSTEM

Check fan motor by battery.

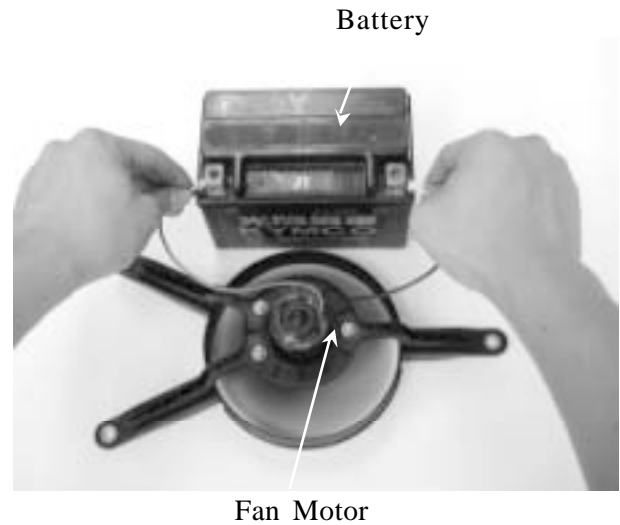


### **CHECK THERMOSTATIC SWITCH**

When coolant temperature lower then 83~87°C the thermostatic switch OFF.  
When coolant temperature over 88~92°C the thermostatic switch ON.




Install the fan shroud on the radiator with the four bolts.

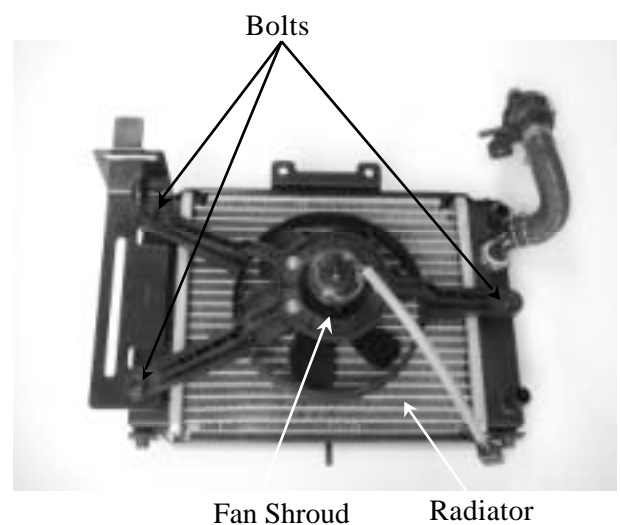


## 12. COOLING SYSTEM

### RADIATOR INSTALLATION


Install the radiator on the radiator bracket with the two bolts and one nut.

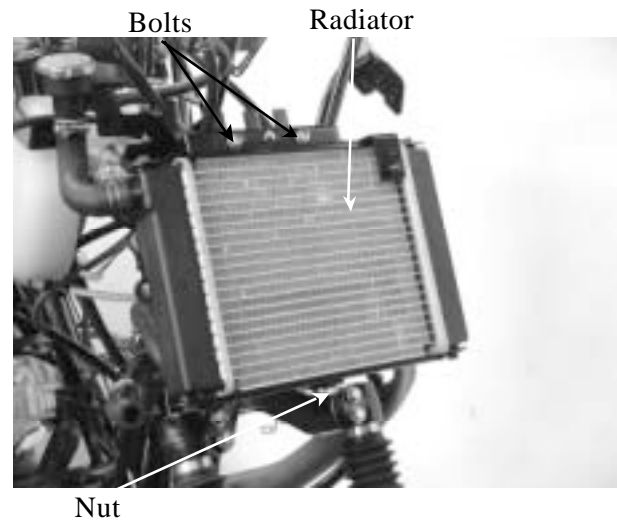

Connect the upper and lower hoses and secure them with hose bands.  
Connect the thermostatic switch wire and fan motor wire couplers.

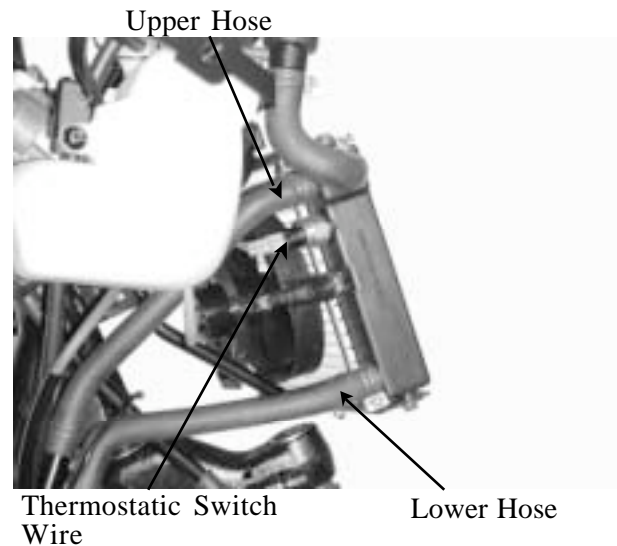

Connect the overflow tube and secure with the tube clamp.  
Connect the vent tube to the radiator filler.  
Fill the radiator with coolant. (⇒ 3-9)  
After installation, check for coolant leaks.

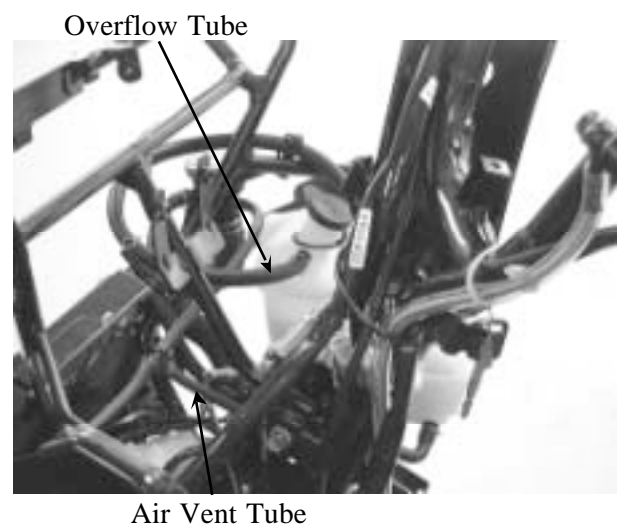



## 12. COOLING SYSTEM

Install the front upper cover.




### WATER PUMP

#### MECHANICAL SEAL (WATER SEAL) INSPECTION

Inspect the telltale hole for signs of mechanical seal coolant leakage. If the mechanical seal is leaking, remove the right crankcase cover and replace the mechanical seal.

Right Crankcase Cover

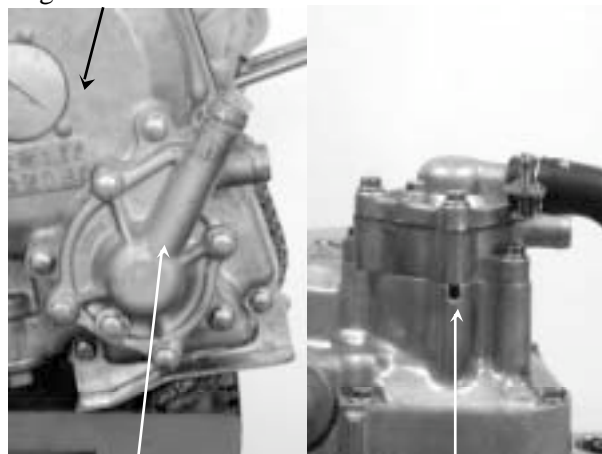


Water Pump

Telltale Hole

#### WATER PUMP/IMPELLER REMOVAL

Remove the coolant inlet hose and outlet hose.

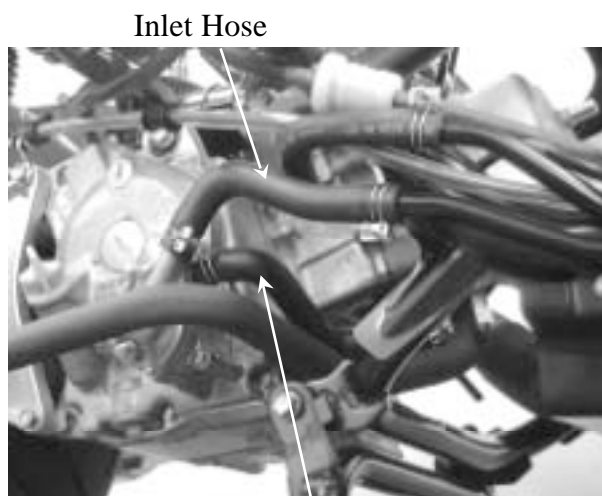


Inlet Hose

Outlet Hose


## 12. COOLING SYSTEM

Remove the four bolts and the water pump cover, gasket and 2 dowel pins.

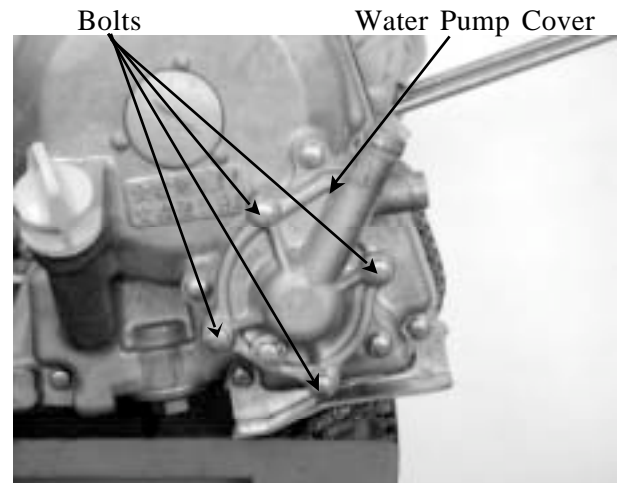


Remove the water pump impeller.

- \* The impeller has left hand threads.

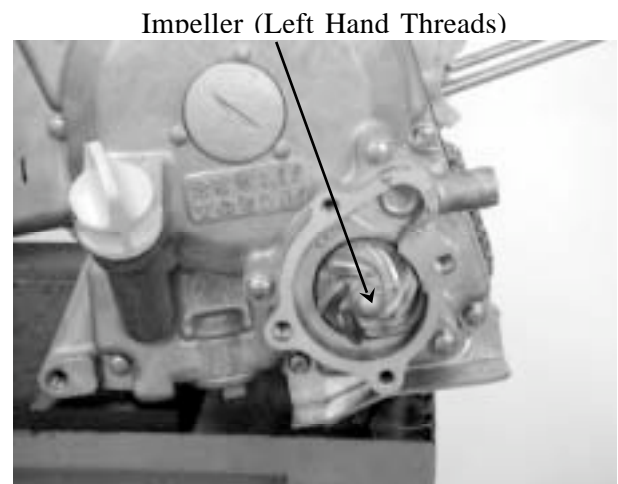

Inspect the mechanical (water) seal and seal washer for wear or damage.


- \* The mechanical seal and seal washer must be replaced as a set.

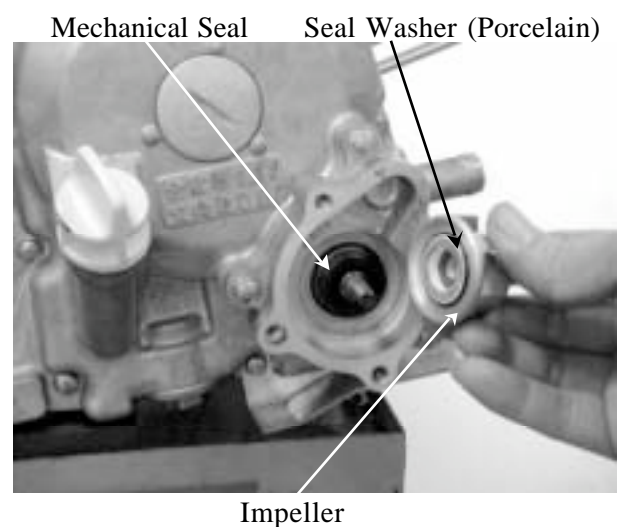

## 12. COOLING SYSTEM


### WATER PUMP SHAFT REMOVAL

Disconnect the water hose from the right crankcase cover.  
Remove the 3 bolts attaching the water pump assembly.  
Remove the water pump assembly, gasket and dowel pins.

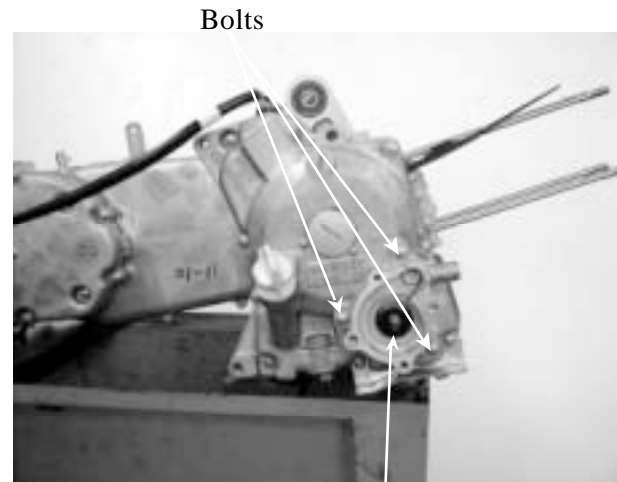

Water Pump Assembly


Remove the water pump bearing snap ring from the water pump assembly.  
Remove the water pump shaft and shaft inner bearing.

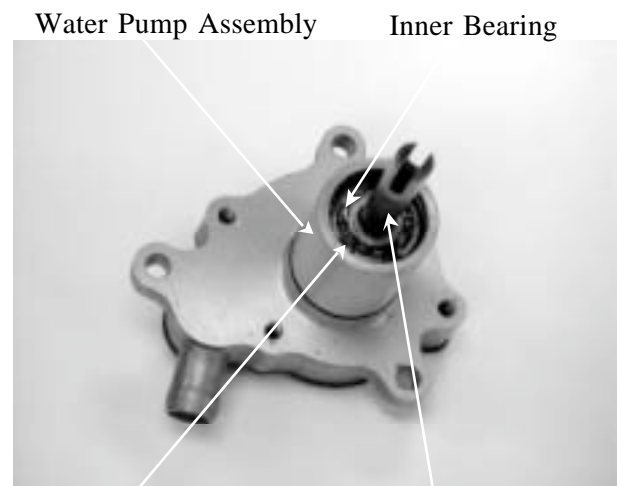

Snap Ring

Water Pump Shaft

Remove the water pump shaft outer bearing.

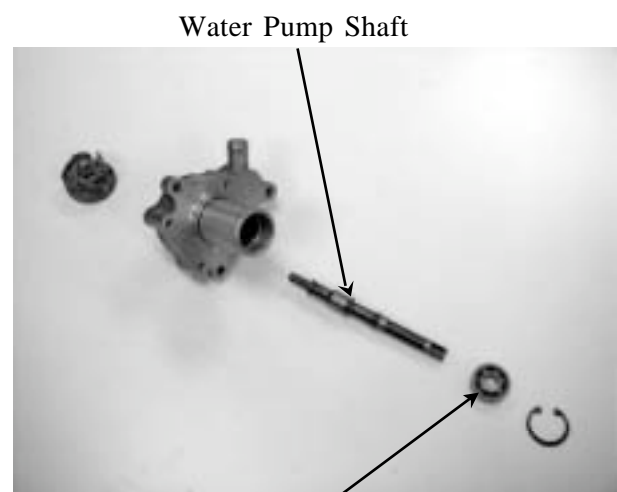


Inner Bearing

## 12. COOLING SYSTEM


### MECHANICAL SEAL REPLACEMENT

Drive the mechanical seal out of the water pump assembly from the inside.

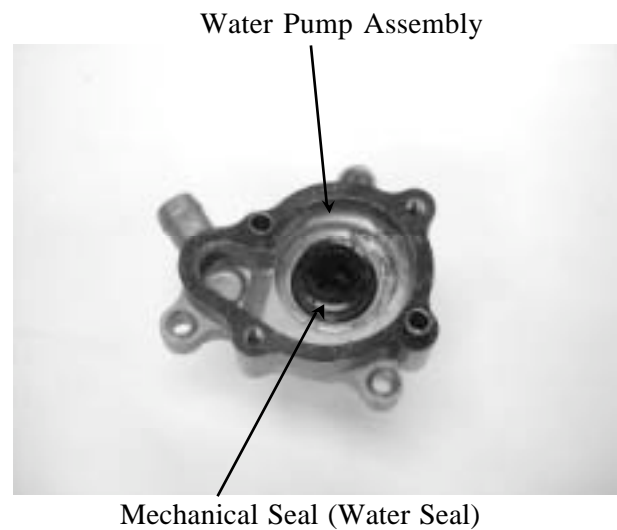


Drive in a new mechanical seal using a mechanical seal driver.

- \* Apply sealant to the right crankcase cover fitting surface of a new mechanical seal and then drive in the mechanical seal.

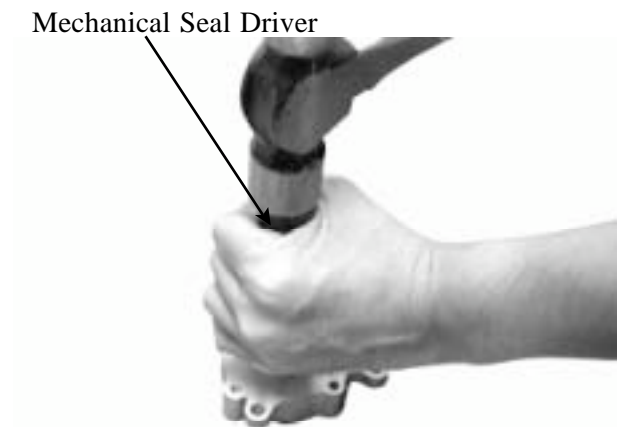


### WATER PUMP SHAFT INSTALLATION

Drive a new water pump shaft outer bearing into the water pump assembly from the inside.

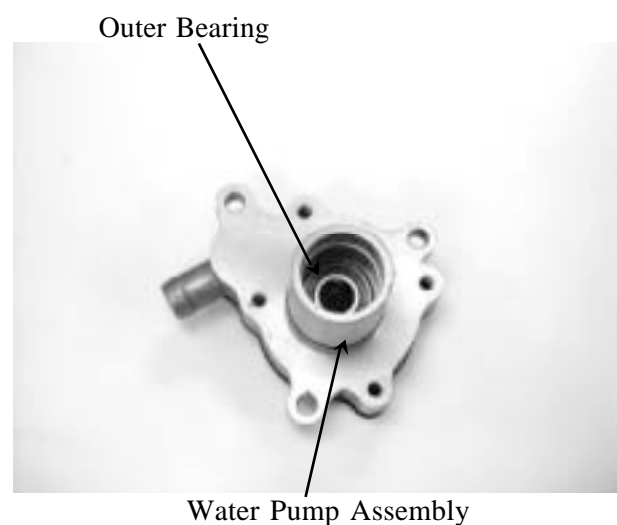


## 12. COOLING SYSTEM

Install the water pump shaft and shaft inner bearing into the water pump assembly. Install the snap ring to secure the inner bearing properly.

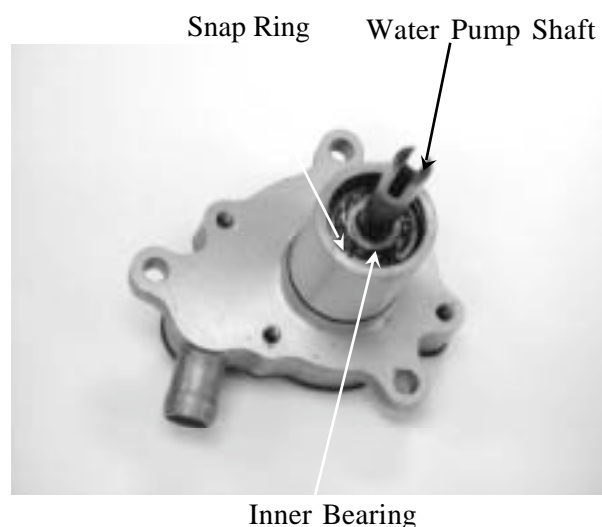


Install the dowel pins and a new gasket and then install the water pump assembly to the right crankcase cover. Tighten the 3 bolts to secure the water pump assembly.

\* When installing the water pump assembly, aligning the groove on the water pump shaft with the tab on the oil pump shaft.

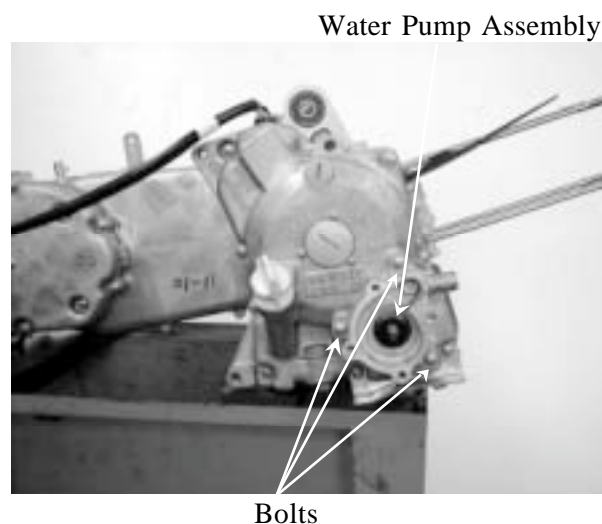

### WATER PUMP/IMPELLER INSTALLATION

When the mechanical seal is replaced, a new seal washer must be installed to the impeller.

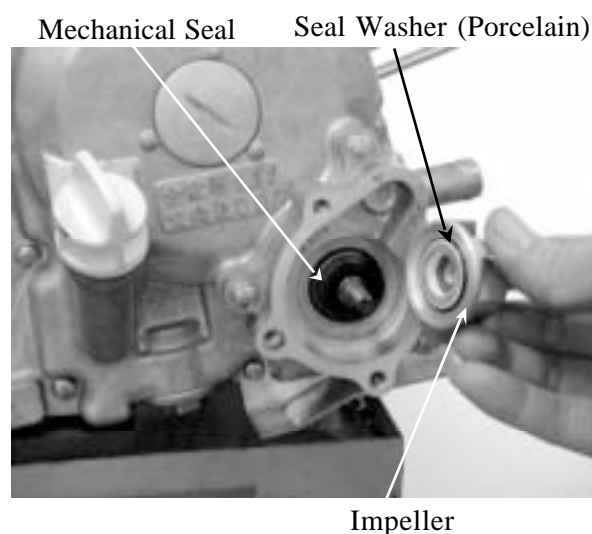


## 12. COOLING SYSTEM

Install the impeller onto the water pump shaft.

**Torque:** 9.8\_ 13.7N-m


\* The impeller has left hand threads.

Impeller (Left Hand Threads)

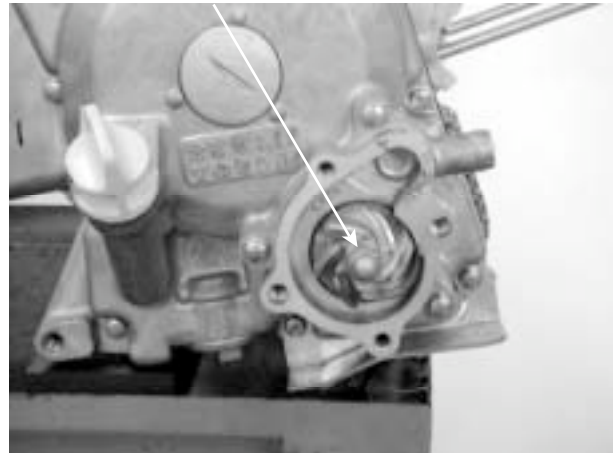

Install the two dowel pins and a new gasket.

Dowel Pins

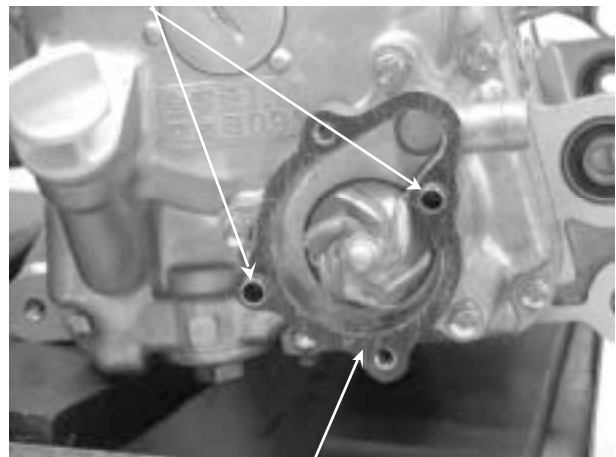


Gasket

Install the water pump cover and tighten the 4 bolts.

**Torque:** 7.8\_ 11.8N-m

Water Pump Cover

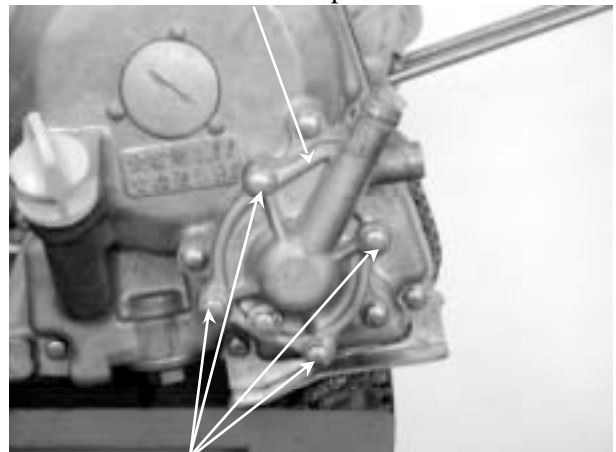

Bolt



## 12. COOLING SYSTEM

### THERMOSENSOR


#### THERMOSENSOR REMOVAL

Remove the seat, met-in box and center cover.

Drain the coolant.

Disconnect the thermosensor wire.

Remove the thermosensor.

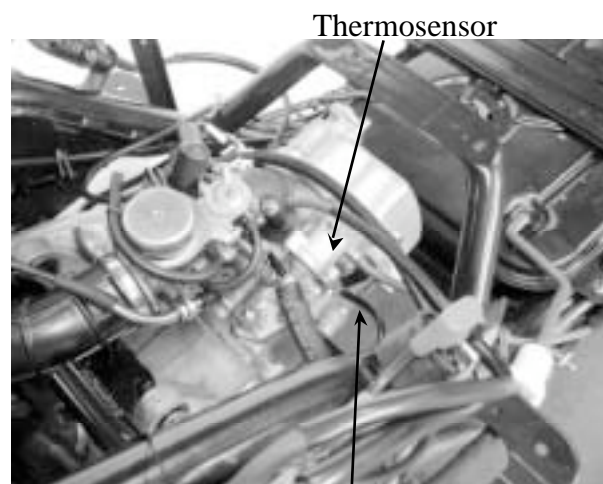


Thermosensor Wire

#### THERMOSENSOR INSPECTION

Suspend the thermosensor in a pan of water over a burner and measure the resistance through the sensor as the water heats up.

| Temperature(<br>°C ) | 50  | 80 | 100 | 120 |
|----------------------|-----|----|-----|-----|
| Resistance(Ω )       | 154 | 52 | 27  | 16  |

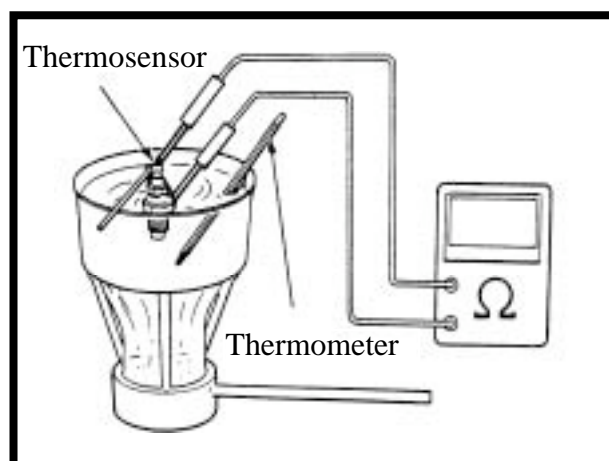

#### THERMOSENSOR INSTALLATION

Apply 3-BOND No. 1212 sealant or equivalent to the thermosensor threads and install it into the thermostat housing.


Connect the thermosensor wire.

Fill the radiator with coolant. (⇒3-9)

Install the center cover, met-in box and seat. (⇒2-3)

**\***

Be sure to bleed air from the cooling system.

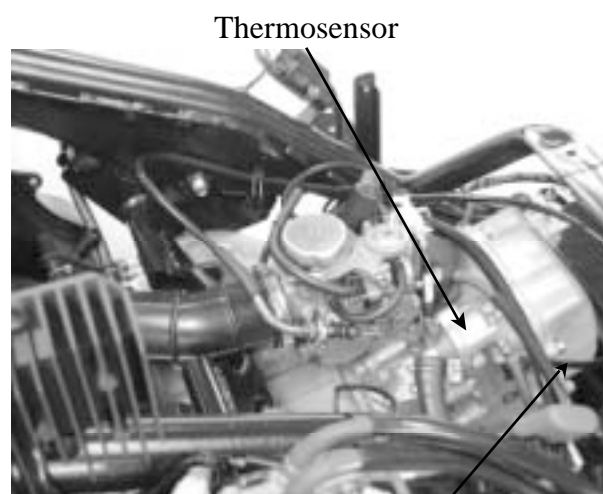

Thermosensor Wire

## 12. COOLING SYSTEM

### THERMOSTAT

#### THERMOSTAT REMOVAL

Remove the seat, met-in box and center cover.


Drain the coolant.

Disconnect the thermosensor wire from the thermosensor.


Disconnect the water hose from the thermostat housing.

Disconnect the air vent tube from the thermostat housing.


Remove the mounting bolt and the thermostat housing from the cylinder head.

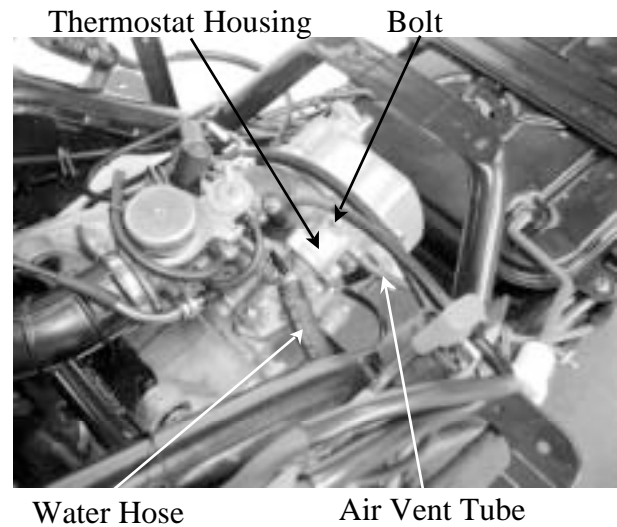

Remove the two bolts and separate the thermostat housing halves.

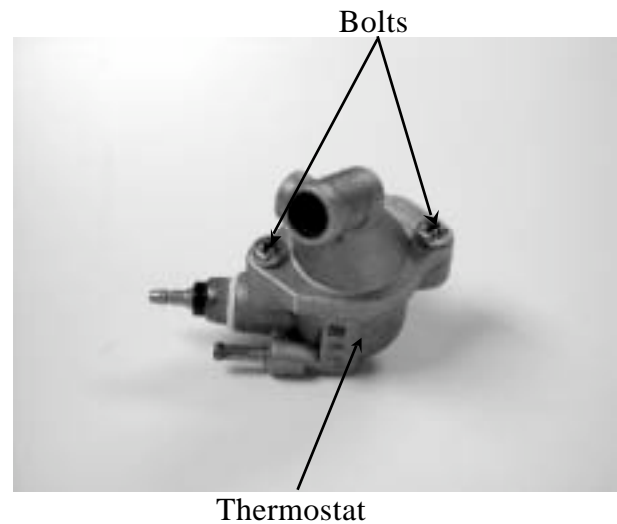

Remove the thermostat from the thermostat housing.

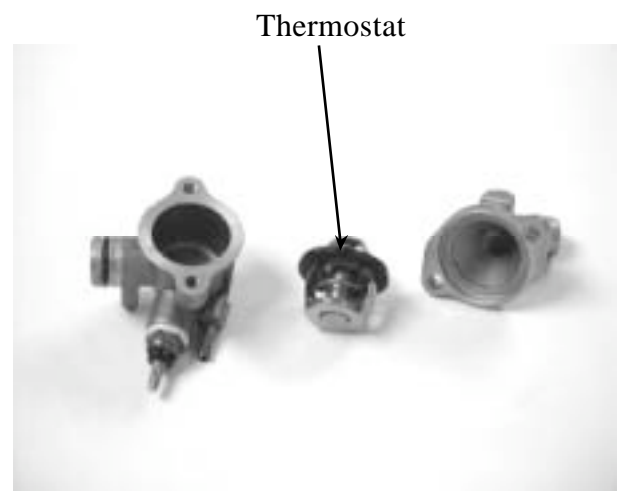


## 12. COOLING SYSTEM

### THERMOSTAT INSPECTION

Suspend the thermostat in a pan of water over a burner and gradually raise the water temperature to check its operation.

#### Technical Data

|                |                            |
|----------------|----------------------------|
| Begins to open | $80 \pm 2^{\circ}\text{C}$ |
| Full-open      | $90^{\circ}\text{C}$       |
| Valve lift     | 3.5_ 4.5mm                 |

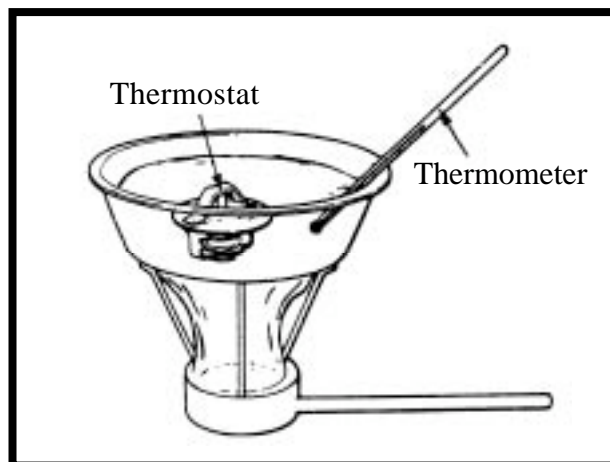

**\***


- Do not let the thermostat touch the pan as it will give a false reading.
- Replace the thermostat if the valve stays open at room temperature.
- Test the thermostat after it is opened for about 5 minutes and holds the temperature at  $70^{\circ}\text{C}$ .

### THERMOSTAT INSTALLATION


The installation sequence is the reverse of removal.

**\***

- Replace the O-ring with a new one and apply grease to it.

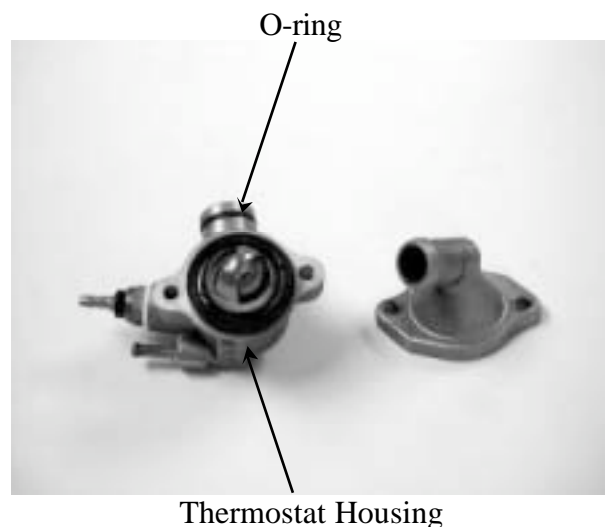

Fill the cooling system with the specified coolant. (⇒3-9)

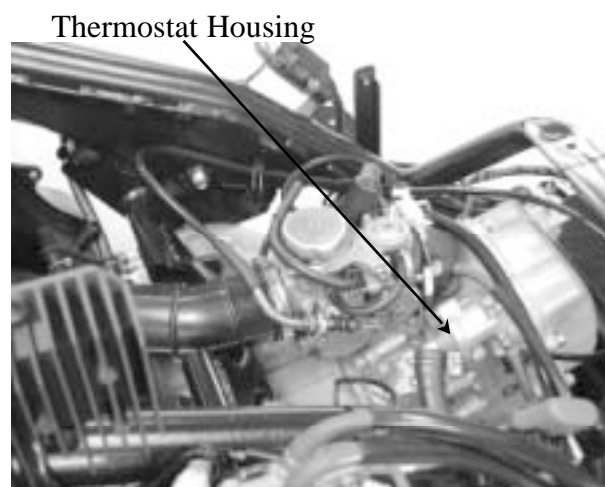


## FUEL SYSTEM/CARBURETOR/FUEL PUMP

|  |       |
|--|-------|
| FUEL SYSTEM .....                      | 13- 1 |
| SCHEMATIC DRAWING .....                | 13- 2 |
| OPERATION OF CARBURETOR JETS.....      | 13- 3 |
| SERVICE INFORMATION .....              | 13- 5 |
| CARBURETOR REMOVAL .....               | 13- 7 |
| VACUUM CHAMBER DISASSEMBLY.....        | 13- 7 |
| FLOAT CHAMBER DISASSEMBLY.....         | 13- 9 |
| AUTO BYSTARTER INSPECTION/REMOVAL..... | 13-11 |
| AIR CUT-OFF VALVE (A.C.V.).....        | 13-12 |
| AUTO BYSTARTER INSTALLATION .....      | 13-14 |
| FLOAT CHAMBER ASSEMBLY .....           | 13-15 |
| FLOAT LEVEL INSPECTION .....           | 13-16 |
| VACUUM CHAMBER ASSEMBLY .....          | 13-16 |
| CARBURETOR INSTALLATION .....          | 13-17 |
| FUEL PUMP REMOVAL/DISASSEMBLY .....    | 13-18 |
| FUEL PUMP INSPECTION.....              | 13-19 |
| FUEL PUMP ASSEMBLY .....               | 13-19 |
| FUEL PUMP INSTALLATION .....           | 13-20 |
| FUEL TANK REMOVAL .....                | 13-20 |

## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK


**KYMCO**  
GRAND DINK 125/150

### FUEL SYSTEM

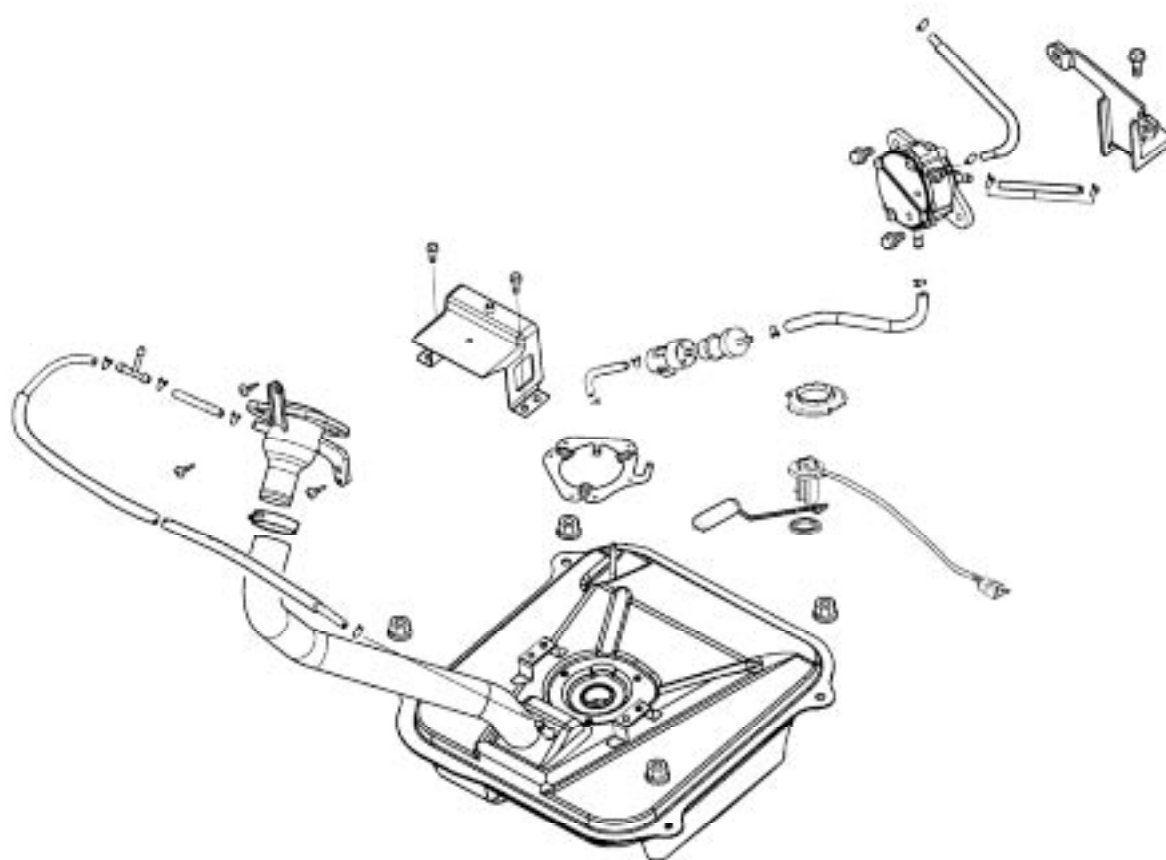

# 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

## SCHEMATIC DRAWING

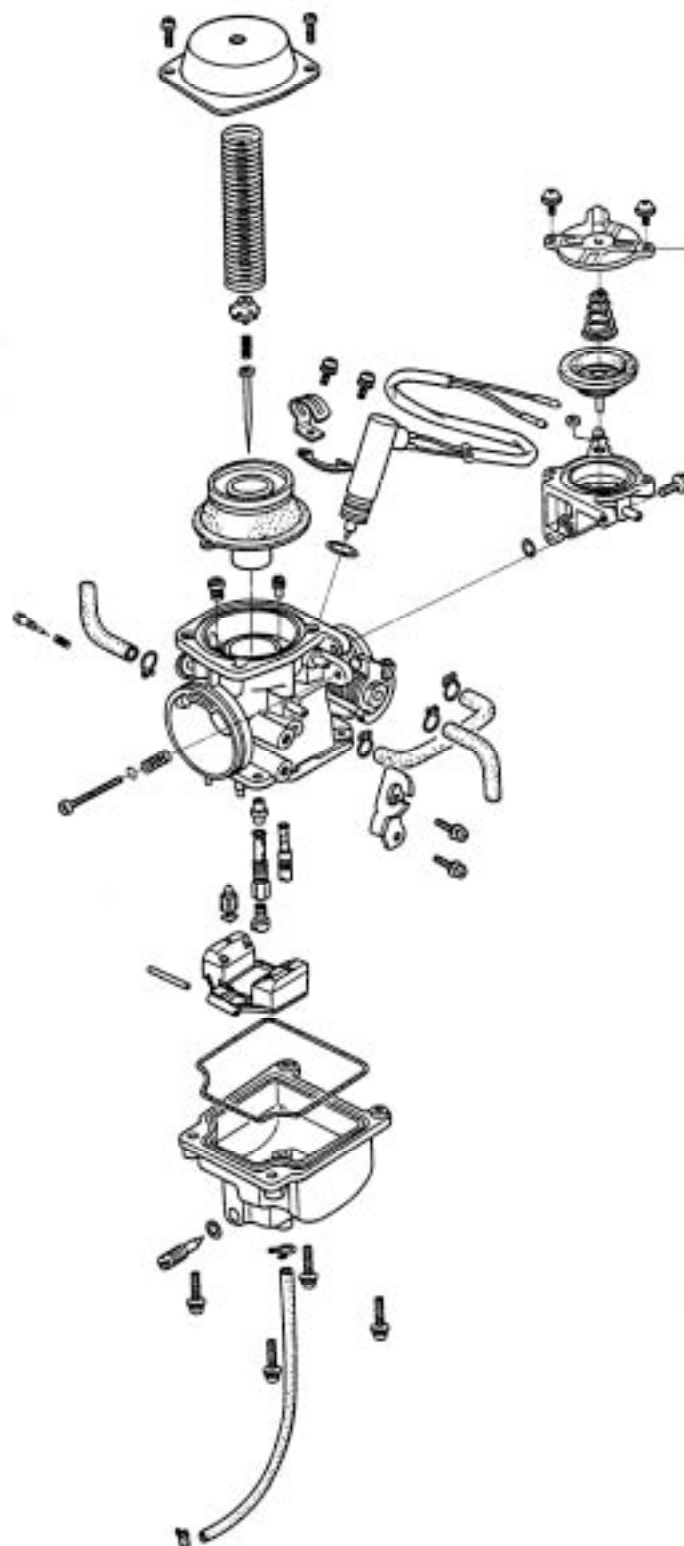



## OPERATION OF CARBURETOR JETS


### 1. LOW SPEED

- ※ Air — [ Venturi (slightly opened throttle valve)  
Low Speed Air Inlet ] — Air Bleed Holes → Mixture.....
- ※ Fuel in Float Chamber → Slow Jet ————— Low Speed Small Jet Holes

### 2. MIDDLE SPEED

- ※ Air — [ Venturi (halfway opened throttle valve)  
High Speed Air Jet ] — Air Bleed Holes → Mixture.....
- ※ Fuel in Float Chamber → Main Jet ————— Main Jet (The slow jet also works.)

### Low & Middle Speed Supplementary Device:

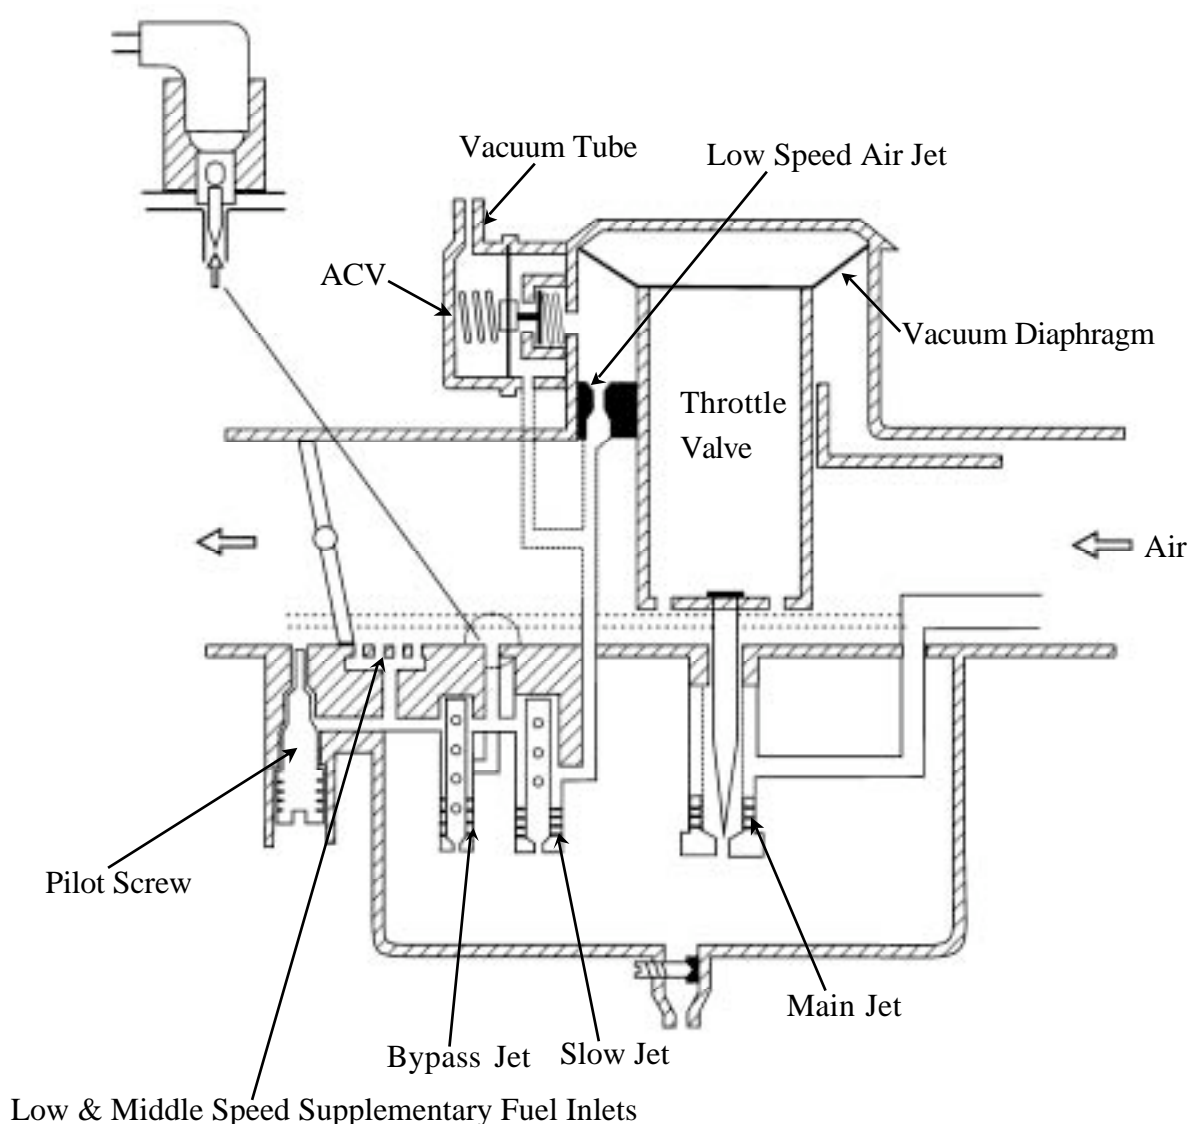


## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

### FUEL PUMP

#### CONSTRUCTION:

The fuel pump adopted for this model is a vacuum-type fuel pump which utilizes the positive and negative pulsating pressures produced by the engine crankcase to control the oil pump diaphragms and deliver fuel from the fuel tank to the carburetor through the suction valve and outlet valve.

#### FUEL PUMP CONSTRUCTION

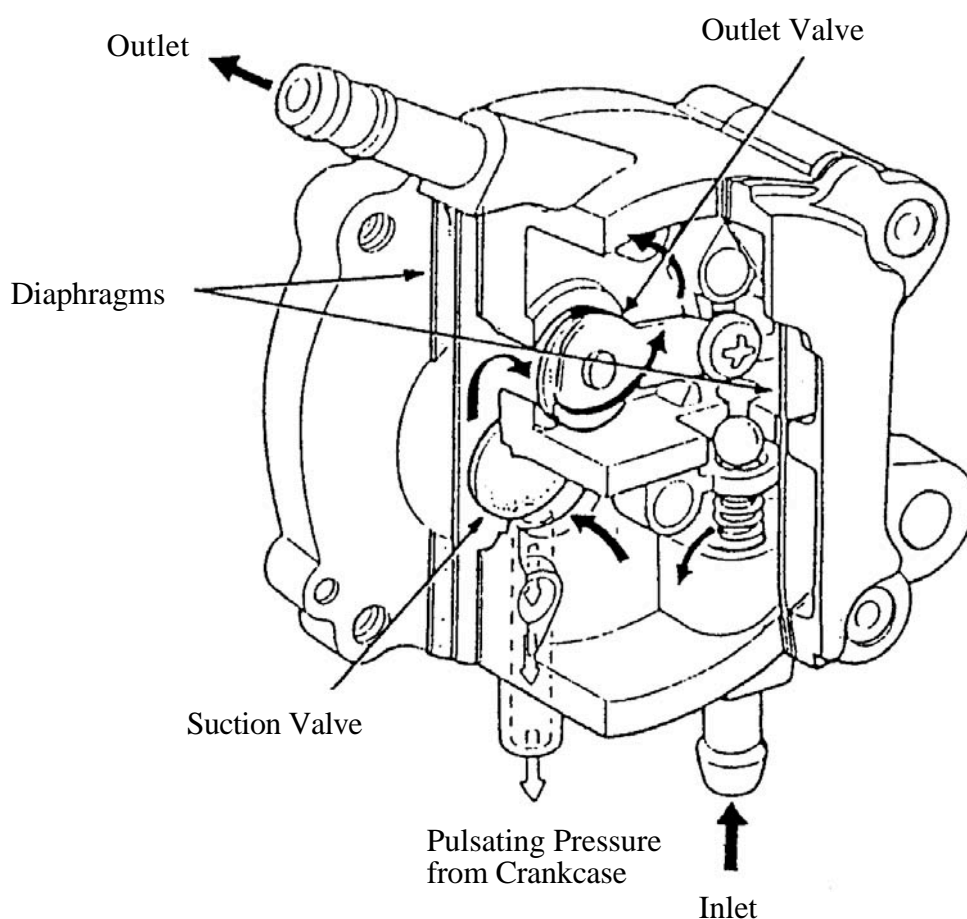

## SERVICE INFORMATION

### GENERAL INSTRUCTIONS

- When working with gasoline, keep away from sparks and flames.
- Note the locations of O-rings when disassembling and replace them with new ones during assembly.
- Before float chamber disassembly, drain the residual gasoline from the float chamber.
- Do not try to disassemble the auto bystarter.
- When assembling the vacuum chamber and air cut-off valve, be careful not to damage the diaphragms.
- All cables, fuel lines and wires must be routed and secured at correct locations.
- When removing the fuel tank, keep sparks and flames away from the working area.
- When removing the fuel tank, the remaining fuel in the tank must be lower than  $\frac{1}{4}$  of the fuel tank capacity to avoid gasoline overflowing.
- Fuel tank capacity: 10.5 liters

### SPECIFICATIONS

|                       | 125cc          | 150cc                   |
|-----------------------|----------------|-------------------------|
| Venturi dia. (mm)     | VE26           | VE26                    |
| Identification number | VE060A         | VE061A                  |
| Float level (mm)      | 18.5           | 18.5                    |
| Pilot screw opening   | $2 \pm 1/2$    | $2 \frac{1}{2} \pm 1/2$ |
| Main jet              | 102#           | 102#                    |
| Slow jet              | 35#            | 35#                     |
| Idle speed            | 1700           | 1700                    |
| Fuel pump output      | 17L/Hr/7000rpm | 17L/Hr/7000rpm          |

### SPECIAL TOOLS

Float level gauge

Fuel unit remover

## TROUBLESHOOTING

### Engine does not start

- No fuel in tank
- Restricted fuel line
- Too much fuel getting to cylinder
- Clogged air cleaner
- Contaminated fuel
- Faulty fuel pump

### Engine idles roughly, stalls or runs poorly

- Incorrect idle speed
- Rich mixture
- Lean mixture
- Clogged air cleaner
- Intake air leak
- Contaminated fuel
- Faulty air-cut off valve
- Damaged vacuum tube and connectors
- Damaged carburetor insulator

### Throttle does not open fully, so engine stalls

- Damaged vacuum piston diaphragm
- Clogged diaphragm hole

### Lean mixture

- Clogged fuel jets
- Clogged fuel tank cap breather hole
- Clogged fuel filter
- Bent, kinked or restricted fuel line
- Faulty float valve
- Float level too low
- Faulty fuel pump or insufficient output

### Rich mixture

- Auto bystarter valve opens excessively
- Faulty float valve
- Float level too high
- Clogged air jets
- Auto bystarter valve set plate installed in the wrong groove
- Clogged air cleaner

### Engine is hard to start

- No fuel in tank
- Restricted fuel line
- Clogged fuel strainer
- Faulty fuel pump
- Broken or clogged vacuum tube
- Faulty or clogged charcoal canister

### Lean mixture


- Clogged charcoal canister
- Bent, kinked or restricted fuel line
- Clogged fuel strainer
- Float level too low

## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK


**KYMCO**  
GRAND DINK 125/150

### CARBURETOR REMOVAL

Remove the seat, met-in box and center cover.  
Disconnect the fuel tube and vacuum tube at the carburetor.  
Disconnect the auto bystarter wire.

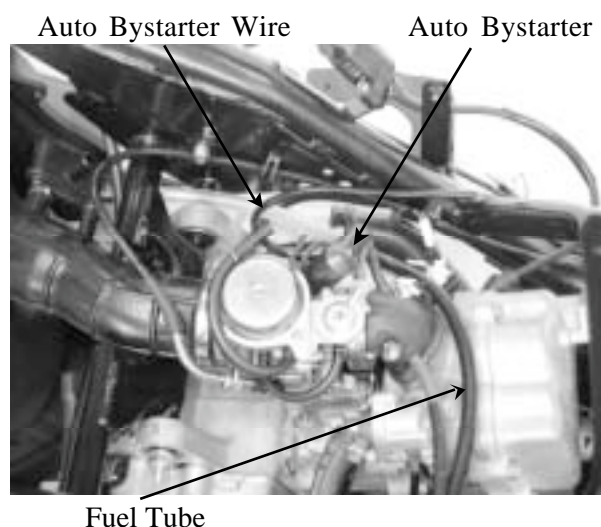

Loosen the throttle cable adjusting nut and lock nut, and disconnect the throttle cable from the carburetor.  
Loosen the air cleaner connecting tube band and carburetor intake manifold band and then remove the carburetor.

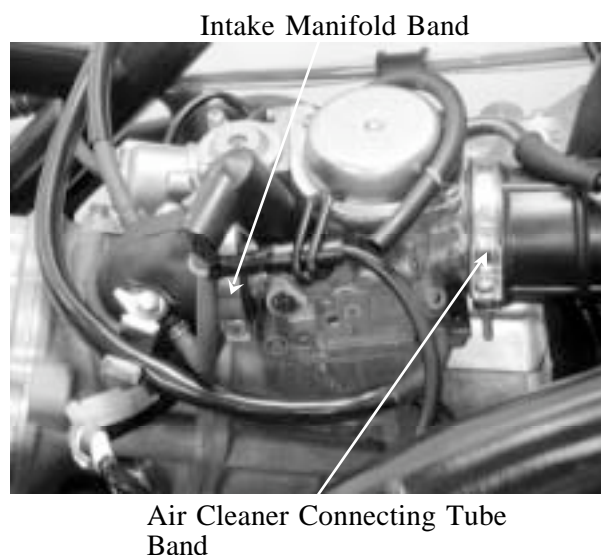


### VACUUM CHAMBER DISASSEMBLY

Loosen the drain screw and drain the fuel from the float chamber.




## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

Remove the two vacuum chamber cover screws and the cover.

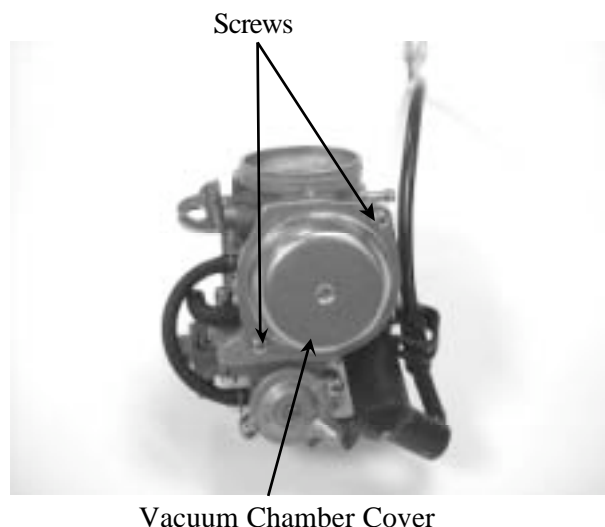

Remove the compression spring and vacuum piston.

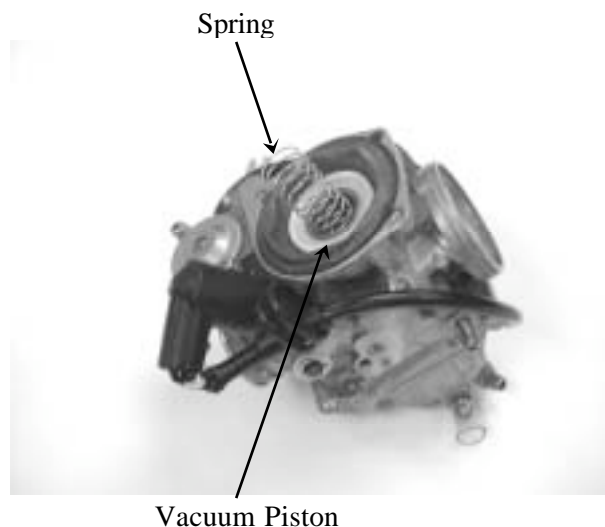


Remove the needle holder, spring and jet needle from the piston.

- \* Be careful not to damage the vacuum piston diaphragm.

### VACUUM PISTON INSPECTION

Inspect the vacuum piston and jet needle for wear or damage.  
Inspect the diaphragm for deterioration and tears.

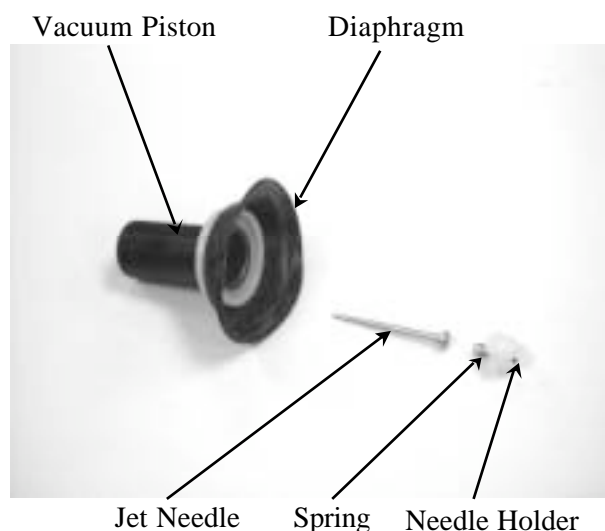





## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

### FLOAT CHAMBER DISASSEMBLY

Remove the four float chamber screws and the float chamber.

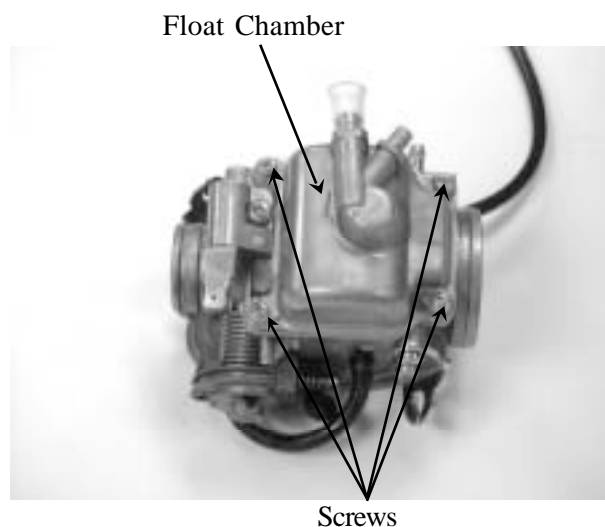


Remove the float pin, float and float valve.

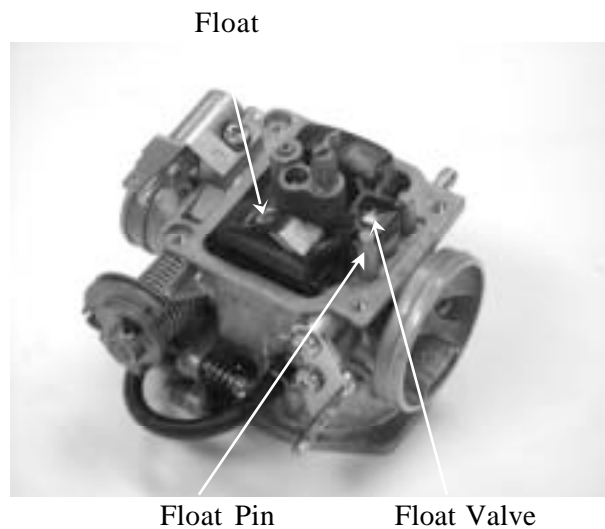

### FLOAT VALVE INSPECTION


Inspect the float valve seat contact area for wear.

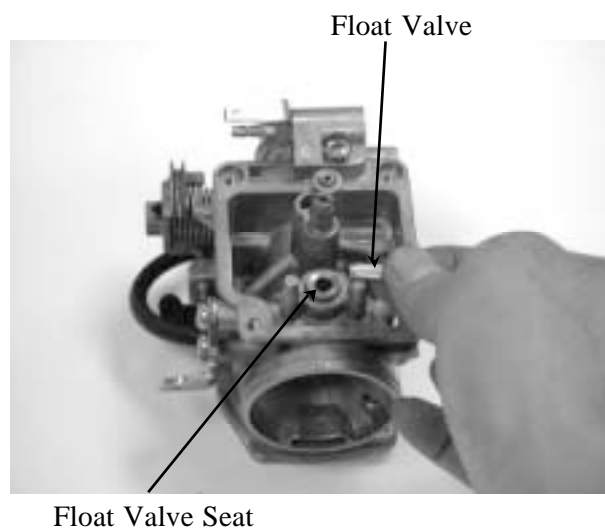

## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK


### JETS/SCREWS REMOVAL

- \* Before removing the pilot screw, turn the pilot screw clockwise until it seats lightly and record the rotating turns. Do not force the pilot screw against its seat to avoid seat damage.

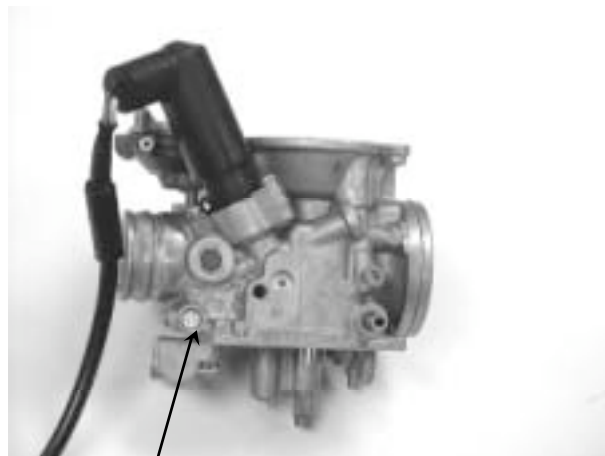

Pilot Screw (P.S.)


Remove the main jet, needle jet holder and needle jet.  
Remove the slow jet.

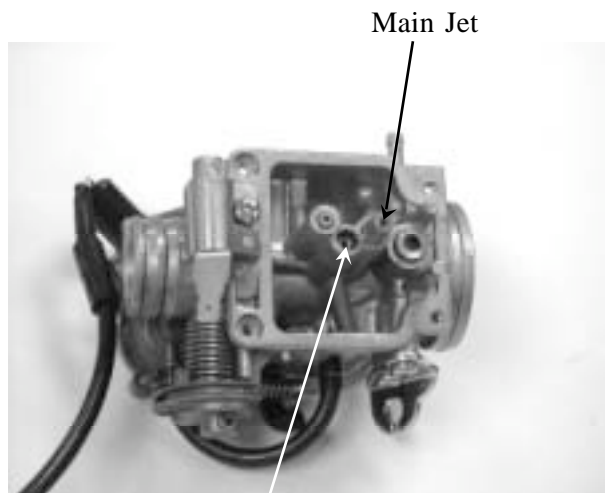

Slow Jet

Clean the removed the main jet, needle jet holder, needle jet and slow jet with detergent oil.

- \* Be sure to use clean detergent oil.

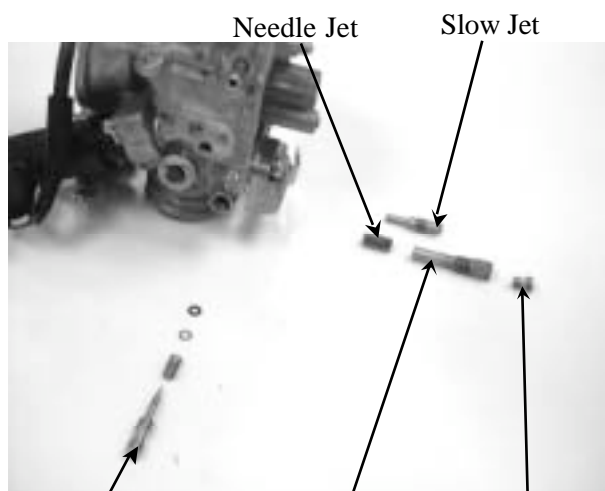

Pilot Screw

Needle Jet Holder

Main Jet


## AUTO BYSTARTER INSPECTION /REMOVAL

### AUTO BYSTARTER INSPECTION


Measure the resistance between the auto bystarter wire terminals.

**Resistance:** 10 $\Omega$  (10 minutes minimum after stopping the engine)

If the reading is not within the limit, replace the auto bystarter with a new one.

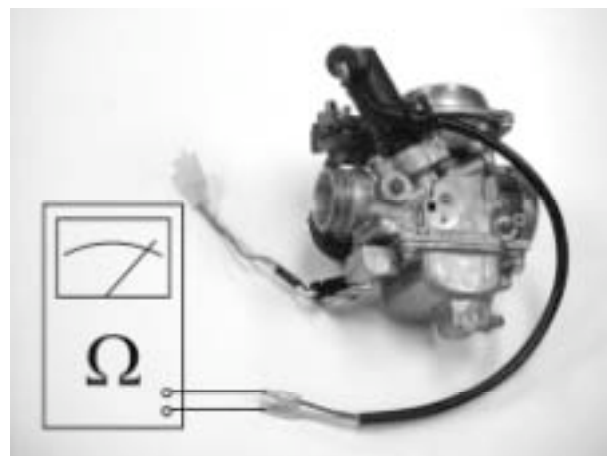


Connect a hose to the fuel enriching circuit of the carburetor. Connect the auto bystarter yellow wire to the positive (+) terminal of a battery and green wire to the negative (-) terminal. Wait 5 minutes and blow the hose with mouth. If the passage is blocked, the auto bystarter is normal. Disconnect the auto bystarter from the battery. Wait 30 minutes and blow the hose with mouth.. If air can be blown into the hose, the auto bystarter is normal.

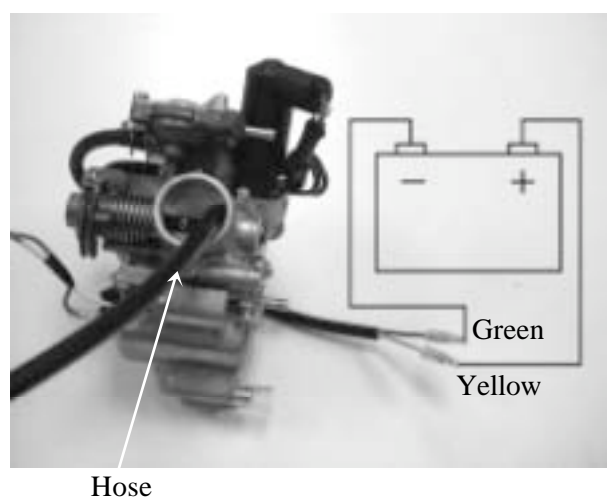

### AUTO BYSTARTER REMOVAL


Remove the two set plate screws and set plate and then remove the auto bystarter from the carburetor body.

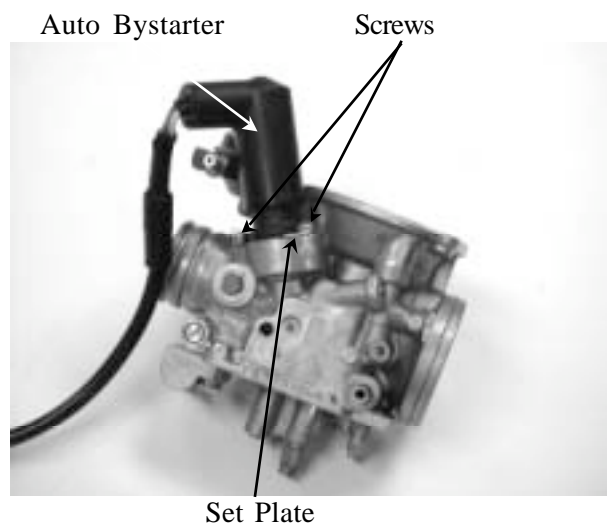

## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

### AUTO BYSTARTER INSPECTION


Check the auto bystarter valve and needle for nicks, wear or damage.  
If any faulty part is found, replace the auto bystarter with a new one.

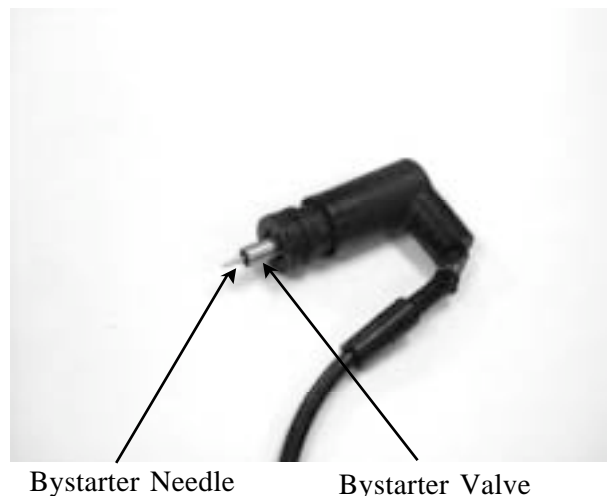


### AIR CUT-OFF VALVE (A.C.V.)

#### A.C.V. REMOVAL

Remove the two screws and the air cut-off valve cover.

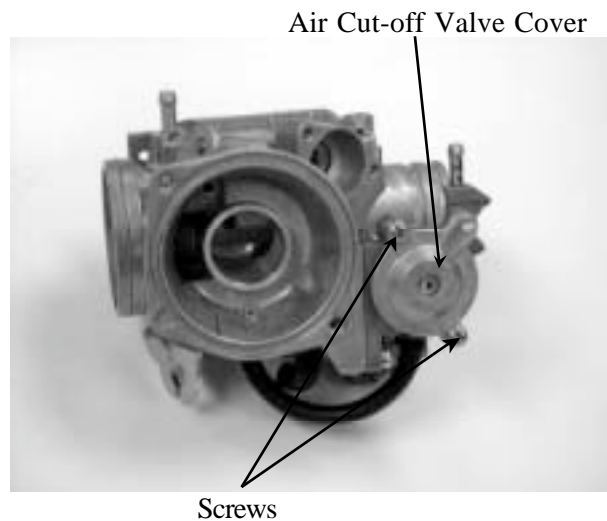


Remove the spring, diaphragm and O-rings.  
Inspect the diaphragm and spring for wear or damage.

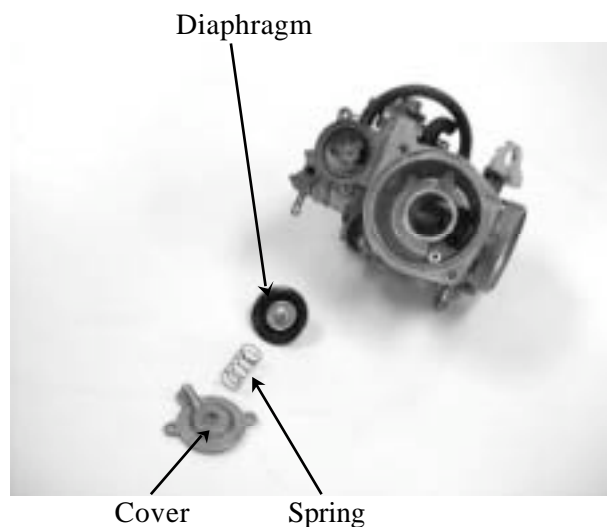

## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

Disconnect the hose at the valve seat.  
Remove the two screws and the air cut-off valve body.

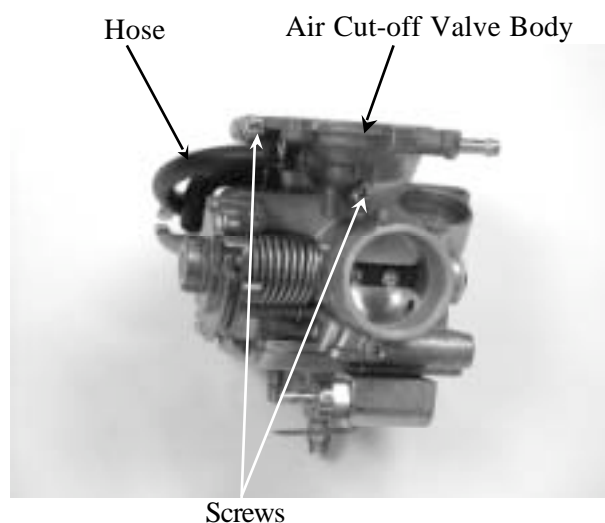

### CARBURETOR BODY CLEANING

Blow compressed air through all passages of the carburetor body.


- \* • Make sure that no fuel jet is clogged.



### A.C.V. ASSEMBLY

Install the O-ring onto the air-cut-off valve body and then install the valve body to the carburetor with the two screws.

- \* • Install the O-ring with the flat face toward the valve body side.

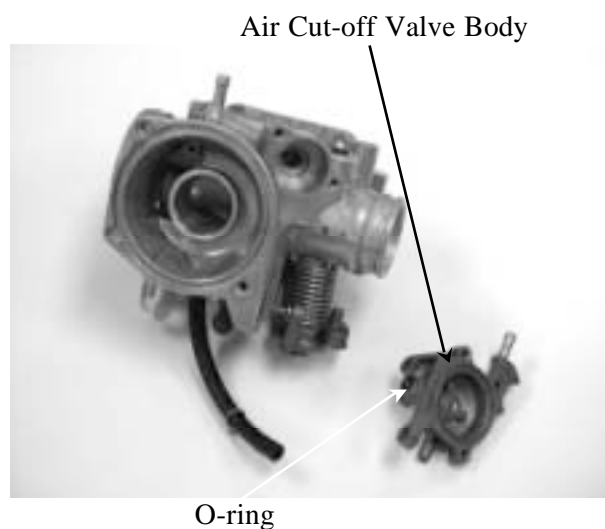


## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

Install the O-ring onto the air-cut-off valve body securely.


**\***

- Install the O-ring with the flat face toward the valve body side.

Install the diaphragm, spring, and cover.

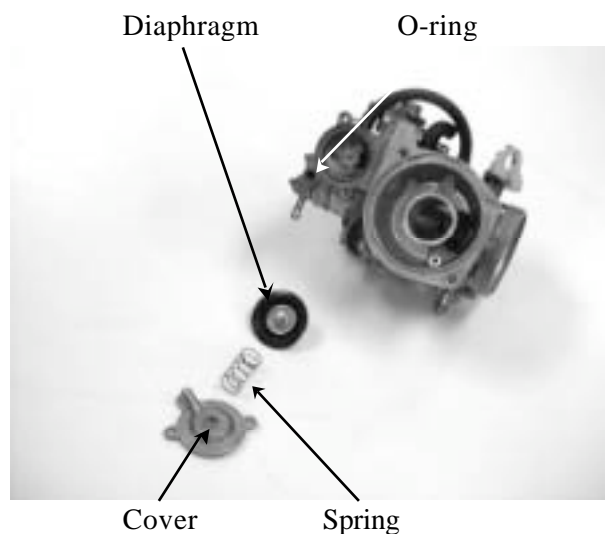

Install and tighten the two screws attaching the air cut-off valve cover.  
Connect the hose.

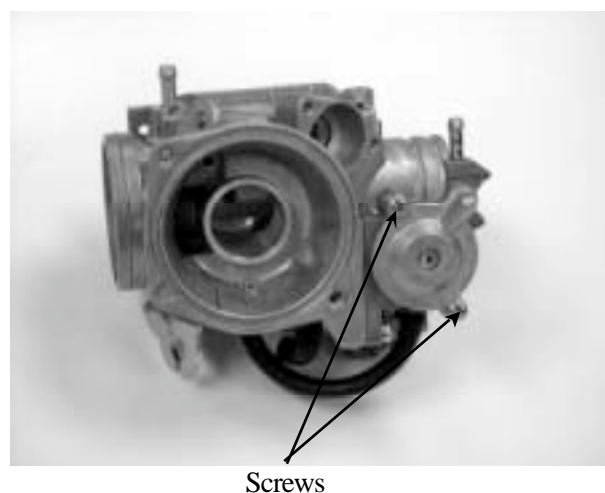


### AUTO BYSTARTER INSTALLATION

Install the auto bystarter and set plate.  
Install and tighten the two screws.

**\***

- Insert the auto bystarter into the carburetor body until it bottoms and position the set plate into the upper groove in the bystarter.
- Install the set plate with its round face facing down.

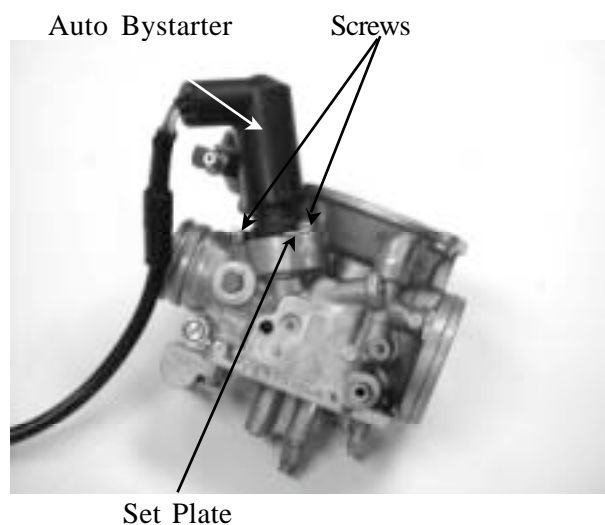




## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

### FLOAT CHAMBER ASSEMBLY

Install the main jet.  
Install the slow jet.

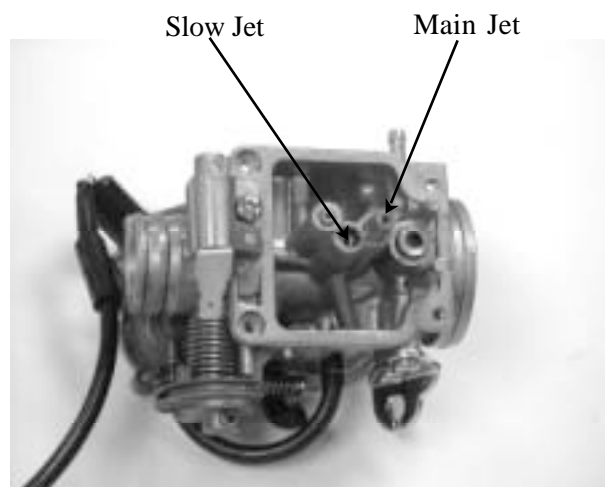

Install the pilot screw.


\*

- Be sure to record the rotating turns when it is removed.



Pilot Screw

Install the float valve, float and float pin.

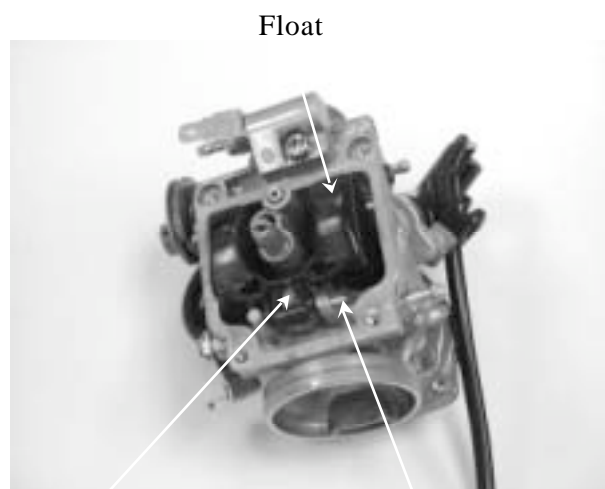

Float Valve

Float Pin


## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

### FLOAT LEVEL INSPECTION

Measure the float level at the location of the main jet (just contacting the float valve).


**Float Level:**  $18.5 \pm 1.0 \text{ mm}$

Replace the float if the level is incorrect.  
Check the operation of the float and then  
reinstall the float chamber.

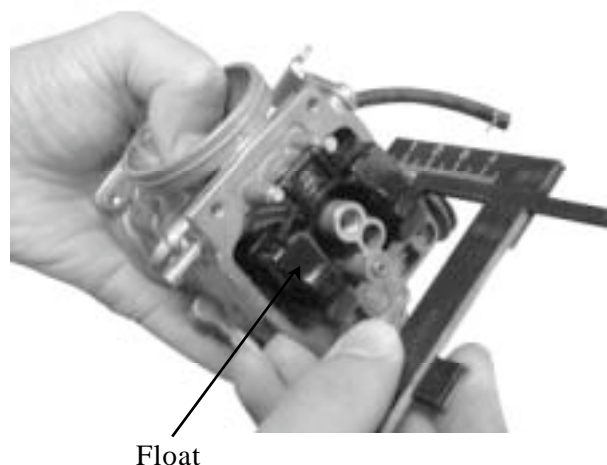

### VACUUM CHAMBER ASSEMBLY

First install the jet needle and spring into the vacuum chamber and then install the needle holder.

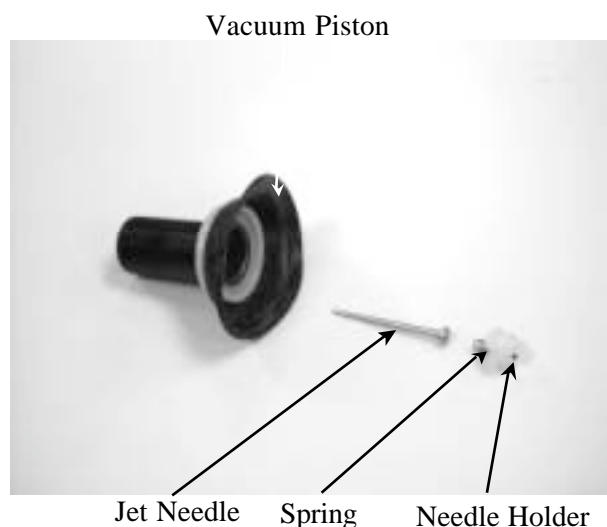


Install the vacuum piston into the carburetor body.

- \* Align the hole in the diaphragm with the hole in the carburetor body.

Install the spring.

Install the vacuum chamber cover and tighten it with the two screws.

- \* Be careful not to let the diaphragm slip.
- \* If the diaphragm cannot be positioned correctly because of expansion, dry the diaphragm before installation.

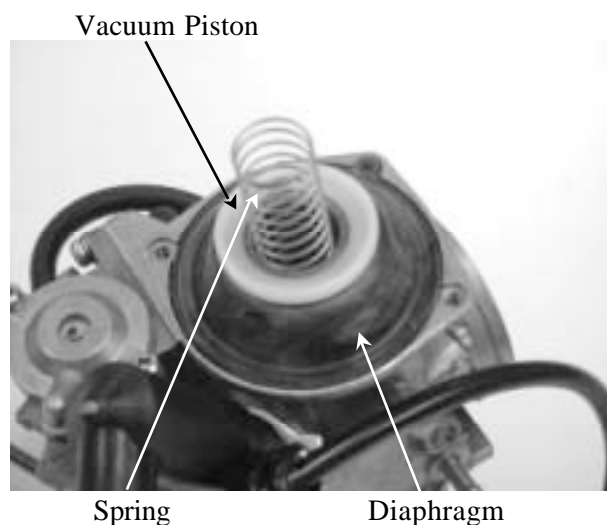

## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

Check the heater with battery.

If the heater is getting hot, means the heater without problem, otherwise the heater has to be changed.



Heater

### CARBURETOR INSTALLATION

Tighten the drain screw.


Install the carburetor onto the intake manifold and tighten the band.

Install the air cleaner connecting tube and tighten the band.

Connect the throttle cable to the carburetor.

**\***

- After connecting the throttle cable, adjust the throttle grip free play to 2\_ 6mm.

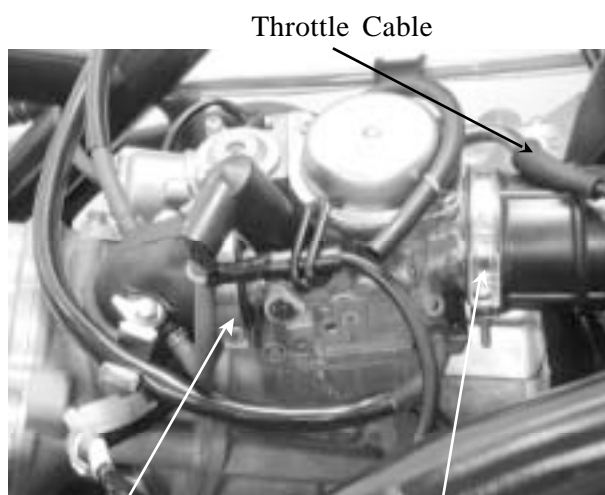

Intake Manifold Band

Air Cleaner Connecting  
Tube Band


Connect the auto bystarter wire.

Connect the fuel tube and vacuum tube to the carburetor.

Perform the following inspections and adjustments:

- Throttle grip free play (⇒ 3-3)
- Idle speed (⇒ 3-6)

Install the seat, met-in box and frame center cover.

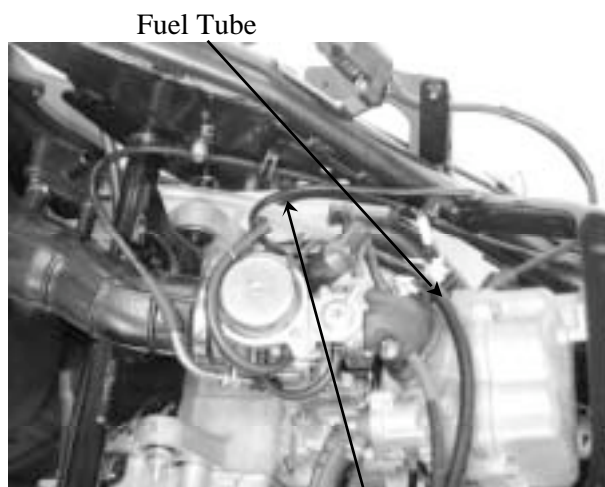


Auto Bystarter Wire

## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK


### FUEL PUMP REMOVAL

Remove the frame center cover.  
Disconnect the fuel pump inlet, outlet and vacuum tubes.  
Remove the two fuel pump attaching bolts and the fuel pump.

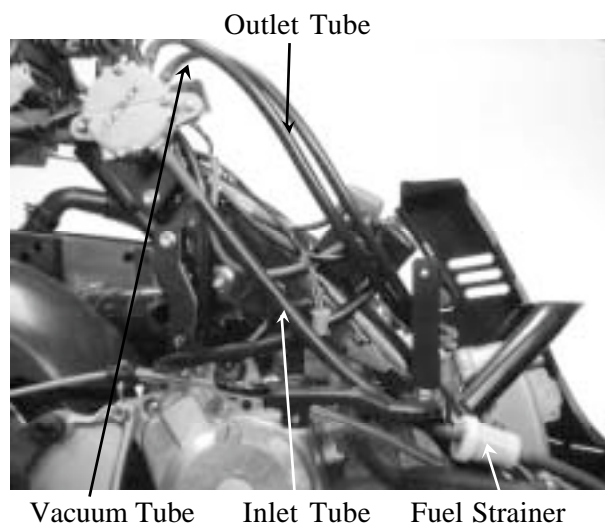

### FUEL PUMP DISASSEMBLY

Remove the four fuel pump body screws.

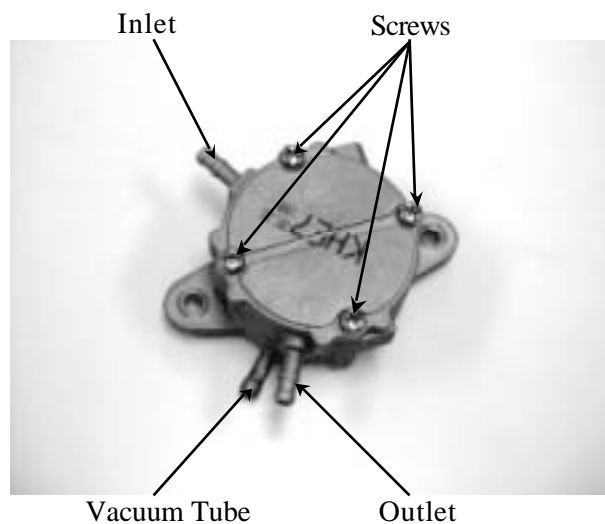

Disassemble the fuel pump.




## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK


### FUEL PUMP INSPECTION

Inspect the fuel pump diaphragms A and B for damage.

Inspect each gasket for damage.

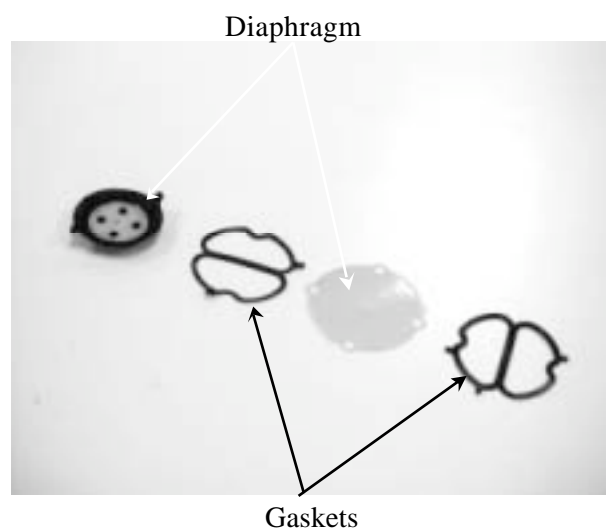


Inspect the suction valve, outlet valve and relief valve in the fuel pump body for damage, cracks or foreign matters.

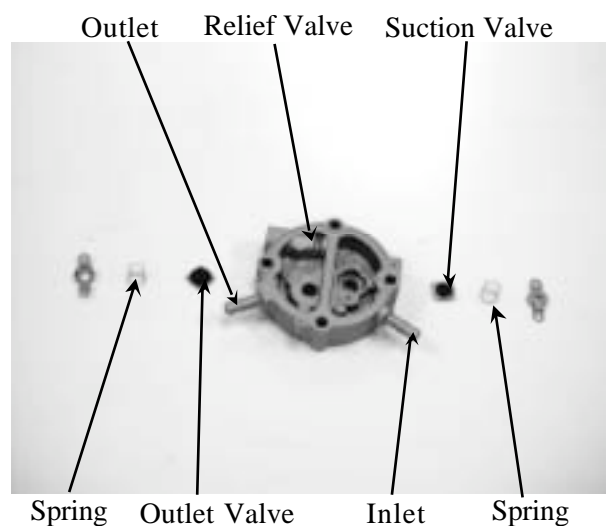

### FUEL PUMP ASSEMBLY

Assemble the fuel pump in the reverse order of disassembly.


- \* During assembly, be sure to install the gaskets and diaphragms properly to avoid damage.
- \* Do not allow any foreign matter to enter the fuel pump during assembly.

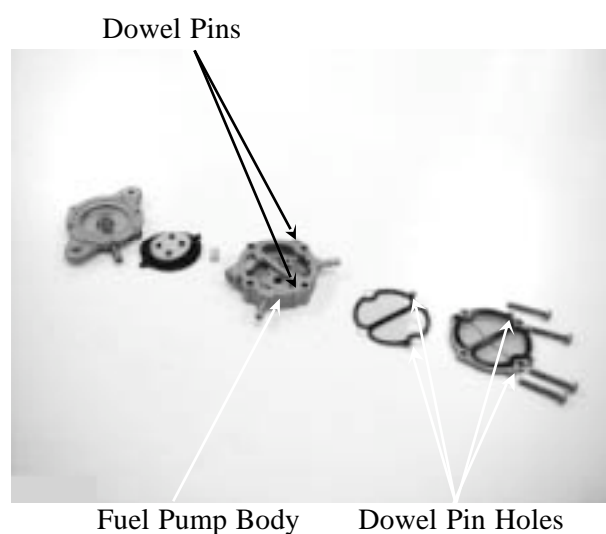

## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK


### FUEL PUMP INSTALLATION

Install the fuel pump and secure it with the two bolts.  
Connect the fuel pump inlet, outlet and vacuum tubes.  
Install the seat, met-in box and frame center cover.

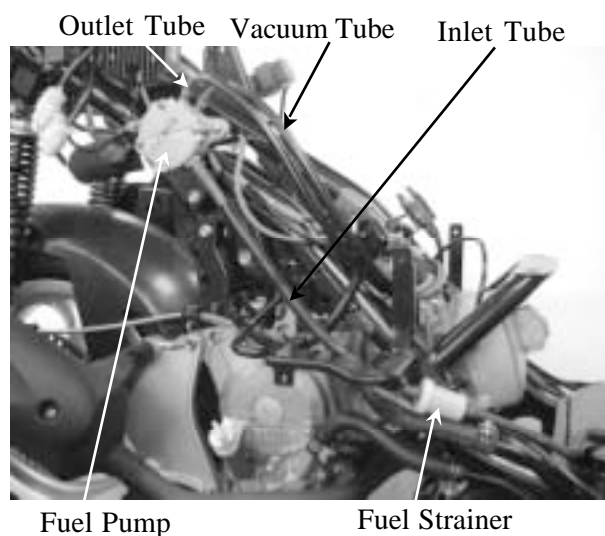


Measure the fuel pump output.  
Start the engine and disconnect the fuel outlet tube and place a clean container under the tube to check the fuel output.

**Output:** 40cc/1500rpm/10 seconds .

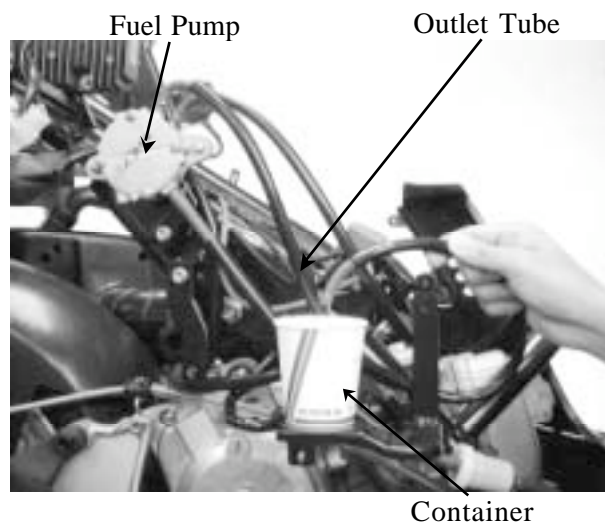

### FUEL TANK REMOVAL

Remove the floor board. (⇒2-4)  
Remove the leg shield . (⇒2-5)  
Disconnect the fuel unit wire connector.  
Remove the fuel tube between the fuel tank and the fuel filler.  
Disconnect the fuel vapor tube.  
Remove the fuel tank.  
The installation sequence is the reverse of removal.

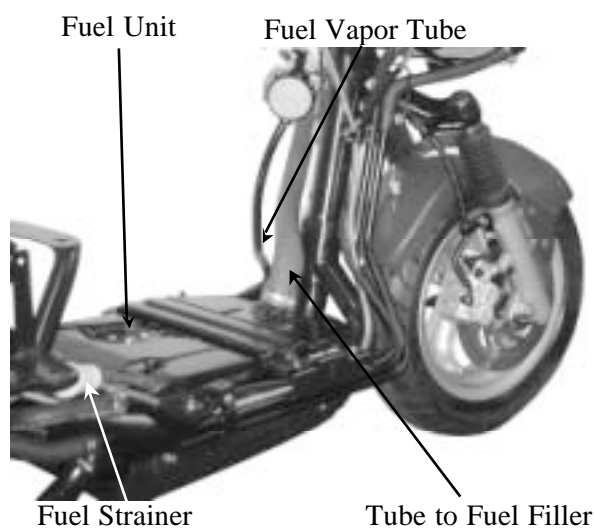



## 13. FUEL SYSTEM/CARBURETOR/ FUEL PUMP/ FUEL TANK

### FUEL STRAINER REMOVAL

Remove the fuel strainer from the fuel tank.

#### INSPECTION

Inspect if the fuel strainer is clogged and clean it with compressed air.

Replace the fuel strainer at every 6000 km.


\*

- When removing the fuel strainer, do not allow flames or sparks near the working area and drain the residual gasoline into a container.



### INSTALLATION

Install the fuel strainer with its arrow mark toward the fuel pump.

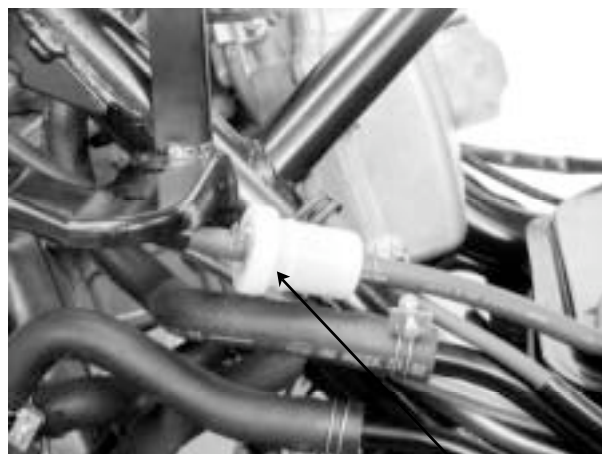

Fuel Strainer

---

**STEERING HANDLEBAR/FRONT WHEEL/FRONT  
BRAKE/FRONT SHOCK ABSORBER/FRONT FORK**

---

|                            |       |
|----------------------------|-------|
| SCHEMATIC DRAWING .....    | 14- 1 |
| SERVICE INFORMATION .....  | 14- 2 |
| TROUBLESHOOTING .....      | 14- 3 |
| STEERING HANDLEBAR .....   | 14- 4 |
| FRONT WHEEL .....          | 14- 5 |
| FRONT BRAKE .....          | 14- 8 |
| FRONT SHOCK ABSORBER ..... | 14-14 |
| FRONT FORK .....           | 14-17 |


## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK

---



GRAND DINK 125/150

### SCHEMATIC DRAWING

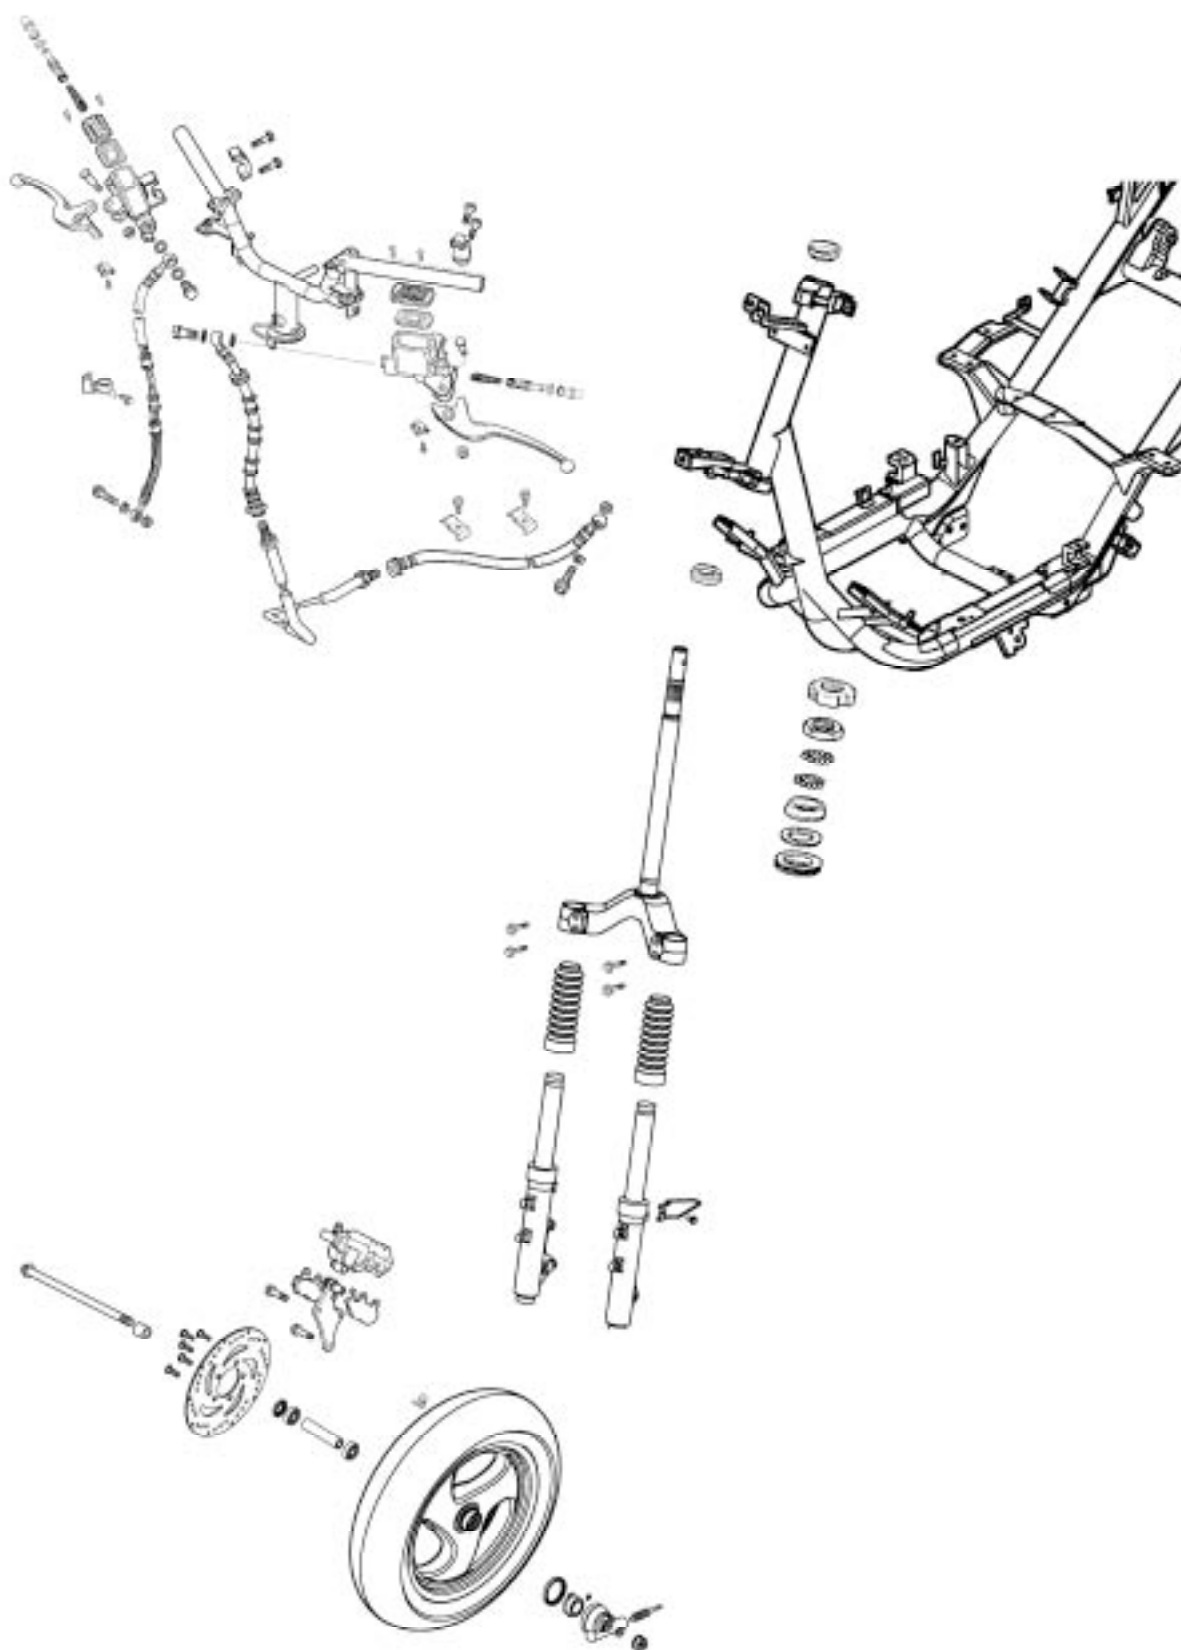

**SERVICE INFORMATION****GENERAL INSTRUCTIONS**

- Remove the motorcycle frame covers before removing the front wheel, steering handlebar, front shock absorber and front fork. Jack the motorcycle front wheel off the ground and be careful to prevent the motorcycle from falling down.
- During servicing, keep oil or grease off the brake pads and brake disk.

**SPECIFICATIONS**

| Item                                    |        | Standard (mm) | Service Limit (mm) |
|---|--------|---------------|--------------------|
| Axle shaft runout                       |        | □             | 0.2                |
| Front wheel rim runout                  | Radial | □             | 2.0                |
|   | Axial  | □             | 2.0                |
| Front shock absorber spring free length |        | 240.6         | 233                |
| Brake disk thickness                    |        | 3.8_ 4.2      | 3.0                |
| Brake disk runout                       |        | □             | 0.30               |
| Brake master cylinder I.D.              |        | 12.70_ 12.74  | 12.75              |
| Brake master cylinder piston O.D.       |        | 12.65_ 12.68  | 12.64              |
| Brake caliper piston O.D.               |        | 25.33_ 25.36  | 25.30              |
| Brake caliper cylinder I.D.             |        | 25.40_ 25.45  | 25.45              |

**TORQUE VALUES**

|                           |        |          |
|---------------------------|--------|----------|
| Steering stem lock nut    | 78.4_  | 117.6N-m |
| Steering top cone race    | 4.9_   | 12.7N-m  |
| Front shock absorber bolt | 19.8_  | 24.5N-m  |
| Front axle nut            | 44.1_  | 49N-m    |
| Brake caliper bolt        | 24.5N_ | 34.3N-m  |

**SPECIAL TOOLS**

Lock nut wrench  
Front shock absorber compressor  
Ball race remover  
Driver handle  
Outer driver, 37x40mm  
Pilot, 12mm  
Bearing remover  
Bearing remover head, 12mm

## **TROUBLESHOOTING**

### **Hard steering (heavy)**

- Excessively tightened steering stem top cone race
- Broken steering balls
- Insufficient tire pressure

### **Steers to one side or does not track straight**

- Uneven front shock absorbers
- Bent front fork
- Bent front axle or uneven tire

### **Poor brake performance**

- Worn brake pads
- Contaminated brake pad surface
- Deformed brake disk
- Air in brake system
- Deteriorated brake fluid
- Worn brake master cylinder piston oil seal
- Clogged brake fluid line
- Unevenly worn brake caliper

### **Front wheel wobbling**

- Bent rim
- Loose front axle
- Bent spoke plate
- Faulty tire
- Improperly tightened axle nut

### **Soft front shock absorber**

- Weak shock springs
- Insufficient damper oil

### **Front shock absorber noise**

- Slider bending
- Loose fork fasteners
- Lack of lubrication

### STEERING HANDLEBAR

#### REMOVAL

Remove the handlebar front and rear covers.

(⇒2-6)


Remove the front and rear brake master cylinder attaching bolts.

Remove the front upper cover. (⇒2-5)

Remove the front lower cover. (⇒2-5)


Remove the floor board. (⇒2-4)

Remove the leg shield. (⇒2-5)

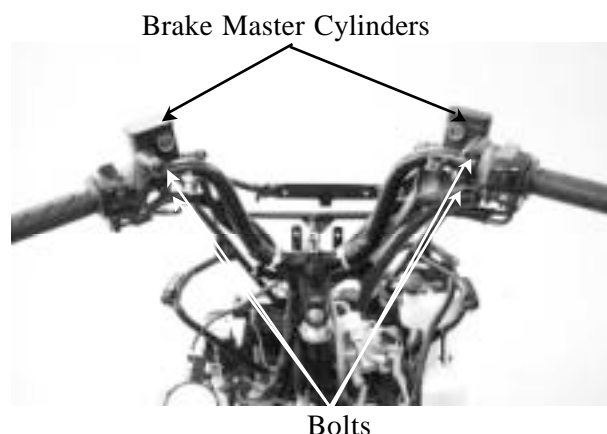


Remove the four screws attaching the right and left handlebar switches.

Disconnect the throttle cable from the throttle grip and remove the throttle grip from the handlebar.

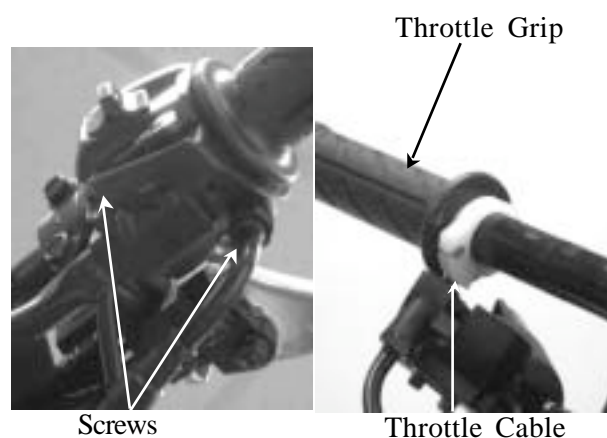

Remove the handlebar lock nut and take out the bolt.

Remove the handlebar.

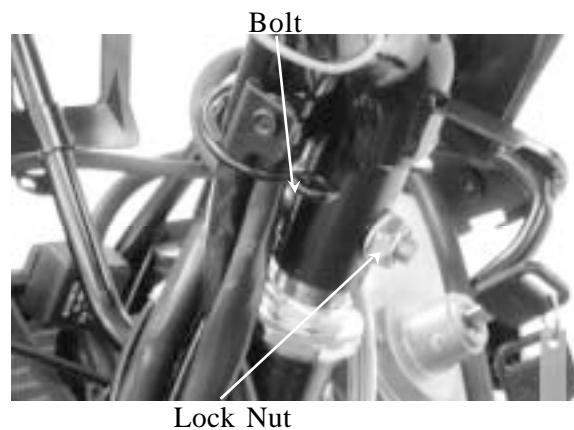


#### INSTALLATION

Install the handlebar onto the steering stem and install the handlebar collar, lock nut and bolt.

Tighten the bolt to the specified torque.

**Torque:** 39.2\_ 49N-m

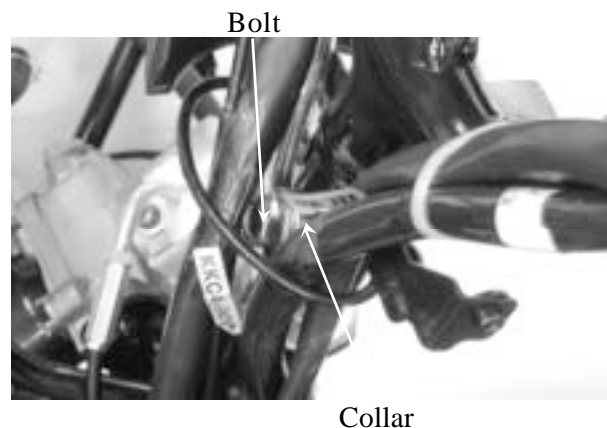




## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK



GRAND DINK 125/150


Lubricate the throttle grip front end with grease and then install the throttle grip. Connect the throttle cable to the throttle grip. Install the right and left handlebar switches and tighten the screws.

- \* Adjust the throttle grip free play to the specified range of 2\_ 6mm.

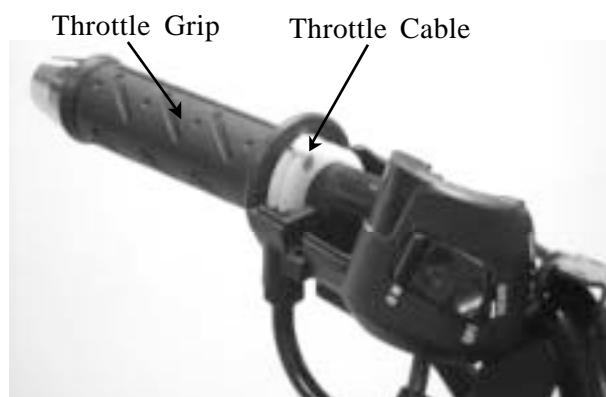

Install the front and rear brake master cylinders.


- \* Install the brake master cylinders by aligning the index marks.

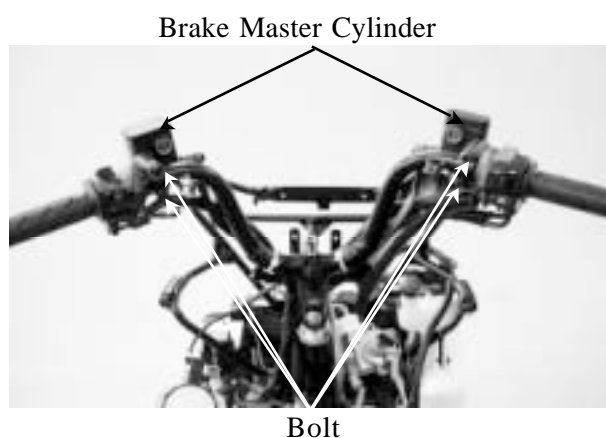

### FRONT WHEEL

#### REMOVAL

Jack the motorcycle front wheel off the ground. Remove the front axle nut to pull out the axle. Remove the front wheel and the speedometer gear unit.

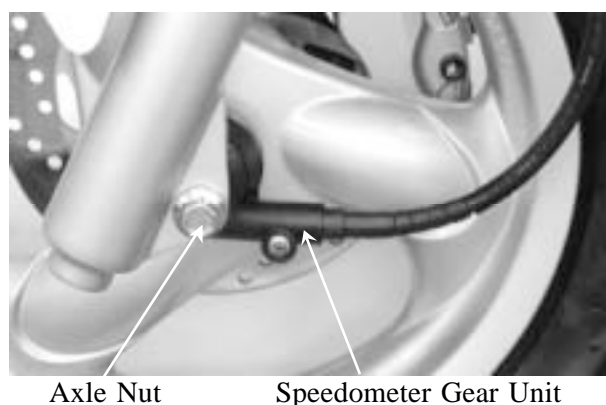


#### INSPECTION

##### AXLE RUNOUT

Set the axle in V blocks and measure the runout using a dial gauge. The actual runout is \_ of the total indicator reading.

**Service Limit:** 0.2mm replace if over

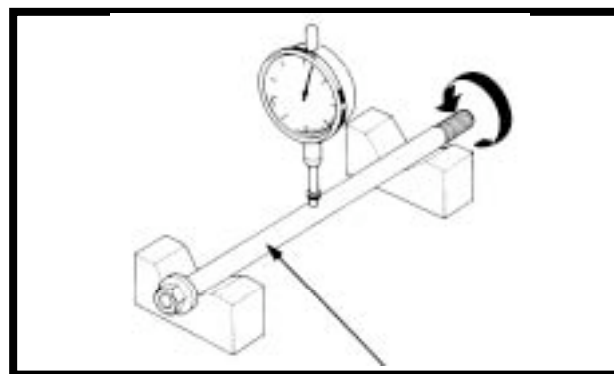

## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK



GRAND DINK 125/150


### WHEEL RIM

Check the wheel rim runout.

#### Service Limits:

**Radial:** 2.0mm replace if over

**Axial:** 2.0mm replace if over

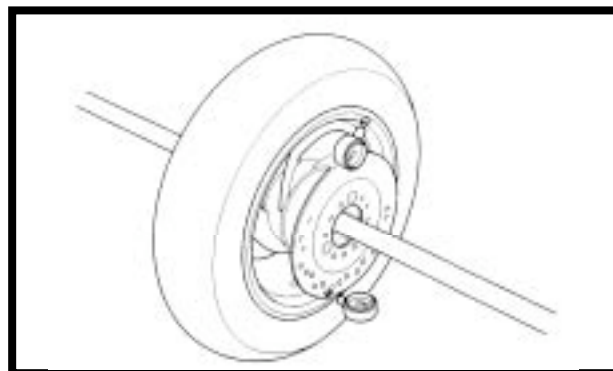

### FRONT WHEEL BEARING

Remove the side collar and dust seal.



Turn the inner race of each bearing with your finger to see if they turn smoothly and quietly. Also check if the outer race fits tightly in the hub.

Replace the bearings if the races do not turn smoothly, quietly, or if they fit loosely in the hub.



Wheel Bearing

### BEARING REPLACEMENT

Remove the front wheel bearings and distance collar.

#### Special Tools

Bearing Remover

Bearing Remover Head, 12mm



## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK



GRAND DINK 125/150


Pack all bearing cavities with grease.  
Drive in the left bearing.  
Install the distance collar.  
Drive in the right bearing.

- \* Do not allow the bearings to tilt while driving them in.
- \* Drive in the bearing squarely with the sealed end facing out.

### Special Tools

Outer driver  
Driver handle

Driver Handle

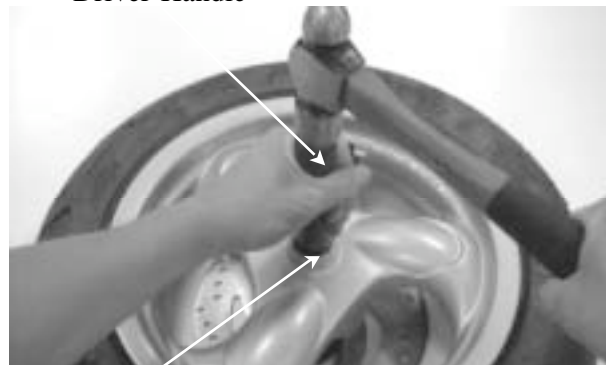

Outer Driver

### INSTALLATION

Apply grease to the speedometer gear unit.  
Install the speedometer gear unit by aligning its retaining pawl with the hub cutout.

- \* If not aligned, the retaining pawl will be deformed when the axle nut is tightened.
- \* After installing the axle, turn the wheel to make sure that the speedometer drive shaft rotates freely.

Speedometer Gear Unit




Hub Cutout

Pawl

Install the front wheel by aligning the speedometer gear unit groove with the front shock absorber tab.  
Insert the axle and tighten the axle nut.

- \* When installing the front wheel, position the brake disk between the two brake pads.

Tab

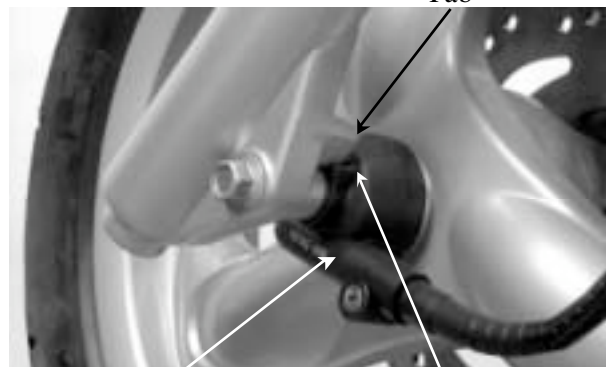

Speedometer Gear Unit

Groove

**Torque:** 44.1\_ 49N-m

### FRONT BRAKE

#### BRAKE MASTER CYLINDER

##### REMOVAL


Remove the handlebar covers. (⇒ 2-6)  
First drain the brake fluid from the hydraulic brake system.

Disconnect the front stop switch wire connector.

Remove the brake fluid tube bolt.

Remove the two bolts attaching the brake master cylinder

Remove the brake master cylinder.

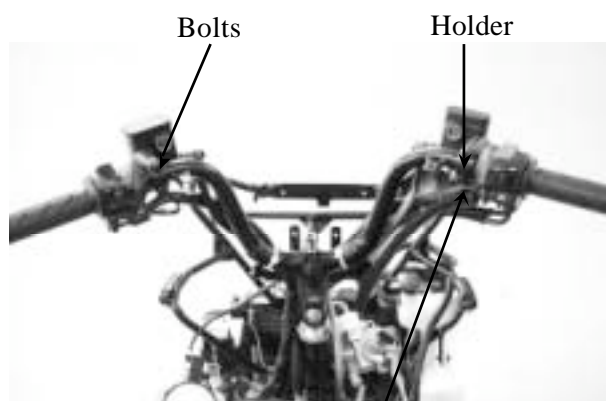


Stop Switch Wire Connector

- \* When servicing the brake system, use shop towels to cover rubber and plastic parts and coated surfaces to avoid being contaminated by brake fluid.
- \* When removing the brake fluid tube bolt, be sure to plug the tube end to avoid brake fluid leakage.

##### DISASSEMBLY

Remove the brake lever bolt and the brake lever.


Remove the piston rubber cover and snap ring from the brake master cylinder.

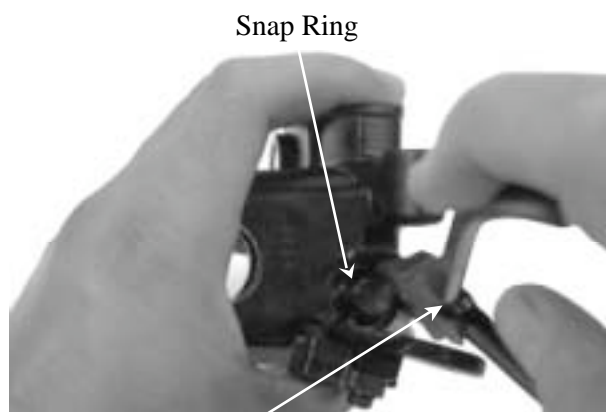

Snap Ring Pliers (Close)

Remove the washer, main piston and spring from the brake master cylinder.

Clean the inside of the master cylinder and brake reservoir with brake fluid.

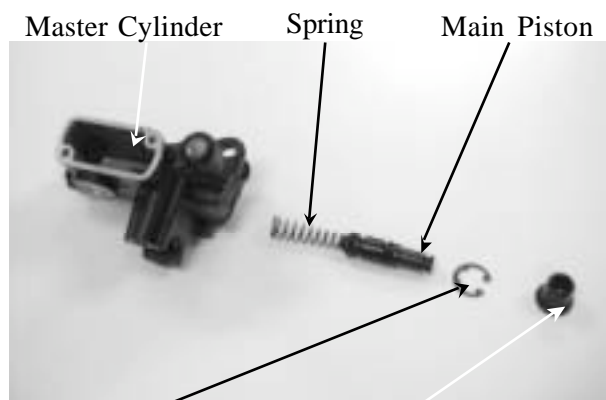

Snap Ring

Rubber Cover

## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK




GRAND DINK 125/150

### INSPECTION

Measure the brake master cylinder I.D.  
Inspect the master cylinder for scratches or cracks.

**Service Limit:** 12.75mm

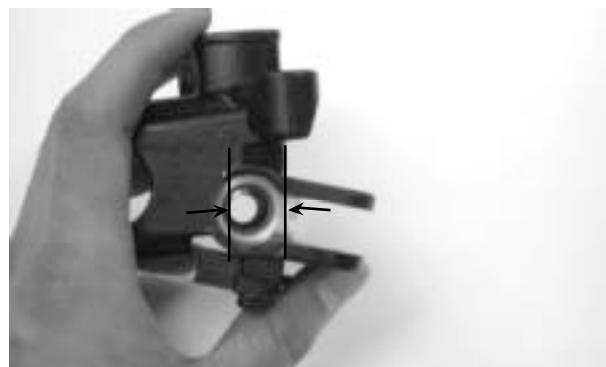

Measure the brake master cylinder piston O.D.

**Service Limit:** 12.645mm

Before assembly, inspect the 1st and 2nd rubber cups for wear.



### ASSEMBLY

Before assembly, apply brake fluid to all removed parts.  
Install the spring together with the 1st rubber cup.



\*

- During assembly, the main piston and spring must be installed as a unit without exchange.
- When assembling the piston, soak the cups in brake fluid for a while.
- Install the cups with the cup lips facing the correct direction.

Install the main piston, spring and snap ring.  
Install the rubber cover.  
Install the brake lever.  
Place the brake master cylinder on the handlebar and install the holder with the “up” mark facing up. Also align the punch mark with the holder joint seam.  
First tighten the upper bolt and then tighten the lower bolt.

**Torque:** 9.8\_ 13.7N-m

Install the brake fluid tube with the attaching bolt and two sealing washers.

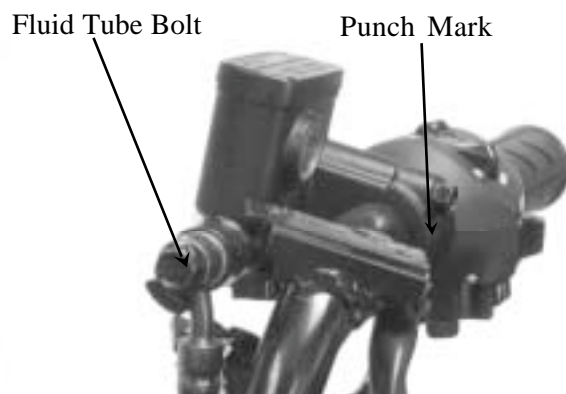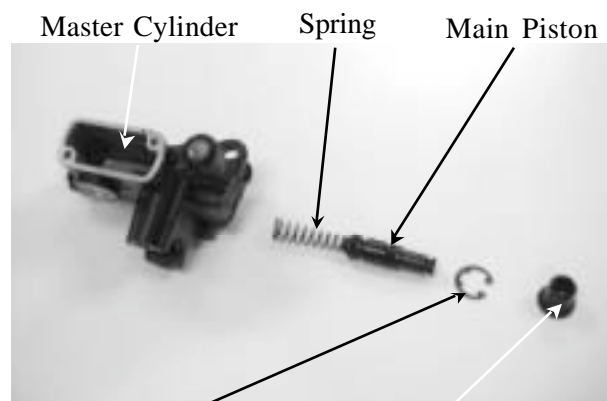



## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK

Connect the front stop switch wire connector.

Install the handlebar covers. (⇒2-6)



Stop Switch Wire Connector

### BRAKE FLUID REFILLING

Keep the handlebar upright and remove the brake reservoir cover and diaphragm. Add DOT-4 brake fluid to the brake reservoir.

- \* When bleeding, be careful not to allow air in the brake reservoir flowing into the brake system.
- \* When using a brake bleeder, follow the manufacturer's instructions.
- \* Never use dirty or unspecified brake fluid or mix different brake fluids because it will damage the brake system.



### BRAKE FLUID BLEEDING

Keep the handlebar upright and remove the brake reservoir cover and diaphragm. Add the specified brake fluid to the upper limit.

- \* Do not allow dust or water to enter the brake system during refilling.
- \* When servicing the brake system, use shop towels to cover plastic parts and coated surfaces to avoid damage caused by splash of brake fluid.



In order to avoid spilling brake fluid, connect a transparent hose to the bleed valve.

#### Warning

Brake fluid spilled on brake pads or brake disk will reduce the braking effect. Clean the brake pads and brake disk with a high quality brake degreaser.

Fully apply the brake lever and then loosen the brake caliper bleed valve to drain the brake fluid until there is no air bubbles in the brake fluid. Then, tighten the bleed valve. Repeat these steps until the brake system is free of air.



Bleed Valve



## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK



GRAND DINK 125/150

### BRAKE CALIPER


#### REMOVAL

First drain the brake fluid from the hydraulic brake system.

Remove the brake fluid tube bolt.

Remove the two bolts attaching the brake caliper.


Remove the brake caliper.

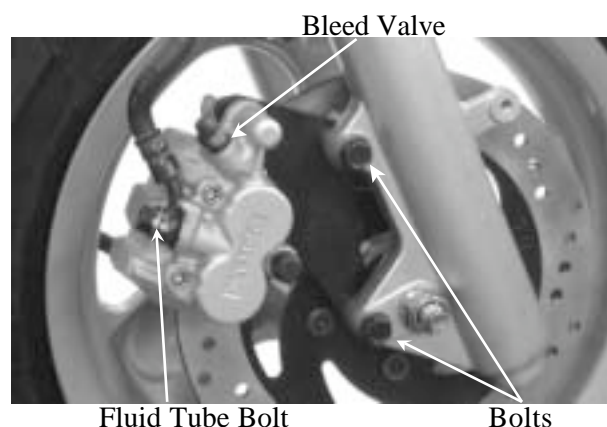

#### DISASSEMBLY


Remove the two brake pads dowel pins from the brake caliper.

Remove the brake pads.

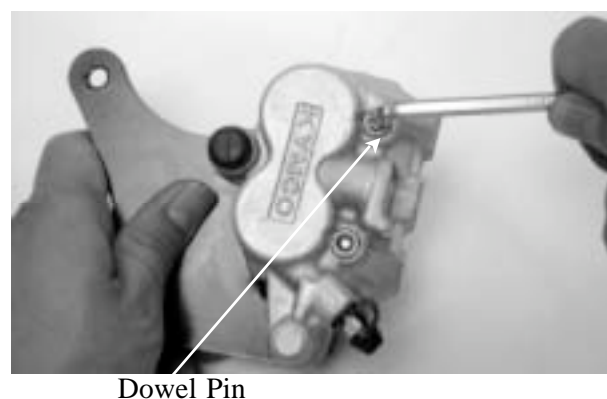

Remove the piston from the brake caliper. If necessary, use compressed air to squeeze out the piston through the brake fluid inlet opening and place a shop towel under the caliper to avoid contamination caused by the removed piston.


Check the piston cylinder for scratches or wear and replace if necessary.

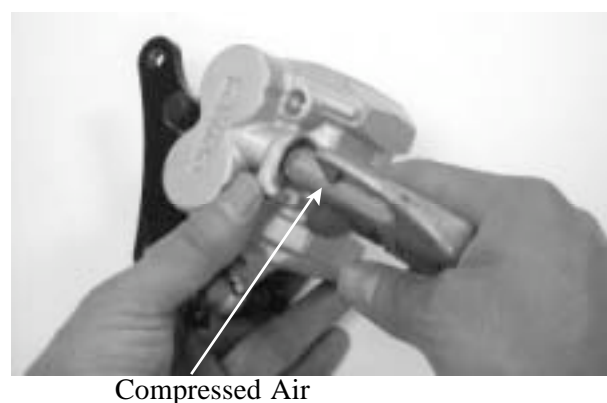

Push the piston oil seal outward to remove it. Clean the oil seal groove with brake fluid.

\*

Be careful not to damage the piston surface.

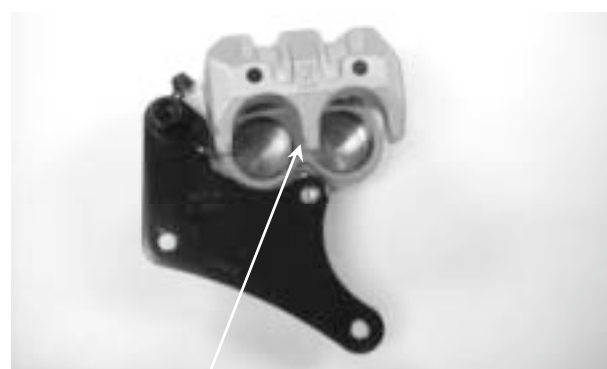


## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK



GRAND DINK 125/150


Check the piston for scratches or wear.  
Measure the piston O.D. with a micrometer gauge.

**Service Limit:** 25.30mm

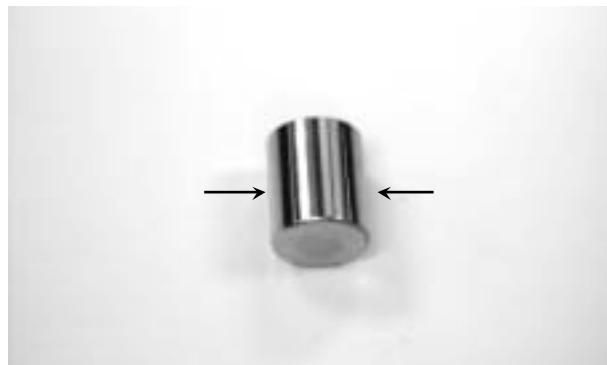

Check the caliper cylinder for scratches or wear and measure the cylinder bore.

**Service Limit:** 25.45mm

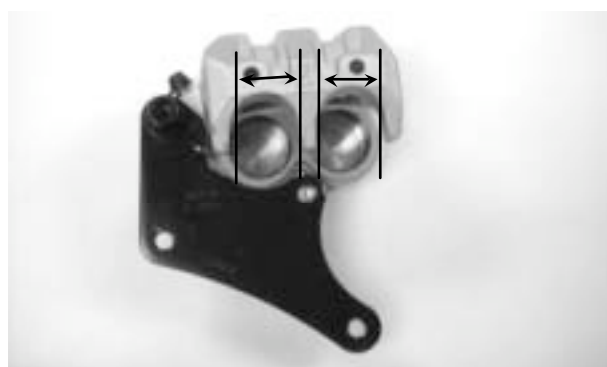

### ASSEMBLY

Clean all removed parts.

Apply silicon grease to the piston and oil seal. Lubricate the brake caliper cylinder inside wall with brake fluid.

Install the brake caliper piston with grooved side facing out.

- \* Install the piston with its outer end protruding 3\_ 5mm beyond the brake caliper.




Wipe off excessive brake fluid with a clean shop towel. Apply silicon grease to the brake caliper seat pin and caliper inside. Install the brake caliper seat.

### INSTALLATION

Install the brake caliper to the shock absorber and tighten the two bolts.

**Torque:** 24.5\_ 34.3N-m

- \* When installing the brake caliper, be sure to position the brake disk between the two brake pads.

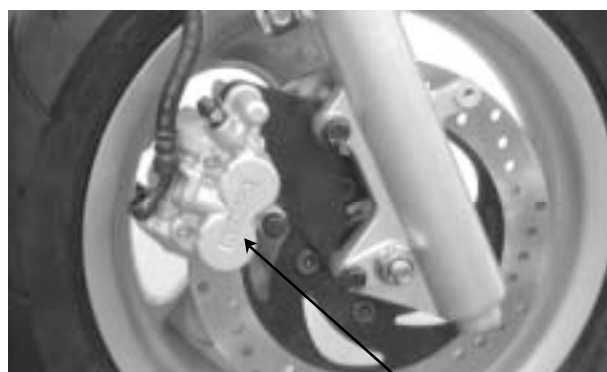

Brake Caliper

## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK



GRAND DINK 125/150


Connect the brake fluid tube to the brake caliper and tighten the fluid tube bolt.

**Torque:** 24.5\_ 34.3N-m

Fill the brake reservoir with the specified brake fluid and bleed air from the brake system. (⇒ 14-10)

\*

When installing the brake fluid tube, be sure to install the two sealing washers.

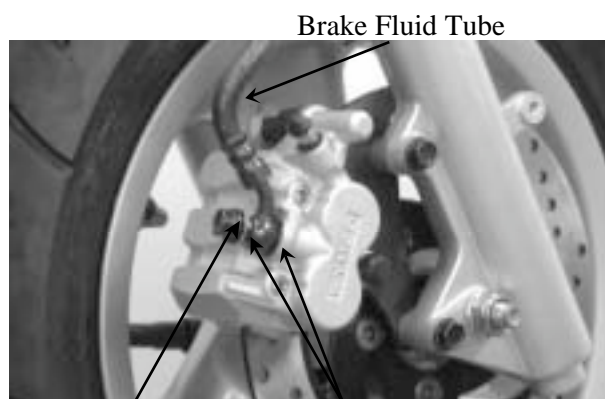

Fluid Tube Bolt

Washers

## FRONT SHOCK ABSORBER

### REMOVAL

Remove the front upper cover. (⇒2-5)


Remove the front lower cover. (⇒2-5)

Remove the front wheel. (⇒14-5)

Remove the front brake caliper. (⇒14-11)

Remove the front shock absorber upper mount bolts.

Loosen the lower mount bolts to remove the front shock absorbers.

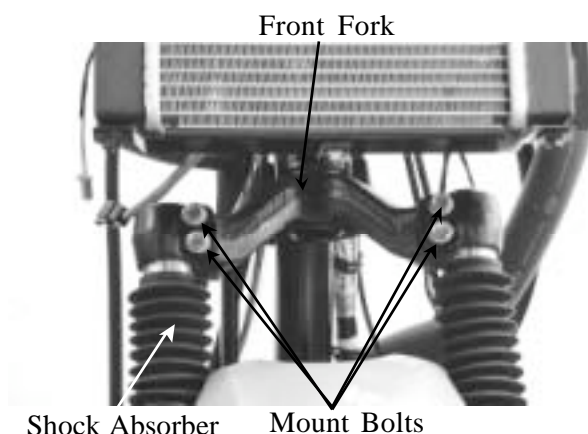


### DISASSEMBLY

Remove the dust boot.

Remove the dust seal.

Remove the circlip.

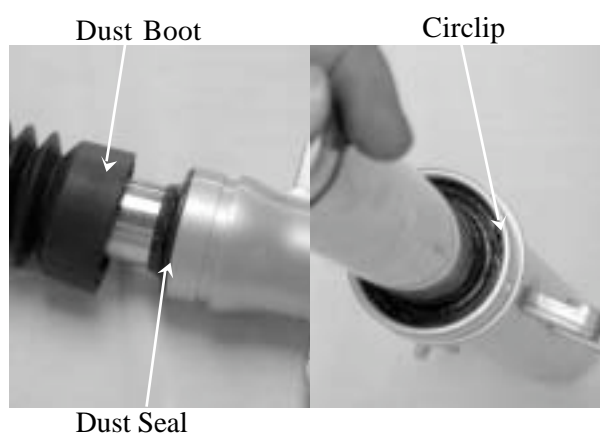


Set the front shock absorber in a vise.

Remove the damper rod hex bolt and copper washer.

Pull out the front shock absorber tube.

**\***

After the hex bolt is removed, place a container under the front shock absorber to drain the engine oil from it.

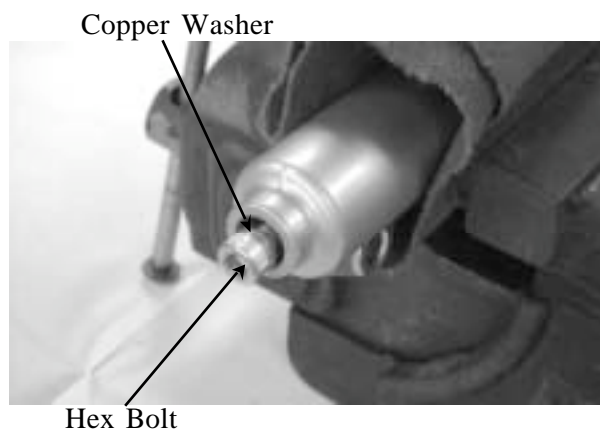


Set the front shock absorber tube in a vise.

Remove the lock nut on the front shock absorber tube.

Take out the shock absorber spring and damper rod.

**\***

When holding the shock absorber tube, place a shop towel to protect it and do apply too much force .

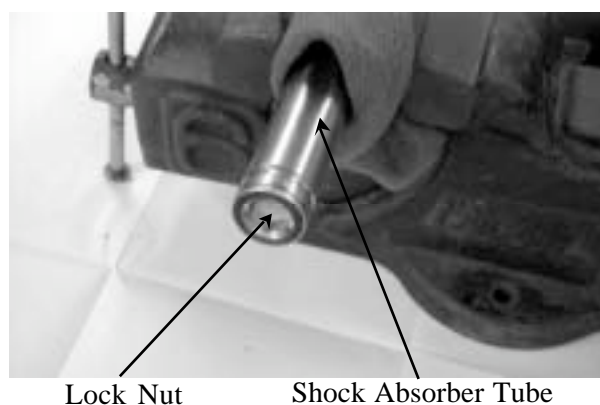

## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK




GRAND DINK 125/150

### INSPECTION

Inspect the following items and replace if necessary.


- Front shock absorber tube bending, damage or wear
- Weak front shock absorber spring
- Damper and damper rod bending
- Oil seal damage or wear

Shock Absorber Tube

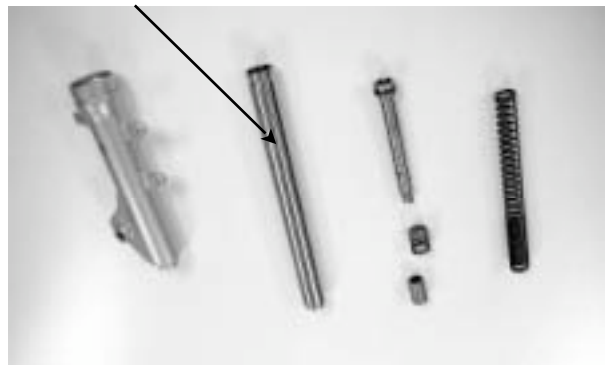

Measure the front shock absorber spring free length.

**Service Limit:** 233mm replace if below

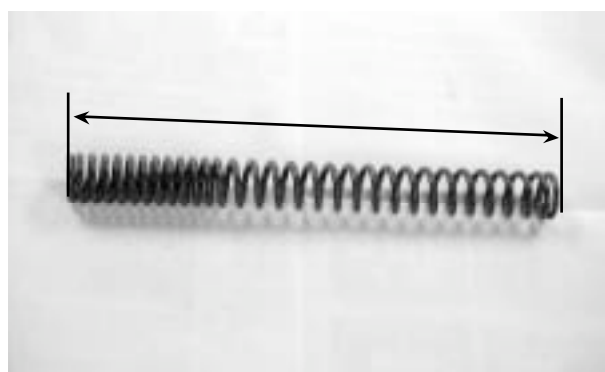

## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK

### ASSEMBLY

Install the damper spring onto the damper rod and then install them into the front shock absorber tube.

Install the shock absorber spring onto the front shock absorber tube.

Set the front shock absorber tube in a vise and then tighten the lock nut.

\*

When holding the shock absorber tube, place a shop towel to protect it and do not apply too much force.



Set the front shock absorber in a vise.

Insert the shock absorber tube into the shock absorber and then install the copper washer and tighten the damper rod hex bolt.

\*

Apply locking agent to the washer and hex bolt and install them together.

Add engine oil into the front shock absorber.

**Torque:** 4.9\_ 29.4N-m

**Specified Oil:** SAE30



Hex Bolt

Copper Washer

**Oil Capacity:** 81cc


Install the oil seal

Install the circlip.

Install the dust seal and dust boot.

Circlip

Dust Boot

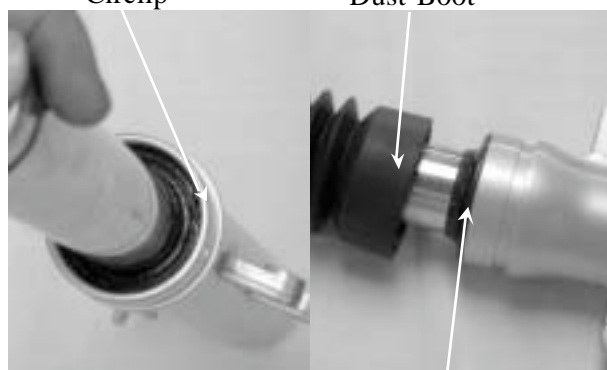

Dust Seal

### INSTALLATION

Install the front shock absorbers onto the front fork.

Install and tighten the front shock absorber upper mount bolts.

Tighten the lower mount bolts.

\*

Align the upper mount bolt hole with the groove on the front fork.

Install the front wheel. (⇒ 14-7)



## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK



GRAND DINK 125/150

### FRONT FORK

#### REMOVAL

Remove the handlebar covers. (⇒2-6)  
Remove the steering handlebar. (⇒14-4)  
Remove the front upper cover. (⇒2-5)  
Remove the front lower cover. (⇒2-5)  
Remove the front inner fender. (⇒2-6)  
Remove the front wheel. (⇒14-5)  
Remove the front brake caliper. (⇒14-11)  
Hold the steering stem top cone race and remove the steering stem lock nut.  
Remove the top cone race and remove the front fork.

\*

Be careful not to lose the steel balls (26 on top race and 19 on bottom race).

Inspect the ball races, cone races and steel balls for wear or damage. Replace if necessary.

#### BOTTOM CONE RACE REPLACEMENT

Remove the bottom cone race using a chisel.

Drive a new bottom cone race into place with a proper driver.

\*


Be careful not to damage the steering stem and front fork.

#### BALL RACE REPLACEMENT

Drive out the ball races.  
Drive in new ball races.

\*


Be sure to drive the ball races into place completely.

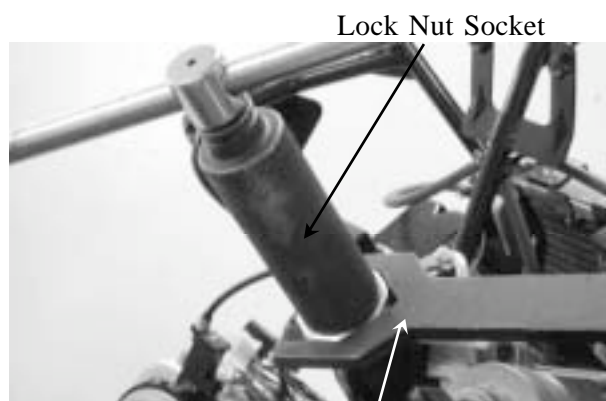

## 14. STEERING HANDLEBAR/FRONT WHEEL/FRONT BRAKE/FRONT SHOCK ABSORBER/FRONT FORK

### INSTALLATION

Apply grease to the top and bottom ball races and install 26 steel balls on the top ball race and 19 steel balls on the bottom ball race. Then, install the front fork.

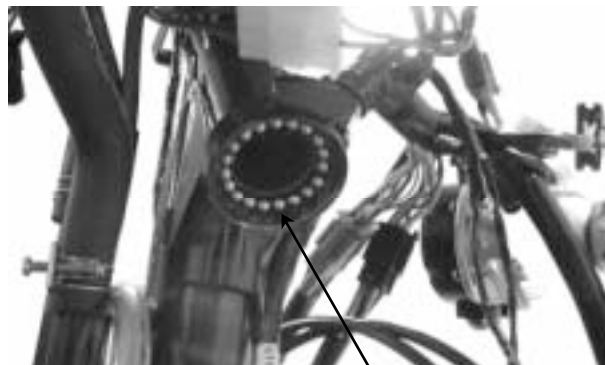

Bottom Ball Race

Apply grease to the top cone race and install it.

Tighten the top cone race and then turn the steering stem right and left several times to make steel balls contact each other closely.

\*

Check that the steering stem rotates freely without vertical play.



Install the steering stem lock nut and tighten it while holding the top cone race.

**Torque:** 78.4\_ 117.6N-m


Install the front wheel. (⇒ 14-7)

Install the front brake caliper. (⇒ 14-12)

Install the front inner fender. (⇒ 2-6)

Install the throttle grip and the right and left handlebar switches. (⇒ 14-5)

Install the right and left brake master cylinders. (⇒ 14-5)

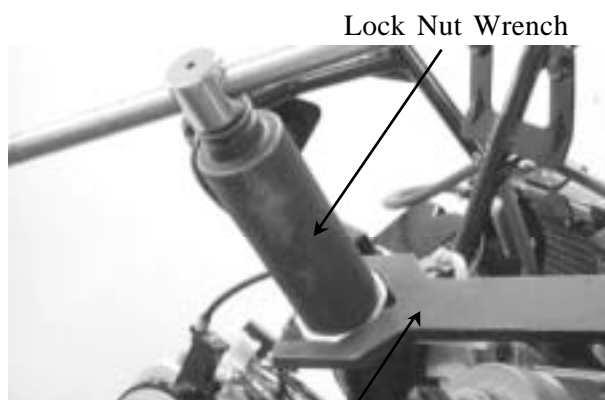

Lock Nut Wrench

**REAR BRAKE/REAR FORK/REAR WHEEL/  
REAR SHOCK ABSORBER**


|                           |      |
|---------------------------|------|
| SCHEMATIC DRAWING -----   | 15-1 |
| SERVICE INFORMATION ----- | 15-2 |
| TROUBLESHOOTING -----     | 15-2 |
| REAR BRAKE-----           | 15-3 |
| REAR FORK -----           | 15-4 |
| REAR WHEEL -----          | 15-4 |
| REAR SHOCK ABSORBER-----  | 15-5 |

## 15. REAR BRAKE/REAR FORK/REAR WHEEL/REAR SHOCK ABSORBER

---

**KYMCO**  
GRAND DINK 125/150

### SCHEMATIC DRAWING

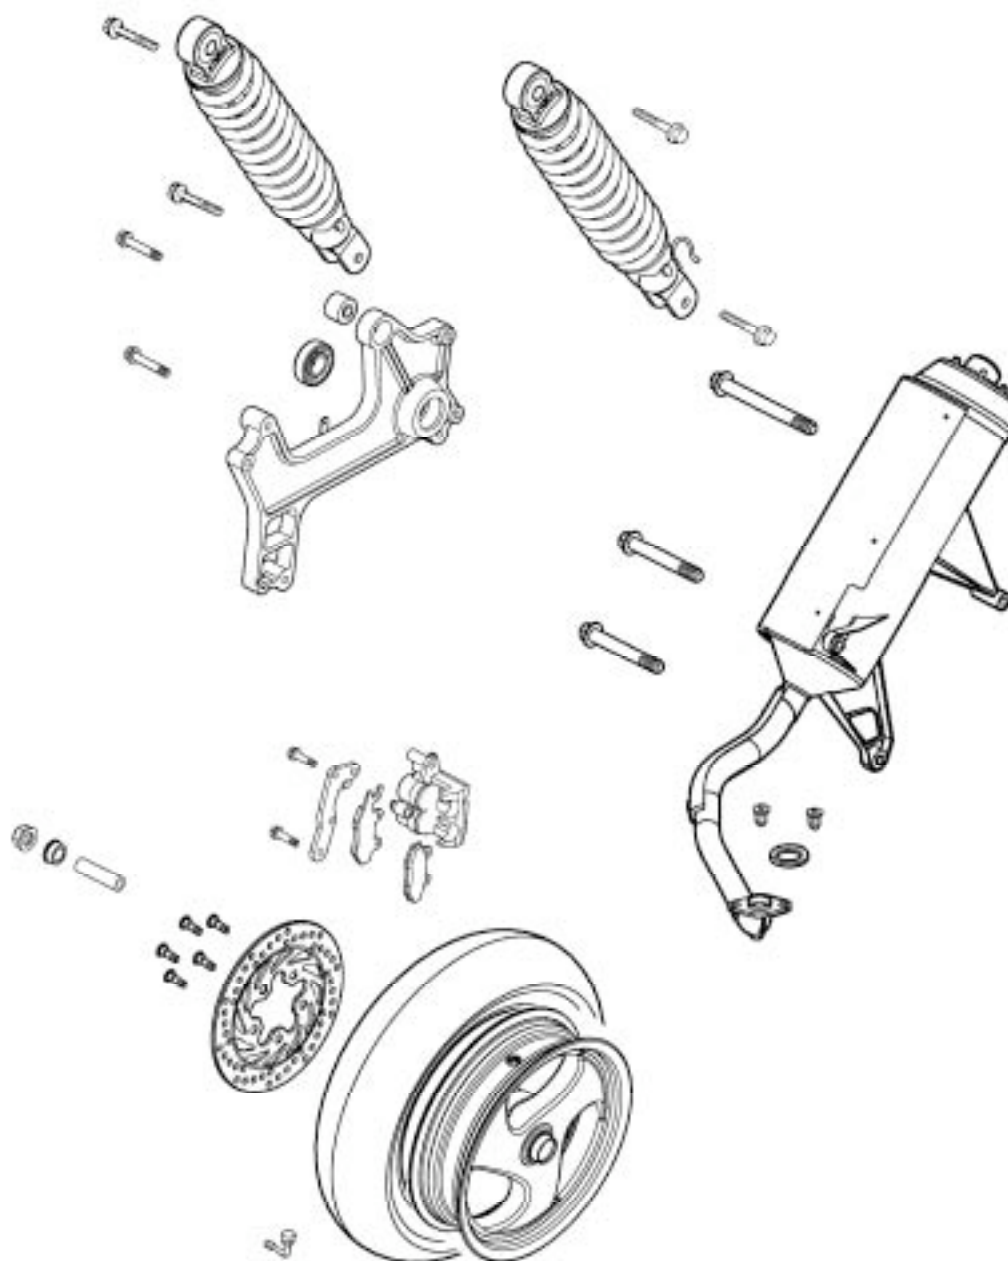

# 15. REAR BRAKE/REAR FORK/REAR WHEEL/REAR SHOCK ABSORBER

## SERVICE INFORMATION

### GENERAL INSTRUCTIONS

- When performing the services stated in this section, the engine and exhaust muffler must be cold to avoid scalding.
- During servicing, keep oil or grease off the brake pads and brake disk.

### SPECIFICATIONS

| Item                                   | Standard (mm)  | Service Limit (mm) |
|--|----------------|--------------------|
| Rear wheel rim runout                  | □              | 2.0                |
| Rear shock absorber spring free length | 232.9          | 226                |
| Rear brake disk thickness              | 3.5_ 3.8       | 3.0                |
| Rear brake disk runout                 | □              | 0.30               |
| Rear brake master cylinder I.D.        | 12.700_ 12.743 | 12.755             |
| Rear brake master cylinder piston O.D. | 12.657_ 12.684 | 12.645             |
| Rear brake caliper cylinder I.D.       | 25.400_ 25.45  | 25.45              |
| Rear brake caliper piston O.D.         | 25.335_ 25.368 | 25.30              |

### TORQUE VALUES

|                                      |  |
|--------------------------------------|--|
| Exhaust muffler lock bolt            | 29.4_ 39.2N-m                          |
| Rear axle nut                        | 78.4_ 98N-m                            |
| Rear shock absorber lower mount bolt | 19.6_ 29.4N-m                          |
| Rear shock absorber upper mount bolt | 39.2N-m                                |
| Rear damper lock nut                 | 14.7_ 24.5N-m<br>(apply locking agent) |
| Rear brake caliper bolt              | 19.6_ 29.4N-m                          |

### SPECIAL TOOLS

|                                  |
|----------------------------------|
| Rear shock absorber remover      |
| Shock absorber spring compressor |

## TROUBLESHOOTING

### Rear wheel wobbling

- Bent rim
- Faulty tire
- Axle not tightened properly

### Soft rear shock absorber

- Weak shock absorber spring
- Damper oil leaks

### Rear wheel noise

- Worn rear wheel axle bearings
- Worn rear fork bearings
- Deformed rear fork

### Poor brake performance

- Air in brake system
- Deteriorated brake fluid
- Contaminated brake pad surface
- Worn brake pads
- Clogged brake fluid line
- Deformed brake disk
- Unevenly worn brake caliper

# 15. REAR BRAKE/REAR FORK/REAR WHEEL/REAR SHOCK ABSORBER

## REAR BRAKE

### REAR BRAKE CALIPER REMOVAL



First remove the exhaust muffler. (⇒2-6)  
Remove the rear brake fluid tube bolt and disconnect the brake fluid tube.  
Remove the two bolts attaching the rear brake caliper.  
Remove the rear brake caliper.

\* When removing the brake fluid tube, use shop towels to cover plastic parts and coated surfaces to avoid damage.

### INSPECTION

Inspect the brake pads and brake disk.  
Visually check the brake pad thickness and it should not exceed the wear indicator mark.  
Measure the brake disk thickness.


**Service Limit:** 3.0mm replace if below

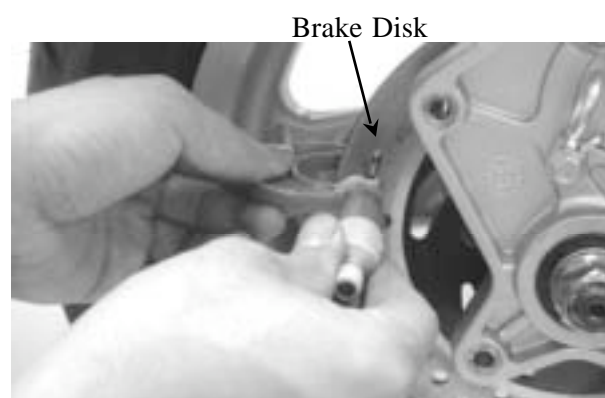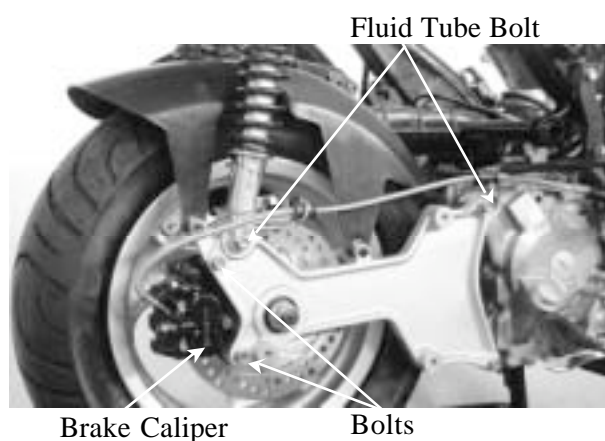

### DISASSEMBLY

Disassemble the rear brake caliper. (⇒14-11)  
Inspect and assemble the rear brake caliper. (⇒14-12)

Note: The rear brake caliper and front brake caliper have the same specification.

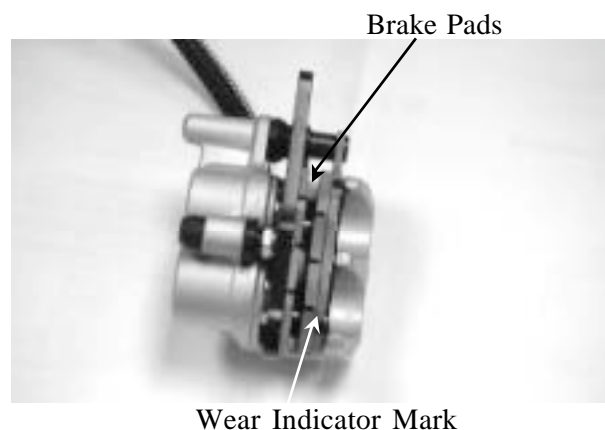


### INSTALLATION

Install the brake caliper to the rear fork and tighten the two bolts.

**Torque:** 24.5\_ 34.3N-m

Connect the brake fluid tube to the brake caliper and tighten the fluid tube bolt.  
Fill the brake reservoir with the specified brake fluid and bleed air from the brake system. (⇒14-10)

\* When installing the brake fluid tube, be sure to install the two copper sealing washers.

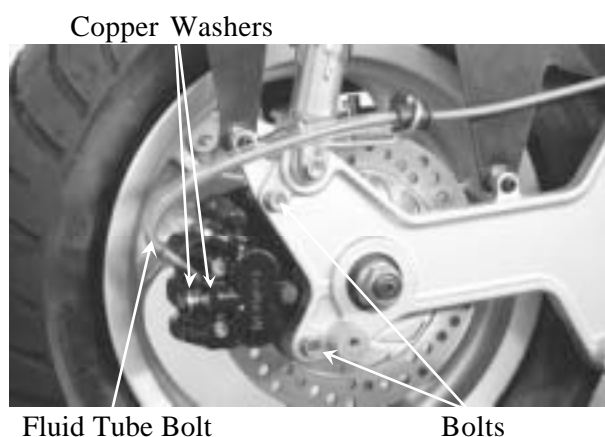



# 15. REAR BRAKE/REAR FORK/REAR WHEEL/REAR SHOCK ABSORBER

## REAR FORK



### REMOVAL

Remove the exhaust muffler. (⇒2-6)  
Remove the rear brake caliper. (⇒15-3)  
Remove the right rear shock absorber lower mount bolt.  
Remove the rear axle nut and remove the collar.  
Remove the rear fork.  
The installation sequence is the reverse of removal.

Turn the inner race of each bearing with your finger to see if they turn smoothly and quietly.

Also check if the outer race fits tightly in the hub.


Replace the bearings if the races do not turn smoothly, quietly, or if they fit loosely in the hub.

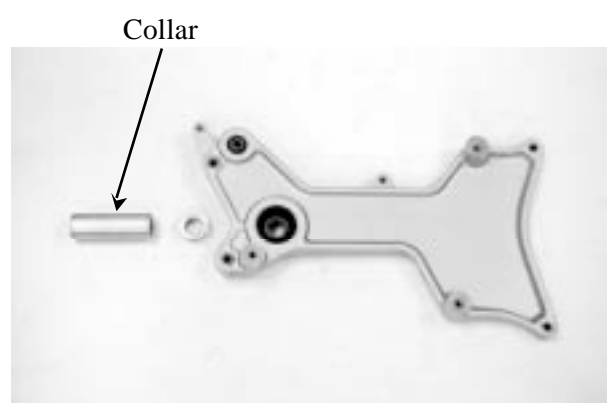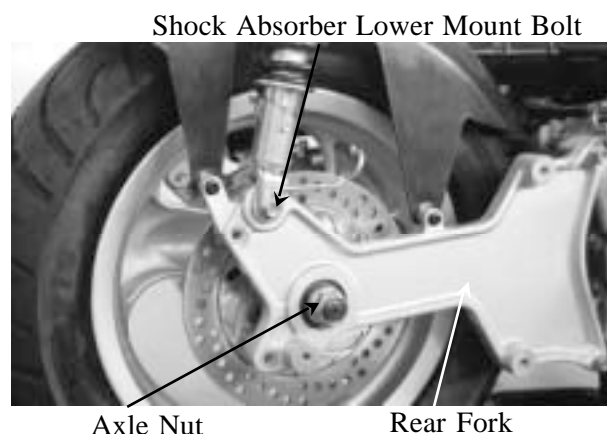

## REAR WHEEL

### REMOVAL

Remove the exhaust muffler. (⇒2-6)  
Remove the rear brake caliper. (⇒15-3)  
Remove the rear fork.  
Remove the rear axle collar.  
Remove the rear wheel.

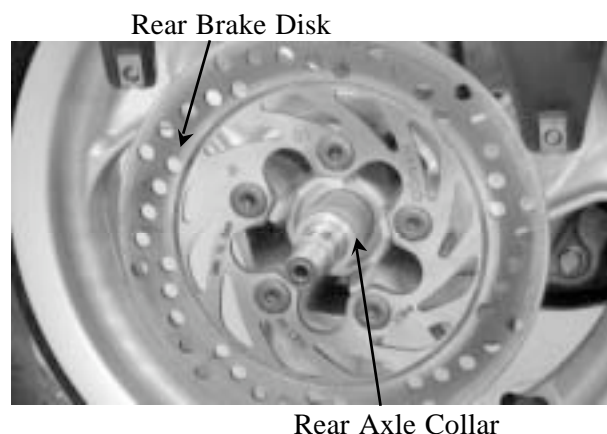


### INSPECTION

Measure the rear wheel rim runout.

#### Service Limits:

**Radial:** 2.0mm replace if over

**Axial:** 2.0mm replace if over

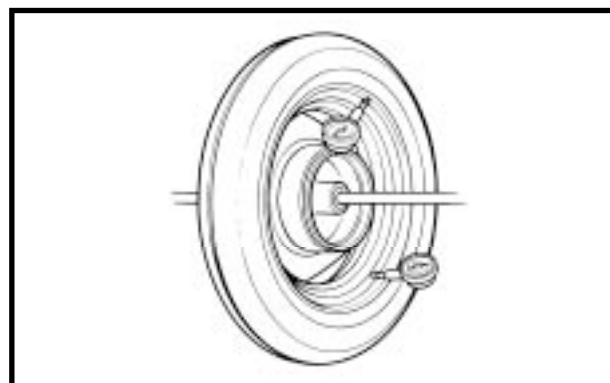

# 15. REAR BRAKE/REAR FORK/REAR WHEEL/REAR SHOCK ABSORBER

## INSTALLATION

The installation sequence is the reverse of removal.


### Torque:

Rear shock absorber lower mount bolt:

19.6\_ 29.4N-m

Rear axle nut: 78.4\_ 98N-m

Shock Absorber Lower Mount Bolt

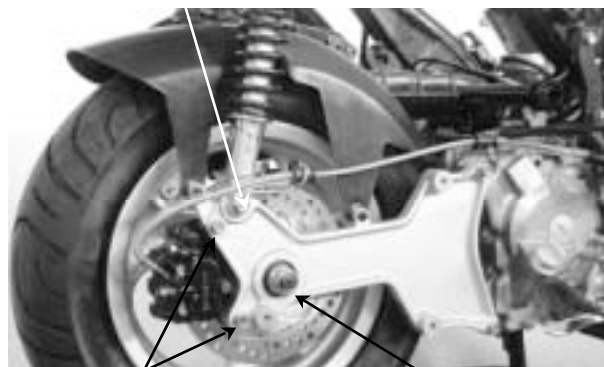

Brake Caliper Bolts

Axle Nut

## ADJUSTABLE REAR CUSHION

To suit scooter behaviour to load condition rear cushion could be adjusted in spring preload.


It is possible to adjust rear cushion in three positions:

A position “soft”


B position “medium”

C position “hard”

When you adjust rear cushion, the spring preload of rear cushions must be the same.

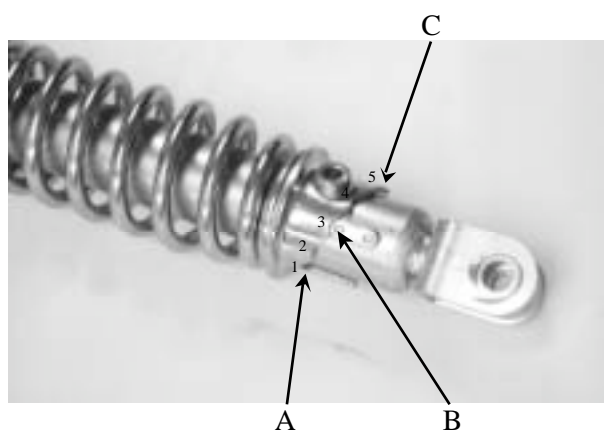

Upper Mount Bolts

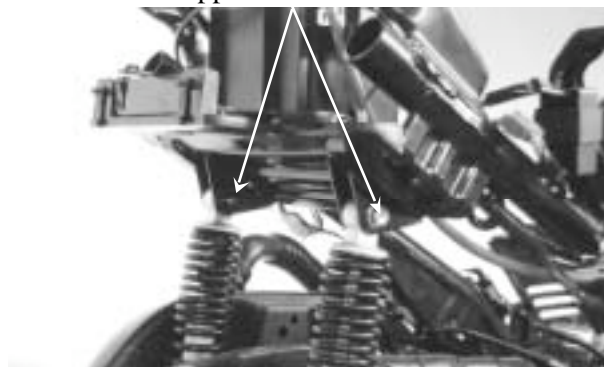

## REAR SHOCK ABSORBER

### REMOVAL

Remove the rear carrier and hand rail. (⇒2-3)

Remove the met-in box. (⇒2-3)

Remove the two air cleaner bolts.

Remove the rear shock absorber upper mount bolt.

Remove the right/left rear shock absorber upper and lower mount bolts.

Remove the right and left rear shock absorbers.

### INSPECTION

Install the rear shock absorbers in the reverse order of removal.

### Torque:

Upper Mount Bolt: 39.2N-m

Lower Mount Bolt: 19.6\_ 29.4N-m

Upper Mount Bolts



Lower Mount Bolts

## **16. BATTERY/CHARGING SYSTEM**

---

---

---

**16**

---

---

---


### **BATTERY/CHARGING SYSTEM**

---


|                                      |      |
|--------------------------------------|------|
| CHARGING SYSTEM LAYOUT-----          | 16-1 |
| SERVICE INFORMATION -----            | 16-2 |
| TROUBLESHOOTING -----                | 16-3 |
| BATTERY-----                         | 16-4 |
| CHARGING SYSTEM -----                | 16-5 |
| A.C. GENERATOR INSPECTION -----      | 16-5 |
| REGULATOR/RECTIFIER INSPECTION ----- | 16-6 |

# 16. BATTERY/CHARGING SYSTEM

## CHARGING SYSTEM LAYOUT

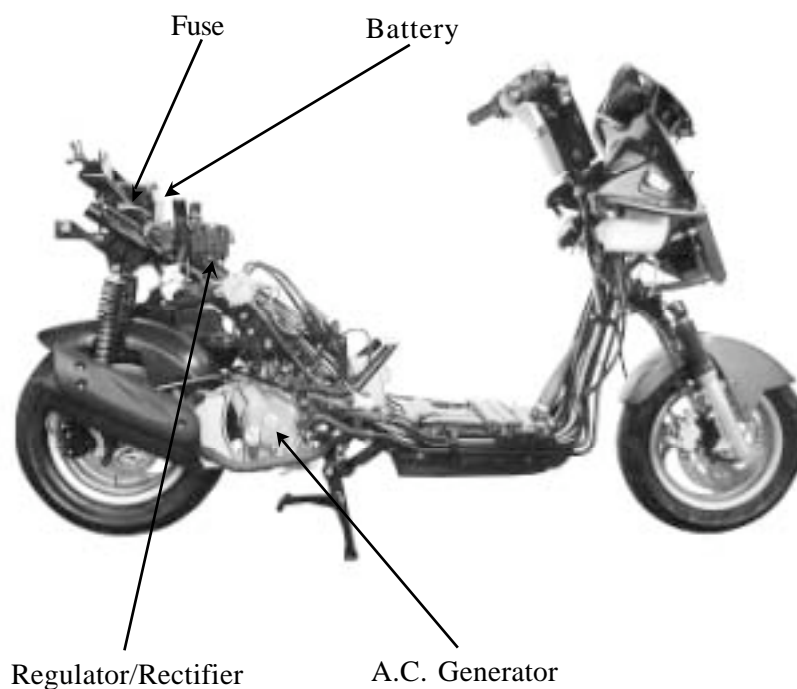

## CHARGING CIRCUIT

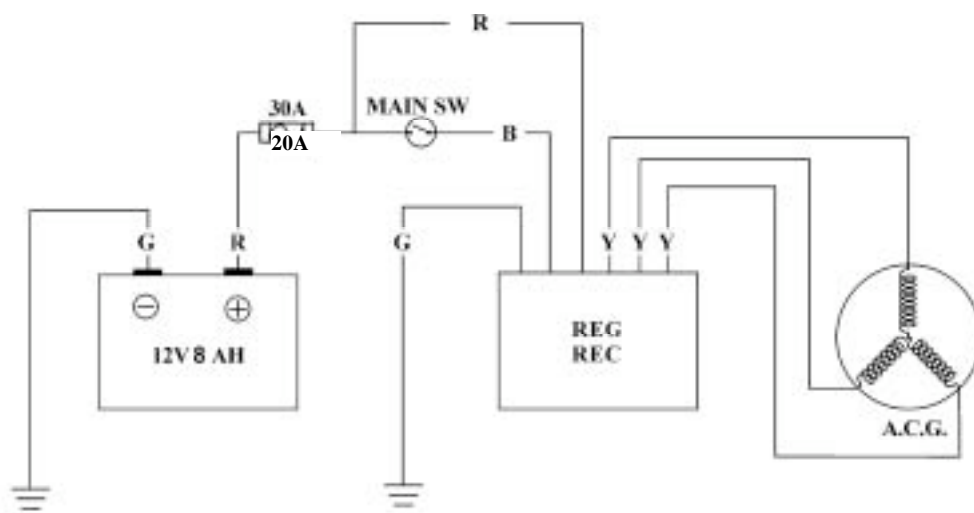

# 16. BATTERY/CHARGING SYSTEM

## SERVICE INFORMATION

### GENERAL INSTRUCTIONS

**\*** The battery electrolyte (sulfuric acid) is poisonous and may seriously damage the skin and eyes. Avoid contact with skin, eyes, or clothing. In case of contact, flush with water and get prompt medical attention

- The battery can be charged and discharged repeatedly. If a discharged battery is not used for a long time, its service life will be shortened. Generally, the capacity of a battery will decrease after it is used for 2\_ 3 years. A capacity-decreased battery will resume its voltage after it is recharged but its voltage decreases suddenly and then increases when a load is added.
- When a battery is overcharged, some symptoms can be found. If there is a short circuit inside the battery, no voltage is produced on the battery terminals. If the rectifier won't operate, the voltage will become too high and shorten the battery service life.
- If a battery is not used for a long time, it will discharge by itself and should be recharged every 3 months.
- A new battery filled with electrolyte will generate voltage within a certain time and it should be recharged when the capacity is insufficient. Recharging a new battery will prolong its service life.
- Inspect the charging system according to the sequence specified in the Troubleshooting.
- Do not disconnect and soon reconnect the power of any electrical equipment because the electronic parts in the regulator/rectifier will be damaged. Turn off the ignition switch before operation.
- It is not necessary to check the MF battery electrolyte or fill with distilled water.
- Check the load of the whole charging system.
- Do not quick charge the battery. Quick charging should only be done in an emergency.
- Remove the battery from the motorcycle for charging.
- When replacing the battery, do not use a traditional battery.
- When charging, check the voltage with an electric tester.

### SPECIFICATIONS

| Item                |                                  |               | Standard                   |
|---------------------|----------------------------------|---------------|----------------------------|
| Battery             | Capacity                         |               | 12V8AH                     |
|                     | Voltage<br>(20°C )               | Fully charged | 13.2V                      |
|                     |                                  | Undercharged  | 12.3V                      |
|                     | Charging current                 |               | STD: 0.9A Quick: 4.0A      |
|                     | Charging time                    |               | STD: 5-10hr Quick: 30min   |
| A.C. Generator      | Capacity                         |               | 160W/500rpm                |
|                     | Charging coil resistance (20°C ) |               | Yellow_ Yellow   0.6_ 1.6□ |
|                     | Charging rpm                     |               | 1300rpm max (14V)          |
|                     | Charging performance             |               | 8A min/5000rpm             |
| Regulator/Rectifier | Limit voltage                    |               | 14.5±0.5V                  |

### TESTING INSTRUMENTS

Ammeter  
Electric tester  
Tachometer

### TORQUE VALUES

Pulser coil bolt 4.9N-m  
Coil lock bolt 8.8N-m  
Flywheel nut 34.3\_ 44.1N-m

## 16. BATTERY/CHARGING SYSTEM

---

### **SPECIAL TOOLS**

Universal holder

Flywheel puller

### **TROUBLESHOOTING**

#### **No power**

- Dead battery
- Disconnected battery cable
- Fuse burned out
- Faulty ignition switch

#### **Low power**

- Weak battery
- Loose battery connection
- Charging system failure
- Faulty regulator/rectifier

#### **Intermittent power**

- Loose battery cable connection
- Loose charging system connection
- Loose connection or short circuit in ignition system

#### **Charging system failure**

- Loose, broken or shorted wire or connector
- Faulty regulator/rectifier
- Faulty A.C. generator



# 16. BATTERY/CHARGING SYSTEM

## BATTERY

Remove the seat and met-in box. (⇒2-3)

Remove the battery cover screw and the battery cover.

Remove the battery.

First disconnect the battery negative (-) cable and then the positive (+) cable.

- \* When disconnecting the battery positive (+) cable, do not touch the frame with tool; otherwise it will cause short circuit and sparks to fire the fuel.

The installation sequence is the reverse of removal.

- \* First connect the positive (+) cable and then negative (-) cable to avoid short circuit.

## BATTERY VOLTAGE INSPECTION (OPEN CIRCUIT VOLTAGE)

Disconnect the battery cables.

Measure the voltage between the battery terminals.

Fully charged : 13.2V

Undercharged : 12.3V max.

- \* Battery charging inspection must be performed with a voltmeter.

## CHARGING

Connect the charger positive (+) cable to the battery positive (+) terminal.

Connect the charger negative (-) cable to the battery negative (-) terminal.

- \*
  - Keep flames and sparks away from a charging battery.
  - Turn power ON/OFF at the charger, not at the battery terminals to prevent sparks near the battery.
  - Charge the battery according to the current specified on the battery.
  - During quick charging, the battery temperature should not exceed 45°C .

- \*
  - Quick charging should only be done in an emergency.
  - Measure the voltage 30 minutes after the battery is charged.

Charging current : Standard : 0.9A


Quick : 4A

Charging time : Standard : 5 - 10 hours

Quick : 30 minutes

After charging Open circuit voltage: 12.8V min.

Battery Cover Screw

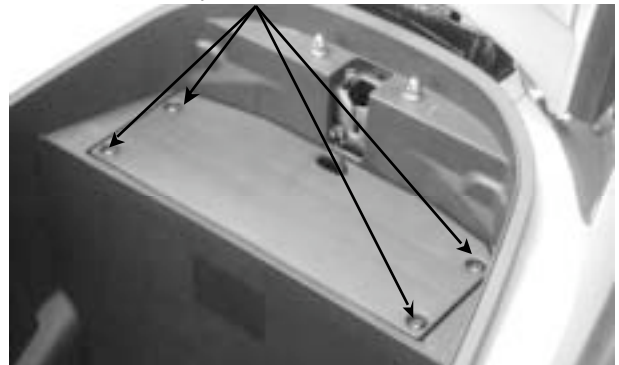

# 16. BATTERY/CHARGING SYSTEM

## CHARGING SYSTEM

### CURRENT TEST

- \* Use a fully charged battery (12.8V min.) to check the charging system.

Warm up the engine after connecting a fully charged battery.

Connect an electric tester across the battery terminals.

Disconnect the red wire from the fuse terminal and connect an ammeter between the red wire lead and the fuse terminal.

Attach a tachometer to the engine.

Start the engine and gradually increase the engine speed to measure the limit voltage and current.

**Limit Voltage/Current:** 14\_ 15V/0.5A  
max. (5000rpm max.)

If the limit voltage is not within the specified range, check the regulator/rectifier.



Red Wire



### PERFORMANCE TEST

|                  |         |         |
|------------------|---------|---------|
| Engine Speed     | 2500rpm | 5000rpm |
| Charging Current | 6A min. | 8A min. |

- \* When measuring the charging current, disconnect the black wire from the regulator/rectifier wire coupler.

If the readings do not meet the specified values, check the regulator/rectifier.

### A.C. GENERATOR INSPECTION

- \* This test can be made without removing the stator from the engine. Disconnect the yellow wire from the auto bystarter.

Remove the frame center cover.


Disconnect the A.C. generator connector.

Check the continuity between the yellow wires and ground.

There should be continuity between the yellow wires and no continuity between each yellow wire and ground.

**Resistance:**

|                |           |
|----------------|-----------|
| Yellow_ Yellow | 0.6_ 1.6Ω |
|----------------|-----------|

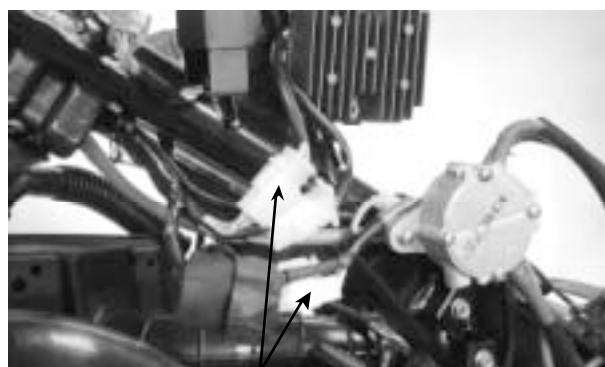


A.C. Generator Connector

# 16. BATTERY/CHARGING SYSTEM

## A.C. GENERATOR REMOVAL

A.C. generator removal (⇒ 10-3)

A.C. generator installation (⇒ 10-6)

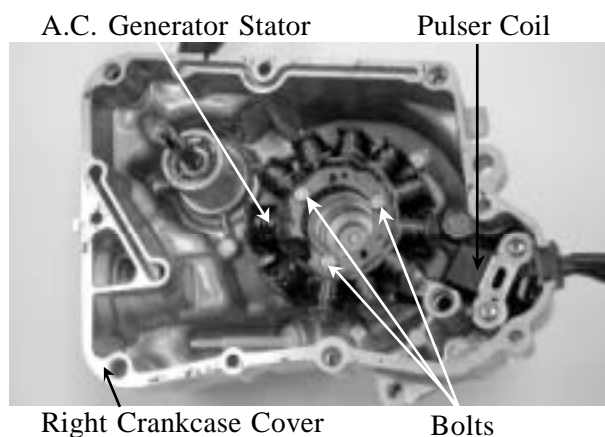

## REGULATOR/RECTIFIER


### INSPECTION

Remove the frame front cover. (⇒ 2-5)

Remove the regulator/rectifier wire coupler.  
Check the continuity between the wire terminals.


Normal Direction: Continuity

|    | (+) Probe | (-) Probe |
|----|-----------|-----------|
| I  | Yellow    | Green     |
| II | Red/Black | Yellow    |

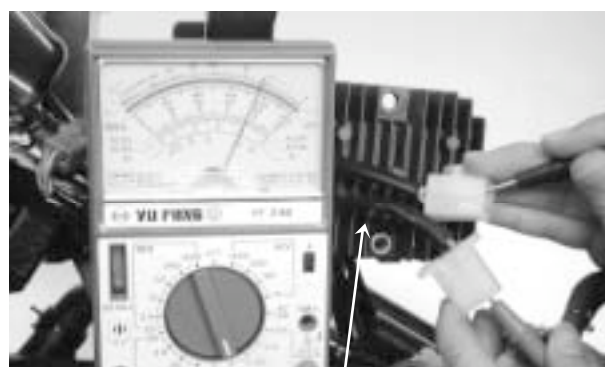

Reverse Direction: No Continuity

|    | (+) Probe | (-) Probe |
|----|-----------|-----------|
| I  | Green     | Yellow    |
| II | Yellow    | Red/Black |

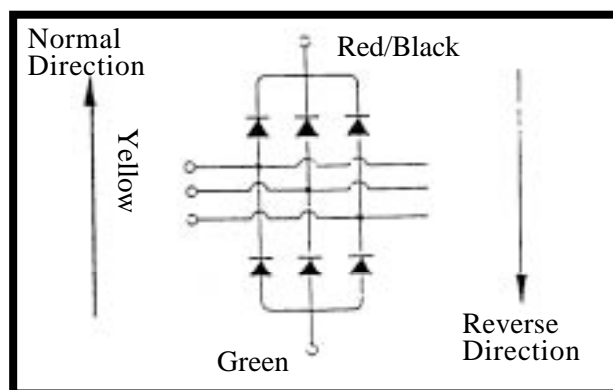


## VOLTAGE REGULATION TEST

Connect a voltmeter across the battery terminals.

Start the engine and gradually increase the engine speed.

The battery terminal voltage should be within 14.0\_ 15.0V.

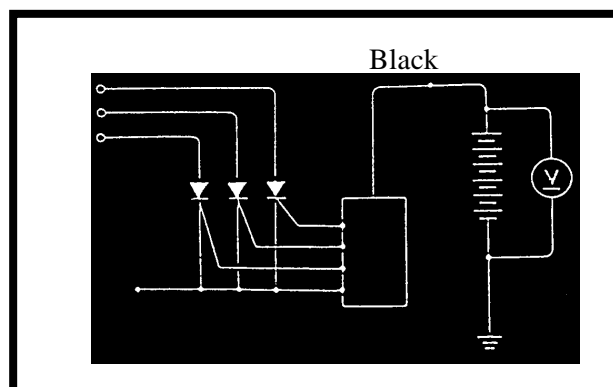

## 17. IGNITION SYSTEM

---

17

---


### IGNITION SYSTEM

---


|                                      |      |
|--------------------------------------|------|
| IGNITION SYSTEM LAYOUT .....         | 17-1 |
| SERVICE INFORMATION .....            | 17-2 |
| TROUBLESHOOTING .....                | 17-2 |
| SPARK PLUG .....                     | 17-3 |
| IGNITION COIL INSPECTION .....       | 17-3 |
| A.C. GENERATOR INSPECTION .....      | 17-4 |
| CDI UNIT RESISTANCE INSPECTION ..... | 17-5 |

# 17. IGNITION SYSTEM

## IGNITION SYSTEM LAYOUT

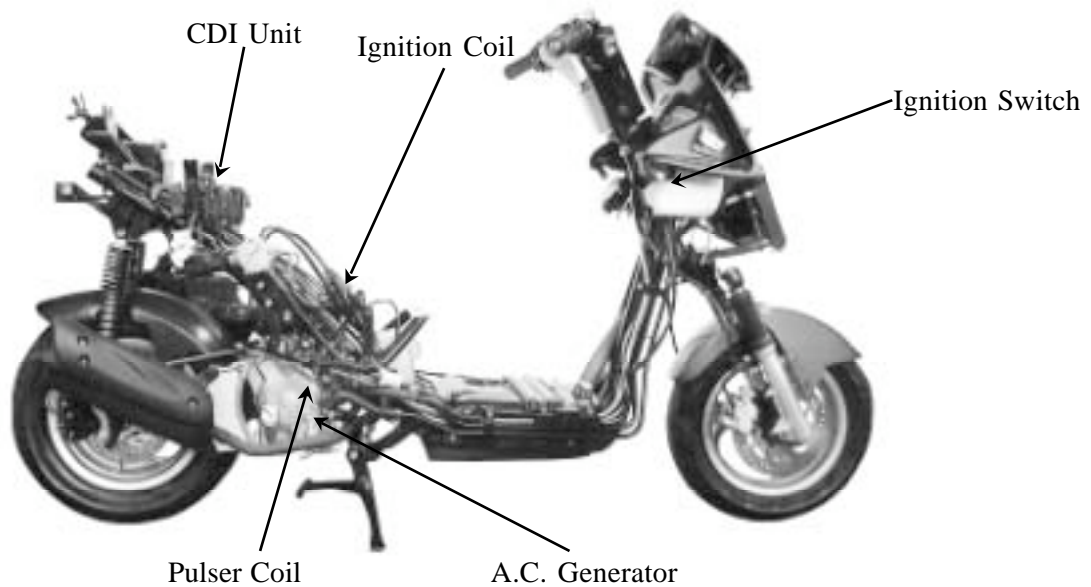

## IGNITION CIRCUIT

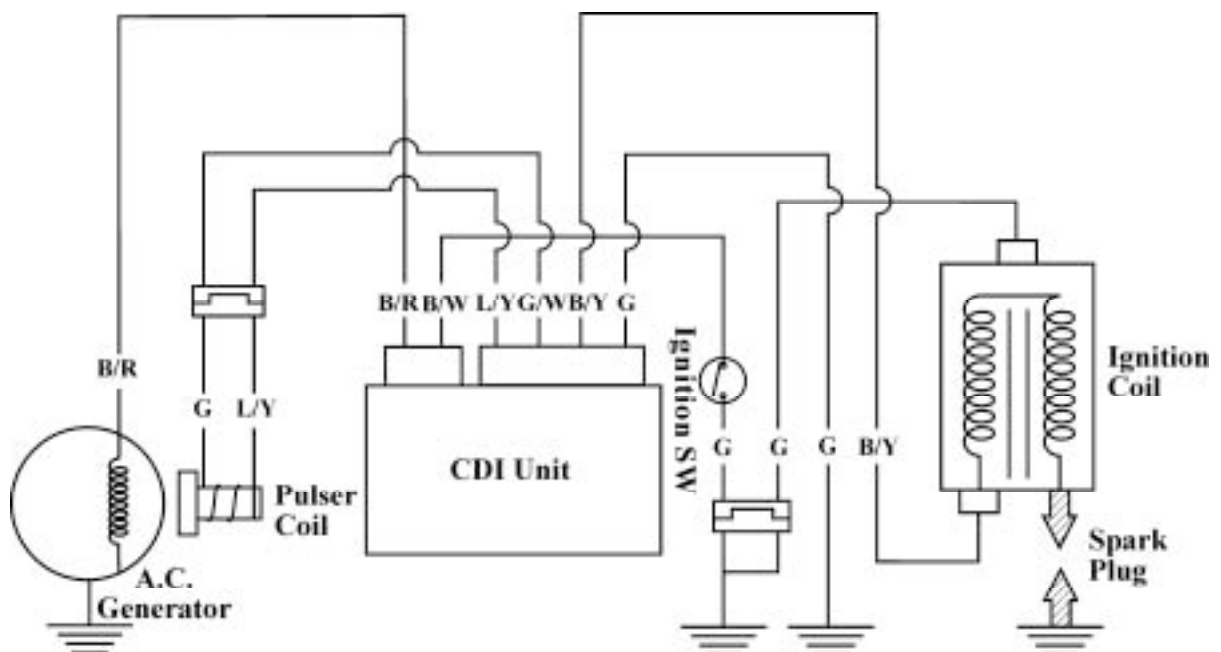

# 17. IGNITION SYSTEM

## SERVICE INFORMATION

### GENERAL INSTRUCTIONS

- Check the ignition system according to the sequence specified in the Troubleshooting. (⇒ 1-28)
- The ignition system adopts CDI unit and the ignition timing cannot be adjusted.
- If the timing is incorrect, inspect the CDI unit and A.C. generator and replace any faulty parts.  
Inspect the CDI unit with a CDI tester
- Loose connector and poor wire connection are the main causes of faulty ignition system. Check each connector before operation.
- Use of spark plug with improper heat range is the main cause of poor engine performance.
- The inspections in this section are focused on maximum voltage. The inspection of ignition coil resistance is also described in this section.
- Inspect the ignition switch according to the continuity table specified in page 20-3.
- Inspect the spark plug referring to Section 3.
- Remove the A.C. generator and pulser coil referring to Section 10.

### SPECIFICATIONS

| Item                                    |                          |                  | Standard                     |
|---|--------------------------|------------------|------------------------------|
| Spark plug                              | Standard type            |                  | NGK DP7EA9                   |
|   | Hot type                 |                  | NGK DP6EA9                   |
|   | Cold type                |                  | NGK DP8EA9                   |
| Spark plug gap                          |                          |                  | 0.8_ 0.9mm                   |
| Ignition timing                         | “F” mark<br>Full advance |                  | BTDC 10°±1.5°<br>BTDC 27°±2° |
| Ignition coil resistance<br>(20℃ )      | Primary coil             |                  | 0.16_ 1□                     |
|   | Secondary<br>coil        | without plug cap | 3.6_ 4.6K□                   |
|   |                          | with plug cap    | 7.6_ 9.6K□                   |
| Pulser coil resistance (20℃ )           |                          |                  | 50_ 170□                     |
| Exciter coil resistance (20℃ )          |                          |                  | 50_ 350□                     |
| Ignition coil primary side max. voltage |                          |                  | 244V                         |
| Pulser coil max. voltage                |                          |                  | 10.5V                        |
| Exciter coil max. voltage               |                          |                  | 244V                         |

### TESTING INSTRUMENT

Electric tester

### TROUBLESHOOTING

#### No spark at plug

- Faulty spark plug
- Poorly connected, broken or shorted wire
- Faulty ignition switch
- Faulty ignition coil
- Faulty CDI unit
- Faulty A.C. generator

#### Engine starts but turns poorly

- Ignition primary circuit
  - Faulty ignition coil
  - Poorly connected wire or connector
  - Poorly contacted ignition switch
- Ignition secondary circuit
  - Faulty ignition coil
  - Faulty spark plug
  - Faulty high-tension wire
  - Poorly insulated plug cap
- Improper ignition timing
  - Faulty A.C. generator
  - Stator not installed properly
  - Faulty CDI unit




# 17. IGNITION SYSTEM

## SPARK PLUG

For spark plug inspection and adjustment, refer to page 3-5.

## IGNITION COIL INSPECTION


Remove the seat and met-in box. (⇒2-3)  
Remove the ignition coil

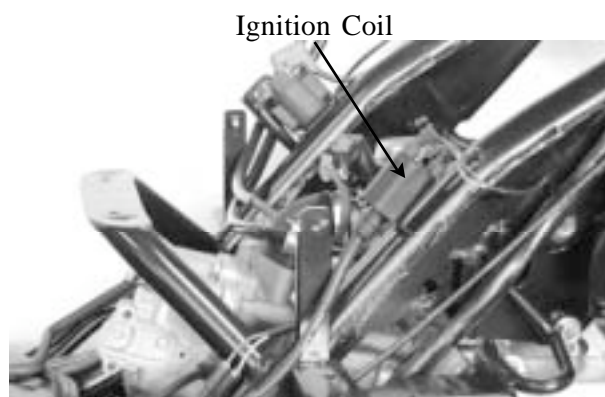

## IGNITION COIL CONTINUITY TEST

Inspect the continuity of the ignition coil, primary coil and secondary coil.


\* This is a general test. Accurate ignition coil test must be performed with a CDI tester.

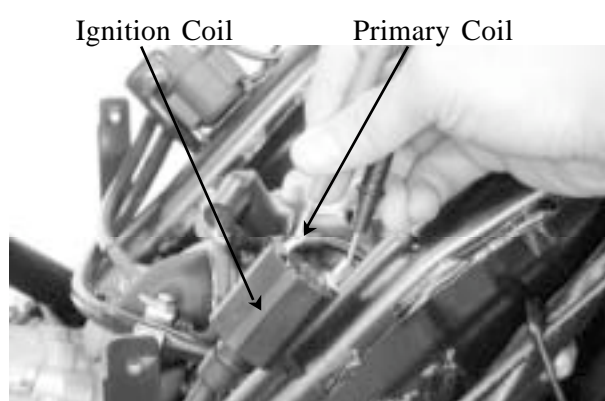

Measure the ignition coil resistances at 20°C .

## SECONDARY COIL WITH PLUG CAP

|                                 |            |
|---------------------------------|------------|
| Primary coil                    | 0.16_ 1Ω   |
| Secondary coil without plug cap | 3.4_ 4.6KΩ |
| Secondary coil with plug cap    | 7.6_ 9.6KΩ |

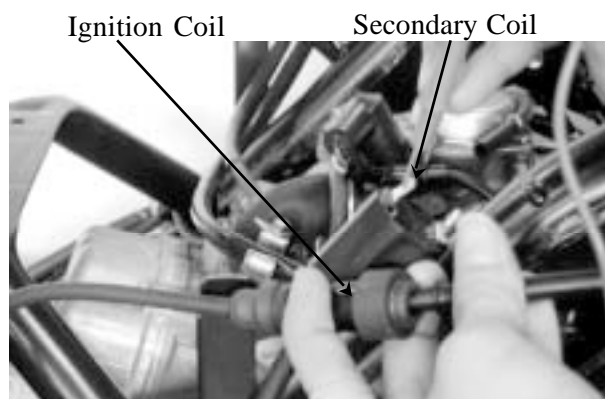

## SECONDARY COIL WITHOUT PLUG CAP



# 17. IGNITION SYSTEM

## A .C. GENERATOR INSPECTION

### EXCITER COIL/PULSER COIL INSPECTION

\* This test is performed with the stator installed in the engine.

Remove the frame right cover. (⇒ 2-4)  
Disconnect the A.C. generator connector.  
Measure the exciter coil resistance between the black/red wire terminal and ground.

|            |        |     |      |
|------------|--------|-----|------|
| Black/red_ | Ground | 50_ | 250Ω |
|------------|--------|-----|------|


\* Measure the resistance in the XΩ range.

For A.C. generator removal/installation, refer to pages 10-3 and 10-6.  
Disconnect the pulser coil wire coupler.  
Measure the pulser coil resistance between the blue/white and green/white wire terminals.

|             |             |     |      |
|-------------|-------------|-----|------|
| Blue/white_ | Green/white | 50_ | 170Ω |
|-------------|-------------|-----|------|



A.C. Generator Connector

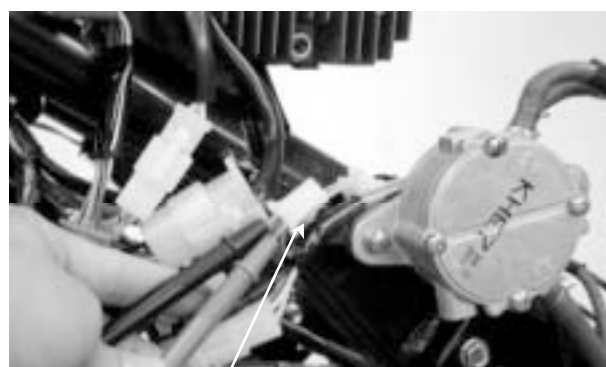

Pulser Coil Wire Coupler

# 17. IGNITION SYSTEM


## CDI UNIT

### RESISTANCE INSPECTION

Measure the resistance between the terminals.  
Replace the CDI unit if the readings are not within the specifications in the table below.

**\***

- Due to the semiconductor in circuit, it is necessary to use a specified tester for accurate testing. Use of an improper tester in an improper range may give false readings.
- Use a Sanwa Electric Tester (07308-0020000) or Kowa Electric Tester (TH-5H).
- In this table, “Needle swings then returns” indicates that there is a charging current applied to a condenser. The needle will then remain at “ $\infty$ ” unless the condenser is discharged.

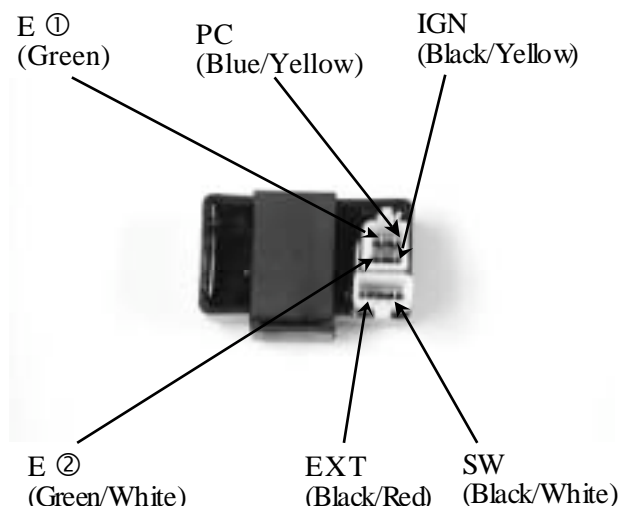

Use the x K $\square$  range for the Sanwa Tester.

Use the x 100 $\square$  range for the Kowa Tester.

Unit: K $\square$

| (+)Probe<br>(-)Probe              | SW<br>(Black/White) | EXT<br>(Black/Red) | PC<br>(Blue/Yellow) | E ① ②<br>(Green •<br>Green/White) | IGN<br>(Black/Yellow) |
|-----------------------------------|---------------------|--------------------|---------------------|-----------------------------------|-----------------------|
| SW<br>(Black/White)               |                     | $\infty$           | $\infty$            | $\infty$                          | $\infty$              |
| EXT<br>(Black/Red)                | 1-10                |                    | 100-200             | 250-450                           | $\infty$              |
| PC<br>(Blue/Yellow)               | 50-90               | 30-100             |                     | 20-80                             | $\infty$              |
| E ① ②<br>(Green •<br>Green/White) | 5-20                | 1-10               | 5-40                |                                   | $\infty$              |
| IGN<br>(Black/Yellow)             | $\infty$            | $\infty$           | $\infty$            | $\infty$                          |                       |

## 18. STARTING SYSTEM

---

18

---


### STARTING SYSTEM

---


|                                |      |
|--------------------------------|------|
| STARTING SYSTEM LAYOUT .....   | 18-1 |
| SERVICE INFORMATION .....      | 18-2 |
| TROUBLESHOOTING .....          | 18-2 |
| STARTER MOTOR .....            | 18-3 |
| STARTER CLUTCH INSPECTION..... | 18-5 |
| STARTER RELAY INSPECTION ..... | 18-6 |

# 18. STARTING SYSTEM

## STARTING SYSTEM LAYOUT

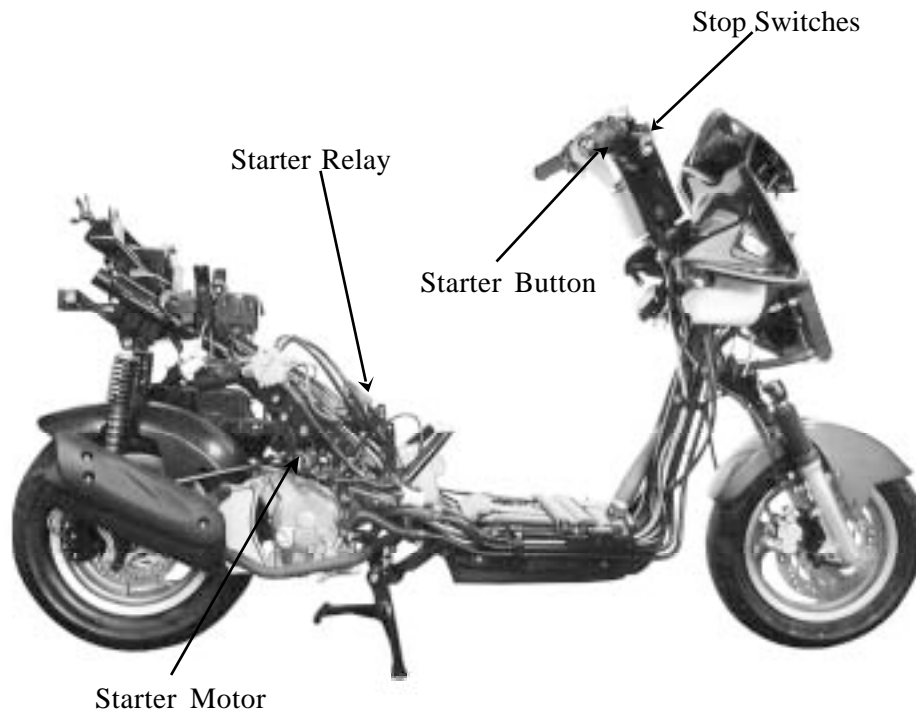

## STARTING CIRCUIT

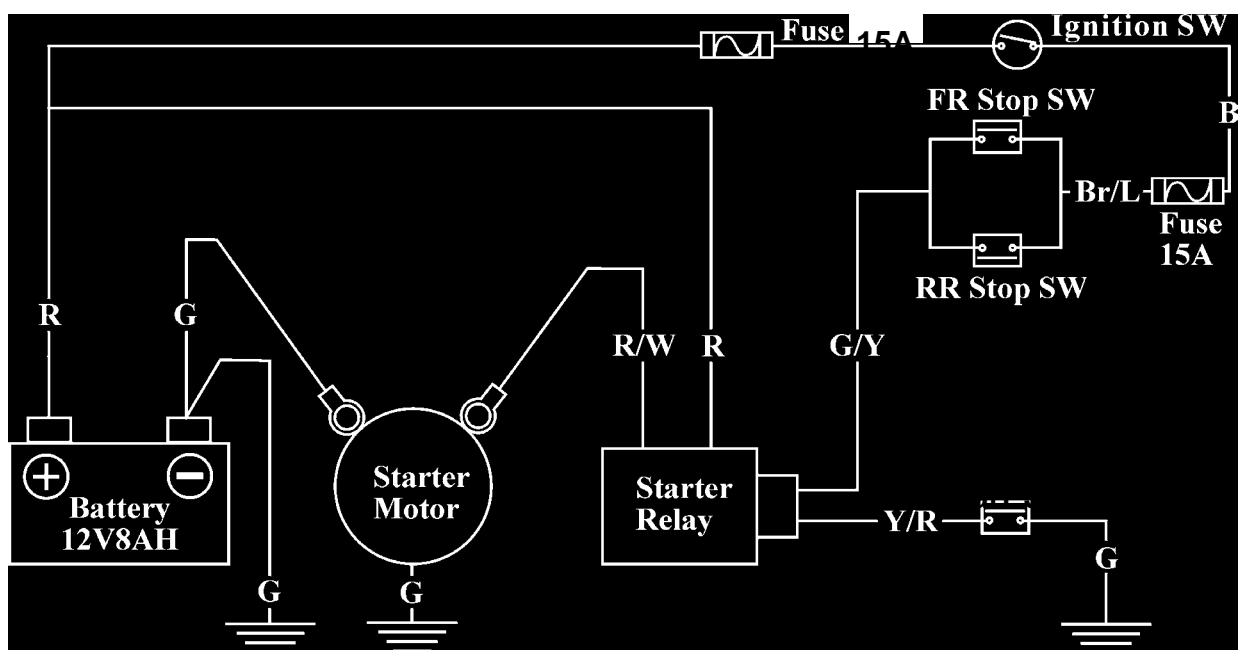

# 18. STARTING SYSTEM

---

## SERVICE INFORMATION

### GENERAL INSTRUCTIONS

- The removal of starter motor can be accomplished with the engine installed.
- For the starter clutch removal, refer to page 10-3.
- After the starter clutch is installed, be sure to add the engine oil and coolant and then bleed air from the cooling system.

### SPECIFICATIONS

| Item                       | Standard (mm) | Service Limit (mm) |
|----------------------------|---------------|--------------------|
| Starter motor brush length | 12.5mm        | 8.5mm              |

### TORQUE VALUES

|                             |      |         |
|-----------------------------|------|---------|
| Starter motor mounting bolt | 6.7_ | 10.8N-m |
| Starter motor case screw    | 2.9_ | 4.9N-m  |
| Starter clutch bolt         | 9.8_ | 13.7N-m |

### SPECIAL TOOLS

Flywheel holder  
Flywheel puller

## TROUBLESHOOTING

### Starter motor won't turn

- Fuse burned out
- Weak battery
- Faulty ignition switch
- Faulty starter clutch
- Faulty front or rear stop switch
- Faulty starter relay
- Poorly connected, broken or shorted wire
- Faulty starter motor

### Lack of power

- Weak battery
- Loose wire or connection
- Foreign matter stuck in starter motor or gear

### Starter motor rotates but engine does not start

- Faulty starter pinion
- Starter motor rotates reversely
- Weak battery



# 18. STARTING SYSTEM

## STARTER MOTOR

### REMOVAL

**\***

- Before removing the starter motor, turn the ignition switch OFF and remove the battery ground. Then, turn on the ignition switch and push the starter button to see if the starter motor operates properly.

Remove the seat, met-in box and frame center cover. (⇒2-3)

Remove the waterproof rubber jacket and disconnect the starter motor cable.

Remove the two starter motor mounting bolts and the motor.

### DISASSEMBLY

Remove the two starter motor case screws, front cover, rear cover, motor case and other parts.

### INSPECTION


Inspect the removed parts for wear, damage or discoloration. Replace if necessary. Clean the commutator if there is metal powder between the segments.

Check for continuity between pairs of the commutator segments and there should be continuity.

Also, make a continuity check between individual commutator segments and the armature shaft. There should be no continuity.



Starter Motor Cable

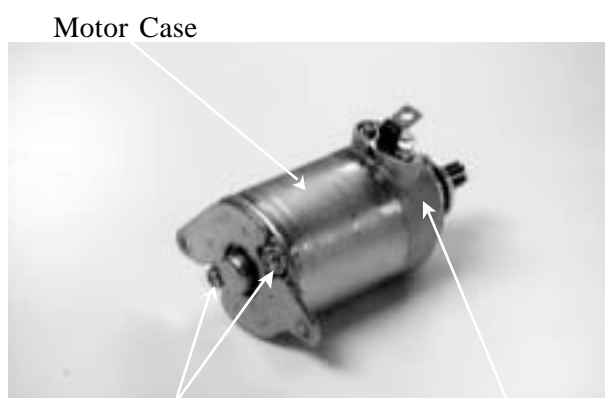


Motor Case

Case Screws

Front Cover



Commutator

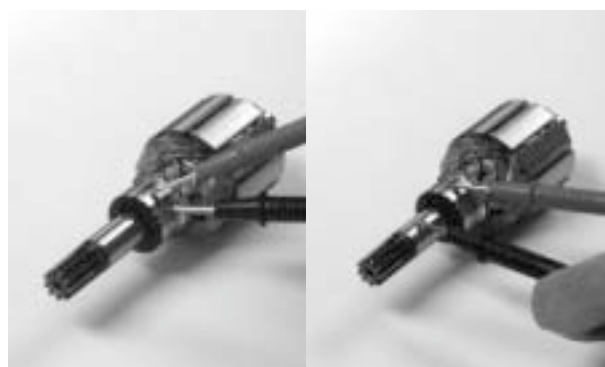


## 18. STARTING SYSTEM

### STARTER MOTOR CASE CONTINUITY CHECK

Check to confirm that there is no continuity between the starter motor wire terminal and the motor front cover.

Also check for the continuity between the wire terminal and each brush.

Replace if necessary.

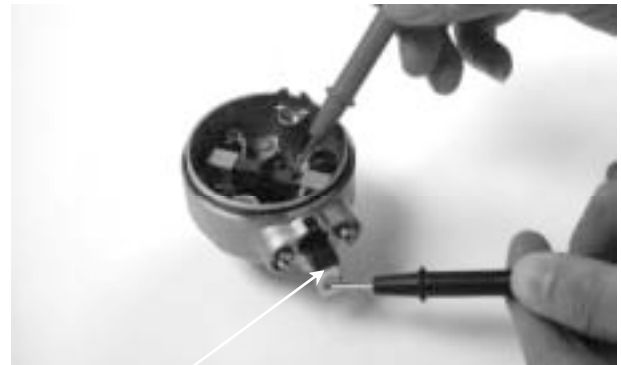

Wire Terminal

Measure the length of the brushes.

**Service Limit:** 8.5mm replace if below




Check for continuity between the brushes. If there is continuity, replace with new ones.



Check if the needle bearing in the front cover turns freely and has no excessive play.

Replace if necessary.

Check the dust seal for wear or damage.

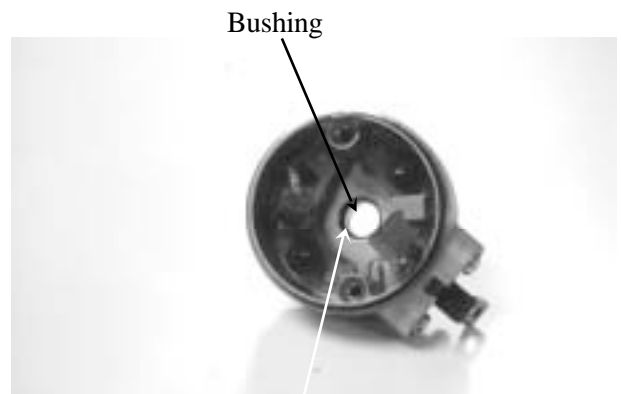


Bushing

Dust Seal

## 18. STARTING SYSTEM


### ASSEMBLY

Apply grease to the dust seal in the front cover.  
Install the brushes onto the brush holders.  
Apply a thin coat of grease to the two ends of the armature shaft.  
Insert the commutator into the front cover.

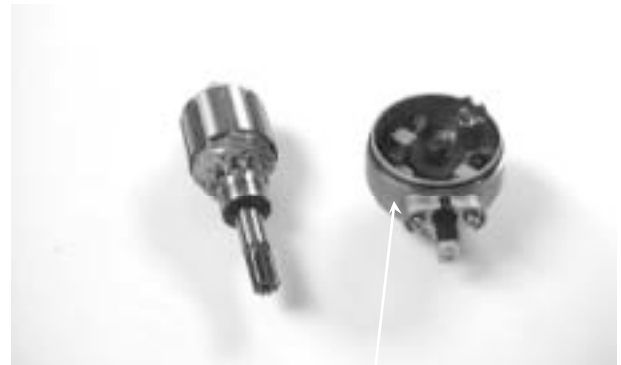

Front Cover


Install a new O-ring to the front cover.  
Install the starter motor case, aligning the tab on the motor case with the groove on the front cover.  
Tighten the starter motor case screws.

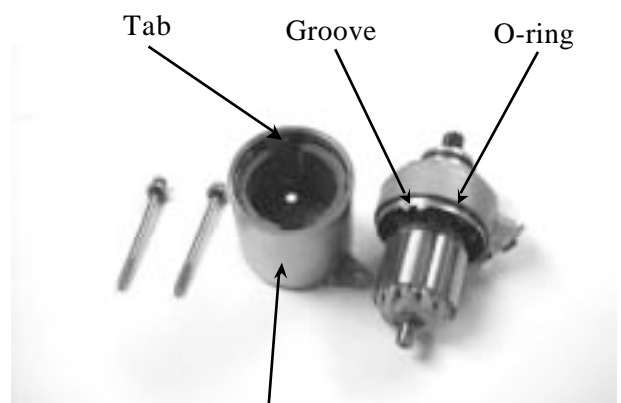

Motor Case

### INSTALLATION

Connect the starter motor cable.  
Check the O-ring for wear or damage and replace if necessary.  
Apply grease to the O-ring and install it to the starter motor.  
Tighten the two mounting bolts.

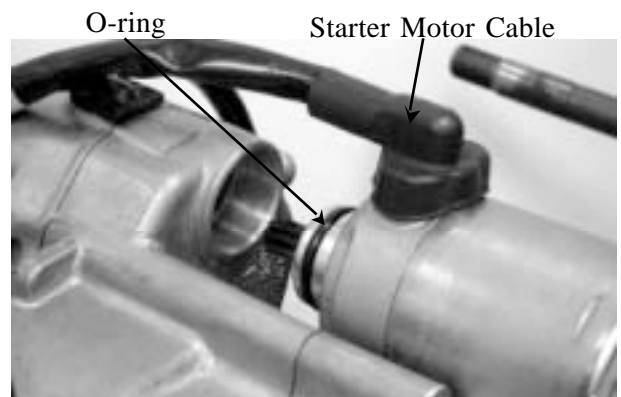

### STARTER CLUTCH INSPECTION

Refer to pages 10-4 and 10-5 for the starter clutch removal, inspection and installation.



## 18. STARTING SYSTEM

---

### STARTER RELAY INSPECTION

Disconnect the starter relay wire connector. Check for continuity between the yellow/red wire terminal and ground.

There should be continuity when the starter button is depressed.

If there is no continuity, check the starter button for continuity and inspect the wire.




Yellow/Red Wire

### OPERATION TEST

Connect the electric tester to the starter relay larger terminals that connect to the battery positive cable and the starter motor cable. Connect a fully charged battery across the starter relay yellow/red and green/yellow wire terminals.

Check for continuity between the starter relay large terminals. The relay is normal if there is continuity.

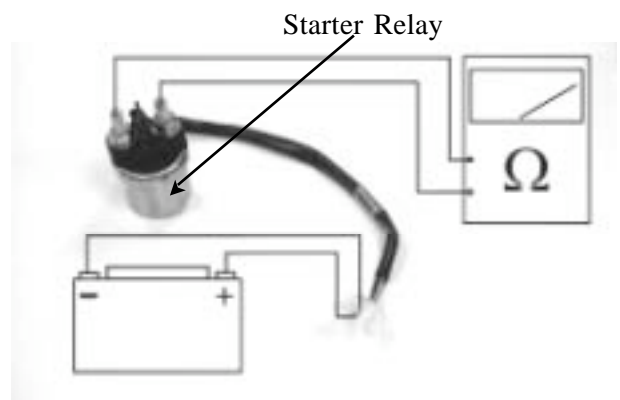


---

**SWITCHES/HORN/FUEL UNIT/THERMOSTATIC  
SWITCH/TEMPERATURE GAUGE/ INSTRUMENTS/LIGHTS**

---

|                                  |      |
|----------------------------------|------|
| ELECTRICAL EQUIPMENT LAYOUT----- | 19-1 |
| SERVICE INFORMATION -----        | 19-2 |
| TROUBLESHOOTING -----            | 19-2 |
| SWITCHES -----                   | 19-3 |
| HORN INSPECTION -----            | 19-5 |
| FUEL UNIT-----                   | 19-5 |
| THERMOSTATIC SWITCH -----        | 19-6 |
| TEMPERATURE GAUGE -----          | 19-6 |
| INSTRUMENTS-----                 | 19-7 |
| LIGHTS -----                     | 19-8 |
| HEATER WIRING DIAGRAM -----      | 19-9 |

**ELECTRICAL EQUIPMENT LAYOUT**

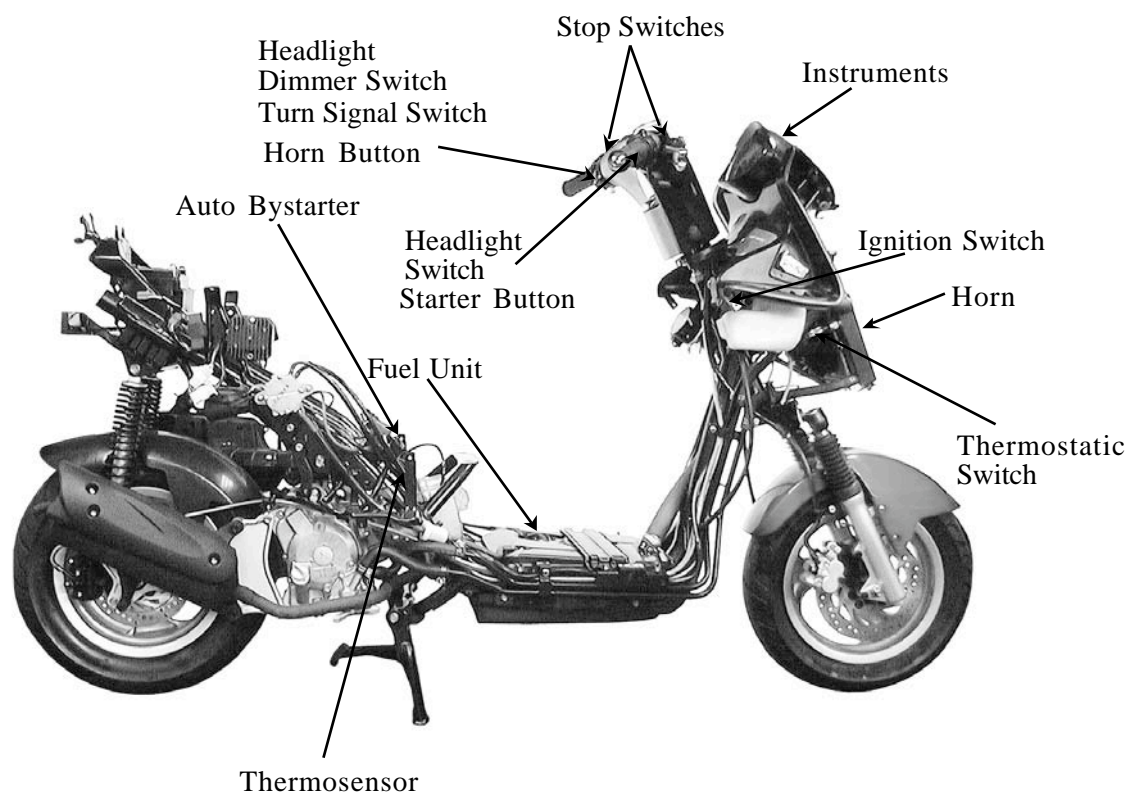



## SERVICE INFORMATION

### GENERAL INSTRUCTIONS

- After installation of each switch, a continuity check must be performed. A continuity check can usually be made without removing the part from the motorcycle.

### TESTING INSTRUMENT

Electric tester

### SPECIAL TOOL

Fuel unit wrench

## TROUBLESHOOTING

### Lights do not come on when ignition switch is "ON"

- Burned bulb
- Faulty switch
- Poorly connected, broken or shorted wire

### Temperature gauge does not register correctly

- Faulty temperature gauge
- Faulty thermosensor
- Broken or shorted wire between temperature gauge and thermosensor

### Fuel gauge pointer does not move or register correctly

- Faulty fuel gauge
- Faulty fuel unit
- Poorly connected wire between fuel gauge and fuel unit
- Fuse burned out

## SPECIFICATIONS


|                             |               |
|-----------------------------|---------------|
| Fuse                        | 20A, 15A, 10A |
| Headlight bulb              | 12V 60W/55W   |
| Turn signal light bulb      | 12V 10W       |
| Stoplight/taillight         | 12V 21/5W     |
| License plate light         | 12V 5W        |
| Instrument light            | 12V 1.7W      |
| Position light              | 12V 5W        |
| Turn signal indicator light | 12V 3.4W      |

## SWITCHES

### IGNITION SWITCH INSPECTION

Remove the frame front covers. (⇒2-5)  
Disconnect the ignition switch wire couplers.  
Check for continuity between the wire terminals.


| Color<br>Position | Red2 | Black/Wh<br>ite | Green | Black |
|-------------------|------|-----------------|-------|-------|
| PARK              |      |                 |       |       |
| LOCK              |      | ○ — ○           |       |       |
| OFF               |      | ○ — ○           |       |       |
| ON                | ○ —  |                 |       | ○     |

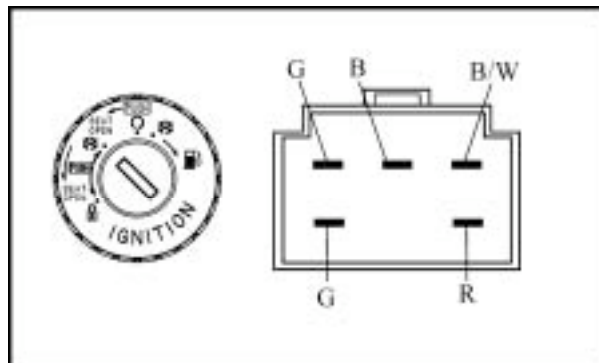

### HEADLIGHT SWITCH INSPECTION

Remove the frame front covers. (⇒2-5)  
Disconnect the headlight switch wire couplers.  
Check for continuity between the wire terminals.


| Color<br>Position | White /<br>Blue | Brown/<br>Blue | Brown | Brown/<br>White |
|-------------------|-----------------|----------------|-------|-----------------|
| ■                 |                 |                |       |                 |
| P                 |                 | ○ — ○          | ○ — ○ | ○               |
| H                 | ○ —             | ○ —            | ○ —   |                 |

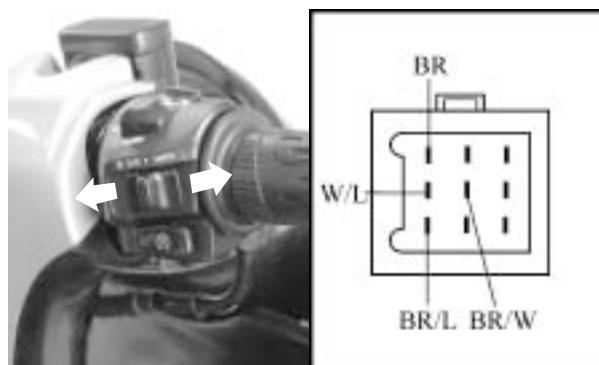

### STARTER SWITCH INSPECTION

Remove the frame front covers. (⇒2-5)  
Disconnect the starter switch wire couplers.  
Depress the starter button and check for continuity between the wire terminals.


| Color<br>Position | Yellow/Red | Green |
|-------------------|------------|-------|
| FREE              |            |       |
| PUSH              | ○ —        | ○     |

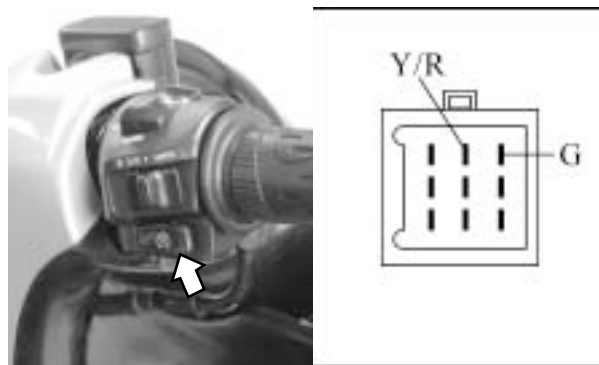

### HAZARD SWITCH

Remove the front upper cover. (⇒2-5)  
Disconnect the headlight switch wire couplers.  
Check for continuity between the hazard switch wire terminals.

| Color<br>Position | Yellow/Black | Gray |
|-------------------|--------------|------|
| OFF               |              |      |
| ON                | ○ —          | ○    |

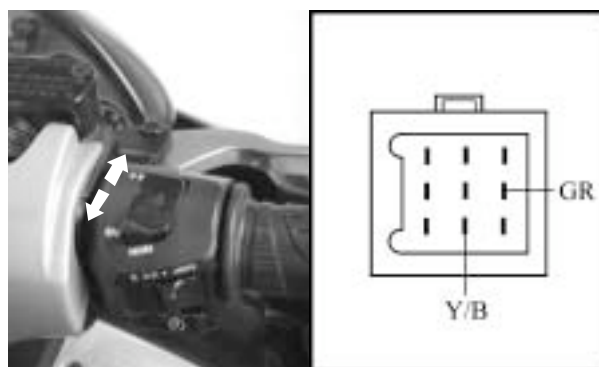

# 19. SWITCHES HORN/FUEL UNIT/THERMOSTATIC SWITCH /TEMPERATURE GAUGE/INSTRUMENTS/LIGHTS


## HORN BUTTON INSPECTION

Remove the frame front covers. (⇒2-5)

Disconnect the horn wire couplers.

Depress the horn button and check for continuity between the wire terminals.

| Color<br>Position | Light Green | Brown/Blue |
|-------------------|-------------|------------|
| FREE              |             |            |
| PUSH              | ○ —         | — ○        |

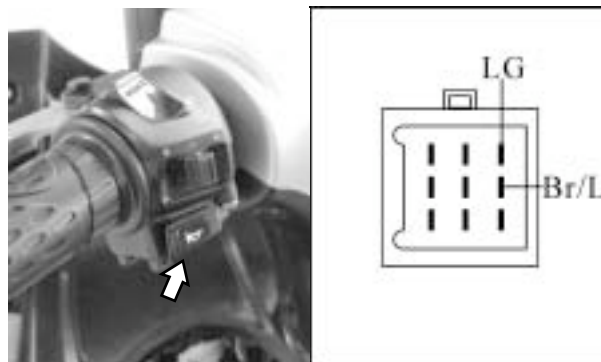

Horn Button


## TURN SIGNAL SWITCH INSPECTION

Remove the frame front covers. (⇒2-5)

Disconnect the turn signal switch wire couplers and turn on the turn signal switch.

Check for continuity between the wire terminals.

| Color<br>Position | Light Blue/<br>White | Gray | Orange/<br>White |
|-------------------|----------------------|------|------------------|
| L                 |                      | ○ —  | — ○              |
| N                 |                      |      |                  |
| R                 | ○ —                  | — ○  |                  |

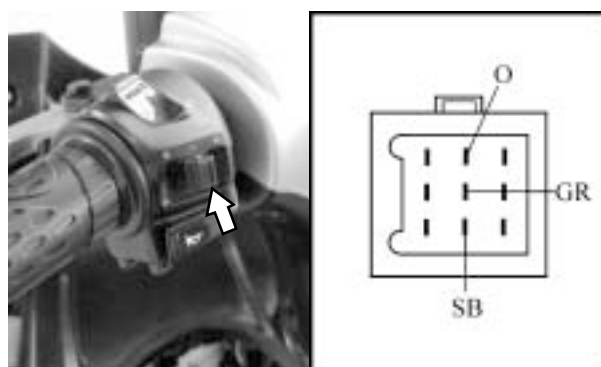

Turn Signal Switch


## DIMMER SWITCH INSPECTION

Remove the frame front covers. (⇒2-5)

Disconnect the headlight dimmer switch wire couplers.

Turn on the dimmer switch and check for continuity between the wire terminals.

| Color<br>Position | White/<br>Blue | Blue | White | Brown/<br>Blue |
|-------------------|----------------|------|-------|----------------|
| LO                | ○ —            |      | ○     |                |
| HI                | ○ —            | ○    |       |                |
| PASSING           |                | ○ —  |       | ○              |

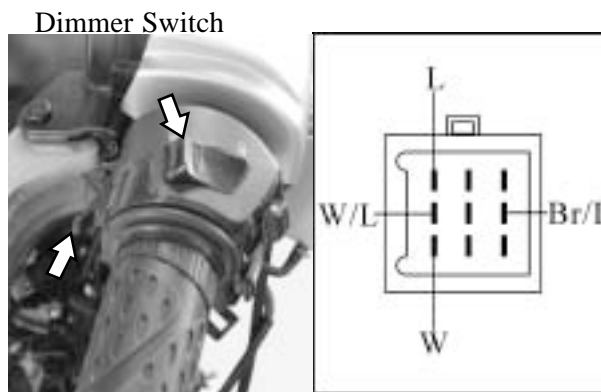

PASSING


## STOP SWITCH INSPECTION

Remove the frame front covers. (⇒2-5)

Disconnect the front/rear stop switch wire couplers.

Check for continuity between the wire terminals when the front brake lever is applied.

| Color<br>Position | Brown/Blue | Green/Yellow |
|-------------------|------------|--------------|
| FREE              |            |              |
| APPLY             | ○ —        | — ○          |

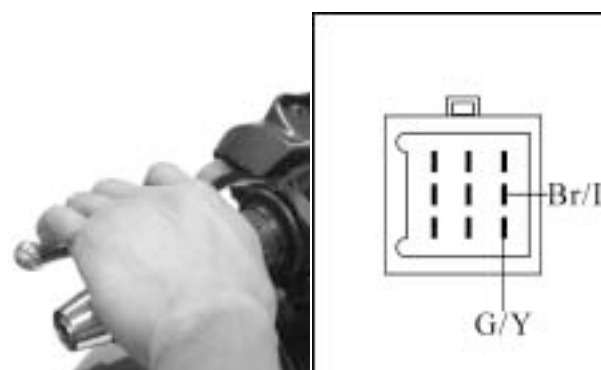

Stop Switch

## HORN INSPECTION

Remove the front upper cover. (⇒2-5)  
Disconnect the horn wire couplers.  
The horn is normal if it sounds when a 12V battery is connected across the horn wire terminals.




Horn

## FUEL UNIT

### FUEL UNIT INSPECTION

Remove the fuel unit.  
Disconnect the fuel unit wire connectors.  
Measure the resistance between the fuel unit wire terminals with the float at upper and lower positions.

| Wire Terminals | Upper     | Lower     |
|----------------|-----------|-----------|
| Y/W_ G         | 33_ 45Ω   | 500_ 850Ω |
| L/W_ G         | 400_ 700Ω | 100_ 200Ω |
| Y/W_ L/W       | 450_ 750Ω | 450_ 750Ω |

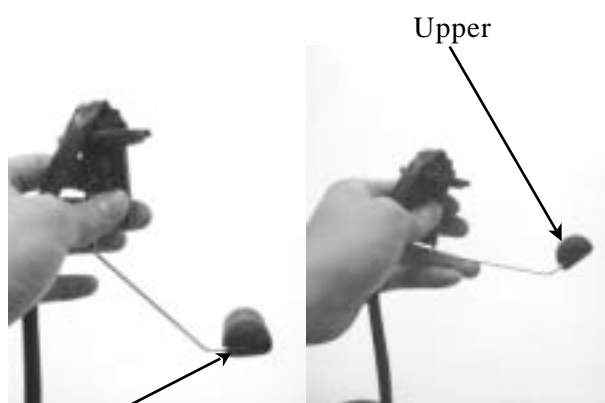

Lower

### FUEL GAUGE INSPECTION

Connect the fuel unit wire connectors and turn the ignition switch "ON".


\* Before performing the following test, operate the turn signals to determine that the battery circuit is normal.

Check the fuel gauge needle for correct indication by moving the fuel unit float up and down.

| Float Position | Needle Position |
|----------------|-----------------|
| Upper          | "F" (Full)      |
| Lower          | "E" (Empty)     |


| Wire Terminals | Needle Position |
|----------------|-----------------|
| Y/W_ G         | From E to F     |
| L/W_ G         | From F to E     |

The fuel gauge is normal if it operates as above indicated. If not, check for loosely tightened nuts, poorly connected terminals or shorted wires.

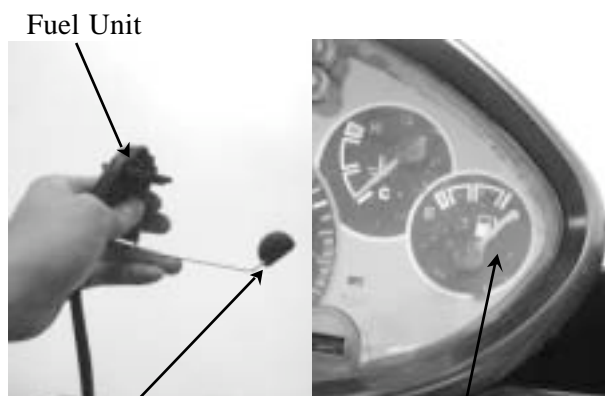

Upper

Fuel Gauge

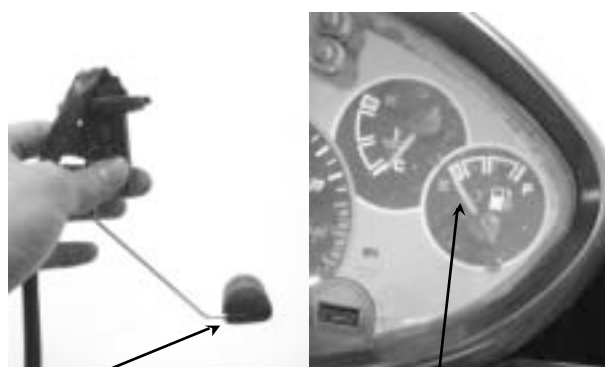

Lower

Needle moves from F to E.

### THERMOSTATIC SWITCH

#### INSPECTION

Remove the front covers. (⇒2-5)

Start and run the engine to make the water temperature reaches  $85^{\circ}\text{C}$  \_  $90^{\circ}\text{C}$  and check if the cooling fan motor operates. Lower the water temperature to  $85^{\circ}\text{C}$  and check if the fan motor stops.

If the fan motor does not start, disconnect the wires from the thermostatic switch and then connect a jumper wire between the wire harness and thermosensor wires (black and green wires).

Turn the ignition switch ON. The thermostatic switch is faulty if the cooling fan motor runs properly.

If it does not start, check for voltage between the fan motor coupler wire terminals (black \_ green).

If there is no voltage, check for the following:

- Blown or faulty fuse
- Loose terminals or connectors
- Shorted wire in the wire harness

### TEMPERATURE GAUGE

Disconnect the wire from the thermosensor and ground it to the engine.

Turn the ignition switch ON.

The temperature gauge needle should move all the way to "H".


**\***

Do not leave the thermosensor wire grounded for longer than 5 seconds or the temperature gauge will be damaged.

### HEATER CONTROLLER UNIT

#### INSPECTION

1. Open ignition switch to check if the black wire of it is enough voltage.
  2. Put the heater controller unit in refrigerator. Start engine after keeping the temperature under  $10 \pm 4^{\circ}\text{C}$ .
  3. Check if the yellow wire of heater controller unit has output voltage.
- Start engine and if the temperature of heater controller unit is under  $10 \pm 4^{\circ}\text{C}$ . Check if the white/blue wire of heater controller unit has output voltage. If it has not any voltage. It is damaged.

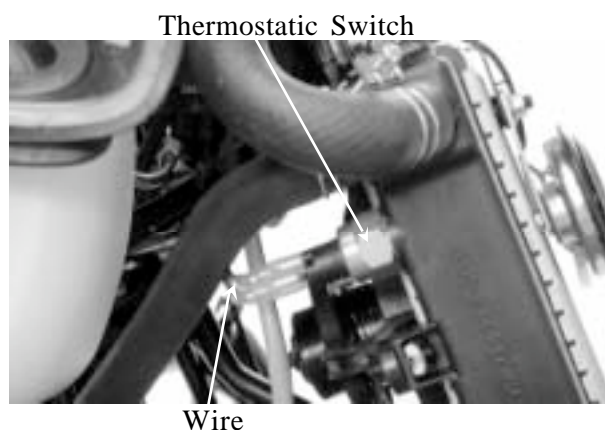





## INSTRUMENTS

### REMOVAL

Remove the front upper cover. (⇒2-5)  
Disconnect the instrument wire couplers and connectors.  
Disconnect the speedometer cable.

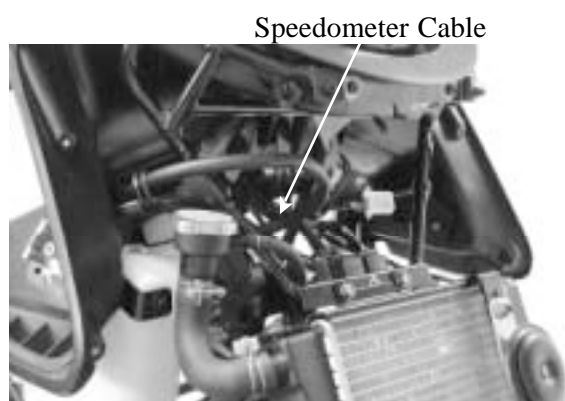


Remove the four instrument cover and leg shield screws.  
Remove the instruments.

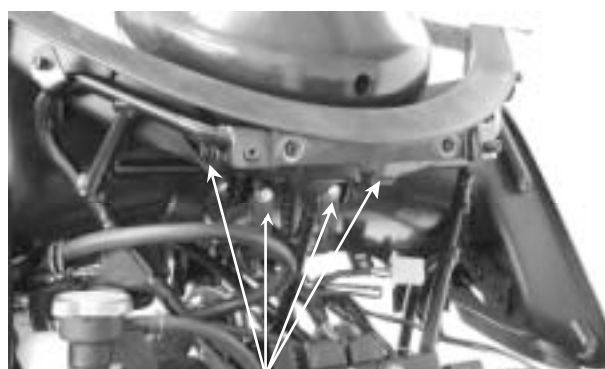

### DISASSEMBLY/ASSEMBLY

Remove the three instrument holder nuts.  
Remove the holder.  
Remove the four screws to disassemble the instruments and instrument cover .  
Assemble the instruments in the reverse order of disassembly.

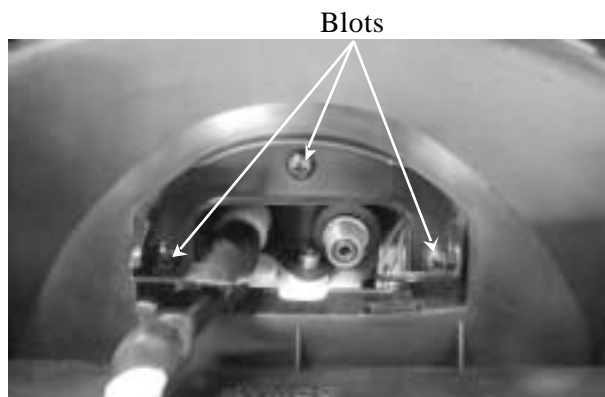

### INSTALLATION

The installation sequence is the reverse of removal.

### HAZARD INSPECTION

|     | BR | Y/B   | O     | SB    | G/Y   | G |
|-----|----|-------|-------|-------|-------|---|
| BR  | ∞  | ∞     | ∞     | ∞     | ∞     | ∞ |
| Y/B | ∞  | 6-12  | 6-12  | ∞     | 3-6   |   |
| O   | ∞  | 45-85 | 20-50 | ∞     | 25-55 |   |
| SB  | ∞  | 45-85 | 35-60 | ∞     | 25-55 |   |
| G/Y | ∞  | ∞     | ∞     | ∞     | ∞     |   |
| G   | ∞  | 9-18  | 10-25 | 10-25 | ∞     |   |






### LIGHTS

#### HEADLIGHT BULB REPLACEMENT


Remove the front upper cover. (⇒2-5)  
Disconnect the headlight and turn signal light wire couplers.  
Remove the rubber boot from the bulb socket.  
Remove the bulb socket and replace the bulb.  
Install the bulb socket, aligning the bulb socket tab with the groove.  
Install the rubber boot.  
Install the front cover in the reverse order of removal.

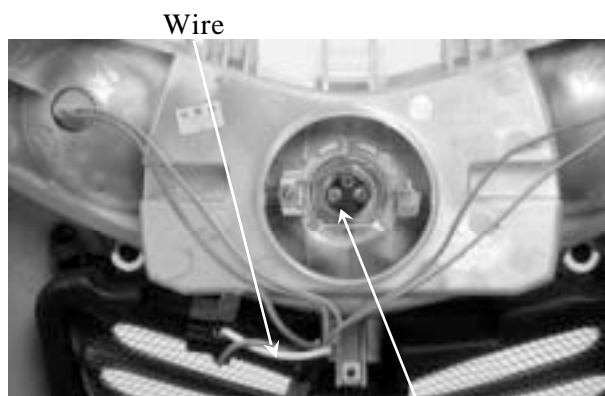

Bulb Socket

#### FRONT POSITION LIGHT BULB REPLACEMENT

Remove the front upper cover. (⇒2-5)  
Disconnect the headlight and turn signal light wire couplers.  
Remove the bulb sockets by turning them counterclockwise.  
Remove the bulbs and replace them with new ones.

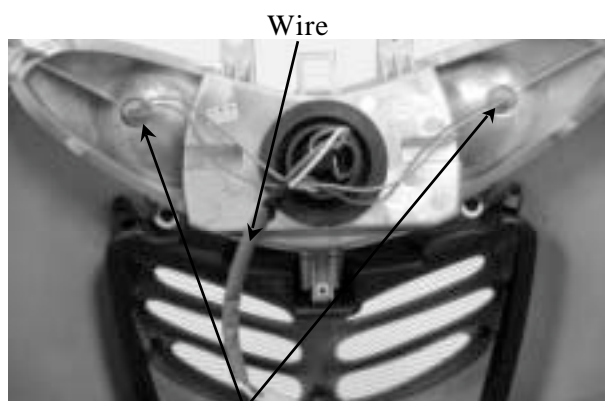

Front Position Light Bulb Sockets

#### FRONT TURN SIGNAL LIGHT BULB REPLACEMENT


Remove the one screw attaching the turn signal light shell and remove the light shell.  
Remove the turn signal fixer two screws.  
Remove the bulb protector screw.  
Remove the bulb and replace with a new one.



Screw


#### TAILLIGHT/REAR TURN SIGNAL LIGHT BULB REPLACEMENT

Remove the rear protective cover. (⇒2-3)  
Remove the two screws attaching the rear light shell and remove the light shell.  
Remove the bulbs and replace with new ones.  
The installation sequence is the reverse of removal.

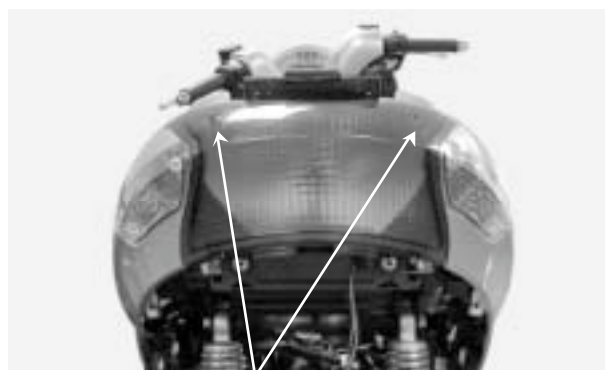

Screws

**HEATER WIRING DIAGRAM**

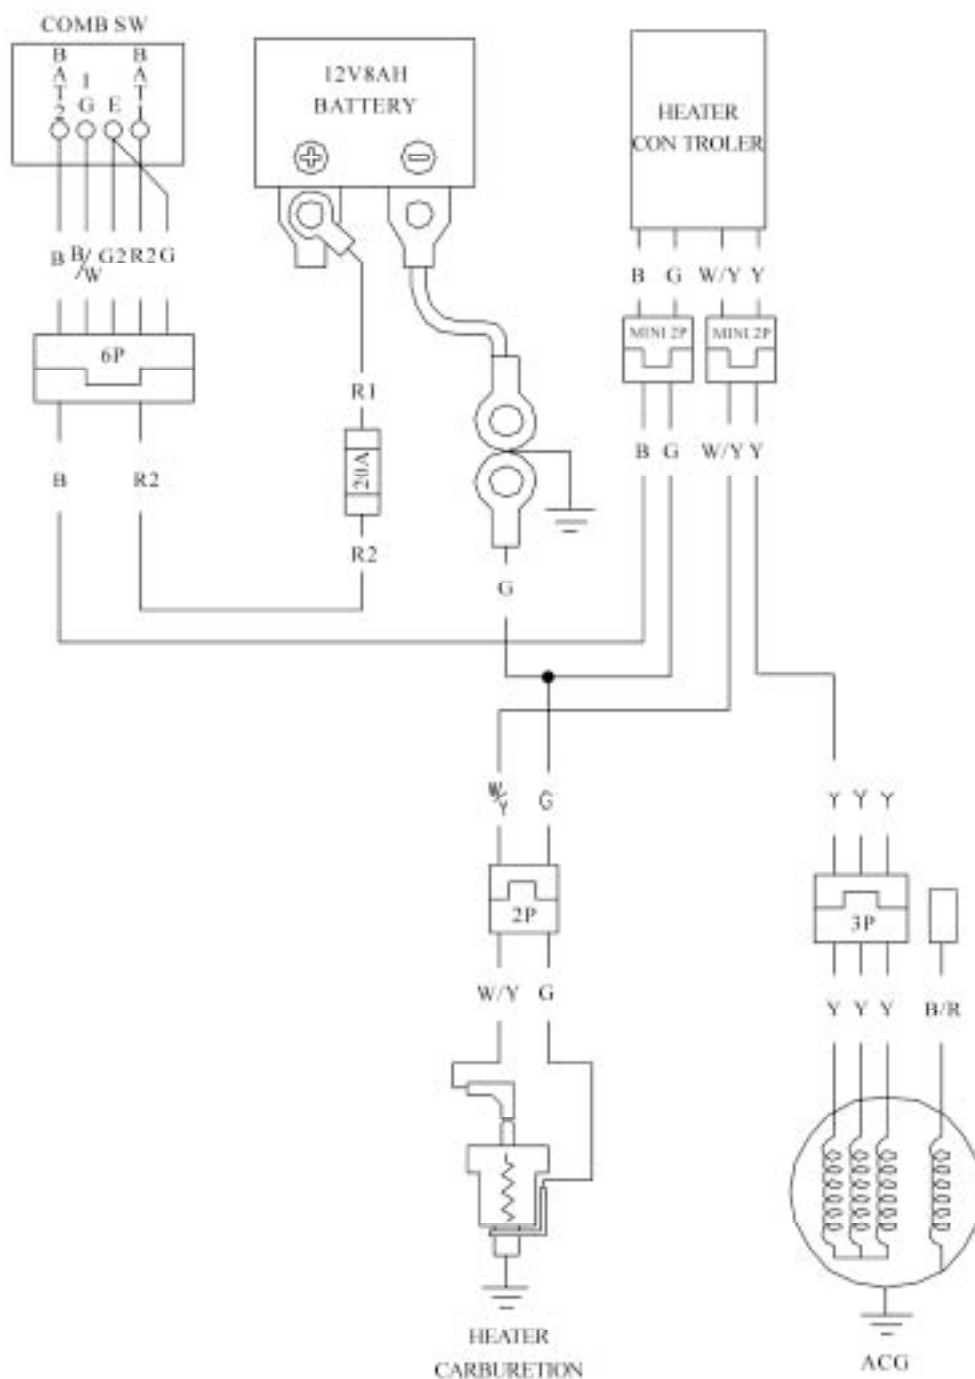



# KYMCO


P A R T S L I S T

## CATALOGO RICAMBI

**GRAND DINK 125**




03-11-04

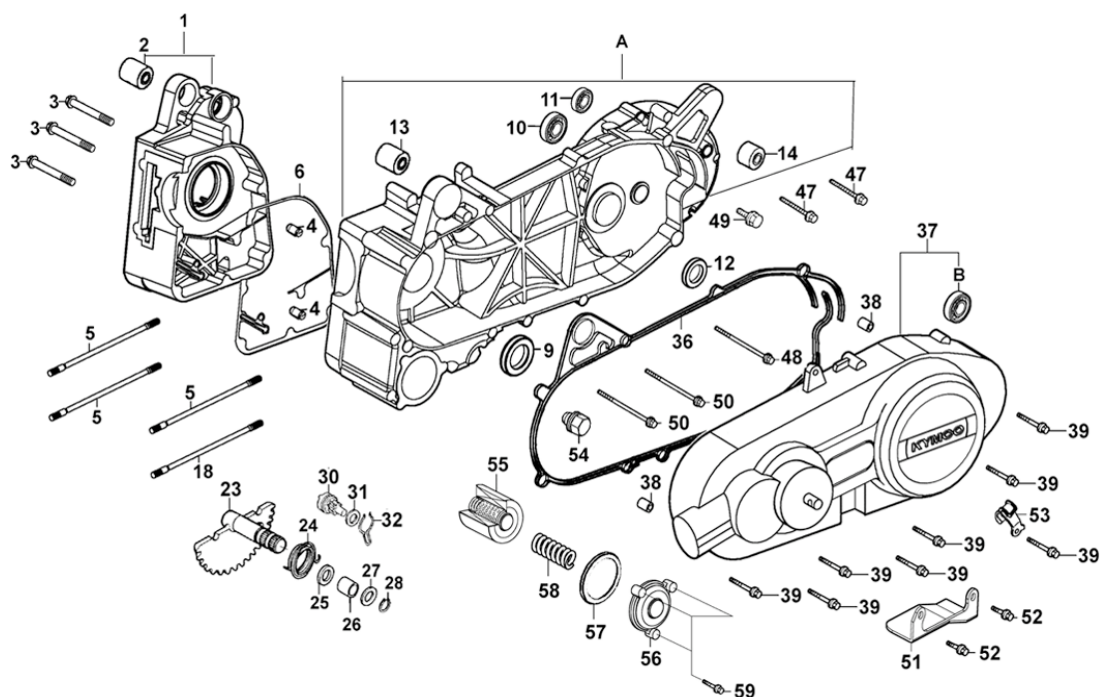


|      | CODICE KY          | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|------|--------------------|------------|--------------------------------|--------------|-------------------|--------|
| ● A  | 11200-KKC3-3150    | 00121155   | BLOCCO MOTORE SX               |              | 165,27            | 1      |
| ● B  | 91009-KKC3-9000    | 00108214   | CUSCINETTO 10X35X11 RAD.6000ZZ |              | 11,36             | 1      |
| ● 1  | 11100-KKC1-3050    | 00121010   | BLOCCO MOTORE DX               |              | 139,44            | 1      |
| ● 2  | 11102-187-0030     | 00109202   | SUPPORTO MOTORE ELASTICO       |              | 9,55              | 1      |
| ○ 3  | 96001-06050-08     | 00105009   | VITE FLANGIATA 6 x 50          |              |                   | 2      |
| ● 4  | 94301-08140        | 00121704   | SPINA DI CENTRAGGIO 8 x 14     |              | 1,55              | 2      |
| ● 5  | 90031-KBE-900      | 00121905   | PRIGIONIERO A 8 mm             |              | 4,65              | 3      |
| ● 6  | 11192-KKC3-9000    | 00121106   | GUARNIZIONE BLOCCO MOTORE      |              | 8,26              | 1      |
| ● 9  | 91261-415-0040     | 00121912   | PARAOLIO 25 x 40 x 8           |              | 4,65              | 1      |
| ● 10 | 91104-KN7-6710     | 00121913   | CUSCINETTO 20x47x14 RAD. 6204  |              | 14,46             | 1      |
| ● 11 | 96100-62030-00     | 00125788   | CUSCINETTO 17x40x12 RAD. 6203  |              | 10,85             | 1      |
| ● 12 | 91202-KJ9-0040     | 00125789   | PARAOLIO 20 x 32 x 6           |              | 6,20              | 1      |
| ● 13 | 11102-187-0030     | 00109202   | SUPPORTO MOTORE ELASTICO       |              | 9,55              | 1      |
| ● 14 | 11203-GC7-3010     | 00109006   | SUPPORTO ELASTICO AMM. POST.   |              | 9,04              | 1      |
| ● 18 | 90032-KBE-9000     | 00121918   | PRIGIONIERO B 8 mm             |              | 4,65              | 1      |
| ● 23 | 28250-KFC8-9000    | 00121923   | ALBERINO AVVIAMENTO PEDALE     |              | 18,59             | 1      |
| ● 24 | 28281-GN2-6030-M1  | 00106012   | MOLLA RITORNO AVV. PEDALE      |              | 6,20              | 1      |
| ● 25 | 28255-GS6-0010     | 00106205   | RONDELLA BATTUTA BOCCOLA       |              | 2,07              | 1      |
| ● 26 | 28253-GN2-6020-M1  | 00106011   | BOCCOLA AVVIAMENTO PEDALE      |              | 7,23              | 1      |
| ● 27 | 90451-GN2-6010     | 00106016   | RONDELLA ALBERINO AVV. PED.    |              | 4,13              | 1      |
| ● 28 | 94511-14000        | 00106119   | SEEGER EST. 14mm               |              | 2,00              | 1      |
| ● 30 | 28230-KBN-9010     | 00121130   | INGRANAGGIO AVV. PEDALE        |              | 20,66             | 1      |
| ● 31 | 90412-329-0010     | 00106014   | RONDELLA DI SPINTA             |              | 4,00              | 1      |
| ● 32 | 28223-KBN-9010     | 00106209   | MOLLA FRIZIONE AVV. PEDALE     |              | 4,13              | 1      |
| ● 36 | 11395-KKC3-9000    | 00121156   | GUARNIZIONE CARTER SX          |              | 19,63             | 1      |
| ● 37 | 11341-KKC3-900-N8A | 00121157   | CARTER SX NH045                |              | 129,11            | 1      |
| ● 38 | 94301-08140        | 00121704   | SPINA DI CENTRAGGIO 8 x 14     |              | 1,55              | 2      |
| ● 39 | 96001-06040-08     | 00105008   | VITE FLANGIATA SH 6 x 40       |              | 4,13              | 8      |
| ○ 47 | 96001-06060-08     | 00109030   | VITE FLANGIATA SH 6 x 60       |              |                   | 2      |

03-11-04

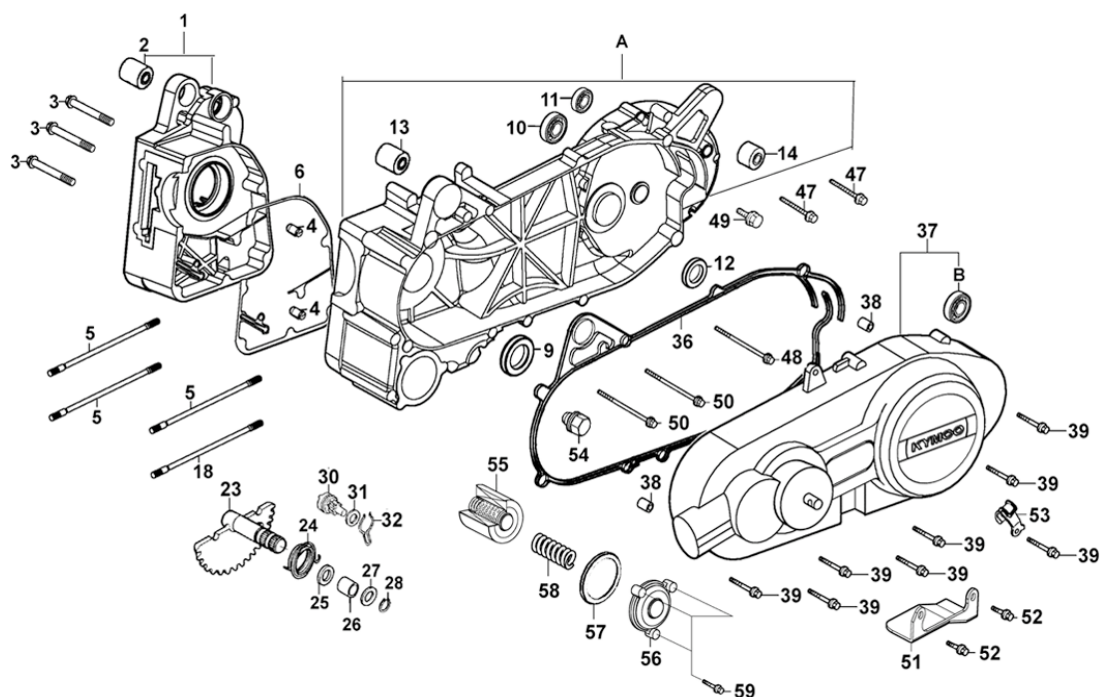

|             | CODICE KY       | CODICE PIR      | DESCRIZIONE                 | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------------|-----------------|-----------------|-----------------------------|--------------|-------------------|--------|
| ○ 48        | 96001-06120-08  | <b>00121954</b> | VITE FLANGIATA 6 x 120      |              |                   | 1      |
| ● 49        | 95701-08012-08  | <b>00109234</b> | VITE FLANGIATA 8 X 12       |              | <b>3,00</b>       | 1      |
| ○ 50        | 96001-06120-08  | <b>00121954</b> | VITE FLANGIATA 6 x 120      |              |                   | 2      |
| ● 51        | 50504-KKC3-9000 | <b>00164124</b> | FERMO CAVALLETTO            |              | <b>4,13</b>       | 1      |
| <b>E</b> 52 | 96001-06016-08  | <b>00101005</b> | VITE FLANGIATA 6 x 16       |              |                   | 2      |
| ○ 53        | 11383-KDU-9000  | <b>00121052</b> | MORSETTO DRENAGGIO CARB.    |              |                   | 1      |
| ● 54        | 9052A-GY6-9500  | <b>00101633</b> | BULLONE SPURGO              |              | <b>5,16</b>       | 1      |
| ● 55        | 1541A-KKC3-9000 | <b>00124759</b> | ELEMENTO FILTRO OLIO        |              | <b>6,71</b>       | 1      |
| ● 56        | 15421-KKC3-9000 | <b>00124390</b> | COPERCHIO FILTRO OLIO       |              | <b>6,20</b>       | 1      |
| ● 57        | 15422-KKC3-9000 | <b>00125037</b> | O-RING 53,65x2,62           |              | <b>4,65</b>       | 2      |
| ● 58        | 15423-KKC3-9000 | <b>00124391</b> | MOLLA COPERCHIO FILTRO OLIO |              | <b>3,10</b>       | 1      |
| <b>E</b> 59 | 96001-06016-08  | <b>00101005</b> | VITE FLANGIATA 6 x 16       |              |                   | 3      |


03-11-04

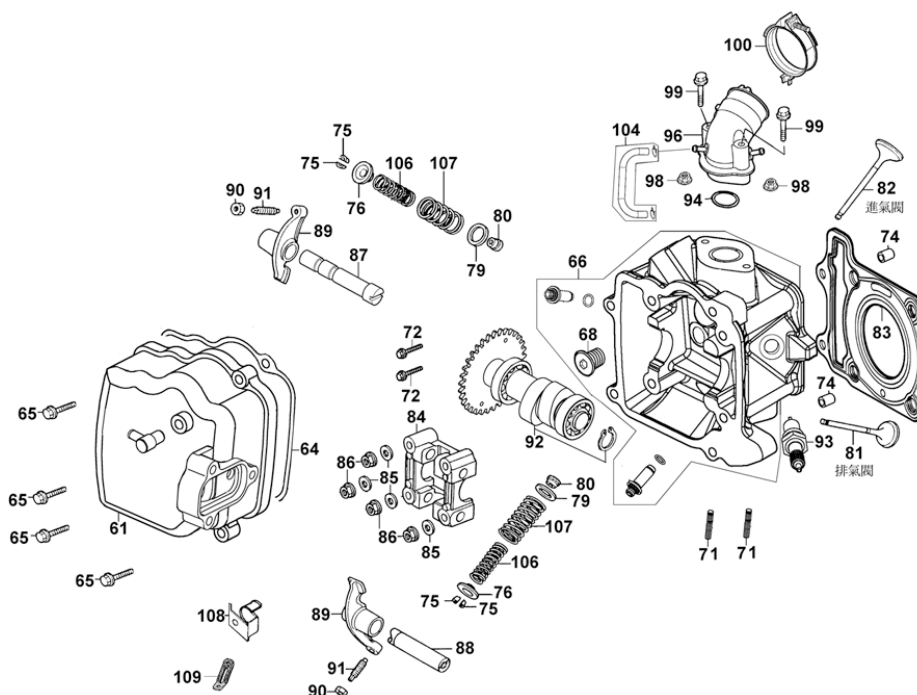

|   | CODICE KY            | CODICE PIR | DESCRIZIONE                 | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|---|----------------------|------------|-----------------------------|--------------|-------------------|--------|
| ● | 61 12310-KBE-E000    | 00122961   | COPERTIO TESTA              |              | 18,08             | 1      |
| ● | 64 12391-KBE-9000    | 00122964   | GUARN. COP. TESTA           |              | 4,65              | 1      |
| ○ | 65 95701-06025-08    | 00101203   | VITE FLANGIATA SH 6 x 25    |              |                   | 4      |
| ● | 66 12200-KKC1-E00    | 00122973   | TESTA                       |              | 185,92            | 1      |
| ● | 68 12205-KE8-3010    | 00122914   | GUARN. VITE 12mm            |              | 4,13              | 1      |
| ● | 71 90033-GY6-9000    | 00122970   | PRIGIONIERO 8 x 32          |              | 3,10              | 2      |
| ○ | 72 96001-06025-00    | 00109026   | VITE FLANGIATA SH 6 x 25    |              |                   | 2      |
| ● | 74 94301-10160       | 00122773   | SPINA DI CENTRAGGIO 10 x 16 |              | 1,55              | 2      |
| ● | 75 14781-MA6-0000-M1 | 00122774   | SEMICONI                    |              | 4,13              | 4      |
| ● | 76 14771-GB4-6800    | 00122775   | SEDE MOLLA INT. VALVOLA     |              | 3,10              | 2      |
| ● | 79 14775-MA6-0000    | 00122778   | SEDE MOLLA EST. VALVOLA     |              | 2,07              | 2      |
| ● | 80 12209-GB4-6820-M1 | 00122779   | GUARNIZIONE STELO VALVOLA   |              | 6,00              | 2      |
| ● | 81 14721-KAA-9000    | 00122980   | VALVOLA SCARICO             |              | 20,66             | 1      |
| ● | 82 14711-KBE-9000    | 00122981   | VALVOLA ASPIRAZIONE         |              | 13,43             | 1      |
| ● | 83 12251-KED1-9010   | 00122992   | GUARNIZIONE TESTA           |              | 8,78              | 1      |
| ● | 84 1221A-KBE-9000    | 00122987   | SEDE ALBERO A CAMME         |              | 20,66             | 1      |
| ● | 85 90465-MC4-0010    | 00122783   | RONDELLA 8mm                |              | 3,10              | 4      |
| ● | 86 94050-08000       | 00109038   | DADO FLANGIATO 8mm          |              | 1,55              | 4      |
| ● | 87 14450-KBE-9000    | 00122989   | ALBERO IMMISSIONE           |              | 10,33             | 1      |
| ● | 88 14461-KBE-9000    | 00122990   | ALBERO SCARICO              |              | 6,20              | 1      |
| ● | 89 14431-KKC1-9000   | 00122089   | BILANCERE                   |              | 36,15             | 2      |
| ● | 90 90206-001-0010    | 00122792   | DADO REGOLAZIONE            |              | 3,10              | 2      |
| ● | 91 90012-333-0010    | 00122793   | VITE DI REGISTRO            |              | 4,13              | 2      |
| ● | 92 14100-KKC2-220    | 00122972   | ALBERO A CAMME              |              | 103,29            | 1      |
| ● | 93 98069-5791R-00    | 00122997   | CANDELA DPR7EA-9            |              | 4,65              | 1      |
| ● | 94 91301-028-0010    | 00122700   | O-RING 27 x 2,0             |              | 4,13              | 1      |
| ● | 96 17110-KKC1-E000   | 00122906   | RACCORDO AMMISSIONE         |              | 35,12             | 1      |
| ○ | 99 92900-06045-0B    | 00122099   | PRIGIONIERO SCARICO 6 x 45  |              |                   | 2      |
| ● | 100 16217-KBE-9000   | 00122903   | FASCETTA                    |              | 4,65              | 1      |




03-11-04

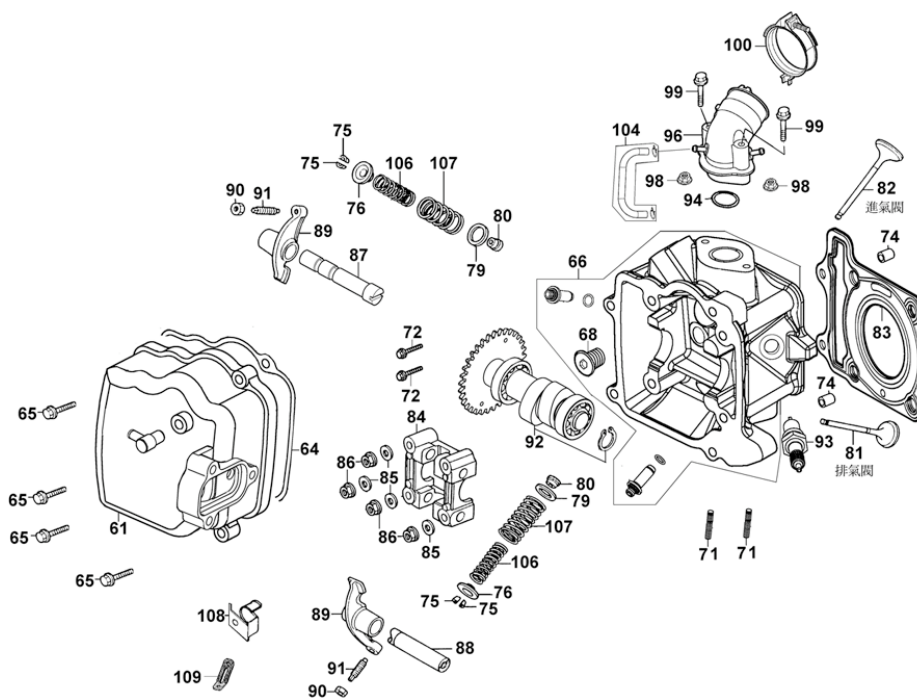


|   | CODICE KY          | CODICE PIR      | DESCRIZIONE              | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|---|--------------------|-----------------|--------------------------|--------------|-------------------|--------|
| ● | 104 16218-KBE-E000 | <b>00122921</b> | TUBO CARBURANTE          |              | <b>4,20</b>       | 1      |
| ● | 106 14761-KJ9-0030 | <b>00122976</b> | MOLLA INTERNA            |              | <b>3,10</b>       | 2      |
| ● | 107 14751-KJ9-0030 | <b>00122977</b> | MOLLA ESTERNA            |              | <b>3,10</b>       | 2      |
| ● | 108 11385-KBE-9000 | <b>00122936</b> | MORSETTO DRENAGGIO CARB. |              | <b>4,13</b>       | 1      |
| ● | 109 94591-KBF-900  | <b>00128739</b> | CLIP 2X70                |              | <b>1,55</b>       | 1      |

03-11-04

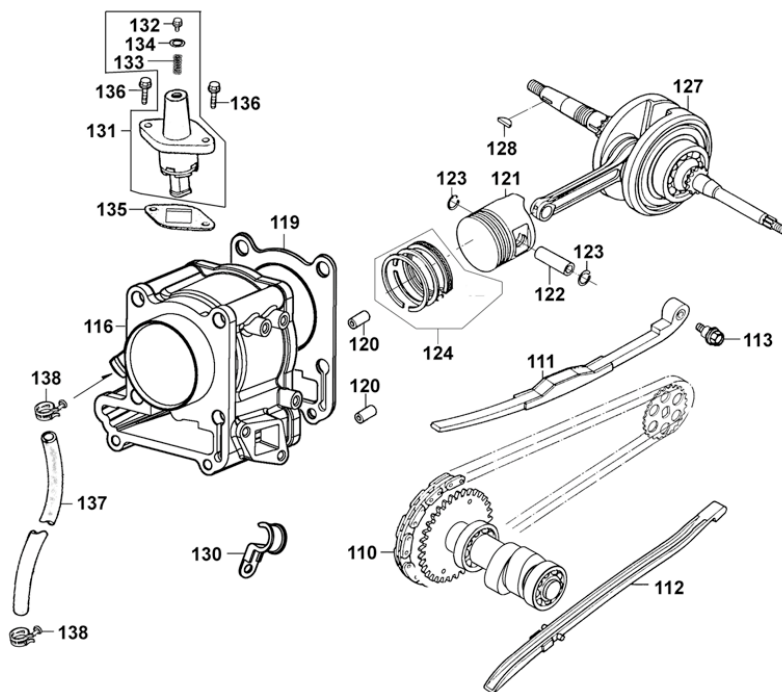


|   | CODICE KY             | CODICE PIR | DESCRIZIONE                 | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|---|-----------------------|------------|-----------------------------|--------------|-------------------|--------|
| ● | 110 14401-KDU-9000    | 00123110   | CATENA DISTRIBUZIONE        |              | 30,99             | 1      |
| ● | 111 14510-KBE-9000    | 00123913   | TENDICATENA                 |              | 16,53             | 1      |
| ● | 112 14610-KJ9-0010    | 00123914   | GUIDA CATENA                |              | 5,68              | 1      |
| ● | 113 14531-KJ9-0010    | 00123916   | PERNO TENDICATENA           |              | 3,62              | 1      |
| ● | 116 12100-KKC1-9000   | 00123947   | CILINDRO                    |              | 98,13             | 1      |
| ● | 119 12191-KKC3-9000   | 00123945   | GUARNIZIONE CILINDRO        |              | 3,10              | 1      |
| ● | 120 94301-10160       | 00122773   | SPINA DI CENTRAGGIO 10 x 16 |              | 1,55              | 2      |
| ● | 121 13101-KED1-9000   | 00123941   | PISTONE ø 52,4mm            |              | 36,15             | 1      |
| ● | 122 13111-384-0010    | 00123724   | SPINOTTO                    |              | 3,10              | 1      |
| ● | 123 94601-15000-M1    | 00123725   | FERMI SPINOTTO IN SET 15mm  |              | 2,58              | 2      |
| ● | 124 13011-GY6-9000    | 00123728   | SEGMENTI(SET) ø 52,4 mm     |              | 29,95             | 1      |
| ● | 127 13000-KKC2-900    | 00123948   | ALBERO MOTORE               |              | 273,72            | 1      |
| ● | 128 90701-HB6-0110    | 00123730   | CHIAVETTA 25 x 14 x 4       |              | 3,10              | 1      |
| ○ | 130 11384-KHE7-9000   | 00153011   | MORSETTO TUBO FRENO POST. A |              |                   | 1      |
| ● | 131 14550-KS4-0040-M2 | 00103731   | REGISTRO TENDICATENA        |              | 15,49             | 1      |
| ○ | 132 14552-KS4-0030    | 00123935   | VITE REGISTRO               |              |                   | 1      |
| ○ | 133 14553-KS4-0030    | 00103636   | MOLLA VITE REGISTRO         |              |                   | 1      |
| ● | 134 90421-KM1-0030    | 00123934   | RONDELLA 8 x 16 x 1,6       |              | 3,10              | 1      |
| ● | 135 14555-KJ9-0010    | 00123932   | GUARN. REGISTRO TENDICAT.   |              | 4,65              | 1      |
| ○ | 136 96001-06018-08    | 00103008   | VITE FLANGIATA SH 6 x 18    |              |                   | 2      |
| ● | 137 19502-KBE-9000    | 00123936   | TUBO B ACQUA                |              | 9,30              | 1      |
| ● | 138 95002-KN7-9100    | 00123937   | FASCETTA TUBO ACQUA         |              | 1,00              | 2      |

03-11-04

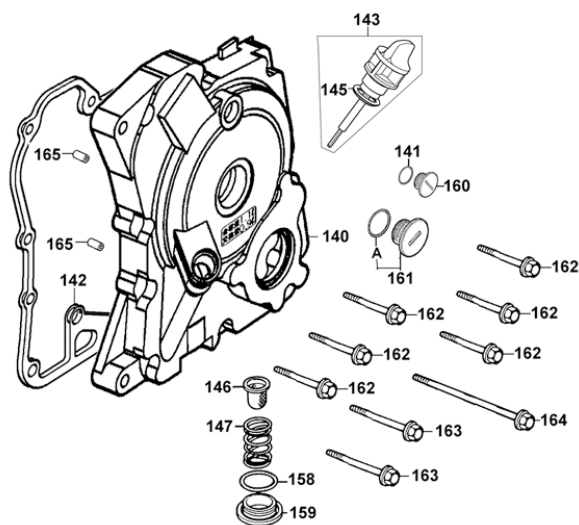


|       | CODICE KY       | CODICE PIR      | DESCRIZIONE                  | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-----------------|-----------------|------------------------------|--------------|-------------------|--------|
| ● A   | 91302-567-0040  | <b>00124952</b> | O-RING 27,4 x 2,4            |              | <b>3,10</b>       | 1      |
| ● 140 | 11330-KKC3-9000 | <b>00124911</b> | CARTER BLOCCO MOTORE DX      |              | <b>139,44</b>     | 1      |
| ● 141 | 91303-377-0010  | <b>00124941</b> | O-RING 13,8 x 2,5            |              | <b>3,10</b>       | 1      |
| ● 142 | 11394-KBE-9000  | <b>00124942</b> | GUARNIZIONE BLOCCO MOTORE DX |              | <b>9,30</b>       | 1      |
| ● 143 | 1565A-KBE-9000  | <b>00124943</b> | ASTA LIVELLO OLIO COMPLETA   |              | <b>9,30</b>       | 1      |
| ● 145 | 91307-035-0010  | <b>00124745</b> | O-RING 18 x 3                |              | <b>1,55</b>       | 1      |
| ● 146 | 15421-107-0000  | <b>00124746</b> | FILTRO OLIO                  |              | <b>4,65</b>       | 1      |
| ● 147 | 15426-GE1-9200  | <b>00124747</b> | MOLLA FILTRO OLIO            |              | <b>7,75</b>       | 1      |
| ● 158 | 91302-001-0210  | <b>00124748</b> | O-RING 30,8                  |              | <b>2,00</b>       | 1      |
| ● 159 | 12361-GY6-9010  | <b>00124749</b> | TAPPO FILTRO OLIO            |              | <b>6,71</b>       | 1      |
| ● 160 | 90084-428-0010  | <b>00124950</b> | CAPPUCCIO ACG                |              | <b>4,65</b>       | 1      |
| ● 161 | 9008A-KE2-9000  | <b>00124951</b> | CAPPUCCIO 30mm               |              | <b>4,65</b>       | 1      |
| ● 162 | 96001-06040-08  | <b>00105008</b> | VITE FLANGIATA SH 6 x 40     |              | <b>4,13</b>       | 6      |
| ○ 164 | 96001-06120-08  | <b>00121954</b> | VITE FLANGIATA 6 x 120       |              |                   | 1      |
| ● 165 | 94301-08140     | <b>00121704</b> | SPINA DI CENTRAGGIO 8 x 14   |              | <b>1,55</b>       | 2      |

03-11-04

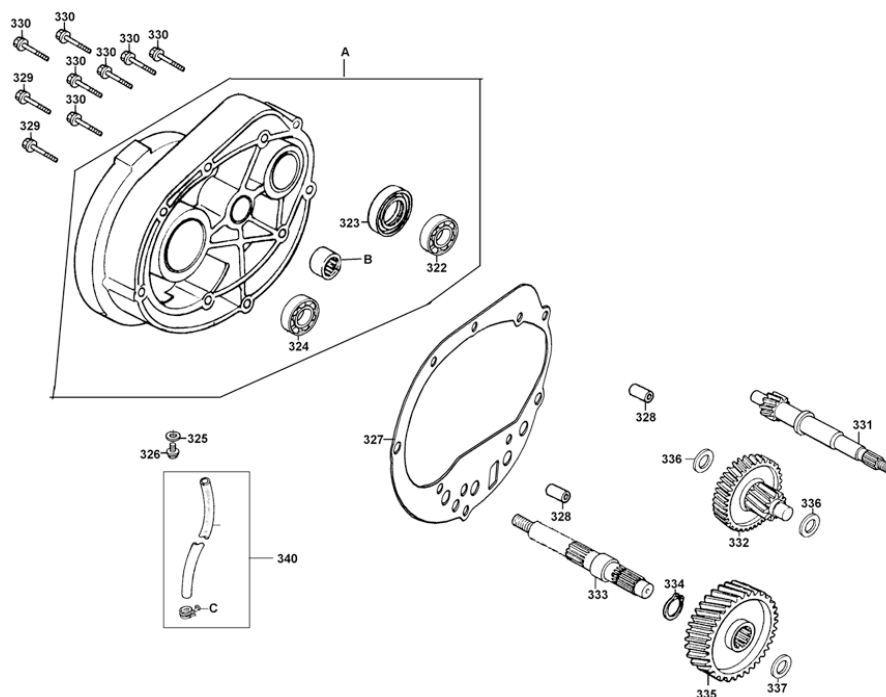


|       | CODICE KY         | CODICE PIR      | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-------------------|-----------------|--------------------------------|--------------|-------------------|--------|
| ● A   | 21201-KFC8-3050   | <b>00125902</b> | CARTER TRASMISSIONE COMPLETO   |              | <b>67,14</b>      | 1      |
| ● B   | 91105-KN7-6710-M1 | <b>00121957</b> | GABBIA A RULLI 14mm            |              | <b>11,88</b>      | 1      |
| ○ C   | 95002-02080       | <b>00159014</b> | CLIP TUBO B8                   |              |                   | 1      |
| ● 322 | 91003-KS4-004     | <b>00121713</b> | CUSCINETTO 12x37x12 RAD. 6301  |              | <b>13,43</b>      | 1      |
| ● 323 | 91255-GE0-0060    | <b>00108209</b> | PARAOILIO 27 x 42 x 7          |              | <b>5,16</b>       | 1      |
| ● 324 | 91009-GE0-0040    | <b>00108208</b> | CUSCINETTO 20x42x12 RAD. 6004  |              | <b>11,88</b>      | 1      |
| ● 325 | 90474-333-001     | <b>00125790</b> | RONDELLA 8mm                   |              | <b>3,10</b>       | 1      |
| ● 326 | 95701-08012-08    | <b>00109234</b> | VITE FLANGIATA 8 X 12          |              | <b>3,00</b>       | 1      |
| ● 327 | 21395-KFC8-9000   | <b>00125997</b> | GUARN. CARTER TRASMISSIONE     |              | <b>4,65</b>       | 1      |
| ● 328 | 94301-08140       | <b>00121704</b> | SPINA DI CENTRAGGIO 8 x 14     |              | <b>1,55</b>       | 2      |
| ● 329 | 96001-06040-08    | <b>00105008</b> | VITE FLANGIATA SH 6 x 40       |              | <b>4,13</b>       | 2      |
| ○ 330 | 96001-06035-08    | <b>00108017</b> | VITE FLANGIATA SH 6 x 35       |              |                   | 7      |
| ● 331 | 23411-KKC3-900    | <b>00129125</b> | ALBERO PULEGGIA                |              | <b>61,97</b>      | 1      |
| ● 332 | 23420-KFC8-900    | <b>00125992</b> | CONTRALBERO                    |              | <b>61,97</b>      | 1      |
| ● 333 | 23431-KFC8-9000   | <b>00125993</b> | ALBERO RUOTA                   |              | <b>61,97</b>      | 1      |
| ● 334 | 94510-20000       | <b>00108210</b> | SEEGER EST. 20mm               |              | <b>1,55</b>       | 1      |
| ● 335 | 23432-KFC8-900    | <b>00125995</b> | INGRANAGGIO USCITA             |              | <b>41,32</b>      | 1      |
| ● 336 | 90411-KM1-0010    | <b>00125916</b> | RONDELLA DI SPINTA 14 x 32 x 1 |              | <b>4,13</b>       | 2      |
| ● 337 | 90446-357-0010    | <b>00125917</b> | RONDELLA DI SPINTA 17,2mm      |              | <b>4,13</b>       | 1      |
| ○ 340 | 1122A-KKC2-9000   | <b>00121142</b> | TUBO DI SFIATO                 |              |                   | 1      |

03-11-04

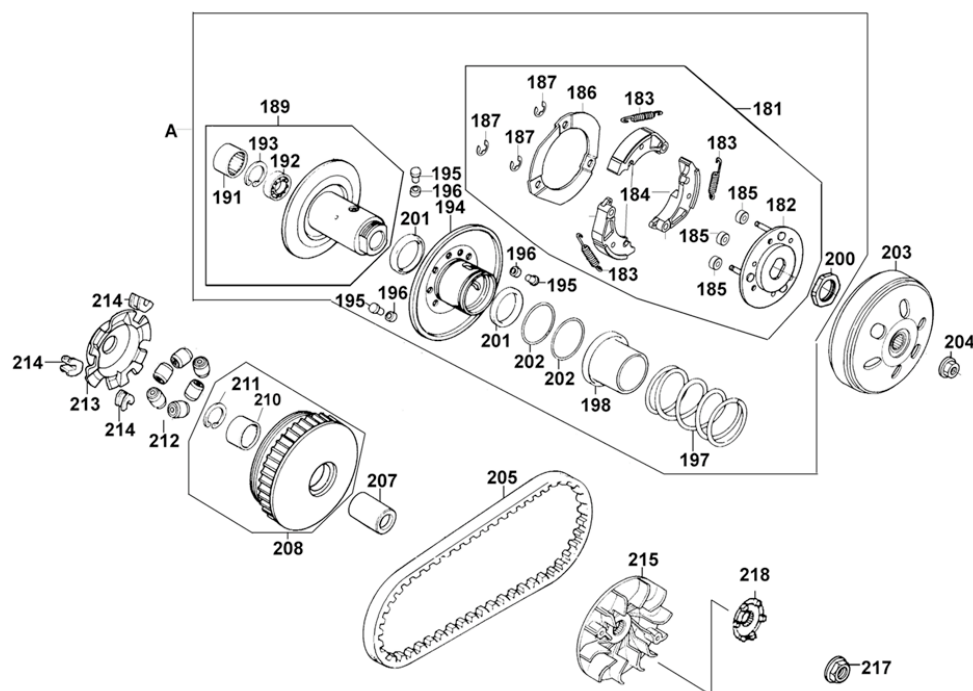

|       | CODICE KY         | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-------------------|------------|--------------------------------|--------------|-------------------|--------|
| ● A   | 2301A-KBE-9000    | 00127960   | PULEGGIA CONDOTTA              |              | 200,00            | 1      |
| ● 181 | 22300-KN7-6710    | 00127961   | FRIZIONE                       |              | 51,13             | 1      |
| ○ 182 | 22350-KN7-6700    | 00127962   | PIATTELLO MOBILE               |              |                   | 1      |
| ● 183 | 22401-KN7-6710    | 00127963   | MOLLA FRIZIONE                 |              | 3,10              | 3      |
| ○ 184 | 22530-KN7-6710    | 00126984   | SET GANASCIA FRIZIONE          |              |                   | 3      |
| ○ 185 | 22804-GB2-0010    | 00127765   | GOMMINO FRIZIONE               |              |                   | 3      |
| ○ 186 | 22361-KN7-6710    | 00127966   | PIASTRA LAT.                   |              |                   | 1      |
| ● 187 | 90605-166-7210    | 00127767   | SEEGER 7mm                     |              | 3,10              | 3      |
| ● 189 | 23200-KBE-9000    | 00127969   | SEMIPULEGGIA CONDOTTA COMPLETA |              | 36,15             | 1      |
| ● 191 | 91001-GY6-90A     | 00127770   | CUSC. RULLI 20 x 29 x 18       |              | 13,43             | 1      |
| ● 192 | 91002-GA7-70A     | 00127771   | CUSC. SFERE RAD. 6902U         |              | 14,46             | 1      |
| ● 193 | 94520-28000       | 00127772   | SEEGER INT. 28mm               |              | 1,55              | 1      |
| ● 194 | 23220-KN7-6710    | 00127973   | PARTE MOBILE PULEGGIA CONDOTTA |              | 61,97             | 1      |
| ● 195 | 23225-GC8-0040    | 00127774   | GUIDA                          |              | 4,65              | 3      |
| ● 196 | 23226-GC8-0040    | 00127775   | SPINA GUIDA                    |              | 4,65              | 3      |
| ● 197 | 23233-KN7-6710    | 00127976   | MOLLA PULEGGIA CONDOTTA        |              | 14,46             | 1      |
| ● 198 | 23237-KG8-9010    | 00127977   | COLLARE DI TENUTA              |              | 5,68              | 1      |
| E 200 | 90202-KN7-6710    | 00127979   | DADO SPECIALE 28mm             |              | 4,13              | 1      |
| E 201 | 91211-KBE-9000    | 00126970   | PARAOLIO 34 x 41 x 4           |              | 4,13              | 2      |
| ● 202 | 91384-KBE-9000    | 00126981   | O-RING 38,8 x 1,9              |              | 5,00              | 2      |
| ● 203 | 22101-KBE-9000    | 00127982   | CAMPANA FRIZIONE               |              | 29,95             | 1      |
| * 204 | 94050-12080       | 00127704   | DADO FLANGIATO 12mm            |              | 1,55              | 1      |
| ● 205 | 23100-KN7-6720-M1 | 00127985   | CINGHIA TRASMISSIONE           |              | 20,66             | 1      |
| ● 207 | 22105-KHD4-E00    | 00127951   | BUSSOLA SEMIPULEGGIA MOTRICE   |              | 30,99             | 1      |
| ● 208 | 22110-KKC3-9000   | 00127952   | SEMIPULEGGIA MOBILE            |              | 30,99             | 1      |
| ● 210 | 22112-KAA-9000-H1 | 00126910   | BOCCOLA SEMIPUL. MOTRICE       |              | 7,75              | 1      |
| ● 211 | 94601-33000       | 00127701   | CLIP 33mm                      |              | 3,10              | 1      |
| ● 212 | 22121-KED1-9000   | 00127999   | RULLINI CENTRIF. 13,4 gr.(SET) |              | 10,33             | 6      |
| ● 213 | 22131-KAA-9000    | 00127990   | PIASTRA A RAMPE                |              | 24,79             | 1      |


03-11-04

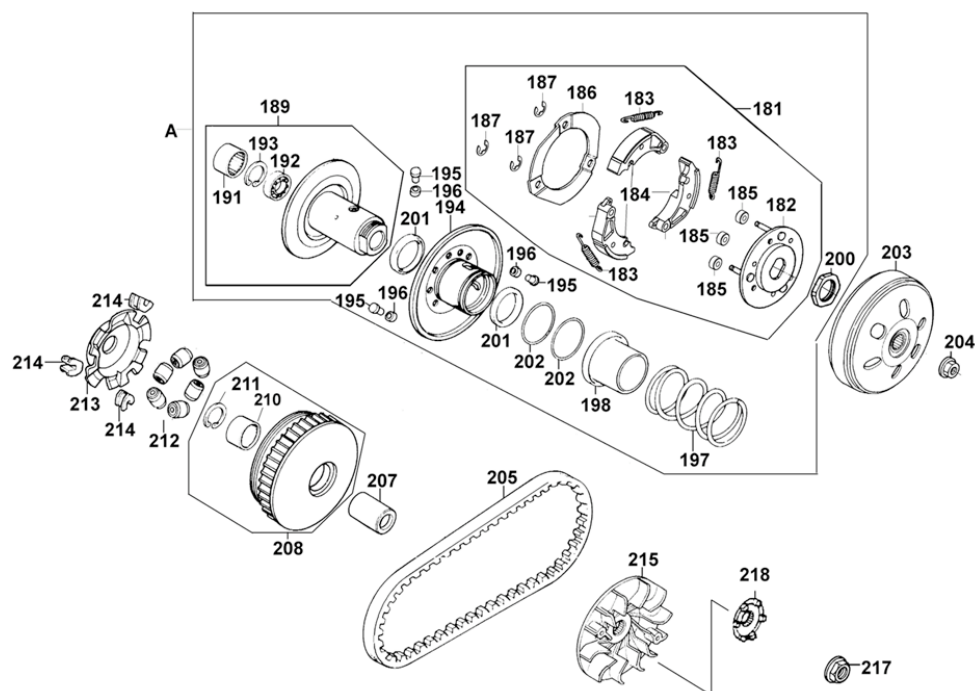

|   | CODICE KY           | CODICE PIR      | DESCRIZIONE          | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|---|---------------------|-----------------|----------------------|--------------|-------------------|--------|
| ● | 214 22132-KN7-6700  | <b>00127991</b> | ELEMENTO GUIDA       |              | <b>1,29</b>       | 3      |
| ● | 215 22102-KKC3-9000 | <b>00126216</b> | SEMIPULEGGIA MOTRICE |              | <b>61,97</b>      | 1      |
| ✱ | 217 94050-12080     | <b>00127704</b> | DADO FLANGIATO 12mm  |              | <b>1,55</b>       | 1      |
| ● | 218 28211-KFC8-9000 | <b>00127905</b> | NOTTOLINO DENTATO    |              | <b>10,33</b>      | 1      |




03-11-04

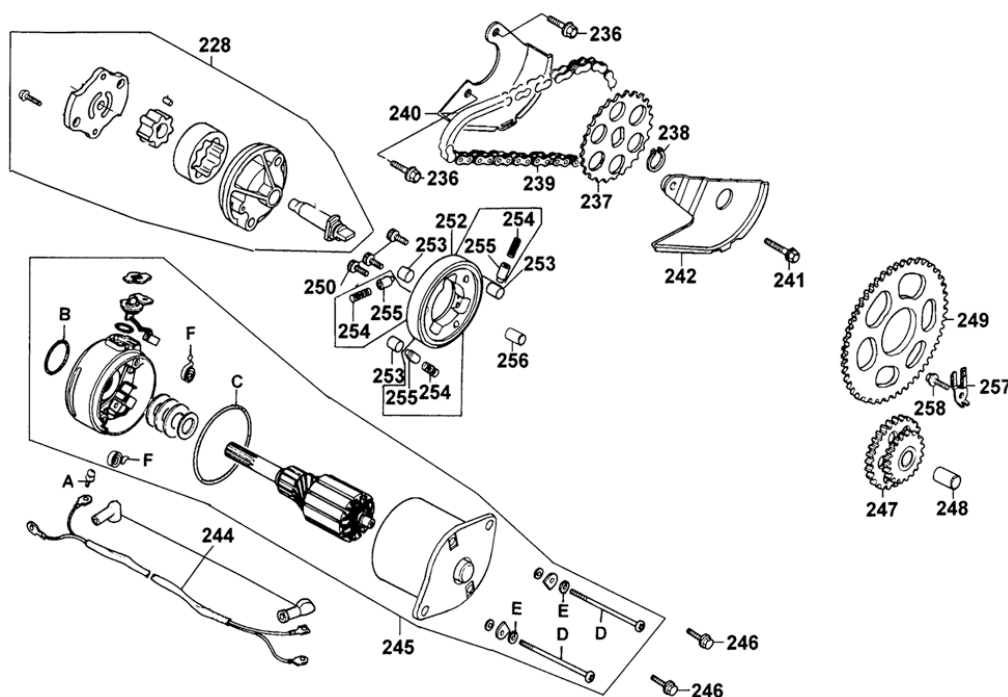


|       | CODICE KY         | CODICE PIR | DESCRIZIONE                | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-------------------|------------|----------------------------|--------------|-------------------|--------|
| ○ D   | 31205-KN7-6700    | 00128941   | SET VITE                   |              |                   | 2      |
| ● C   | 31206-KN7-6700    | 00128938   | O-RING                     |              | 3,10              | 1      |
| ● B   | 91309-425-0040    | 00128931   | O-RING 24,4 x 3,1          |              | 3,00              | 1      |
| * A   | 91981-KN7-6700    | 00128954   | VITE RONDELLA 5 x 8        |              | 1,00              | 1      |
| ○ E   | 94111-05800       | 00127950   | RONDELLA 5mm               |              |                   | 2      |
| ○ F   | 31204-KN7-6700    | 00128943   | MOLLA SPAZZOLA             |              |                   | 2      |
| ● 228 | 15100-KKC3-9000   | 00127320   | POMPA OLIO                 |              | 67,14             | 1      |
| ○ 236 | 92000-06028-0H    | 00127236   | VITE FLANGIATA SH 6 x 28   |              |                   | 2      |
| ● 237 | 15133-KM1-0010    | 00128919   | CORONA MOVIM. POMPA OLIO   |              | 8,26              | 1      |
| ● 238 | 94510-10000       | 00128920   | SEEGER EST. 10mm           |              | 3,62              | 1      |
| ● 239 | 15141-KJ9-0040    | 00128921   | CATENA POMPA OLIO          |              | 19,63             | 1      |
| ● 240 | 15711-KKC3-9000   | 00128800   | PARACATENA "A"             |              | 6,20              | 1      |
| ○ 241 | 96001-06014-08    | 00101004   | VITE FLANGIATA 6X14        |              |                   | 1      |
| ● 242 | 15712-KBE-9000    | 00128923   | PARACATENA B               |              | 8,26              | 1      |
| ● 244 | 32410-KDU-9000    | 00127159   | CAVO AVVIAMENTO            |              | 10,33             | 1      |
| ● 245 | 31210-KKC3-9000   | 00128751   | MOTORE AVVIAMENTO          |              | 77,47             | 1      |
| E 246 | 96001-06016-08    | 00101005   | VITE FLANGIATA 6 x 16      |              |                   | 2      |
| ● 247 | 28101-KJ9-0110    | 00128927   | RIDUZIONE INGRANAGGIO AVV. |              | 41,32             | 1      |
| ● 248 | 28102-KJ9-0010    | 00128928   | PERNO INGRANAGGIO AVV.     |              | 5,68              | 1      |
| ● 249 | 28110-KN7-6720    | 00128929   | INGRANAGGIO USCITA AVV.    |              | 36,15             | 1      |
| ● 250 | 96600-08015-10    | 00126361   | VITE A BRUGOLA 8 x 15      |              | 4,65              | 3      |
| ● 252 | 28120-KBE-305     | 00128934   | RUOTA LIBERA ESTERNA 8 mm  |              | 92,96             | 1      |
| ● 253 | 91101-179-7110-M1 | 00128733   | RULLINO 10 x 10            |              | 3,10              | 3      |
| ● 254 | 28125-426-0010    | 00128734   | MOLLA RUOTA LIBERA         |              | 3,10              | 3      |
| ● 255 | 28126-KDU-900     | 00128735   | CAPPUCCIO MOLLA            |              | 3,10              | 3      |
| ● 256 | 96220-60100       | 00127248   | GRANO 6 x 10               |              | 2,00              | 1      |
| ● 257 | 28131-KN7-6710    | 00128939   | GUIDA INGRANAGGIO USCITA   |              | 4,65              | 1      |
| ○ 258 | 96001-06014-08    | 00101004   | VITE FLANGIATA 6X14        |              |                   | 1      |

03-11-04

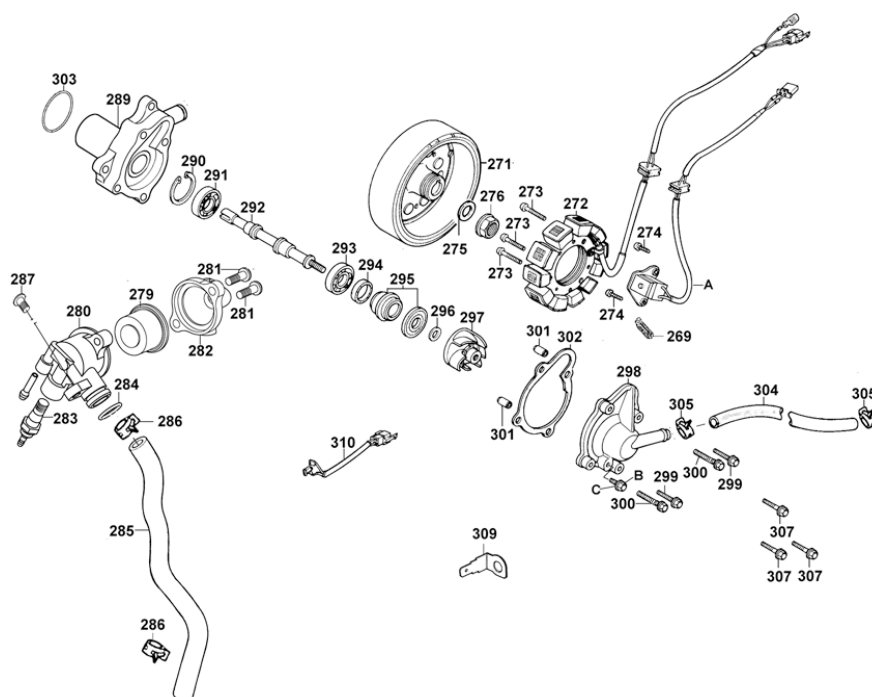


|       | CODICE KY         | CODICE PIR | DESCRIZIONE                     | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-------------------|------------|---------------------------------|--------------|-------------------|--------|
| ● A   | 30301-KBE-9000-M2 | 00128952   | PICK-UP                         |              | 30,99             | 1      |
| ○ C   | 90478-700-0010    | 00123919   | RONDELLA 6mm                    |              |                   | 1      |
| ● B   | 96001-06010-08    | 00129991   | VITE FLANGIATA 6 x 10           |              | 3,10              | 1      |
| ● 269 | 94591-KBF-900     | 00128739   | CLIP 2X70                       |              | 1,55              | 1      |
| ● 271 | 31110-KBE-9000    | 00128946   | VOLANO MAGNETE 8 mm             |              | 77,47             | 1      |
| ● 272 | 31120-KBE-90B     | 00128947   | STATORE                         |              | 98,13             | 1      |
| ○ 273 | 92000-05032-OH    | 00128948   | VITE TESTA PIATTA 5 x 32        |              |                   | 3      |
| ○ 274 | 93500-05016-OH    | 00128949   | VITE TESTA PIATTA 5 x 16        |              |                   | 2      |
| ● 275 | 90401-KJ9-0010    | 00128950   | RONDELLA SPALLA 14 x28x2        |              | 3,00              | 1      |
| ● 276 | 90201-KR8-7520-M1 | 00128951   | DADO FLANGIATO 14mm             |              | 4,13              | 1      |
| ● 279 | 19300-KE1-0030-M1 | 00129962   | TERMOSTATO POMPA ACQUA          |              | 46,48             | 1      |
| ● 280 | 19310-KBE-9000    | 00129963   | CUSTODIA TERMOSTATO POMPA ACQUA |              | 15,49             | 1      |
| ○ 281 | 93500-05016-OH    | 00128949   | VITE TESTA PIATTA 5 x 16        |              |                   | 2      |
| ● 282 | 19315-KBE-9000    | 00129965   | COPERCHIO TERMOSTATO POMPA ACQ  |              | 3,10              | 1      |
| ● 283 | 37750-PC1-0050    | 00129966   | BULBO TERMOSTATO POMPA ACQUA    |              | 21,69             | 1      |
| ● 284 | 91301-KV7-6710    | 00129967   | O-RING 14,8 x 1,9               |              | 2,00              | 1      |
| ● 285 | 19503-KBE-9000    | 00129968   | TUBO C ACQUA                    |              | 8,26              | 1      |
| ● 286 | 95002-KN7-9100    | 00123937   | FASCETTA TUBO ACQUA             |              | 1,00              | 2      |
| ○ 287 | 96001-06018-08    | 00103008   | VITE FLANGIATA SH 6 x 18        |              |                   | 1      |
| ● 289 | 19211-KKC3-9000   | 00129902   | CORPO POMPA ACQUA               |              | 40,00             | 1      |
| ● 290 | 94520-26000       | 00129980   | SEEGER INT. 26mm                |              | 3,62              | 1      |
| ● 291 | 96100-60000-00    | 00128975   | CUSC. SFERE RAD. 6000           |              | 14,98             | 1      |
| ● 292 | 19231-KBE-9000    | 00129977   | ALBERO POMPA ACQUA              |              | 37,18             | 1      |
| ● 293 | 91001-KJ9-006     | 00129985   | CUSC. SFERE RAD. 6901           |              | 16,53             | 1      |
| ● 294 | 91201-KJ9-0040    | 00129984   | PARAOILIO 12 x 20 x 4           |              | 4,65              | 1      |
| ● 295 | 19217-657-0240    | 00129974   | GUARN. MECCANICA                |              | 16,53             | 1      |
| ● 296 | 90423-KJ9-0010    | 00129978   | RONDELLA 7,2 x 13 x 1,2         |              | 4,00              | 1      |
| ● 297 | 19215-KJ9-0110    | 00129973   | GIRANTE POMPA ACQUA             |              | 6,71              | 1      |
| ● 298 | 19221-KKC3-9000   | 00129906   | COPERCHIO POMPA ACQUA           |              | 16,00             | 1      |

03-11-04

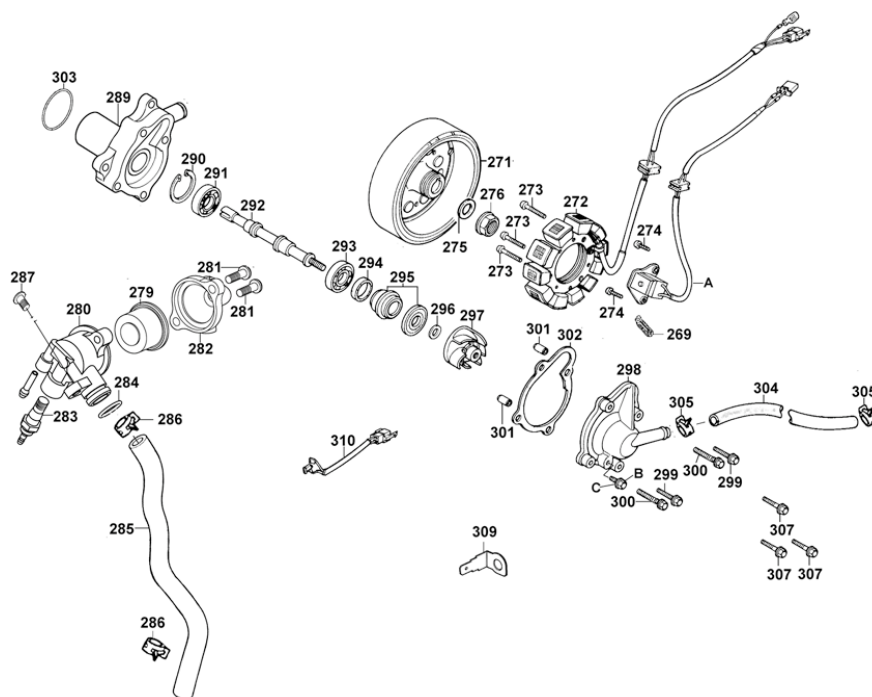


|   | CODICE KY           | CODICE PIR      | DESCRIZIONE                | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|---|---------------------|-----------------|----------------------------|--------------|-------------------|--------|
| ○ | 299 96001-06022-08  | <b>00103207</b> | VITE FLANGIATA SH 6 x 22   |              |                   | 2      |
| ○ | 300 96001-06028-08  | <b>00108016</b> | VITE FLANGIATA SH 6 x 28   |              |                   | 2      |
| ● | 301 94301-08140     | <b>00121704</b> | SPINA DI CENTRAGGIO 8 x 14 |              | <b>1,55</b>       | 2      |
| ● | 302 19229-KKC3-900  | <b>00128302</b> | GUARNIZIONE POMPA ACQUA    |              | <b>4,00</b>       | 1      |
| ● | 303 91302-567-0040  | <b>00124952</b> | O-RING 27,4 x 2,4          |              | <b>3,10</b>       | 1      |
| ● | 304 19501-KKC3-9000 | <b>00129969</b> | TUBO ACQUA"A"              |              | <b>10,33</b>      | 1      |
| ● | 305 95002-KN7-9100  | <b>00123937</b> | FASCETTA TUBO ACQUA        |              | <b>1,00</b>       | 1      |
| ○ | 307 96001-06020-08  | <b>00104004</b> | VITE FLANGIATA SH 6 x 20   |              |                   | 3      |
| ○ | 309 37720-KGB5-9000 | <b>00102020</b> | TERRA TERMOSTATO           |              |                   | 1      |
| ● | 310 32101-KHD8-9000 | <b>00128913</b> | CAVETTO                    |              | <b>8,00</b>       | 1      |

03-11-04

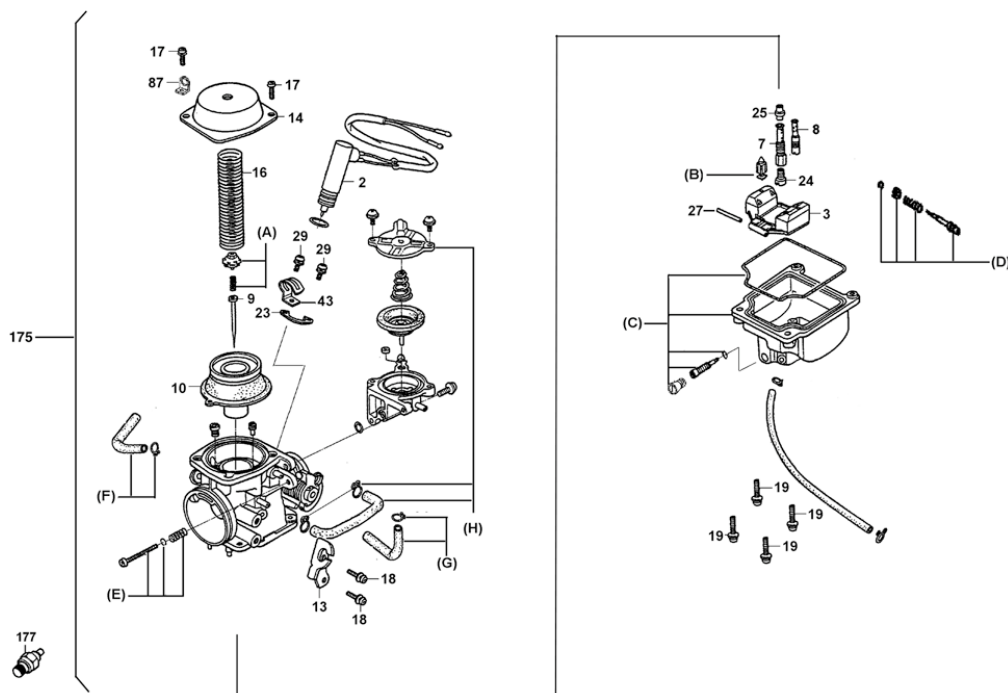

|       | CODICE KY         | CODICE PIR      | DESCRIZIONE            | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-------------------|-----------------|------------------------|--------------|-------------------|--------|
| ○ G   | 0804-E39-0000     | <b>00129993</b> | TUBO                   |              |                   | 1      |
| ● C   | K350-GY6-0200     | <b>00129911</b> | VASCHETTA COMPLETA     |              | <b>18,08</b>      | 1      |
| ● H   | K6510-KBE-0100    | <b>00126725</b> | DISPOSITIVO ANTISPARO  |              | <b>50,61</b>      | 1      |
| ● B   | S362-0080         | <b>00126707</b> | VALVOLA A SPILLO       |              | <b>6,20</b>       | 1      |
| ● D   | S446-1210         | <b>00126708</b> | VITE ARIA IN SET       |              | <b>4,65</b>       | 1      |
| ● A   | S506-0052         | <b>00126717</b> | FERMO SPILLO /MOLLA    |              | <b>2,58</b>       | 1      |
| ● E   | S536-1050         | <b>00126719</b> | VITE MINIMO IN SET     |              | <b>2,58</b>       | 1      |
| ○ F   | S7860-112-B000    | <b>00129918</b> | TUBO                   |              |                   | 1      |
| ● 2   | 4000-170-0000     | <b>00129916</b> | STARTER AUTOMATICO     |              | <b>77,47</b>      | 1      |
| ● 3   | D1310-853-0110    | <b>00126704</b> | GALLEGGIANTE           |              | <b>3,62</b>       | 1      |
| ● 7   | N413-30B00        | <b>00129007</b> | POLVERIZZATORE         |              | <b>6,00</b>       | 1      |
| ● 8   | 1001-MA1H-0351    | <b>00126722</b> | GETTO MINIMO #35       |              | <b>4,65</b>       | 1      |
| ● 9   | N425-BVA00        | <b>00129009</b> | SPILLO CONICO          |              | <b>8,00</b>       | 1      |
| ● 10  | 16111-KN7-7410-M1 | <b>00126718</b> | MEMBRANA A DEPRESSIONE |              | <b>46,48</b>      | 1      |
| ○ 13  | W1561-107-9920    | <b>00129924</b> | STAFFA SUPPORTO CAVO   |              |                   | 1      |
| ● 14  | 16107-KJ9-0030    | <b>00126728</b> | CAPPUCCIO              |              | <b>4,00</b>       | 1      |
| ● 16  | 16051-KN7-7410-M1 | <b>00126724</b> | MOLLA GHIGLIOTTINA     |              | <b>3,62</b>       | 1      |
| ○ 17  | 93500-04008-1H    | <b>00117046</b> | VITE TESTA PIATTA      |              |                   | 2      |
| ○ 18  | 16080-KJ9-0030    | <b>00129900</b> | VITE TESTA PIATTA      |              |                   | 2      |
| ○ 19  | 93500-04014-1H    | <b>00129921</b> | VITE TESTA PIATTA      |              |                   | 4      |
| ○ 23  | 1703-GJ2H-0040    | <b>00111029</b> | FERMO STARTER          |              |                   | 1      |
| ● 24  | 99101-393-1020    | <b>00126727</b> | GETTO PRINCIPALE #115  |              | <b>3,62</b>       | 1      |
| ● 25  | 1010-43BH-9900    | <b>00129905</b> | GUIDA SPILLO           |              | <b>6,20</b>       | 1      |
| ● 27  | W1314-014-9901    | <b>00126706</b> | PERNO GALLEGGIANTE     |              | <b>3,62</b>       | 1      |
| ○ 29  | 93892-04008-18    | <b>00129917</b> | VITE RONDELLA 4 x 8    |              |                   | 2      |
| ○ 43  | 1531-803-2000     | <b>00129925</b> | CLIP GUIDA             |              |                   | 1      |
| ○ 87  | 1531-818-2000     | <b>00129087</b> | CLIP GUIDA             |              |                   | 1      |
| ● 175 | 1610K-KKC1-E000   | <b>00128173</b> | CARBURATORE            |              | <b>273,72</b>     | 1      |
| ● 177 | 37710-KGBG-E000   | <b>00129920</b> | RISCALDATORE           |              | <b>21,69</b>      | 1      |

03-11-04

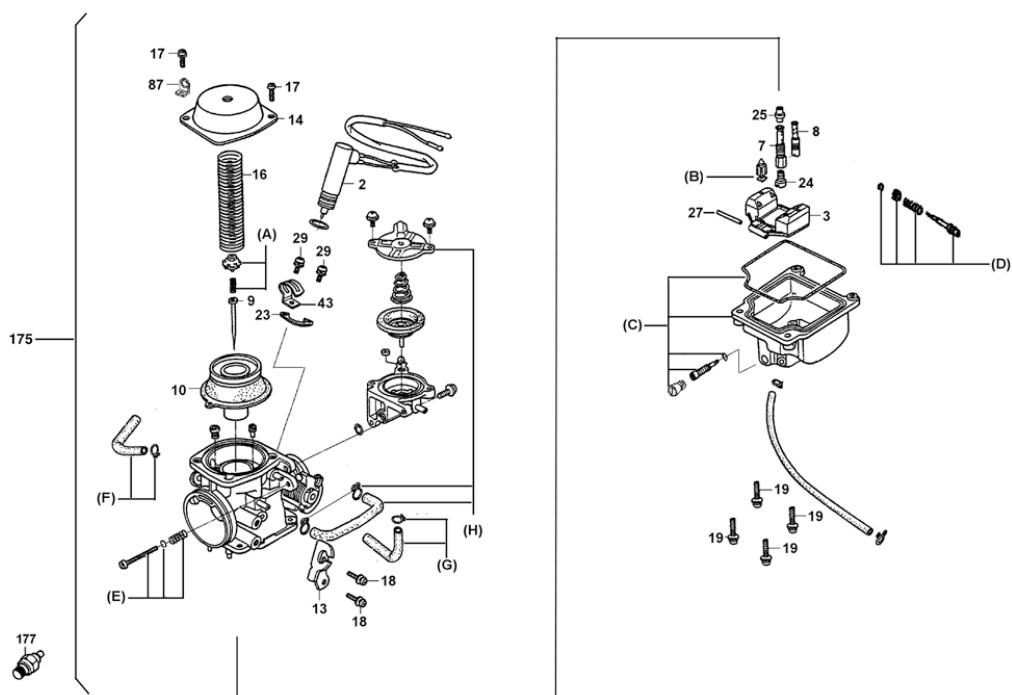

CODICE KY

CODICE PIR


DESCRIZIONE

DA N° TELAIO

LISTINO IVA ESCL.

N° PZ.


03-11-04

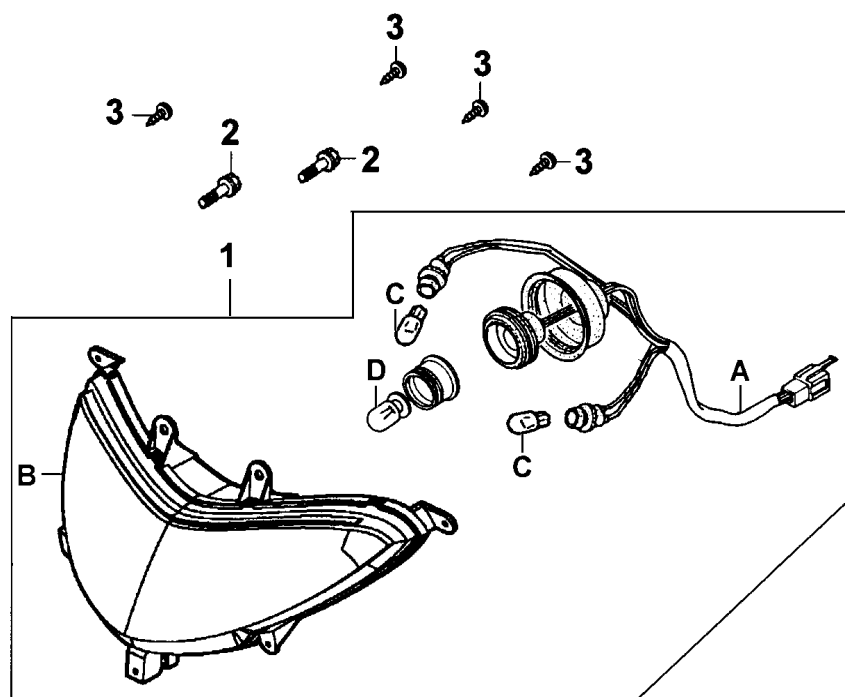

|     | CODICE KY       | CODICE PIR | DESCRIZIONE                | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-----|-----------------|------------|----------------------------|--------------|-------------------|--------|
| E B | 33120-KKC4-E000 | 00150600   | FARO ANT.                  |              |                   | 1      |
| ○ A | 33130-KKC4-E000 | 00150910   | CAVO CON PORTALAMPADA      |              |                   | 1      |
| ● D | 34901-KED9-900  | 00150309   | LAMP. FARO ANT.            |              | 20,00             | 1      |
| ● C | 34903-KCP-9000  | 00150407   | LAMPADINA 5W-12V           |              | 3,10              | 2      |
| ● 1 | 33100-KKC4-E000 | 00150909   | FARO ANTERIORE COMPLETO    |              | 139,44            | 1      |
| ● 2 | 95701-06012-08  | 00159015   | VITE FLANGIATA 6X12        |              | 1,00              | 2      |
| ○ 3 | 93903-35380     | 00150702   | VITE AUTOFILETTANTE 5 x 16 |              |                   | 4      |




03-11-04

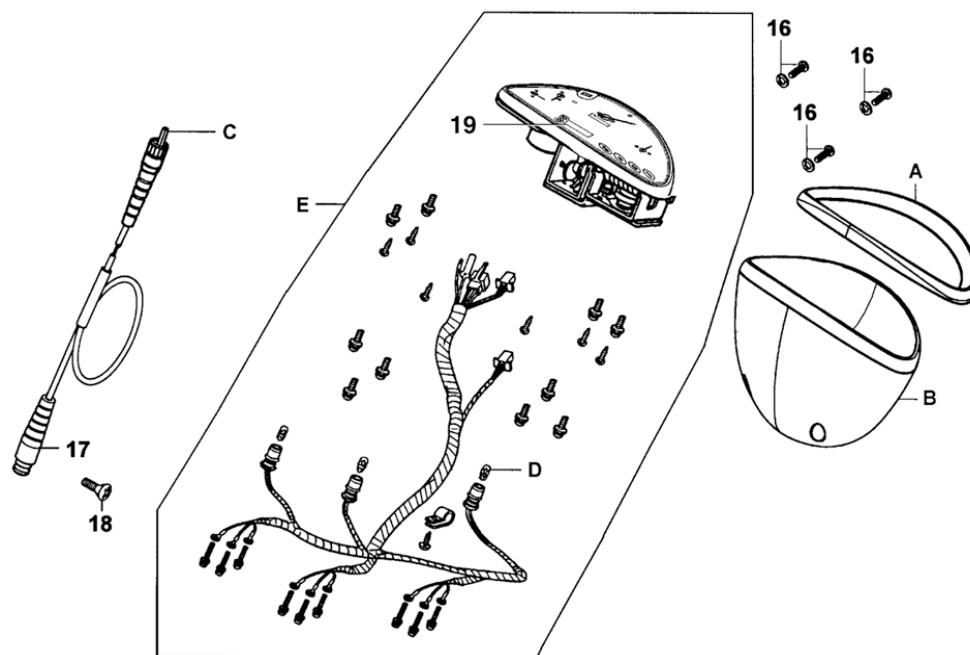


|      | CODICE KY          | CODICE PIR      | DESCRIZIONE                | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|------|--------------------|-----------------|----------------------------|--------------|-------------------|--------|
| ● D  | 34908-MB9-8710-M1  | <b>00151002</b> | LAMPADA A INNESTO 12V 1,7W |              | <b>2,32</b>       | 2      |
| ● E  | 37200-KKC1-E00     | <b>00159026</b> | STRUMENTAZIONE COMPLETA    |              | <b>185,92</b>     | 1      |
| ● A  | 37203-KKC3-900-N8P | <b>00159027</b> | CORNICE CRUSCOTTO NH045    |              | <b>20,66</b>      | 1      |
| ● B  | 37204-KKC3-900-N8P | <b>00159028</b> | CRUSCOTTO NH045            |              | <b>39,00</b>      | 1      |
| ○ C  | 44831-KKC4-9000    | <b>00151920</b> | FILO CONTA-KM              |              |                   | 1      |
| ○ 16 | 90302-GY6-9400     | <b>00155515</b> | VITE RONDELLA 5 x 12       |              |                   | 3      |
| ● 17 | 44830-KKC4-9000    | <b>00151171</b> | CAVO COMPLETO CONTA KM     |              | <b>15,49</b>      | 1      |
| ● 18 | 93700-05018-0H     | <b>00156031</b> | VITE OVALE 5X18 ±          |              | <b>3,10</b>       | 1      |
| ● 19 | 37280-KKC3-9000    | <b>00151025</b> | OROLOGIO DIGITALE          |              | <b>39,00</b>      | 1      |

03-11-04

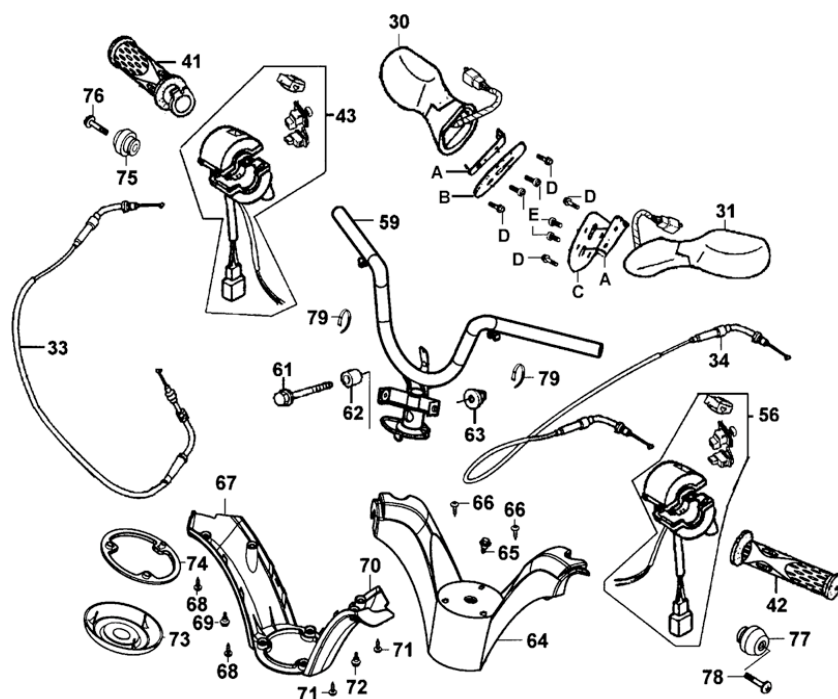


|      | CODICE KY          | CODICE PIR | DESCRIZIONE                   | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|------|--------------------|------------|-------------------------------|--------------|-------------------|--------|
| ● A  | 88114-KKC4-9000    | 00163031   | STAFFA RETROVISORE            |              | 13,94             | 1      |
| ● B  | 88115-KKC4-9000    | 00163032   | GUARNIZIONE RETROVISORE DX    |              | 3,62              | 1      |
| ● C  | 88125-KKC4-9000    | 00163033   | GUARNIZIONE RETROVISORE SX    |              | 3,62              | 1      |
| ● D  | 88130-KKC4-9000    | 00163035   | VITE SPECIALE                 |              | 3,10              | 4      |
| ○ E  | 93500-05020-0H     | 00152597   | VITE TESTA PIATTA 5 x 20      |              |                   | 4      |
| ● 30 | 88110-KKC3-900-BHP | 00163036A  | RETROVISORE DX BLU GARDA      |              | 67,14             | 1      |
| ● 30 | 88110-KKC3-900-N8P | 00163036S  | RETROVISORE DX ARGENTO METAL  |              | 67,14             | 1      |
| ● 30 | 88110-KKC3-900-NFP | 00163036N  | RETROVISORE DX NERO NH124     |              | 67,14             | 1      |
| ● 30 | 88110-KKC3-900-R1P | 00163036H  | RETROVISORE DX ROSSO RR004    |              | 67,14             | 1      |
| ● 31 | 88120-KKC3-900-BHP | 00163037A  | RETROVISORE SX BLU GARDA      |              | 67,14             | 1      |
| ● 31 | 88120-KKC3-900-N8P | 00163037S  | RETROVISORE SX ARGENTO METAL  |              | 67,14             | 1      |
| ● 31 | 88120-KKC3-900-NFP | 00163037N  | RETROVISORE SX NERO SMOKE     |              | 67,14             | 1      |
| ● 31 | 88120-KKC3-900-R1P | 00163037H  | RETROVISORE SX ROSSO RR004    |              | 67,14             | 1      |
| ● 33 | 17910-KKC3-9000    | 00152934   | CAVO ACCELERATORE             |              | 17,56             | 1      |
| ● 41 | 53140-KKC3-900-N1R | 00152996   | MANOPOLA ACCELERATORE NH001   |              | 6,71              | 1      |
| ● 42 | 53166-KGB5-900-N1R | 00152322   | MANOPOLA SX                   |              | 6,71              | 1      |
| ● 43 | 3515A-KKC2-E000    | 00152951   | GRUPPO COMANDI DX             |              | 41,32             | 1      |
| ● 56 | 3520A-KBE-9000     | 00152928   | GRUPPO COMANDI SX             |              | 29,95             | 1      |
| ● 59 | 53100-KKC4-9000    | 00152171   | MANUBRIO                      |              | 67,14             | 1      |
| ● 61 | 90106-GN5-9010     | 00172212   | VITE FLANGIATA 10X50          |              | 4,13              | 1      |
| ● 62 | 53125-GN5-9010     | 00152745   | SEDE VITE MANUBRIO            |              | 4,13              | 1      |
| ● 63 | 90304-GE8-0040     | 00153206   | DADO FLANGIATO 10MM AUTOBLOC. |              | 4,13              | 1      |
| ● 64 | 53205-KKC4-900-N8P | 00170109   | COPRIMANUBRIO SUP.            |              | 46,48             | 1      |
| ○ 65 | 90302-KEC8-9000    | 00152061   | VITE RONDELLA 5 X 9           |              |                   | 1      |
| ○ 66 | 93903-35380        | 00150702   | VITE AUTOFILETTANTE 5 x 16    |              |                   | 2      |
| ● 67 | 53206-KKC4-900-N1R | 00152172   | COPRIMANUBRIO INF. DX         |              | 7,75              | 1      |
| ● 68 | 93903-34380        | 00153009   | VITE AUTOFILETTANTE M4 x 12   |              | 1,00              | 2      |
| ● 69 | 90302-GY6-9010     | 00160702   | VITE RONDELLA 5X12            |              | 1,00              | 1      |
| ● 70 | 53207-KKC4-900-N1R | 00152176   | COPRIMANUBRIO INF. SX         |              | 7,75              | 1      |

03-11-04

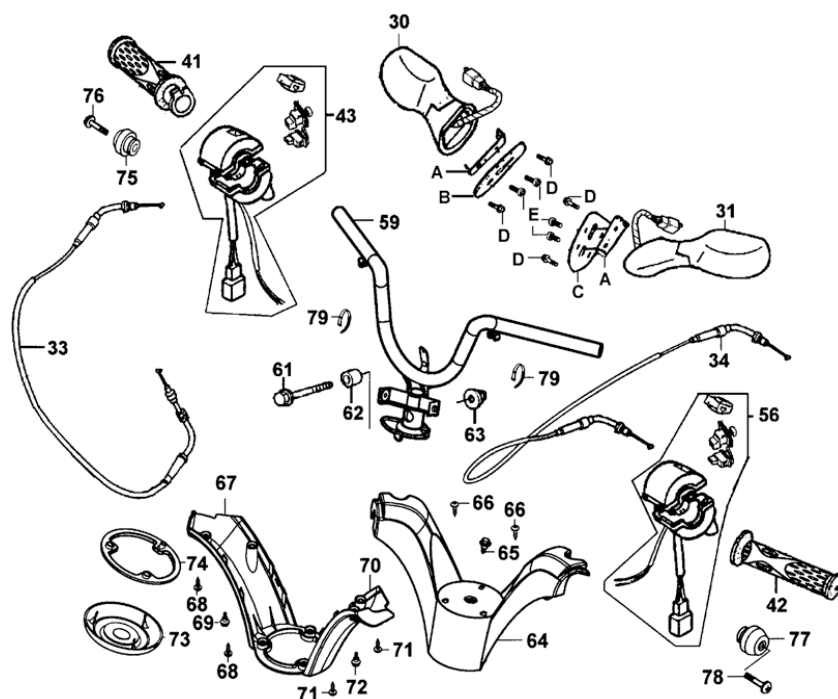


|      | CODICE KY          | CODICE PIR | DESCRIZIONE                 | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|------|--------------------|------------|-----------------------------|--------------|-------------------|--------|
| ● 71 | 93903-34380        | 00153009   | VITE AUTOFILETTANTE M4 x 12 |              | 1,00              | 2      |
| ● 72 | 90302-GY6-9010     | 00160702   | VITE RONDELLA 5X12          |              | 1,00              | 1      |
| ● 73 | 53208-KKC4-900-N8P | 00170111   | TAPPO COPRIMANUBRIO SUP.    |              | 13,94             | 1      |
| ● 74 | 53209-KKC4-9000    | 00152173   | GUARNIZIONE COPRIMANUBRIO   |              | 7,75              | 1      |
| ● 75 | 53105-KFC8-9000    | 00152911   | CONTRAPPESO MANOPOLA DX ±   |              | 9,30              | 1      |
| ● 75 | 53105-KKC4-900     | 00152914   | CONTRAPPESO MANOPOLA DX     | 24100747     | 9,30              | 1      |
| ● 76 | 90106-KFA6-9000    | 00161308   | VITE SPECIALE 8X75          | 24100747     | 7,75              | 1      |
| ● 76 | 90106-KFC2-9000    | 00152330   | VITE SPECIALE 8 x 42        |              | 5,00              | 1      |
| ● 77 | 53106-KFC8-9000    | 00152912   | CONTRAPPESO MANOPOLA SX ±   |              | 9,30              | 1      |
| ● 77 | 53106-KKC4-900     | 00152915   | CONTRAPPESO MANOPOLA SX     | 24100747     | 9,30              | 1      |
| ● 78 | 90106-KFA6-9000    | 00161308   | VITE SPECIALE 8X75          | 24100747     | 7,75              | 1      |
| ● 78 | 90106-KFC2-9000    | 00152330   | VITE SPECIALE 8 x 42        |              | 5,00              | 1      |
| ● 79 | 90656-GY6-9110     | 00159961   | FASCETTA TUBO OLIO          |              | 3,10              | 2      |

03-11-04

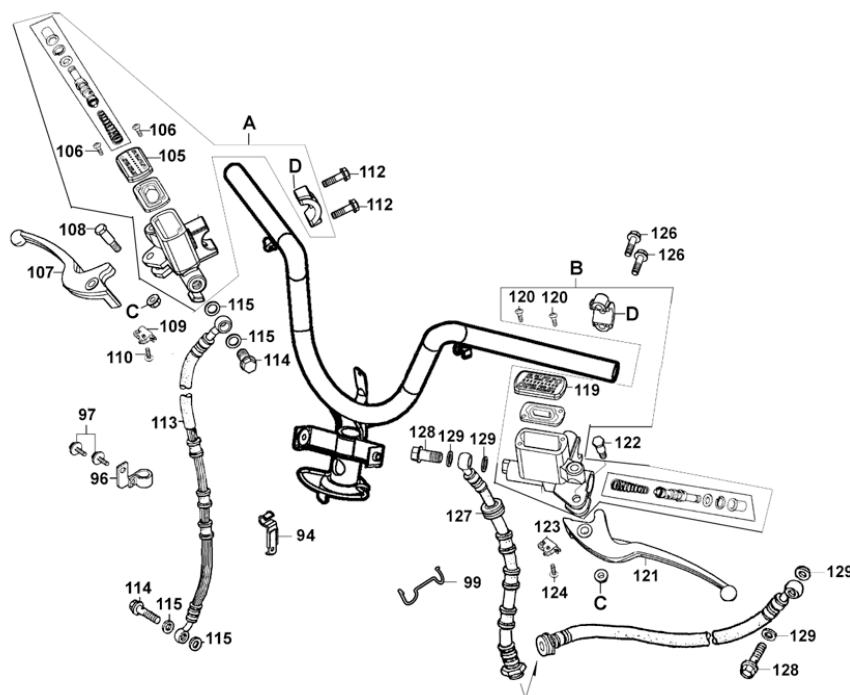

|       | CODICE KY          | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|--------------------|------------|--------------------------------|--------------|-------------------|--------|
| ● B   | 43530-KFC8-3050    | 00153979   | CORPO POMPA SX                 |              | 92,96             | 1      |
| ● D   | 45517-KAK-9000     | 00152353   | STAFFA SUPPORTO POMPA ±        |              | 3,62              | 2      |
| ● A   | 45530-KFC8-E000-IT | 00153962   | CORPO POMPA DX                 |              | 92,96             | 1      |
| ○ C   | 94050-06070        | 00172205   | DADO FLANGIATO 6mm             |              |                   | 2      |
| ○ 94  | 43156-KKC3-9000    | 00153094   | MORSETTO TUBO FRENO            |              |                   | 1      |
| ○ 96  | 45128-KBE-9000     | 00153996   | SUPP. TUBO FRENO ANT.          |              |                   | 1      |
| ● 97  | 95701-06012-08     | 00159015   | VITE FLANGIATA 6X12            |              | 1,00              | 2      |
| ○ 99  | 43156-KKC4-9000    | 00153373   | MORSETTO TUBO FRENO            |              |                   | 1      |
| ● 105 | 45513-KCX-M000-US  | 00153122   | COPERCHIO CORPO POMPA          |              | 6,00              | 1      |
| ○ 106 | 93600-04012-1G     | 00153505   | VITE 4 x 12                    |              |                   | 2      |
| ● 107 | 53175-KFA5-E10-M3A | 00153960   | LEVA FRENO DX ARGENTO          |              | 14,46             | 1      |
| ● 108 | 90114-166-0070     | 00154210   | VITE LEVA FRENO ±              |              | 3,10              | 1      |
| ● 109 | 35340-KBN-9000     | 00154204   | CONTATTO STOP FRENO ANTERIORE± |              | 6,97              | 1      |
| ○ 110 | 93893-04012-18     | 00154209   | VITE RONDELLA 4 x 12           |              |                   | 1      |
| ● 112 | 95701-06022-07     | 00165007   | VITE FLANGIATA 6X22 (NERA)     |              | 3,10              | 2      |
| ● 113 | 45126-KHD8-9000    | 00153970   | TUBO FLESSIBILE FRENO ANT.     |              | 61,97             | 1      |
| ● 114 | 90145-MS9-6120-M1  | 00154205   | RACCORDO FILETTATO 10X22       |              | 4,13              | 2      |
| ● 115 | 90545-300-0010     | 00154206   | GUARNIZIONE TUBO FRENO ±       |              | 3,10              | 4      |
| ● 119 | 45513-KCX-M000-US  | 00153122   | COPERCHIO CORPO POMPA          |              | 6,00              | 1      |
| ○ 120 | 93600-04012-1G     | 00153505   | VITE 4 x 12                    |              |                   | 2      |
| ● 121 | 53178-KFC8-E10-M3A | 00153977   | LEVA FRENO SX ARGENTO          |              | 14,46             | 1      |
| ● 122 | 90114-166-0070     | 00154210   | VITE LEVA FRENO ±              |              | 3,10              | 1      |
| ● 123 | 35350-KBN-900      | 00155604   | CONTATTO STOP FRENO POSTERIORE |              | 9,30              | 1      |
| ○ 124 | 93893-04012-18     | 00154209   | VITE RONDELLA 4 x 12           |              |                   | 1      |
| ● 126 | 95701-06022-07     | 00165007   | VITE FLANGIATA 6X22 (NERA)     |              | 3,10              | 2      |
| ● 127 | 43126-KKC2-E000    | 00153914   | TUBO COMPLETO FRENO POST.      |              | 92,96             | 1      |
| ● 128 | 90145-MS9-6120-M1  | 00154205   | RACCORDO FILETTATO 10X22       |              | 4,13              | 2      |
| ● 129 | 90545-300-0010     | 00154206   | GUARNIZIONE TUBO FRENO ±       |              | 3,10              | 4      |


03-11-04

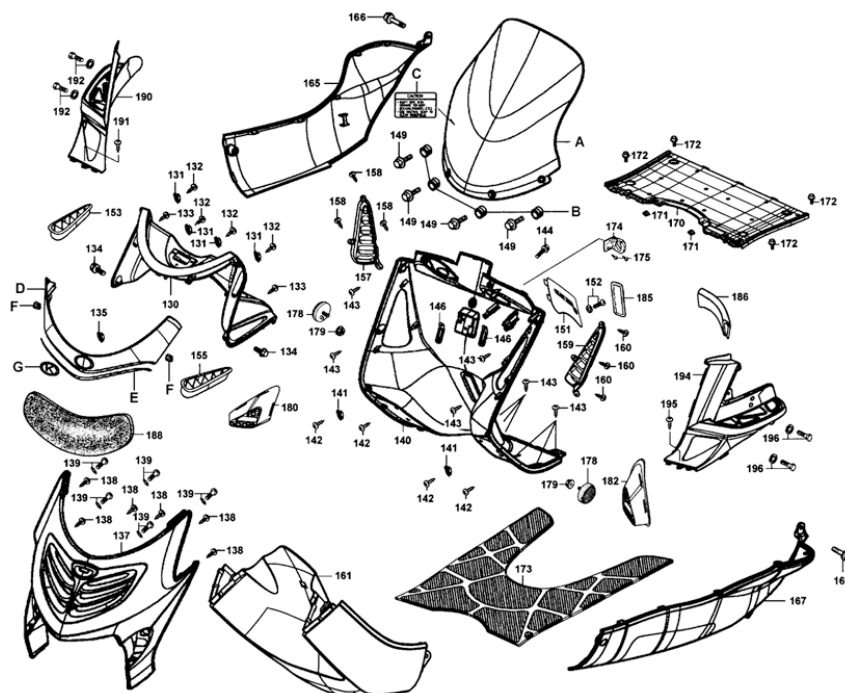

|       | CODICE KY          | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|--------------------|------------|--------------------------------|--------------|-------------------|--------|
| ● A   | 64220-KKC4-9000    | 00151831   | PARABREZZA                     |              | 108,46            | 1      |
| ● E   | 64221-KKC4-9000    | 00151834   | GUARNIZIONE PROFILO SCUDO ANT. |              | 3,00              | 1      |
| ● B   | 64222-KKC4-9000    | 00170113   | GOMMINO PARABREZZA             |              | 0,93              | 4      |
| ● D   | 64301-KKC4-900-BHP | 00154120A  | PROFILO SCUDO ANT.BLU GARDA    |              | 32,02             | 1      |
| ● D   | 64301-KKC4-900-N8P | 00154120S  | PROFILO SCUDO ANT.ARGENTO MET. |              | 32,02             | 1      |
| ● D   | 64301-KKC4-900-NFP | 00154120N  | PROFILO SCUDO ANT.NERO SMOKE   |              | 32,02             | 1      |
| ● D   | 64301-KKC4-900-R1P | 00154120H  | PROFILO SCUDO ANT.ROSSO RACING |              | 32,02             | 1      |
| ○ C   | 87508-KKC4-E00     | 00151832   | ETICHETTA PARABREZZA           |              |                   | 1      |
| ● F   | 90302-SA4-0040     | 00162570   | INSERTO FILETTATO 4MM          |              | 3,10              | 2      |
| ● 130 | 53204-KKC4-900-N1R | 00154942   | SCUDO INTERNO SUPERIORE        |              | 23,24             | 1      |
| ● 131 | 90302-SA4-0040     | 00162570   | INSERTO FILETTATO 4MM          |              | 3,10              | 4      |
| ● 132 | 93903-34380        | 00153009   | VITE AUTOFILETTANTE M4 x 12    |              | 1,00              | 4      |
| ○ 133 | 93903-GY6-900      | 00154705   | VITE AUTOFILETTANTE 4 x 14     |              |                   | 2      |
| ● 134 | 90302-GY6-9010     | 00160702   | VITE RONDELLA 5X12             |              | 1,00              | 2      |
| ● 135 | 90677-GR1-0040     | 00154014   | CLIP FILETTATA 5MM ±           |              | 2,00              | 1      |
| ● 137 | 64302-KKC4-900-BHP | 00154630A  | SCUDO ANT.BLU GARDA            |              | 165,27            | 1      |
| ● 137 | 64302-KKC4-900-N8P | 00154630S  | SCUDO ANT.ARGENTO              |              | 165,27            | 1      |
| ● 137 | 64302-KKC4-900-NFP | 00154630N  | SCUDO ANT.NERO SMOKE           |              | 165,27            | 1      |
| ● 137 | 64302-KKC4-900-R1P | 00154630H  | SCUDO ANT.ROSSO RACING         |              | 165,27            | 1      |
| ● 138 | 93903-34380        | 00153009   | VITE AUTOFILETTANTE M4 x 12    |              | 1,00              | 6      |
| ○ 139 | 93903-KEB7-9000    | 00154194   | VITE RONDELLA 4mm              |              |                   | 5      |
| ● 140 | 81131-KKC4-900-N1R | 00154141   | SCUDO INTERNO INFERIORE        |              | 98,13             | 1      |
| ● 141 | 90302-SA4-0040     | 00162570   | INSERTO FILETTATO 4MM          |              | 3,10              | 2      |
| ○ 142 | 93903-GY6-900      | 00154705   | VITE AUTOFILETTANTE 4 x 14     |              |                   | 4      |
| ● 143 | 93903-34380        | 00153009   | VITE AUTOFILETTANTE M4 x 12    |              | 1,00              | 10     |
| ○ 144 | 93404-KKC2-900     | 00168560   | VITE RONDELLA 6 x 16           |              |                   | 1      |
| ○ 146 | 94591-27000        | 00154023   | CLIP 2 x 70                    |              |                   | 2      |
| ● 149 | 90302-GR2-0000     | 00160006   | VITE RONDELLA 5 x 16           |              | 3,10              | 4      |
| ● 151 | 81136-KKC4-900-N1R | 00154143   | COP.VASCHETTA LIQ.RAFFRED.     |              | 6,71              | 1      |




03-11-04

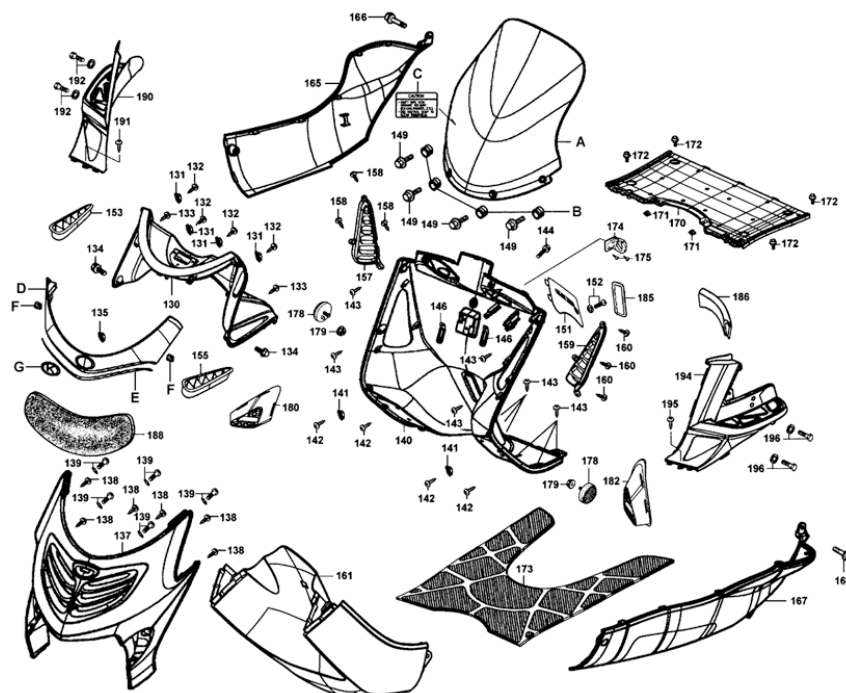

|   | CODICE KY              | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|---|------------------------|------------|--------------------------------|--------------|-------------------|--------|
| ○ | 152 93891-05012-07     | 00171211   | VITE RONDELLA 5 x 12           |              |                   | 1      |
| ● | 153 53214-KKC4-900-N1R | 00152177   | GRIGLIA DX SCUDO INT.SUPERIORE |              | 3,10              | 1      |
| ● | 155 53224-KKC4-900-N1R | 00152178   | GRIGLIA SX SCUDO INT.SUPERIORE |              | 3,10              | 1      |
| ● | 157 81137-KKC4-900-N1R | 00154144   | GRIGLIA DX SCUDO INT.INFERIORE |              | 9,30              | 1      |
| ● | 158 93903-34380        | 00153009   | VITE AUTOFILETTANTE M4 x 12    |              | 1,00              | 3      |
| ● | 159 81147-KKC4-900-N1R | 00154147   | GRIGLIA SX SCUDO INT.INFERIORE |              | 9,30              | 1      |
| ● | 160 93903-34380        | 00153009   | VITE AUTOFILETTANTE M4 x 12    |              | 1,00              | 3      |
| ● | 161 64400-KKC4-900-BHP | 00154183A  | SPOILER BLU GARDA              |              | 144,61            | 1      |
| ● | 161 64400-KKC4-900-N8P | 00154183S  | SPOILER ARGENTO METAL          |              | 144,61            | 1      |
| ● | 161 64400-KKC4-900-NFP | 00154183N  | SPOILER NERO SMOKE             |              | 144,61            | 1      |
| ● | 161 64400-KKC4-900-R1P | 00154183H  | SPOILER ROSSO RACING           |              | 144,61            | 1      |
| ● | 165 64305-KKC4-900-BHP | 00154631A  | FASCIONE ANT.DX BLU            |              | 92,96             | 1      |
| ● | 165 64305-KKC4-900-N8P | 00154631S  | FASCIONE ANT.DX ARGENTO METAL  |              | 92,96             | 1      |
| ● | 165 64305-KKC4-900-NFP | 00154631N  | FASCIONE ANT.DX NERO SMOKE     |              | 92,96             | 1      |
| ● | 165 64305-KKC4-900-R1P | 00154631H  | FASCIONE ANT.DX ROSSO RACING   |              | 92,96             | 1      |
| ○ | 166 90302-GY6-9400     | 00155515   | VITE RONDELLA 5 x 12           |              |                   | 1      |
| ● | 167 64306-KKC4-900-BHP | 00154632A  | FASCIONE ANT.SX BLU GARDA      |              | 92,96             | 1      |
| ● | 167 64306-KKC4-900-N8P | 00154632S  | FASCIONE ANT.SX ARGENTO METAL  |              | 92,96             | 1      |
| ● | 167 64306-KKC4-900-NFP | 00154632N  | FASCIONE ANT.SX NERO SMOKE     |              | 92,96             | 1      |
| ● | 167 64306-KKC4-900-R1P | 00154632H  | FASCIONE ANT.SX ROSSO RACING   |              | 92,96             | 1      |
| ○ | 168 90302-GY6-9400     | 00155515   | VITE RONDELLA 5 x 12           |              |                   | 1      |
| ● | 170 64310-KKC4-900-N1R | 00154166   | PEDANA                         |              | 67,14             | 1      |
| ● | 171 90302-SA4-0040     | 00162570   | INSERTO FILETTATO 4MM          |              | 3,10              | 2      |
| ○ | 172 93404-06020-07     | 00154548   | VITE RONDELLA 6 x 20           |              |                   | 4      |
| ● | 173 64320-KKC4-900-N1R | 00154174   | COPRIPEDANA NH001              |              | 26,86             | 1      |
| ● | 174 8376A-KBE-900      | 00154938   | GANCIO PORTABORSA              |              | 9,30              | 1      |
| ○ | 175 93903-GY6-900      | 00154705   | VITE AUTOFILETTANTE 4 x 14     |              |                   | 2      |
| ● | 178 33741-GY6-C300     | 00154946   | CATARIFRANGENTE LATERALE ±     |              | 8,26              | 2      |
| ● | 179 94050-06080        | 00109022   | DADO FLANGIATO 6mm             |              | 1,55              | 2      |




03-11-04

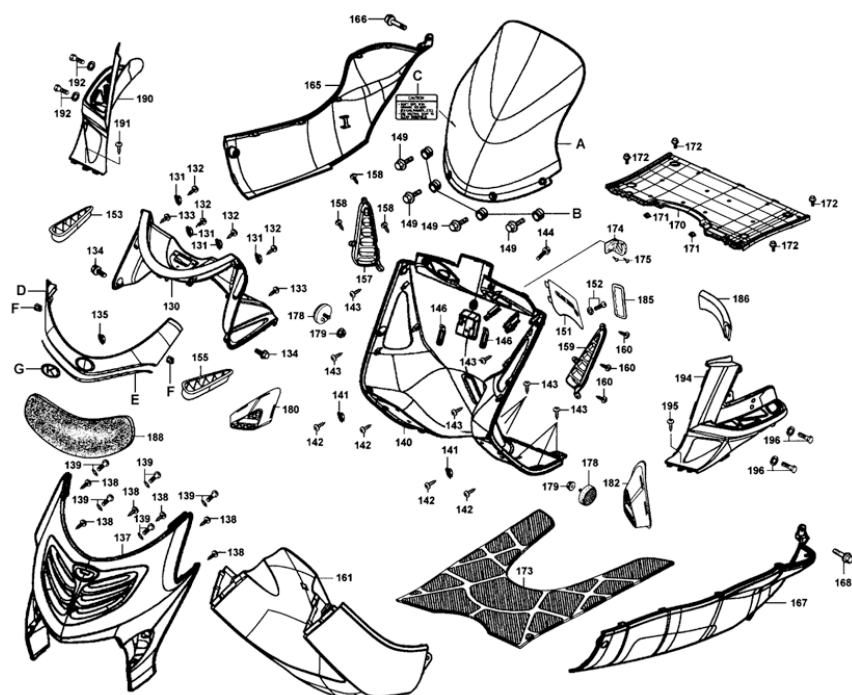


|   | CODICE KY              | CODICE PIR | DESCRIZIONE                 | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|---|------------------------|------------|-----------------------------|--------------|-------------------|--------|
| ● | 180 64312-KKC4-900-N1R | 00154176   | GRIGLIA POGGIPIEDI DX       |              | 11,88             | 1      |
| ● | 182 64322-KKC4-900-N1R | 00154177   | GRIGLIA POGGIPIEDI SX       |              | 11,88             | 1      |
| ● | 185 81132-KEB7-900-N1R | 00154553   | COP.ISPEZIONE TELAIO        |              | 3,10              | 1      |
| ● | 186 64317-KKC4-9000    | 00152179   | GUARNIZIONE SCUDO INT.SUP.  |              | 6,20              | 1      |
| ● | 188 64309-KKC4-9000    | 00154029   | GRIGLIA SCUDO ANTERIORE     |              | 11,36             | 1      |
| ● | 190 64311-KKC4-900-N1R | 00154178   | POGGIPIEDI DX               |              | 13,94             | 1      |
| ● | 191 93903-34380        | 00153009   | VITE AUTOFILETTANTE M4 x 12 |              | 1,00              | 1      |
| ○ | 192 93404-06016-07     | 00163215   | VITE RONDELLA 6 x 16        |              |                   | 2      |
| ● | 194 64321-KKC4-900-N1R | 00154179   | POGGIPIEDI SX               |              | 13,94             | 1      |
| ● | 195 93903-34380        | 00153009   | VITE AUTOFILETTANTE M4 x 12 |              | 1,00              | 1      |
| ○ | 196 93404-06016-07     | 00163215   | VITE RONDELLA 6 x 16        |              |                   | 2      |

03-11-04

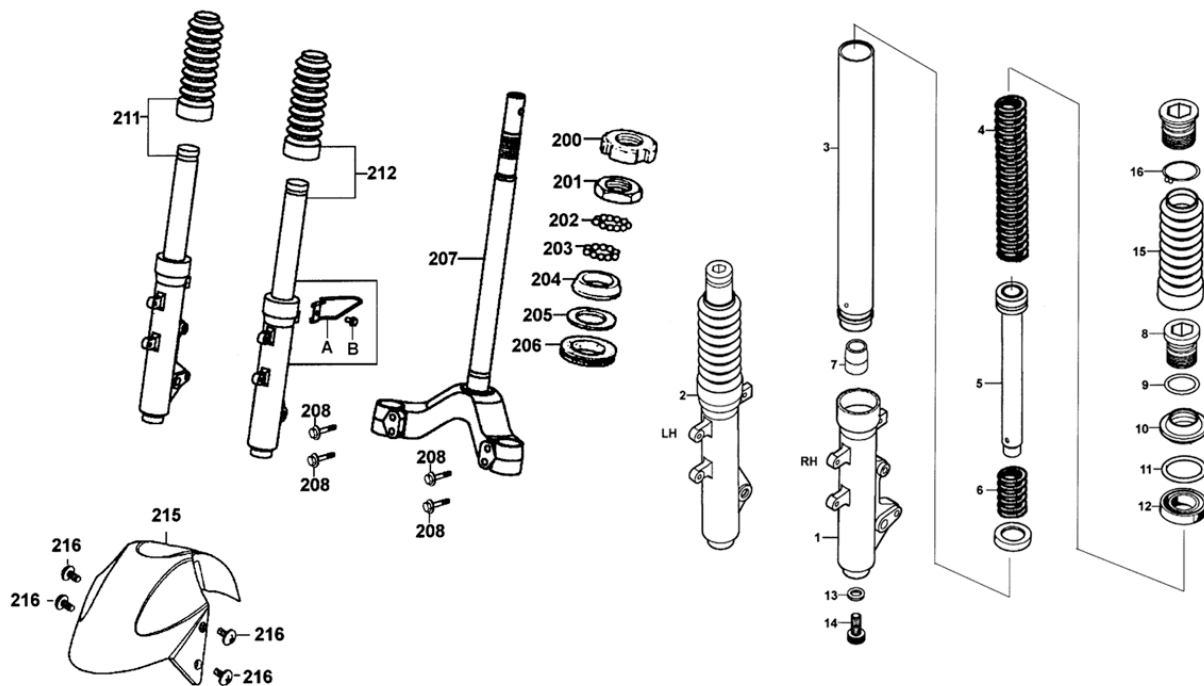


|       | CODICE KY          | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|--------------------|------------|--------------------------------|--------------|-------------------|--------|
| ● A   | 45156-KCE-9000     | 00155000   | SUPP. TUBO FRENO ANT.          |              | 3,00              | 1      |
| ● B   | 95701-06012-08     | 00159015   | VITE FLANGIATA 6X12            |              | 1,00              | 1      |
| ○ 1   | 51420-KKC4-9000    | 00155901   | FODERO DX                      |              |                   | 1      |
| ○ 2   | 51520-KKC4-9000    | 00155902   | FODERO SX                      |              |                   | 1      |
| ● 3   | 51410-KHD8-9000    | 00171903   | STELO                          |              | 56,81             | 2      |
| ● 4   | 51401-KHD8-9000    | 00171904   | MOLLA INFERIORE STELO          |              | 5,16              | 2      |
| ○ 5   | 51429-KHD8-9000    | 00171905   | TUBO CALIBRATO                 |              |                   | 2      |
| ● 6   | 51412-KHD8-9000    | 00171906   | MOLLA SUPERIORE STELO          |              | 4,65              | 2      |
| ○ 7   | 51422-KEC8-900     | 00171907   | BOCCOLA                        |              |                   | 2      |
| ○ 8   | 94605-KHD8-9000    | 00171908   | VITE FORCELLA                  |              |                   | 2      |
| ● 10  | 51427-KAK-9000     | 00156317   | PARAPOLVERE                    |              | 6,20              | 2      |
| ● 11  | 51428-KAK-9000     | 00156315   | FINE CORSA                     |              | 4,65              | 2      |
| ● 12  | 51423-KAK-9000     | 00156310   | PARAOILIO 33 x 46 x 11         |              | 6,20              | 2      |
| ○ 13  | 90544-KEC8-9000    | 00171013   | RONDELLA                       |              |                   | 2      |
| ○ 14  | 90116-KHD8-9000    | 00171014   | VITE A BRUGOLA                 |              |                   | 2      |
| ● 15  | 51411-KHD8-9000    | 00171015   | SOFFIETTO STELO                |              | 6,00              | 2      |
| ○ 16  | 51413-KHD8-9000    | 00171016   | FASCETTA SOFFIETTO             |              |                   | 2      |
| ● 200 | 50306-196-0010     | 00158205   | DADO SERRAGGIO STELO STERZO ±  |              | 2,32              | 1      |
| ● 201 | 53211-GY6-9400     | 00158214   | CONO SUPERIORE SFERE STERZO ±  |              | 4,39              | 1      |
| ● 202 | 96211-05000        | 00155025   | SFERE ACCIAIO # 3,9(SET 30 pz) |              | 4,65              | 26     |
| ● 203 | 96211-08000        | 00155753   | SFERE ACCIAIO # 6,3(SET 19 pz) |              | 4,65              | 19     |
| ● 204 | 53212-250-0110     | 00155754   | CONO INFERIORE SFERE STERZO ±  |              | 8,01              | 1      |
| ● 205 | 53215-250-0010     | 00155755   | RONDELLA PARAPOLVERE ±         |              | 1,81              | 1      |
| ● 206 | 53214-250-0010     | 00155756   | PARAPOLVERE ±                  |              | 3,10              | 1      |
| ● 207 | 53200-KKC2-9000    | 00155102   | FORCELLA PORTA STELI           |              | 82,63             | 1      |
| ● 208 | 95801-08040-07     | 00158211   | VITE FLANGIATA 8 x 40          |              | 2,00              | 4      |
| ● 211 | 51400-KKC4-E10     | 00155217   | STELO DX COMPLETO              | 24100747     | 113,62            | 1      |
| ● 212 | 5150A-KKC4-E10     | 00155218   | STELO SX COMPLETO              | 24100747     | 113,62            | 1      |
| ● 215 | 61110-KHD8-900-BHP | 00154921B  | PARAFANGO ANT.BLU GARDA        |              | 67,14             | 1      |

03-11-04

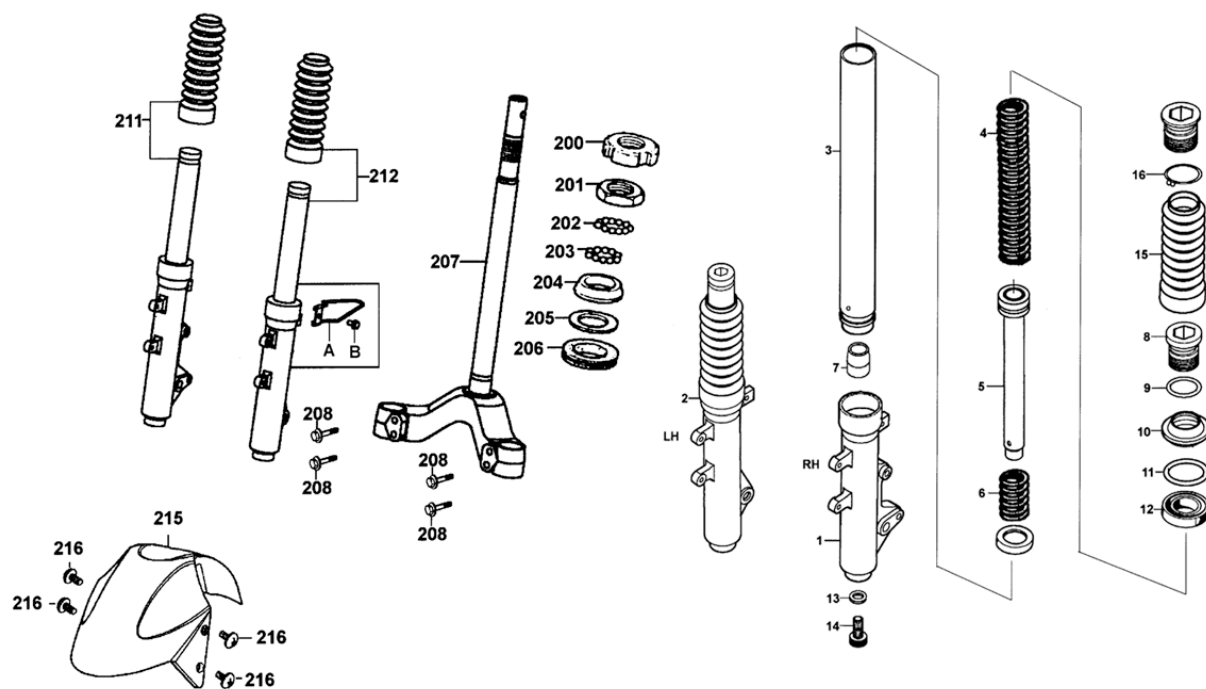


|   | CODICE KY              | CODICE PIR       | DESCRIZIONE                | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|---|------------------------|------------------|----------------------------|--------------|-------------------|--------|
| ● | 215 61110-KHD8-900-N8P | <b>00154921S</b> | PARAFANGO ANT.ARGENTO      |              | <b>67,14</b>      | 1      |
| ● | 215 61110-KHD8-900-NFP | <b>00154921N</b> | PARAFANGO ANT.NERO SMOKE   |              | <b>67,14</b>      | 1      |
| ● | 215 61110-KHD8-900-R1P | <b>00154921H</b> | PARAFANGO ANT.ROSSO RACING |              | <b>67,14</b>      | 1      |
| ● | 216 90110-KEB7-9000    | <b>00152575</b>  | VITE SPECIALE 6 x 14       |              | <b>1,00</b>       | 4      |

03-11-04

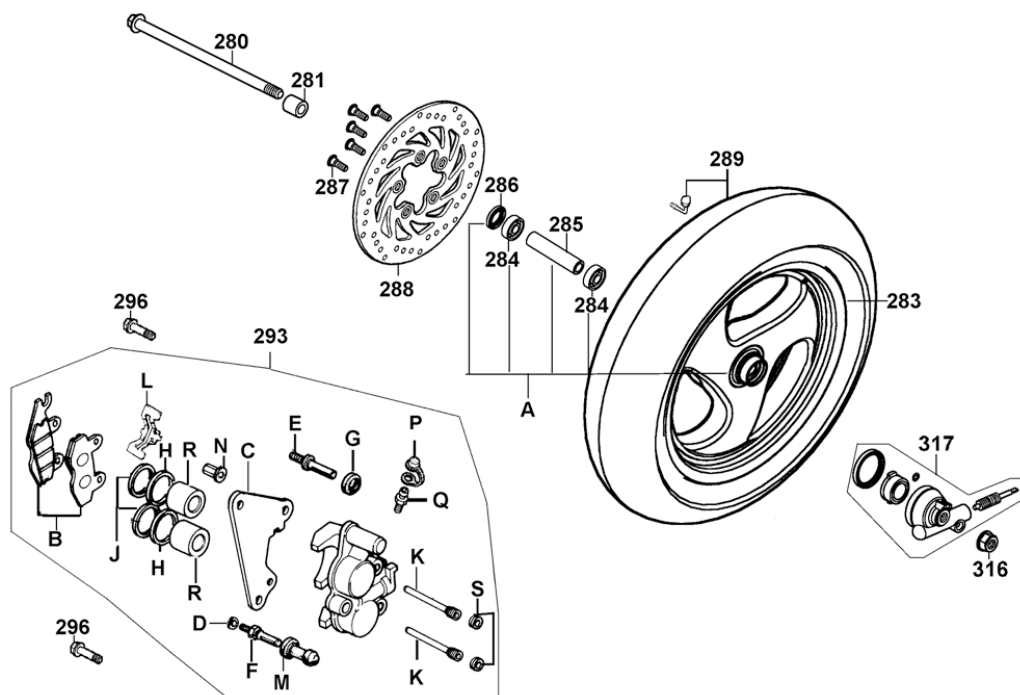

|       | CODICE KY          | CODICE PIR | DESCRIZIONE                   | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|--------------------|------------|-------------------------------|--------------|-------------------|--------|
| ● Q   | 43352-568-0030     | 00156983   | VITE DI SPURGO                |              | 9,00              | 1      |
| ✱ P   | 43353-461-7710-M1  | 00156984   | CAPPUCCIO SPURGO              |              | 1,00              | 1      |
| ● A   | 44650-KHD8-30A-NJA | 00156907   | CERCHIO ANT.(COMPLETO)        |              | 206,58            | 1      |
| ○ R   | 45107-MN5-0070     | 00156994   | PARAPOLVERE                   |              |                   | 2      |
| ● L   | 45108-ML4-0060     | 00156988   | MOLLA ±                       |              | 4,65              | 1      |
| ● J   | 45109-GE2-0060     | 00156989   | PARAPOLVERE ±                 |              | 7,75              | 2      |
| ● E   | 45131-GE2-0060     | 00156893   | PERNO FLOTTANTE SUPP.PINZA ±  |              | 9,30              | 1      |
| ● M   | 45132-166-0160     | 00156895   | PERNO FLOTTANTE PERNO PAST. ± |              | 9,30              | 1      |
| ○ G   | 45133-MA3-0060     | 00156891   | PROTEZIONE PERNO PINZA        |              |                   | 1      |
| ● B   | 45150-LLB5-3050    | 00126217   | PASTIGLIE ANTERIORI (COPPIA)  |              | 17,56             | 1      |
| ● H   | 45209-GE2-0060     | 00156890   | PARAPOLVERE ±                 |              | 8,26              | 2      |
| ● C   | 45210-KHD8-9000    | 00156990   | SUPPORTO PINZA ANTERIORE      |              | 26,00             | 1      |
| ● K   | 45215-KA3-7320-M1  | 00156898   | PERNO PINZA FRENO ±           |              | 4,00              | 2      |
| ○ D   | 45216-166-0060     | 00156295   | RONDELLA                      |              |                   | 1      |
| ○ S   | 45531-GR1-9510     | 00156927   | CAPPUCCIO                     |              |                   | 2      |
| ● F   | 45131-166-0160     | 00156894   | PERNO PASTIGLIA ±             |              | 9,30              | 1      |
| ● N   | 45216-KW6-9020-M1  | 00156956   | DADO SPECIALE ±               |              | 4,65              | 1      |
| ● 280 | 44301-KCX-900      | 00156860   | PERNO RUOTA ANTERIORE         |              | 7,75              | 1      |
| ● 281 | 44311-KBE-9000     | 00156971   | BOCCOLA LAT. RUOTA ANTERIORE  |              | 3,62              | 1      |
| ● 284 | 90912-GC8-00B      | 00156030   | CUSCINETTO 12X32X10 RAD.6201U |              | 11,36             | 2      |
| ● 285 | 44620-KHD8-9000    | 00156973   | DISTANZIALE PERNO RUOTA ANT.  |              | 7,75              | 1      |
| ● 286 | 90754-GC8-0030     | 00156029   | PARAPOLVERE 20 X32 X 5        |              | 3,36              | 1      |
| ● 287 | 90105-KR3-0010     | 00156556   | VITE DISCO 8X 24              |              | 4,65              | 5      |
| ● 288 | 45351-KHE7-E000    | 00156909   | DISCO ANTERIORE               |              | 56,81             | 1      |
| ● 289 | 44710-KKC4-900     | 00156592   | PNEUMATICO ANTERIORE          |              | 44,00             | 1      |
| ● 293 | 45200-KKC2-E00-NJA | 00159029   | PINZA ANTERIORE               |              | 118,79            | 1      |
| ✱ 296 | 90122-KBE-9000     | 00156901   | VITE FLANGIATA 8 x 32         |              | 4,00              | 2      |
| ● 316 | 90306-KF0-901      | 00156027   | DADO FLANGIATO 12MM AUTOBLOC. |              | 4,13              | 1      |
| ● 317 | 44800-KFA5-9000    | 00156904   | INGRANAGGIO CONTA KM ±        |              | 18,08             | 1      |

03-11-04

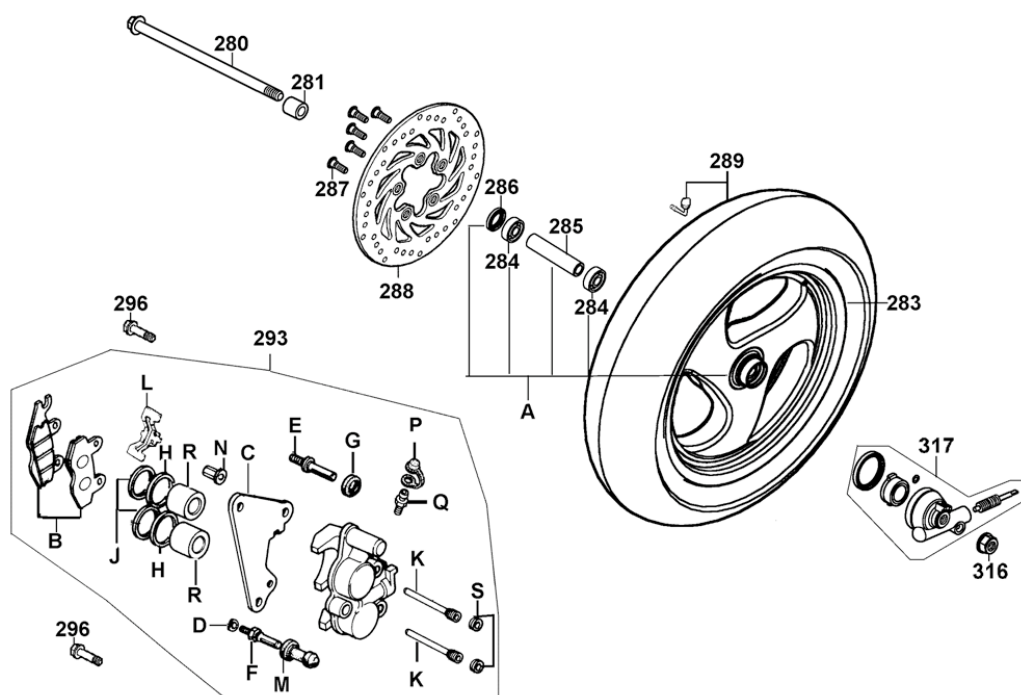

CODICE KY

CODICE PIR


DESCRIZIONE

DA N° TELAIO

LISTINO IVA ESCL.

N° PZ.


03-11-04

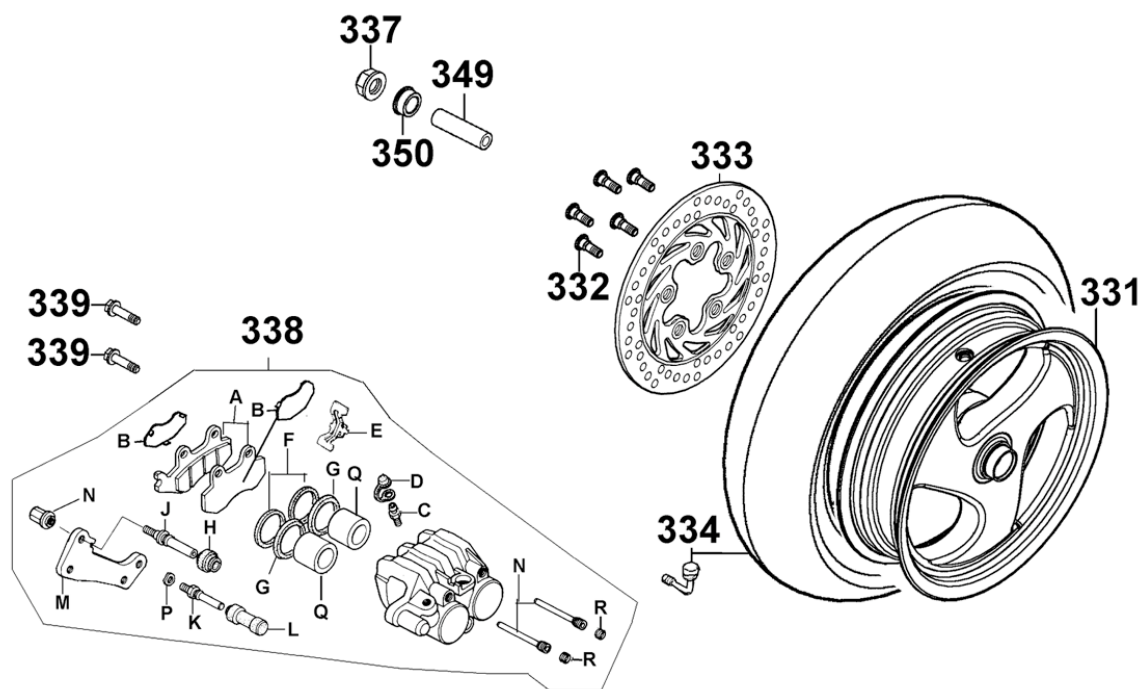

|       | CODICE KY          | CODICE PIR | DESCRIZIONE                   | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|--------------------|------------|-------------------------------|--------------|-------------------|--------|
| ● A   | 43150-KBE-3060     | 00157900   | PASTIGLIE POSTERIORI (COPPIA) |              | 17,56             | 1      |
| ● M   | 43210-KBE-900-N1A  | 00157977   | SUPPORTO PINZA POSTERIORE     |              | 17,00             | 1      |
| ○ B   | 43215-KBE-9000     | 00157000   | SUPPORTO PASTIGLIE            |              |                   | 2      |
| ● C   | 43352-568-0030     | 00156983   | VITE DI SPURGO                |              | 9,00              | 1      |
| ✱ D   | 43353-461-7710-M1  | 00156984   | CAPPUCCIO SPURGO              |              | 1,00              | 1      |
| ○ Q   | 45107-MN5-0070     | 00156994   | PARAPOLVERE                   |              |                   | 2      |
| ● E   | 45108-ML4-0060     | 00156988   | MOLLA ±                       |              | 4,65              | 1      |
| ● K   | 45131-166-0160     | 00156894   | PERNO PASTIGLIA ±             |              | 9,30              | 1      |
| ● J   | 45131-GE2-0060     | 00156893   | PERNO FLOTTANTE SUPP.PINZA ±  |              | 9,30              | 1      |
| ● L   | 45132-166-0160     | 00156895   | PERNO FLOTTANTE PERNO PAST. ± |              | 9,30              | 1      |
| ○ H   | 45133-MA3-0060     | 00156891   | PROTEZIONE PERNO PINZA        |              |                   | 1      |
| ● G   | 45209-GE2-0060     | 00156890   | PARAPOLVERE ±                 |              | 8,26              | 2      |
| ● P   | 45216-KW6-9020-M1  | 00156956   | DADO SPECIALE ±               |              | 4,65              | 1      |
| ○ R   | 45531-GR1-9510     | 00156927   | CAPPUCCIO                     |              |                   | 2      |
| ● F   | 45109-GE2-0060     | 00156989   | PARAPOLVERE ±                 |              | 7,75              | 2      |
| ● N   | 45215-KA3-7320-M1  | 00156898   | PERNO PINZA FRENO ±           |              | 4,00              | 2      |
| ● 331 | 42601-KHD8-90B-NJA | 00157990   | CERCHIO POSTERIORE            |              | 206,58            | 1      |
| ● 332 | 90105-KR3-0010     | 00156556   | VITE DISCO 8X 24              |              | 4,65              | 5      |
| ● 333 | 43351-KHE7-E00     | 00156976   | DISCO POSTERIORE              |              | 61,97             | 1      |
| ● 334 | 42710-KKC4-900     | 00157330   | PNEUMATICO POSTERIORE         |              | 48,00             | 1      |
| ● 337 | 90305-KW6-9120-M1  | 00157413   | DADO FLANGIATO 16MM           |              | 5,68              | 1      |
| ● 338 | 43100-KBE-910-N1A  | 00157336   | PINZA POSTERIORE              |              | 118,79            | 1      |
| ○ 339 | 90131-GW0-9110     | 00159217   | VITE FLANGIATA 8 x 35         |              |                   | 2      |
| ● 349 | 42311-KFC8-9000    | 00157997   | BOCCOLA ASSE POSTERIORE       |              | 13,43             | 1      |
| ● 350 | 42312-KBE-9000     | 00157938   | DISTANZIALE ASSE POSTERIORE ± |              | 6,20              | 1      |




03-11-04

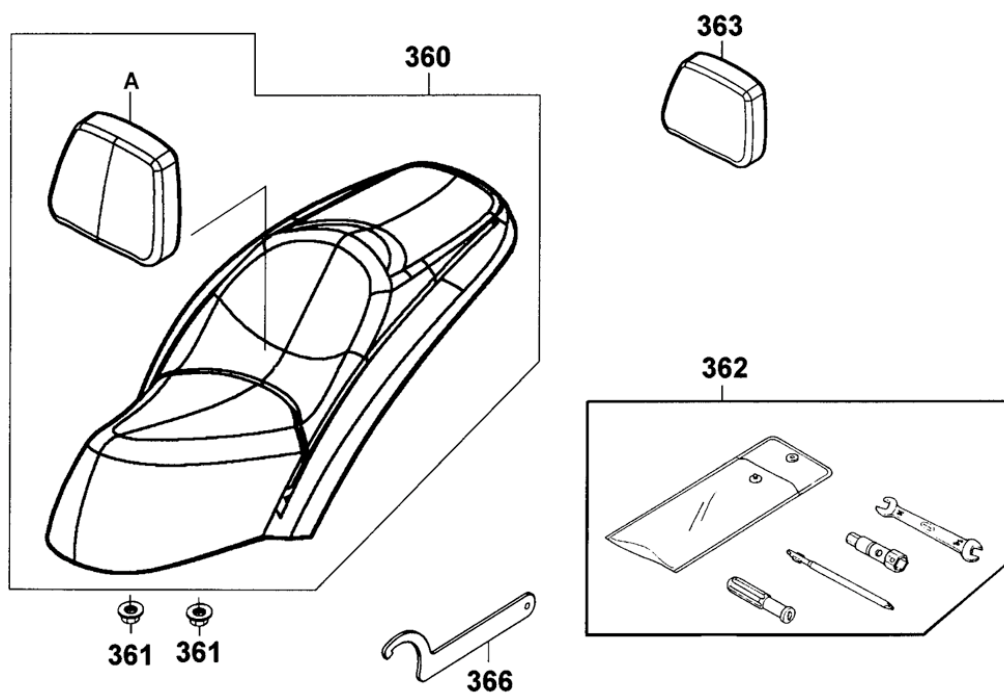

|       | CODICE KY          | CODICE PIR | DESCRIZIONE               | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|--------------------|------------|---------------------------|--------------|-------------------|--------|
| ● A   | 77220-KKC4-910-T01 | 00158995   | SCHIENALE SELLA           |              | 21,69             | 1      |
| ● 360 | 77200-KKC4-E10-T01 | 00158164   | SELLA                     |              | 149,77            | 1      |
| ● 361 | 94050-06080        | 00109022   | DADO FLANGIATO 6mm        |              | 1,55              | 2      |
| ● 362 | 89010-KN7-C000     | 00158942   | ATTREZZI(SET)             |              | 9,30              | 1      |
| ● 363 | 77210-KKC4-900-T01 | 00158165   | POGGIASCHIENA             |              | 45,96             | 1      |
| ● 366 | 89013-KFC8-E000    | 00158100   | REG. AMMORTIZZATORE POST. |              | 8,00              | 1      |




03-11-04

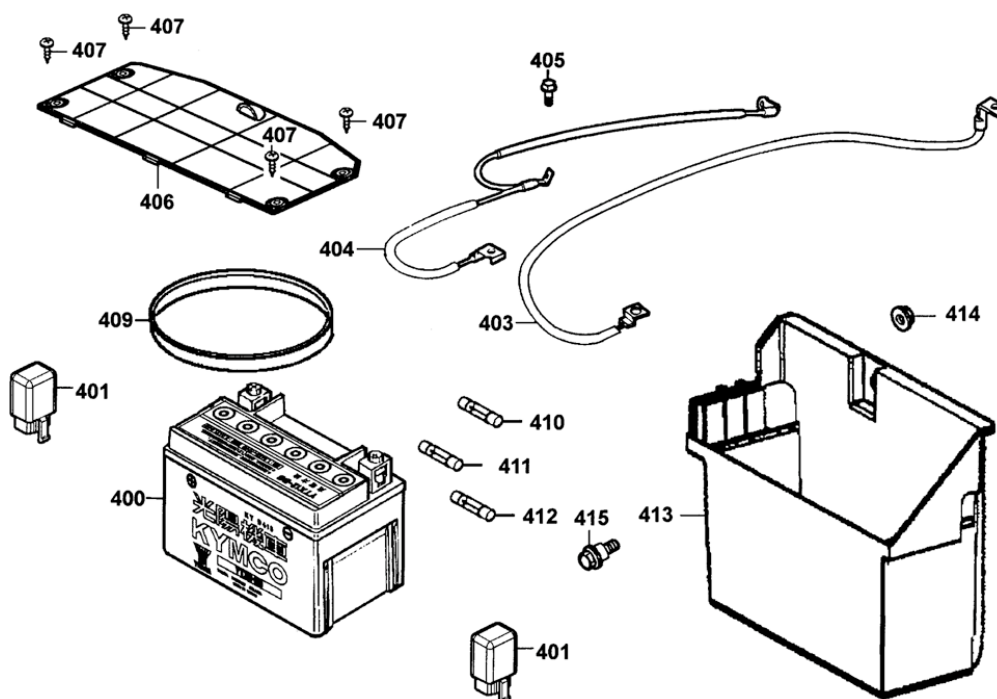


|   | CODICE KY              | CODICE PIR | DESCRIZIONE                | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|---|------------------------|------------|----------------------------|--------------|-------------------|--------|
| ● | 400 31500-KAF-9000-M1  | 00160700   | BATTERIA GTX9-BS ±         |              | 61,97             | 1      |
| ● | 401 38500-KHD8-9000-M1 | 00168930   | RELE' FARI                 |              | 30,99             | 2      |
| ● | 403 32411-KKC4-9000    | 00128971   | CAVO BATTERIA              |              | 8,00              | 1      |
| ✱ | 404 32412-KKC3-9000    | 00128973   | CAVO TERRA                 |              | 12,00             | 1      |
| ● | 405 95701-06012-08     | 00159015   | VITE FLANGIATA 6X12        |              | 1,00              | 1      |
| ● | 406 50326-KKC4-900-N1R | 00160404   | COPERCHIO SEDE BATTERIA    |              | 9,81              | 1      |
| ○ | 407 93903-GY6-900      | 00154705   | VITE AUTOFILETTANTE 4 x 14 |              |                   | 4      |
| ● | 409 50328-KBN-2000     | 00160408   | ELASTICO BATTERIA          |              | 4,00              | 1      |
| ● | 410 98200-31000        | 00155400   | FUSIBILE 10A               |              | 1,55              | 1      |
| ● | 411 98200-31500        | 00160409   | FUSIBILE 15A               |              | 1,50              | 1      |
| ● | 412 98200-33000        | 00155401   | FUSIBILE 30A               |              | 1,55              | 1      |
| ● | 413 5032A-KKC4-9000    | 00151916   | SEDE BATTERIA              |              | 9,30              | 1      |
| ● | 414 94050-06080        | 00109022   | DADO FLANGIATO 6mm         |              | 1,55              | 1      |
| ● | 415 90112-KBN-9010     | 00170205   | VITE FLANGIATA 6mm         |              | 1,00              | 1      |

03-11-04

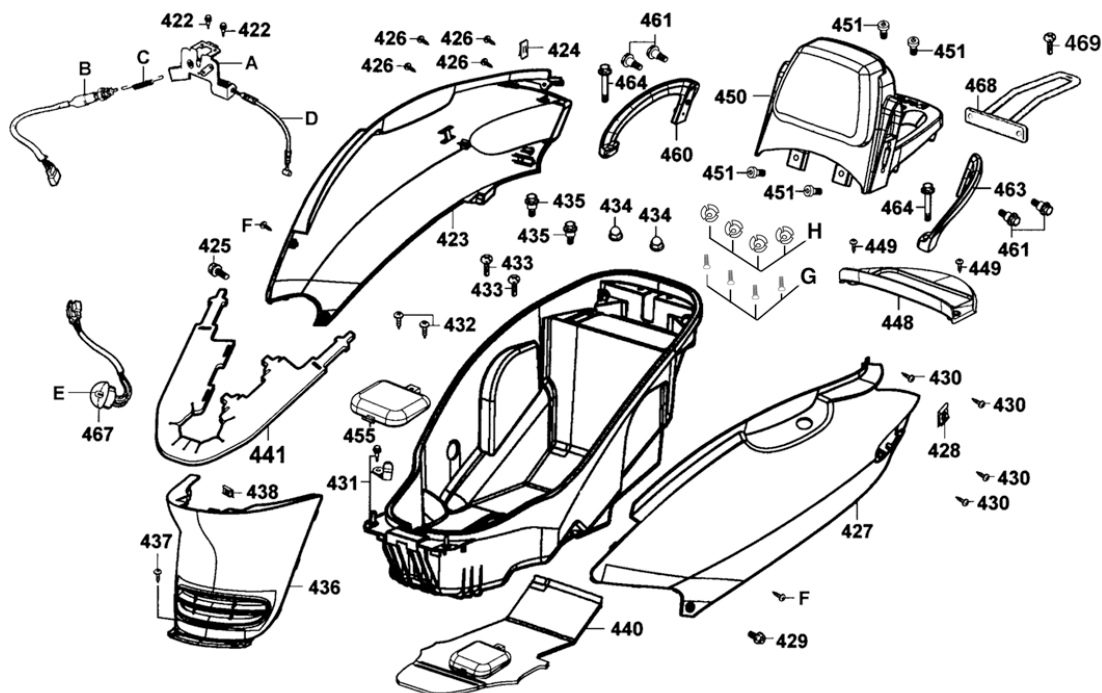


|       | CODICE KY          | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|--------------------|------------|--------------------------------|--------------|-------------------|--------|
| ● E   | 34909-KBF-9000     | 00161000   | LAMP. A INNESTO T6.5           |              | 1,00              | 1      |
| ● B   | 35360-KBF-9000     | 00161951   | INTERRUTTORE LUCE VANO ±       |              | 5,68              | 1      |
| ● C   | 46514-KBF-9000     | 00161952   | MOLLA INTERRUTTORE VANO        |              | 3,10              | 1      |
| ● A   | 77235-KKC4-9000    | 00161420   | GANCIO SERRATURA SELLA         |              | 11,36             | 1      |
| ● D   | 77240-KKC4-9000    | 00168908   | CAVO SERRATURA SELLA           |              | 18,08             | 1      |
| ● H   | 81202-KKC4-900     | 00161038   | BOCCOLA PORTAPACCHI            |              | 4,00              | 4      |
| ● G   | 93500-04012-1H     | 00161039   | VITE TESTA PIATTA              |              | 3,10              | 4      |
| ● 422 | 95701-06012-08     | 00159015   | VITE FLANGIATA 6X12            |              | 1,00              | 2      |
| ● 423 | 83500-KKC4-900-BHP | 00161017A  | FIANCHETTO DX BLU GARDA        |              | 149,77            | 1      |
| ● 423 | 83500-KKC4-900-N8P | 00161017S  | FIANCHETTO DX ARGENTO METAL    |              | 149,77            | 1      |
| ● 423 | 83500-KKC4-900-NFP | 00161017N  | FIANCHETTO DX NERO SMOKE       |              | 149,77            | 1      |
| ● 423 | 83500-KKC4-900-R1P | 00161017H  | FIANCHETTO DX ROSSO RAC. RR004 |              | 149,77            | 1      |
| ● 424 | 90302-SA4-0040     | 00162570   | INSERTO FILETTATO 4MM          |              | 3,10              | 1      |
| ○ 425 | 90302-GY6-9400     | 00155515   | VITE RONDELLA 5 x 12           |              |                   | 1      |
| ○ 426 | 93903-35380        | 00150702   | VITE AUTOFIETTANTE 5 x 16      |              |                   | 4      |
| ● 427 | 83600-KKC4-900-BHP | 00161019A  | FIANCHETTO SX BLU GARDA        |              | 149,77            | 1      |
| ● 427 | 83600-KKC4-900-N8P | 00161019S  | FIANCHETTO SX ARGENTO          |              | 149,77            | 1      |
| ● 427 | 83600-KKC4-900-NFP | 00161019N  | FIANCHETTO SX NERO SMOKE       |              | 149,77            | 1      |
| ● 427 | 83600-KKC4-900-R1P | 00161019H  | FIANCHETTO SX ROSSO RACING     |              | 149,77            | 1      |
| ● 428 | 90302-SA4-0040     | 00162570   | INSERTO FILETTATO 4MM          |              | 3,10              | 1      |
| ○ 429 | 90302-GY6-9400     | 00155515   | VITE RONDELLA 5 x 12           |              |                   | 1      |
| ○ 430 | 93903-35380        | 00150702   | VITE AUTOFIETTANTE 5 x 16      |              |                   | 4      |
| ● 431 | 81260-KKC4-9000    | 00161014   | VANO PORTA OGGETTI             |              | 92,96             | 1      |
| ● 432 | 93903-34380        | 00153009   | VITE AUTOFIETTANTE M4 x 12     |              | 1,00              | 2      |
| ○ 433 | 90381-GZ5-0010     | 00161930   | VITE SPECIALE 6mm              |              |                   | 2      |
| ● 434 | 90215-GM0-9100     | 00154908   | DADO A CAPPuccio 6MM           |              | 3,00              | 2      |
| ● 435 | 90111-187-0010     | 00154504   | VITE FLANGIATA 6 MM            |              | 1,03              | 2      |
| ● 436 | 80151-KKC4-900-N1R | 00161923   | SCUDO CENTRALE NERO            |              | 50,61             | 1      |
| ● 437 | 93903-34380        | 00153009   | VITE AUTOFIETTANTE M4 x 12     |              | 1,00              | 2      |

03-11-04

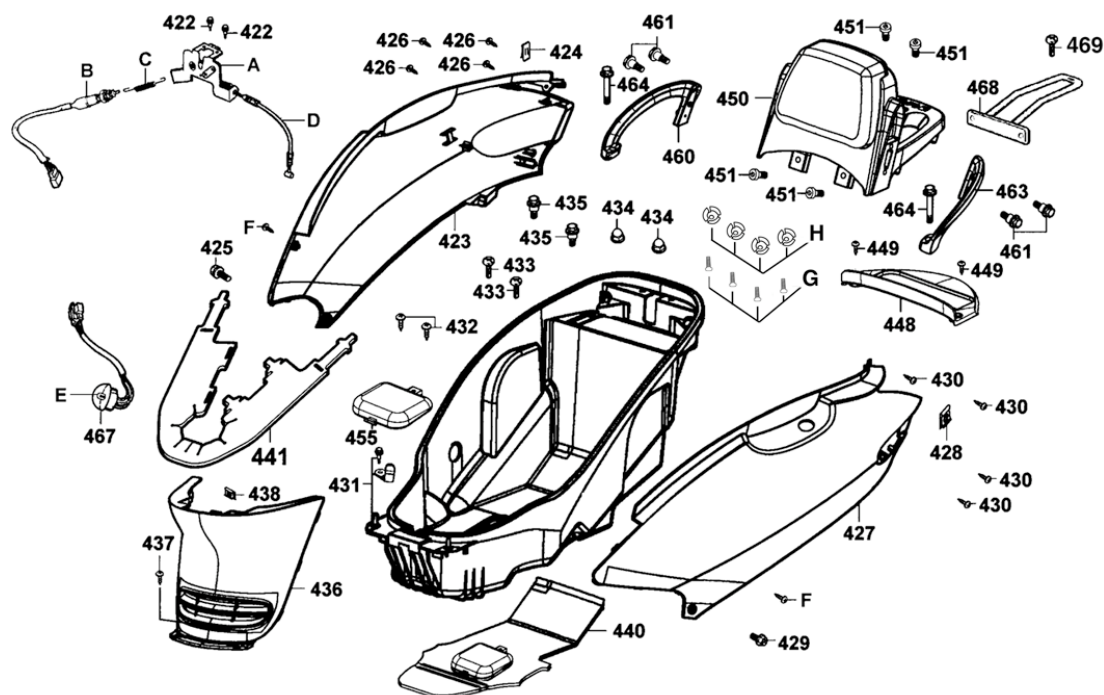

| CODICE KY                | CODICE PIR | DESCRIZIONE                   | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|--------------------------|------------|-------------------------------|--------------|-------------------|--------|
| ● 438 90305-GK8-0010     | 00162025   | CLIP FILETTATA 6mm            |              | 3,10              | 1      |
| ● 441 81151-KKC4-9000    | 00161441   | ISOLANTE SCUDO INT.           |              | 20,00             | 1      |
| ✱ 448 83750-KKC4-900-BHP | 00161391A  | CODINO BLU GARDA PB183        |              | 47,51             | 1      |
| ✱ 448 83750-KKC4-900-N8P | 00161391S  | CODINO ARGENTO METAL NH045    |              | 47,51             | 1      |
| ✱ 448 83750-KKC4-900-NFP | 00161391N  | CODINO NERO SMOKE NH124       |              | 47,51             | 1      |
| ✱ 448 83750-KKC4-900-R1P | 00161391H  | CODINO ROSSO RACING RR004     |              | 47,51             | 1      |
| ○ 449 93903-GY6-900      | 00154705   | VITE AUTOFILETTANTE 4 x 14    |              |                   | 2      |
| ● 450 8120A-KKC4-900     | 00161450   | PORTAPACCHI                   |              | 82,63             | 1      |
| ○ 451 90105-KEC8-9000    | 00161451   | VITE RONDELLA 8mm             |              |                   | 4      |
| ○ 451 90106-KKC4-900     | 00161452   | VITE RONDELLA 8mm             | 24100747     |                   | 4      |
| ● 455 81257-KKC4-800     | 00162065   | COPERCHIO ACCESSO CARBURATORE |              | 11,88             | 1      |
| ● 460 81400-KKC4-900-N1R | 00161015   | MANIGLIONE DX                 |              | 36,15             | 1      |
| ● 461 90105-KBN-9010     | 00163214   | VITE SPECIALE 8MM             |              | 3,36              | 4      |
| ● 463 81500-KKC4-900-N1R | 00161016   | MANIGLIONE SX                 |              | 36,15             | 1      |
| ● 464 90106-KFC2-9000    | 00152330   | VITE SPECIALE 8 x 42          |              | 5,00              | 2      |
| ● 467 33900-KBF-9000     | 00161745   | LUCE VANO PORTAOGG.           |              | 9,30              | 1      |
| ● 468 81201-KKC4-900     | 00161020   | SUPPORTO PORTAPACCHI          | 24100747     | 20,00             | 1      |
| ● 469 90105-KN5-0010     | 00160611   | VITE DISCO 6X 17              | 24100747     | 3,10              | 1      |




03-11-04

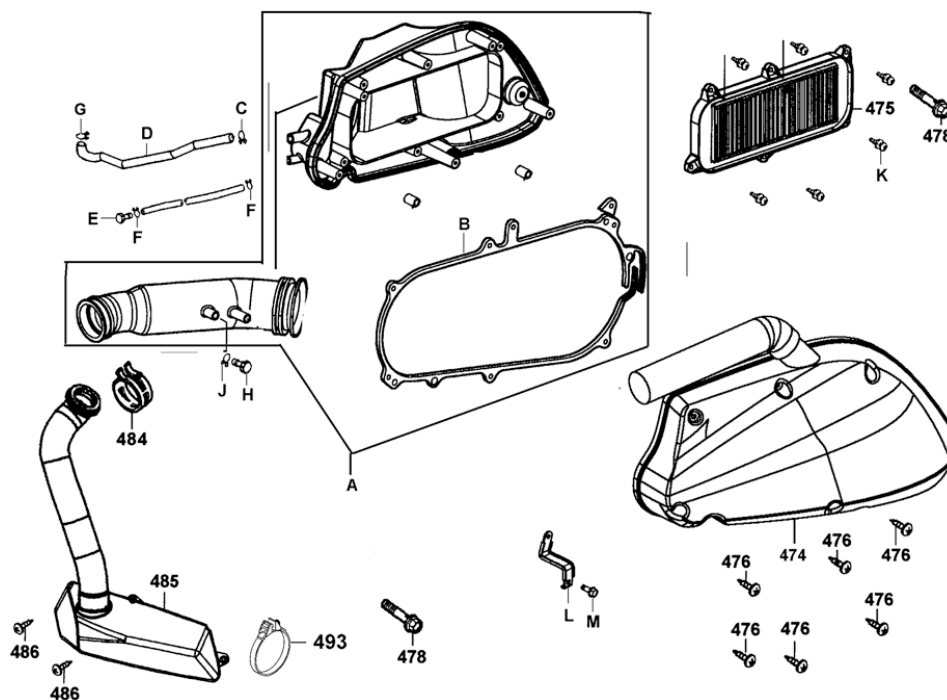

|       | CODICE KY       | CODICE PIR | DESCRIZIONE                  | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-----------------|------------|------------------------------|--------------|-------------------|--------|
| ● L   | 11207-KKC4-9000 | 00167925   | SUPPORTO PARASPRUZZI POST.   |              | 9,30              | 1      |
| ○ D   | 11211-KKC2-900  | 00162483   | MANDATA TUBO SFIATO          |              |                   | 1      |
| ● G   | 15772-551-0000  | 00161001   | CLIP TUBO SFIATO             |              | 1,55              | 1      |
| ● B   | 17214-KKC3-9000 | 00162911   | GUARN.COPERCHIO FILTRO ARIA  |              | 7,23              | 1      |
| ● A   | 1723A-KKC3-E000 | 00162976   | SCATOLA FILTRO ARIA COMPLETA |              | 41,32             | 1      |
| ● H   | 17254-KCA-P000  | 00163803   | TAPPO SFIATO FILTRO ARIA     |              | 2,50              | 1      |
| ○ C   | 17368-KB4-6710  | 00162977   | CLIP TUBO 14,5               |              |                   | 3      |
| ○ E   | 17370-419-6700  | 00162978   | COP. TUBO SFIATO             |              |                   | 1      |
| ○ K   | 93891-05016-07  | 00154027   | VITE RONDELLA 5 X16 NERA     |              |                   | 6      |
| ○ M   | 93903-35220     | 00151719   | VITE AUTOFILETTANTE 5 x 12   |              |                   | 1      |
| ○ J   | 95002-02130     | 00162961   | CLIP TUBO B 12,5             |              |                   | 1      |
| ○ F   | 17371-174-6710  | 00162762   | CLIP TUBO SFIATO             |              |                   | 2      |
| ● 474 | 17231-KKC3-900  | 00162474   | COPERCHIO FILTRO ARIA        |              | 20,66             | 1      |
| ● 475 | 1721A-KKC3-9000 | 00162475   | ELEMENTO FILTRO ARIA         |              | 12,91             | 1      |
| ○ 476 | 93903-25480     | 00166210   | VITE AUTOFILETTANTE 5X20     |              |                   | 6      |
| ● 478 | 90114-GM4-0110  | 00163008   | VITE FLANGIATA 6X28          |              | 3,10              | 1      |
| ○ 479 | 90114-KCX-9000  | 00163897   | VITE FLANGIATA 6 x 12        |              |                   | 1      |
| ● 484 | 17215-KGBG-9000 | 00162625   | CLIP MANICOTTO               |              | 10,33             | 1      |
| ● 485 | 8360A-KKC4-9000 | 00162485   | CAMERA FILTRO ARIA(GRUPPO)   |              | 50,10             | 1      |
| ● 486 | 93903-34380     | 00153009   | VITE AUTOFILETTANTE M4 x 12  |              | 1,00              | 2      |
| ● 493 | 17255-KV7-6710  | 00162980   | COLLARINO                    |              | 4,39              | 1      |




03-11-04

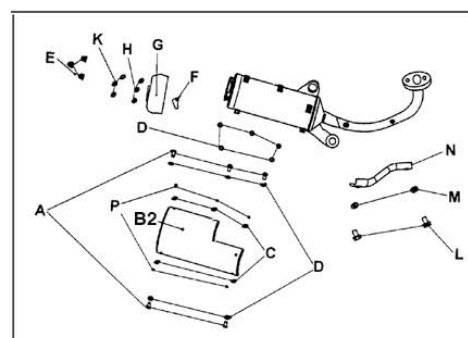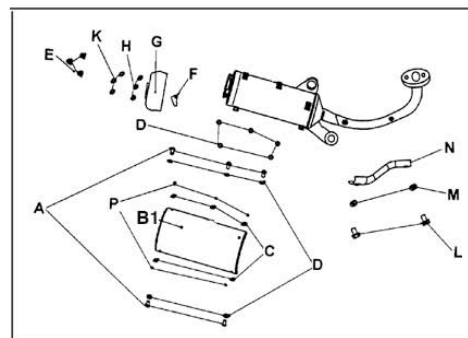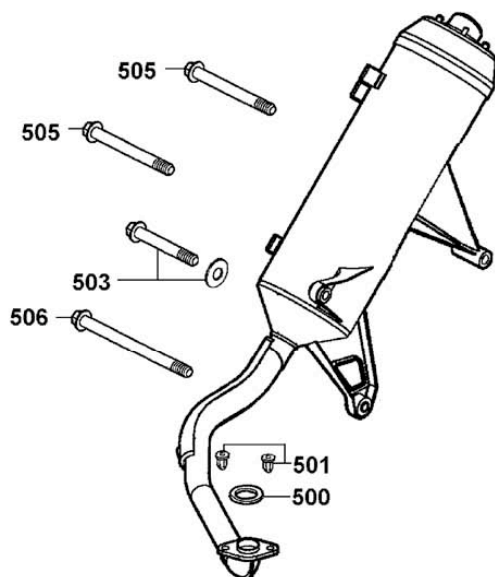


|       | CODICE KY       | CODICE PIR      | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-----------------|-----------------|--------------------------------|--------------|-------------------|--------|
| ● C   | 18293-KCE-9000  | <b>00163908</b> | GOMMINO PROTEZIONE MARMITTA    |              | <b>3,10</b>       | 5      |
| ● D   | 18294-KBE-9000  | <b>00163070</b> | ISOLANTE PROTEZIONE MARMITTA ± |              | <b>1,90</b>       | 10     |
| ● P   | 18295-KCE-9000  | <b>00163902</b> | RONDELLA                       |              | <b>4,00</b>       | 5      |
| ● G   | 18306-KHD8-9000 | <b>00163974</b> | CAPPUCCIO TERMINALE MARMITTA   |              | <b>20,14</b>      | 1      |
| ● A   | 90110-KHD8-9000 | <b>00163907</b> | VITE SPECIALE 6 x 20           |              | <b>0,30</b>       | 5      |
| ● E   | 90215-GM0-9100  | <b>00154908</b> | DADO A CAPPUCCIO 6MM           |              | <b>3,00</b>       | 3      |
| ● H   | 94101-06800     | <b>00121325</b> | RONDELLA PIANA 6mm             |              | <b>1,00</b>       | 5      |
| ○ M   | 94101-KBE-9000  | <b>00163990</b> | RONDELLA 6mm                   |              |                   | 2      |
| ○ K   | 94111-06800     | <b>00164407</b> | RONDELLA 6mm                   |              |                   | 5      |
| ● L   | 96001-06010-08  | <b>00129991</b> | VITE FLANGIATA 6 x 10          |              | <b>3,10</b>       | 2      |
| ● F   | 18305-KHD8-9000 | <b>00163960</b> | RIVEST.TERMINALE MARMITTA      |              | <b>13,94</b>      | 1      |
| ● N   | 18325-KKC1-9000 | <b>00163890</b> | PROTEZIONE COLLETTORE          |              | <b>11,36</b>      | 1      |
| ● B1  | 18317-KHD8-E000 | <b>00163972</b> | PROTEZIONE MARMITTA ±          |              | <b>18,08</b>      | 1      |
| ● B2  | 18318-KKC1-E000 | <b>00164030</b> | PROTEZIONE MARMITTA            |              | <b>20,00</b>      | 1      |
| ● 500 | 18291-GC8-0010  | <b>00164001</b> | GUARNIZIONE SCARICO ±          |              | <b>1,96</b>       | 1      |
| ● 501 | 90301-GY6-9010  | <b>00163961</b> | DADO ALTO A CAPPUCCIO 8MM      |              | <b>5,00</b>       | 2      |
| ● 502 | 1830A-KKC1-E0A  | <b>00163106</b> | GRUPPO DI SCARICO              |              | <b>211,75</b>     | 1      |
| ● 503 | 90021-GY6-900   | <b>00163543</b> | VITE 8 x 42                    |              | <b>3,00</b>       | 1      |
| ● 505 | 95801-08042-07  | <b>00163764</b> | VITE FLANGIATA 8 x 42          |              | <b>3,16</b>       | 2      |
| ● 506 | 95801-08065-07  | <b>00158355</b> | VITE FLANGIATA 8 X 65          |              | <b>2,58</b>       | 1      |

03-11-04

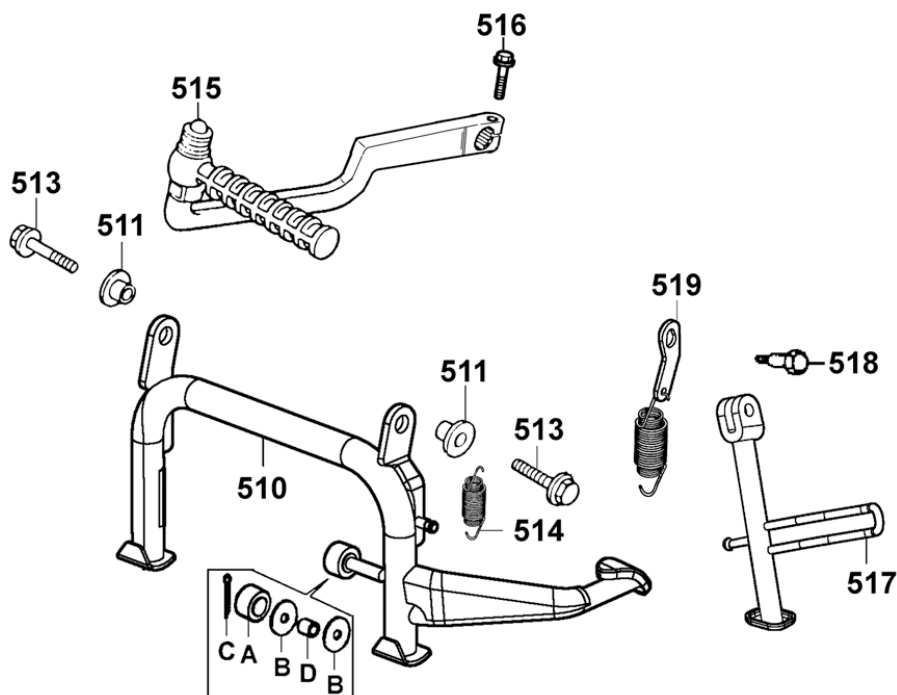


|       | CODICE KY       | CODICE PIR | DESCRIZIONE                   | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-----------------|------------|-------------------------------|--------------|-------------------|--------|
| ● A   | 50505-KHE7-E000 | 00164982   | GOMMA FERMO CAVALLETTO        |              | 4,13              | 1      |
| ● D   | 50506-KHE7-E000 | 00164983   | BOCCOLA GOMMA FINE CORSA      |              | 9,00              | 1      |
| ● B   | 94101-08700     | 00168212   | RONDELLA LISCIA 8MM           |              | 3,00              | 2      |
| ● C   | 94251-08800     | 00165105   | COPPIGLIA 8mm                 |              | 2,00              | 1      |
| ● 510 | 5050A-KKC3-900  | 00164126   | CAVALLETTO CENTRALE           |              | 46,48             | 1      |
| ● 511 | 50502-GY6-9010  | 00164792   | BOCCOLA CAVALLETTO CENTRALE ± |              | 3,10              | 2      |
| ● 513 | 95801-10025-08  | 00164794   | VITE FLANGIATA 10X25          |              | 3,10              | 2      |
| ● 514 | 50550-KKC2-E000 | 00164514   | MOLLA CAVALLETTO CENTRALE     |              | 5,68              | 1      |
| ● 515 | 28300-KKC2-E000 | 00164515   | LEVA AVVIAMENTO               |              | 23,76             | 1      |
| ● 516 | 95701-06022-07  | 00165007   | VITE FLANGIATA 6X22 (NERA)    |              | 3,10              | 1      |
| ● 517 | 50530-KKC4-E00  | 00164517   | CAVALLETTO LATERALE           | 24100747     | 20,00             | 1      |
| ● 517 | 50530-KKC4-E000 | 00164996   | CAVALLETTO LATERALE           |              | 19,63             | 1      |
| ● 518 | 90108-KFC8-E000 | 00164918   | PERNO CAVALLETTO LATERALE     |              | 4,65              | 1      |
| ● 518 | 90108-KKC4-900  | 00164518   | PERNO CAVALLETTO LATERALE     | 24100747     | 5,00              | 1      |
| ● 519 | 50532-KGBG-E000 | 00164979   | MOLLA CAVALLETTO LATERALE     |              | 6,20              | 1      |

03-11-04

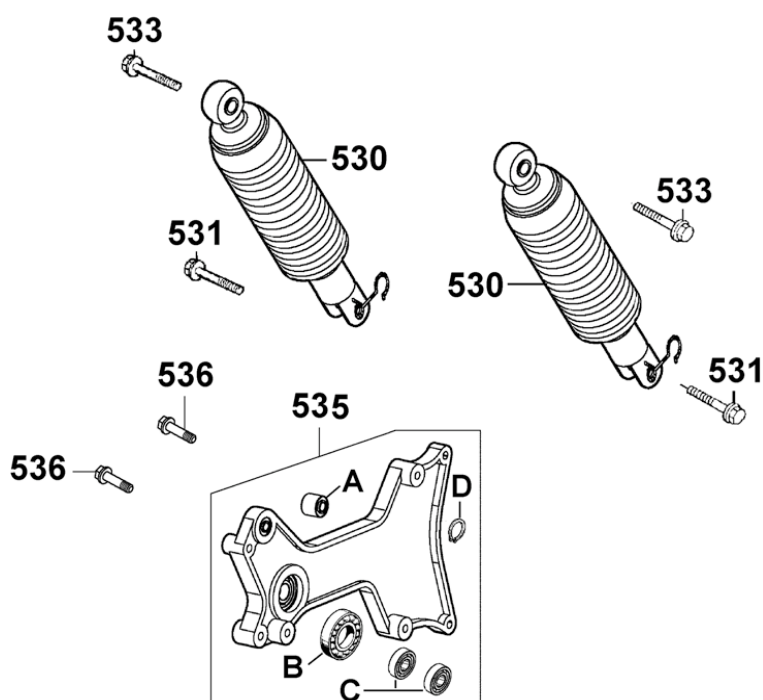


|       | CODICE KY          | CODICE PIR      | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|--------------------|-----------------|--------------------------------|--------------|-------------------|--------|
| ● A   | 11203-GC7-3010     | <b>00109006</b> | SUPPORTO ELASTICO AMM. POST.   |              | <b>9,04</b>       | 1      |
| ● B   | 91051-KBF-901      | <b>00165715</b> | CUSCINETTO 21X40X12 RAD.6203LU |              | <b>11,88</b>      | 1      |
| ● C   | 91259-KBF-9000     | <b>00165716</b> | PARAOLIO 40 x 26 x 5           |              | <b>5,16</b>       | 2      |
| ○ D   | 94524-42000        | <b>00165000</b> | SEEGER INT. 42mm               |              |                   | 1      |
| ● 530 | 52400-KKC2-E00-F1S | <b>00165134</b> | AMMORTIZZATORE POST.DX PT001   |              | <b>72,30</b>      | 1      |
| ● 530 | 52500-KKC2-E00-F1S | <b>00165135</b> | AMMORTIZZATORE POST.SX PT001   |              | <b>72,30</b>      | 1      |
| ○ 531 | 95701-08030-02     | <b>00153394</b> | VITE FLANGIATA 8 x 30          |              |                   | 2      |
| ● 533 | 95801-10035-08     | <b>00165711</b> | VITE FLANGIATA 10X35           |              | <b>3,10</b>       | 2      |
| ● 535 | 52000-KKC3-900-NJA | <b>00170092</b> | FORCELLA POSTERIORE ARGENTO HT |              | <b>77,47</b>      | 1      |
| ● 536 | 90131-KAF-9000     | <b>00157770</b> | VITE FLANGIATA 8X42            |              | <b>3,10</b>       | 2      |

03-11-04

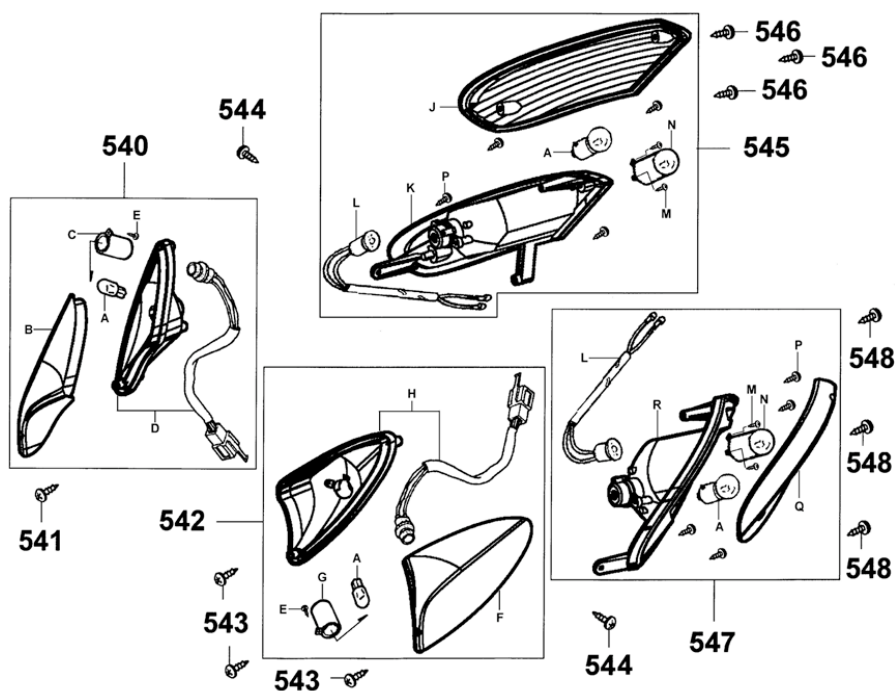


|       | CODICE KY       | CODICE PIR | DESCRIZIONE                   | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-----------------|------------|-------------------------------|--------------|-------------------|--------|
| ● B   | 33402-KKC4-E000 | 00166148   | SCHERMO FRECCIA ANTERIORE DX  |              | 10,33             | 1      |
| ○ D   | 33403-KKC4-E000 | 00166911   | PARABOLA FRECCIA ANT. DX      |              |                   | 1      |
| ○ C   | 33407-KKC4-E000 | 00166910   | SEDE LAMPADA FRECCIA DX       |              |                   | 1      |
| ○ H   | 33453-KKC4-E000 | 00166913   | PARABOLA FRECCIA ANT. SX      |              |                   | 1      |
| ○ G   | 33457-KKC4-E000 | 00166912   | SEDE LAMPADA FRECCIA SX       |              |                   | 1      |
| ● J   | 33602-KKC4-E000 | 00159366   | SCHERMO FRECCIA POSTERIORE DX |              | 9,30              | 1      |
| ○ K   | 33603-KKC4-E000 | 00166914   | PARABOLA FRECCIA POST. DX     |              |                   | 1      |
| ○ L   | 33606-KKC4-E000 | 00166915   | CAVO CON PORTALAMPADA         |              |                   | 2      |
| ● Q   | 33652-KKC4-E000 | 00159368   | SCHERMO FRECCIA POSTERIORE SX |              | 9,30              | 1      |
| ○ R   | 33653-KKC4-E000 | 00166919   | PARABOLA FRECCIA POST. SX     |              |                   | 1      |
| ○ A   | 34905-KCP-9000  | 00168407   | LAMPADA A BAIONETTA 12V R10W  |              |                   | 4      |
| ○ P   | 93901-32220     | 00166918   | VITE AUTOFIETTANTE 3 x 10     |              |                   | 8      |
| ○ E   | 93901-32320     | 00166901   | VITE AUTOFIETTANTE 3 x 12     |              |                   | 2      |
| ○ M   | 93901-34220     | 00166916   | VITE AUTOFIETTANTE 4 x 10     |              |                   | 4      |
| ● F   | 33452-KKC4-E000 | 00166150   | SCHERMO FRECCIA ANTERIORE SX  |              | 10,33             | 1      |
| ○ N   | 33607-KKD7-E000 | 00166917   | SEDE LAMPADA FRECCIA          |              |                   | 2      |
| ● 540 | 33400-KKC4-E000 | 00166147   | FRECCIA ANTERIORE DX          |              | 18,08             | 1      |
| ● 541 | 93903-34380     | 00153009   | VITE AUTOFIETTANTE M4 x 12    |              | 1,00              | 3      |
| ● 542 | 33450-KKC4-E000 | 00166149   | FRECCIA ANTERIORE SX          |              | 18,08             | 1      |
| ● 543 | 93903-34380     | 00153009   | VITE AUTOFIETTANTE M4 x 12    |              | 1,00              | 3      |
| ● 544 | 93903-34380     | 00153009   | VITE AUTOFIETTANTE M4 x 12    |              | 1,00              | 2      |
| ✱ 545 | 33600-KKC4-E000 | 00159365   | FRECCIA POSTERIORE DX         |              | 20,66             | 1      |
| ● 546 | 93903-34380     | 00153009   | VITE AUTOFIETTANTE M4 x 12    |              | 1,00              | 3      |
| ✱ 547 | 33650-KKC4-E000 | 00159367   | FRECCIA POSTERIORE SX         |              | 20,66             | 1      |
| ● 548 | 93903-34380     | 00153009   | VITE AUTOFIETTANTE M4 x 12    |              | 1,00              | 3      |

03-11-04

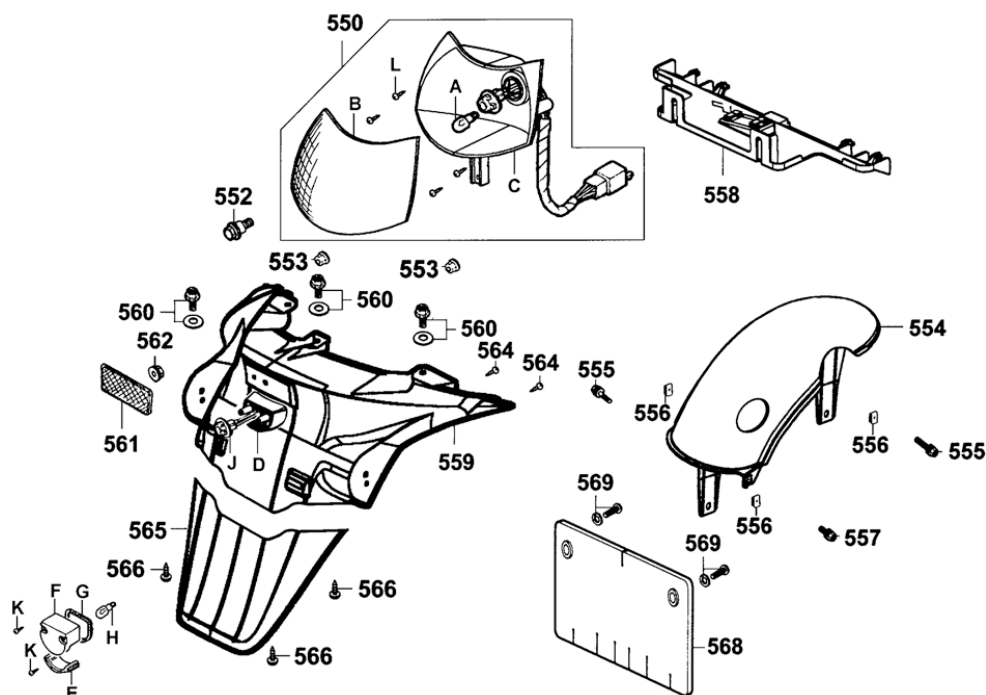


|       | CODICE KY         | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-------------------|------------|--------------------------------|--------------|-------------------|--------|
| ✱ B   | 33702-KKC4-E000   | 00159020   | SCHERMO FARO POSTERIORE        |              | 23,24             | 1      |
| ○ C   | 33705-KKC4-E000   | 00167711   | BASE LUCE POST.                |              |                   | 1      |
| ● G   | 33709-KAB-0030    | 00168537   | GUARN. LUCE TARGA              |              | 2,00              | 1      |
| ○ D   | 33722-KHB4-E000   | 00167922   | LUCE TARGA                     |              |                   | 1      |
| ● E   | 33725-KHB4-E000   | 00167903   | SCHERMO LUCE TARGA             |              | 3,00              | 1      |
| ○ J   | 33726-KHB4-E000   | 00167907   | CAVO CON PORTALAMPADA          |              |                   | 1      |
| ● H   | 34903-KCP-9000    | 00150407   | LAMPADINA 5W-12V               |              | 3,10              | 1      |
| ● A   | 34906-KCP-9000    | 00168408   | LAMPADA FARO POST.P21/5W-12V ± |              | 2,84              | 1      |
| ○ K   | 91508-KV7-6710-M1 | 00168538   | VITE AUTOFILETTANTE 4 x 14     |              |                   | 2      |
| ○ L   | 93901-34320       | 00167921   | VITE AUTOFILETTANTE 4 x 12     |              |                   | 4      |
| ● F   | 33706-GN3-6710-M1 | 00168536   | COPERCHIO LUCE TARGA           |              | 9,30              | 1      |
| ● 550 | 33700-KKC4-E000   | 00159369   | FARO POSTERIORE                |              | 118,79            | 1      |
| ○ 552 | 93404-06016-07    | 00163215   | VITE RONDELLA 6 x 16           |              |                   | 1      |
| ● 553 | 90301-634-6710    | 00162564   | DADO FLANGIATO 6MM             |              | 3,10              | 2      |
| ● 554 | 80100-KKC4-900    | 00167897   | PARASPRUZZI POSTERIORE INF.    |              | 46,48             | 1      |
| ○ 555 | 90302-KFC2-9000   | 00167955   | VITE RONDELLA 5 x 25           |              |                   | 3      |
| ● 556 | 90677-GR1-0040    | 00154014   | CLIP FILETTATA 5MM ±           |              | 2,00              | 3      |
| ○ 557 | 90302-GY6-9400    | 00155515   | VITE RONDELLA 5 x 12           |              |                   | 1      |
| ● 558 | 80101-KKC4-900    | 00167153   | PARASPRUZZI POSTERIORE SUP.    |              | 30,99             | 1      |
| ● 559 | 80105-KKC4-9000   | 00167163   | PARAFANGO POSTERIORE SUP.      |              | 41,32             | 1      |
| ● 560 | 90112-KBN-9010    | 00170205   | VITE FLANGIATA 6mm             |              | 1,00              | 3      |
| ● 561 | 33741-KBE-9000    | 00161953   | CATARIFRANGENTE POSTERIORE ±   |              | 6,71              | 1      |
| ○ 562 | 94050-05080       | 00171218   | DADO FLANGIATO 5mm             |              |                   | 1      |
| ● 564 | 93903-34380       | 00153009   | VITE AUTOFILETTANTE M4 x 12    |              | 1,00              | 2      |
| ● 565 | 80106-KKC4-9000   | 00167164   | PARAFANGO POSTERIORE INF.      |              | 9,30              | 1      |
| ● 566 | 93903-34380       | 00153009   | VITE AUTOFILETTANTE M4 x 12    |              | 1,00              | 3      |
| ● 568 | 80102-KKC4-900    | 00167568   | TENDINA PARASPRUZZI            |              | 3,00              | 1      |
| ○ 569 | 93903-KEB7-9000   | 00154194   | VITE RONDELLA 4mm              |              |                   | 2      |

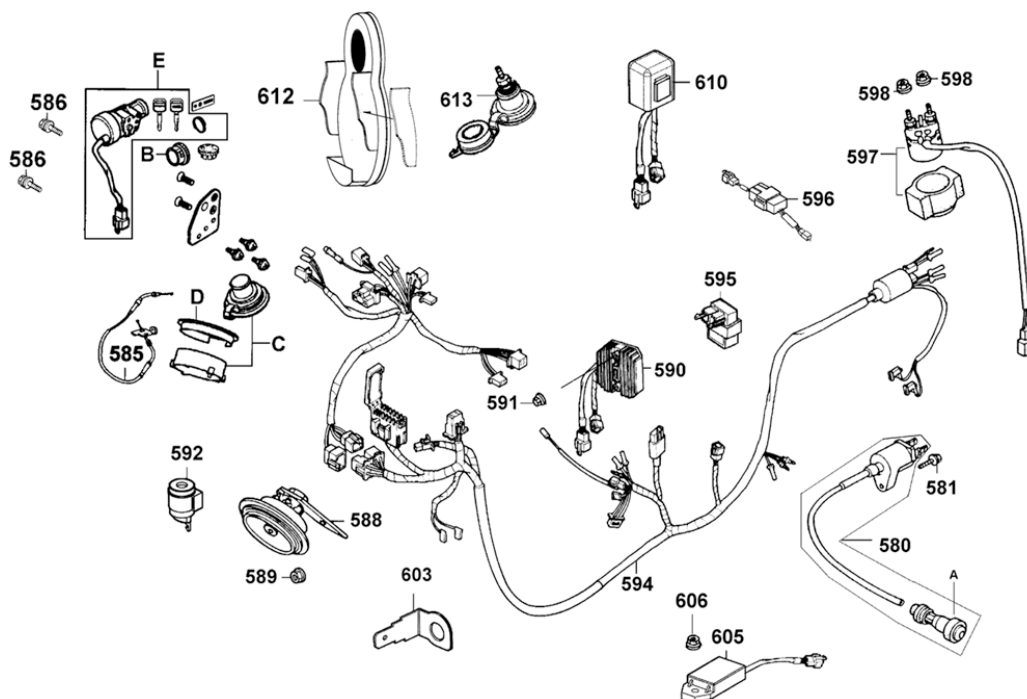

|       | CODICE KY             | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-----------------------|------------|--------------------------------|--------------|-------------------|--------|
| ● C   | 17620-KHC5-E000-IT-M2 | 00168582   | TAPPO CARBURANTE COMPLETO      |              | 36,15             | 1      |
| ● D   | 17623-KHC4-9000       | 00168912   | CORNICE TAPPO CARBURANTE       |              | 4,65              | 1      |
| ● A   | 30700-KN7-6710        | 00168937   | PIPETTA CANDELA                |              | 12,39             | 1      |
| ● E   | 35101-KHC4-3050       | 00168913   | ROTORE ACCENSIONE              |              | 61,97             | 1      |
| ● B   | 35102-KHC4-9000       | 00168910   | CORNICE ROTORE ACCENSIONE      |              | 7,75              | 1      |
| ● 580 | 30510-KBE-900         | 00168921   | BOBINA A.T E CAVO CANDELA      |              | 46,48             | 1      |
| ○ 581 | 90112-KDR-9000        | 00168581   | VITE FLANGIATA 5 x 22          |              |                   | 1      |
| ● 585 | 17520-KKC4-9000       | 00124155   | CAVO APERTURA TAPPO CARBURANTE |              | 8,26              | 1      |
| ● 586 | 95701-KHC5-E000-IT    | 00168586   | VITE 8 X 25                    |              | 4,13              | 2      |
| ● 588 | 38110-KKC3-90A        | 00169103   | CLACSON                        |              | 25,82             | 1      |
| ● 589 | 94050-08000           | 00109038   | DADO FLANGIATO 8mm             |              | 1,55              | 1      |
| ● 590 | 31600-KM1-009         | 00168780   | REG. TENSIONE / RADDRIZZATORE  |              | 57,84             | 1      |
| ● 591 | 94050-06080           | 00109022   | DADO FLANGIATO 6mm             |              | 1,55              | 1      |
| ● 592 | 38300-KCE-9000        | 00151708   | RELE' SONORO FRECCIE ±         |              | 16,53             | 1      |
| ● 594 | 32100-KKC2-E000       | 00168195   | CAVO PRINCIPALE                |              | 87,80             | 1      |
| ● 595 | 30400-KN7-6710        | 00168923   | CENTRALINA CDI                 |              | 98,13             | 1      |
| ● 596 | 3195A-KCB-9000        | 00168990   | CENTRALINA HAZARD              |              | 46,48             | 1      |
| ● 597 | 35850-KHD8-9000       | 00168997   | RELE' AVVIAMENTO               |              | 36,15             | 1      |
| ● 598 | 94050-06080           | 00109022   | DADO FLANGIATO 6mm             |              | 1,55              | 2      |
| ● 603 | 37720-KGBG-E000       | 00102021   | TERRA TERMOSTATO ±             |              | 7,75              | 1      |
| ● 605 | 37760-KGBG-E100       | 00129931   | CONTROLLO RISCALDAMENTO        |              | 61,97             | 1      |
| ● 606 | 94050-06080           | 00109022   | DADO FLANGIATO 6mm             |              | 1,55              | 1      |
| ● 610 | 39100-KHD8-9000       | 00168999   | RELE' VENTOLA                  |              | 20,66             | 1      |
| ● 612 | 31602-KKC4-9000       | 00150912   | SUPPORTO CELLULARE             |              | 18,08             | 1      |
| ✱ 613 | 31601-KKC4-900        | 00150911   | PRESA 12V                      |              | 10,85             | 1      |




03-11-04

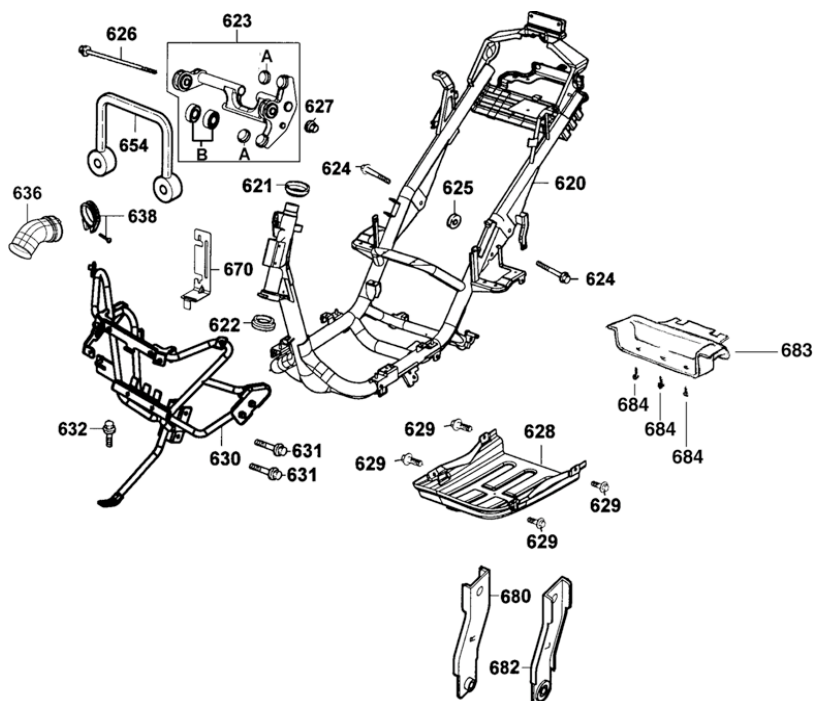


|       | CODICE KY       | CODICE PIR | DESCRIZIONE                   | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-----------------|------------|-------------------------------|--------------|-------------------|--------|
| ● A   | 50352-GY6-9000  | 00169992   | GOMMA FINE CORSA              |              | 5,00              | 2      |
| ● B   | 50356-KHE7-E000 | 00169997   | BOCCOLA                       |              | 15,49             | 2      |
| ● 620 | 50100-KKC2-E00  | 00169624   | TELAIO                        | 24100747     | 780,00            | 1      |
| ● 620 | 50100-KKC2-E000 | 00170090   | TELAIO                        |              | 774,69            | 1      |
| ● 621 | 50301-KN7-6710  | 00169701   | SEDE SUPERIORE SFERE STERZO ± |              | 5,68              | 1      |
| ● 622 | 50302-268-0110  | 00169702   | SEDE INFERIORE SFERE STERZO ± |              | 4,65              | 1      |
| ● 623 | 50350-KKC3-9000 | 00170091   | SUPPORTO OSCILLANTE MOTORE    |              | 87,80             | 1      |
| ● 624 | 90106-KHE7-E000 | 00170017   | VITE FLANGIATA 12X59          |              | 6,20              | 2      |
| ● 625 | 90121-KHE7-E000 | 00156978   | DISTANZIALE                   |              | 6,20              | 1      |
| ● 626 | 90117-KED9-900  | 00169621   | VITE FLANGIATA 10X265         |              | 7,00              | 1      |
| ● 627 | 90304-GE8-0040  | 00153206   | DADO FLANGIATO 10MM AUTOBLOC. |              | 4,13              | 1      |
| ● 628 | 50613-KKC4-900  | 00170103   | PROTEZIONE INFERIORE A NH001  |              | 16,53             | 1      |
| ● 629 | 95701-06012-08  | 00159015   | VITE FLANGIATA 6X12           |              | 1,00              | 4      |
| ● 630 | 64315-KKC4-900  | 00154959   | SUPPORTO SCUDO ANTERIORE      |              | 108,46            | 1      |
| ● 631 | 95701-08050-07  | 00164504   | VITE FLANGIATA 8 x 50         |              | 3,10              | 2      |
| ● 632 | 95701-08012-08  | 00109234   | VITE FLANGIATA 8 X 12         |              | 3,00              | 1      |
| ● 636 | 11345-KKC2-E000 | 00169630   | MANICOTTO                     |              | 10,33             | 1      |
| ○ 638 | 11346-KKC3-9000 | 00169965   | FASCETTA MANICOTTO            |              |                   | 1      |
| ● 654 | 50151-KKC4-9000 | 00169654   | SEDE/SUPP. PORTAPACCHI        |              | 12,00             | 1      |
| ○ 670 | 50191-KKC4-9000 | 00169670   | SUPPORTO                      |              |                   | 1      |
| ○ 680 | 50185-KKC4-9000 | 00169680   | SUPP. FIANCH. DX              |              |                   | 1      |
| ● 682 | 50186-KKC4-9000 | 00169682   | SUPP. FIANCH. SX              |              | 4,00              | 1      |
| ● 683 | 50614-KKC3-900  | 00169683   | PROTEZIONE INFERIORE B N1R    | 24100747     | 12,00             | 1      |
| ● 684 | 93903-34380     | 00153009   | VITE AUTOFILETTANTE M4 x 12   |              | 1,00              | 3      |

03-11-04

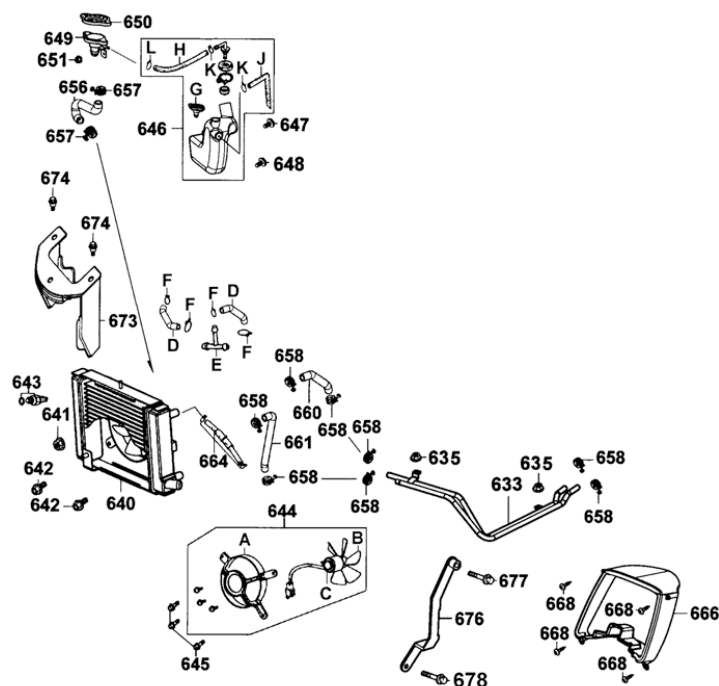

|       | CODICE KY       | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|-----------------|------------|--------------------------------|--------------|-------------------|--------|
| ● A   | 19015-KKC4-9000 | 00159362   | CAMERA VENTOLA RAFFREDDAMENTO  |              | 19,63             | 1      |
| ● B   | 19020-KED9-900  | 00159363   | VENTOLA RAFFREDDAMENTO         |              | 29,44             | 1      |
| ● C   | 19030-KHD8-9000 | 00170903   | MOTORE VENTOLA RAFFREDDAMENTO  |              | 123,95            | 1      |
| * J   | 19104-KKC4-9000 | 00129384   | TUBO DRENAGGIO                 |              | 6,20              | 1      |
| ● H   | 19105-KKC4-9000 | 00170907   | TUBO SERBATOIO LIQUIDO RAFF.   |              | 7,75              | 1      |
| ● G   | 19210-KKC4-900  | 00170020   | TAPPO VASCHETTA LIQUIDO RAF.   |              | 6,71              | 1      |
| ● E   | 38773-PB9-001   | 00168992   | GIUNTO A 3 VIE 3,5             |              | 1,00              | 1      |
| ○ D   | 95001-35225-40  | 00170910   | TUBO DRENAGGIO LIQUIDO REFRIGE |              |                   | 2      |
| ● L   | 95002-02100     | 00161011   | CLIP TUBO B10                  |              | 1,00              | 1      |
| ○ K   | 95002-70000     | 00170911   | CLIP TUBO C11                  |              |                   | 2      |
| ○ F   | 95002-02070     | 00159013   | CLIP TUBO B7                   |              |                   | 4      |
| ● 633 | 19120-KKC4-900  | 00170972   | TUBO A/R ACQUA                 |              | 41,32             | 1      |
| ● 635 | 94050-06080     | 00109022   | DADO FLANGIATO 6mm             |              | 1,55              | 2      |
| ● 640 | 19010-KKC4-900  | 00170333   | RADIATORE                      |              | 134,28            | 1      |
| ● 641 | 94050-06080     | 00109022   | DADO FLANGIATO 6mm             |              | 1,55              | 1      |
| ● 642 | 95701-06016-08  | 00169709   | VITE FLANGIATA 6 x 16          |              | 1,00              | 2      |
| ● 643 | 37760-KHD8-9000 | 00170950   | BULBO TERMOSTATO RADIATORE     |              | 61,97             | 1      |
| ● 644 | 19005-KKC4-9000 | 00170971   | GRUPPO VENTOLA                 |              | 134,28            | 1      |
| ● 645 | 95701-06016-08  | 00169709   | VITE FLANGIATA 6 x 16          |              | 1,00              | 3      |
| * 646 | 19101-KKC4-9000 | 00170018   | SERBATOIO LIQUIDO RAFF.        |              | 21,69             | 1      |
| ● 647 | 90302-GR2-0000  | 00160006   | VITE RONDELLA 5 x16            |              | 3,10              | 1      |
| ● 648 | 90302-GY6-9010  | 00160702   | VITE RONDELLA 5X12             |              | 1,00              | 1      |
| ● 649 | 19012-KHD8-900  | 00170648   | SEDE TAPPO RADIATORE           |              | 18,08             | 1      |
| ● 650 | 19111-GE2-0040  | 00170967   | TAPPO RADIATORE                |              | 11,36             | 1      |
| ● 651 | 94050-06080     | 00109022   | DADO FLANGIATO 6mm             |              | 1,55              | 1      |
| * 656 | 19506-KKC4-900  | 00170937   | TUBO ACQUA"G"                  |              | 6,20              | 1      |
| ● 657 | 95002-KHE7-9000 | 00170900   | CLIP TUBO ACQUA                |              | 3,00              | 2      |
| ● 658 | 95002-KN7-9100  | 00123937   | FASCETTA TUBO ACQUA            |              | 1,00              | 6      |
| * 660 | 19504-KKC4-9000 | 00129385   | TUBO ACQUA"D"                  |              | 6,20              | 1      |

03-11-04

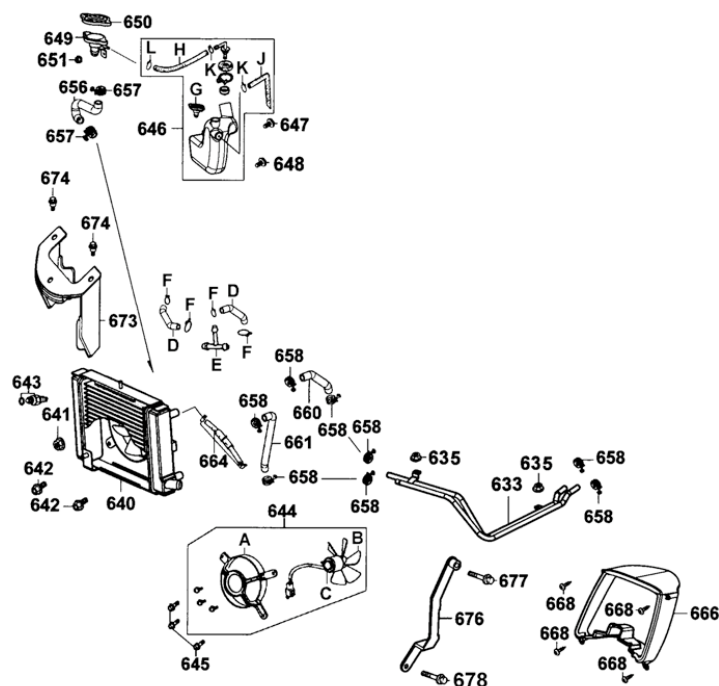

|   | CODICE KY           | CODICE PIR | DESCRIZIONE                    | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|---|---------------------|------------|--------------------------------|--------------|-------------------|--------|
| ● | 661 19505-KKC4-9000 | 00170936   | TUBO ACQUA"F"                  |              | 6,20              | 1      |
| ✱ | 664 90913-KKC4-9000 | 00121003   | TUBO VASCHETTA POMPA-RADIATORE |              | 18,08             | 1      |
| ● | 666 19102-KKC4-9000 | 00159364   | CONDOTTO RAFFREDDAMENTO        |              | 15,49             | 1      |
| ● | 668 93903-34380     | 00153009   | VITE AUTOFILETTANTE M4 x 12    |              | 1,00              | 4      |
| ● | 673 64318-KKC4-9000 | 00170673   | SUPP. CRUSCOTTO                |              | 4,00              | 1      |
| ○ | 674 93404-06016-07  | 00163215   | VITE RONDELLA 6 x 16           |              |                   | 2      |
| ○ | 676 17228-KKC3-9000 | 00170670   | SUPP. FILTRO ARIA              |              |                   | 1      |
| ● | 677 95701-06012-08  | 00159015   | VITE FLANGIATA 6X12            |              | 1,00              | 1      |
| ○ | 678 90001-GHB-6610  | 00123733   | VITE FLANGIATA 6 x 22          |              |                   | 1      |

03-11-04



710



711



725



900



713



750




714


|       | CODICE KY          | CODICE PIR      | DESCRIZIONE                   | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-------|--------------------|-----------------|-------------------------------|--------------|-------------------|--------|
| ● G   | 86102-KFA6-E00     | <b>00172300</b> | ADESIVO"(K)" ±                |              | <b>7,75</b>       | 1      |
| ● 710 | 86202-KKC4-900     | <b>00170196</b> | ADESIVO"DINK"                 |              | <b>10,33</b>      | 2      |
| ● 711 | 86212-KKC4-900     | <b>00170197</b> | ADESIVO"GRAND"                |              | <b>10,33</b>      | 2      |
| ● 713 | 86030-KKC4-E00-T01 | <b>00171690</b> | ADESIVO COPRIMANUBRIO "KYMCO" |              | <b>7,75</b>       | 1      |
| ● 725 | 86212-KHD4-E00     | <b>00172305</b> | ADESIVO"125"                  |              | <b>10,33</b>      | 2      |
| ● 900 | NH045 - N8         | <b>00191016</b> | VERNICE RITOCO ARG.M. NH045M  |              | <b>9,30</b>       | 1      |
| ● 900 | NH124 - NF         | <b>00191017</b> | VERNICE RITOCO NERO S.NH124M  |              | <b>9,30</b>       | 1      |
| ● 900 | PB183 - BH         | <b>00191007</b> | VERNICE RITOCO BLU G. PB183M  |              | <b>9,30</b>       | 1      |
| ● 900 | RR004 - R1         | <b>00191003</b> | VERNICE RITOCO ROSSO RR004C   |              | <b>9,30</b>       | 1      |

03-11-04

TIPO A

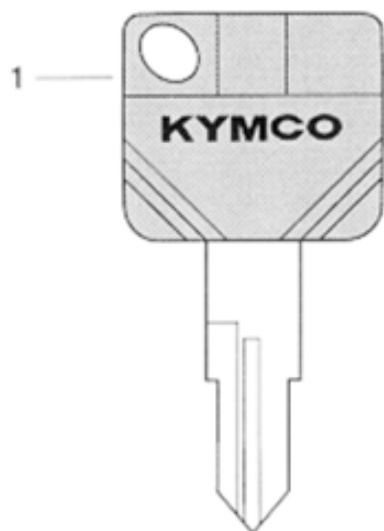

TIPO B

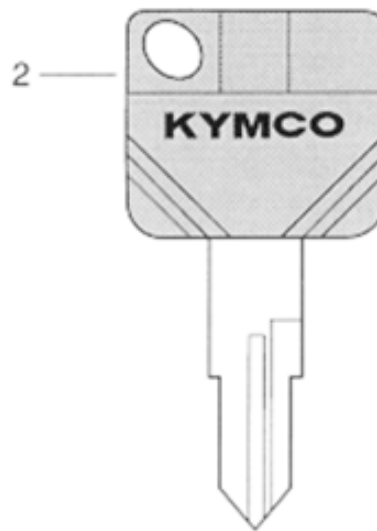

|     | CODICE KY          | CODICE PIR      | DESCRIZIONE           | DA N° TELAIO | LISTINO IVA ESCL. | N° PZ. |
|-----|--------------------|-----------------|-----------------------|--------------|-------------------|--------|
| ● 1 | 35111-KHC5-3060-M2 | <b>00190005</b> | CHIAVE GREZZA TIPO"A" |              | <b>4,00</b>       | 1      |
| ● 2 | 35111-KHC5-3050-M2 | <b>00190006</b> | CHIAVE GREZZA TIPO"B" |              | <b>4,00</b>       | 1      |